


Secadora Whirlpool 7MGW9200MW0



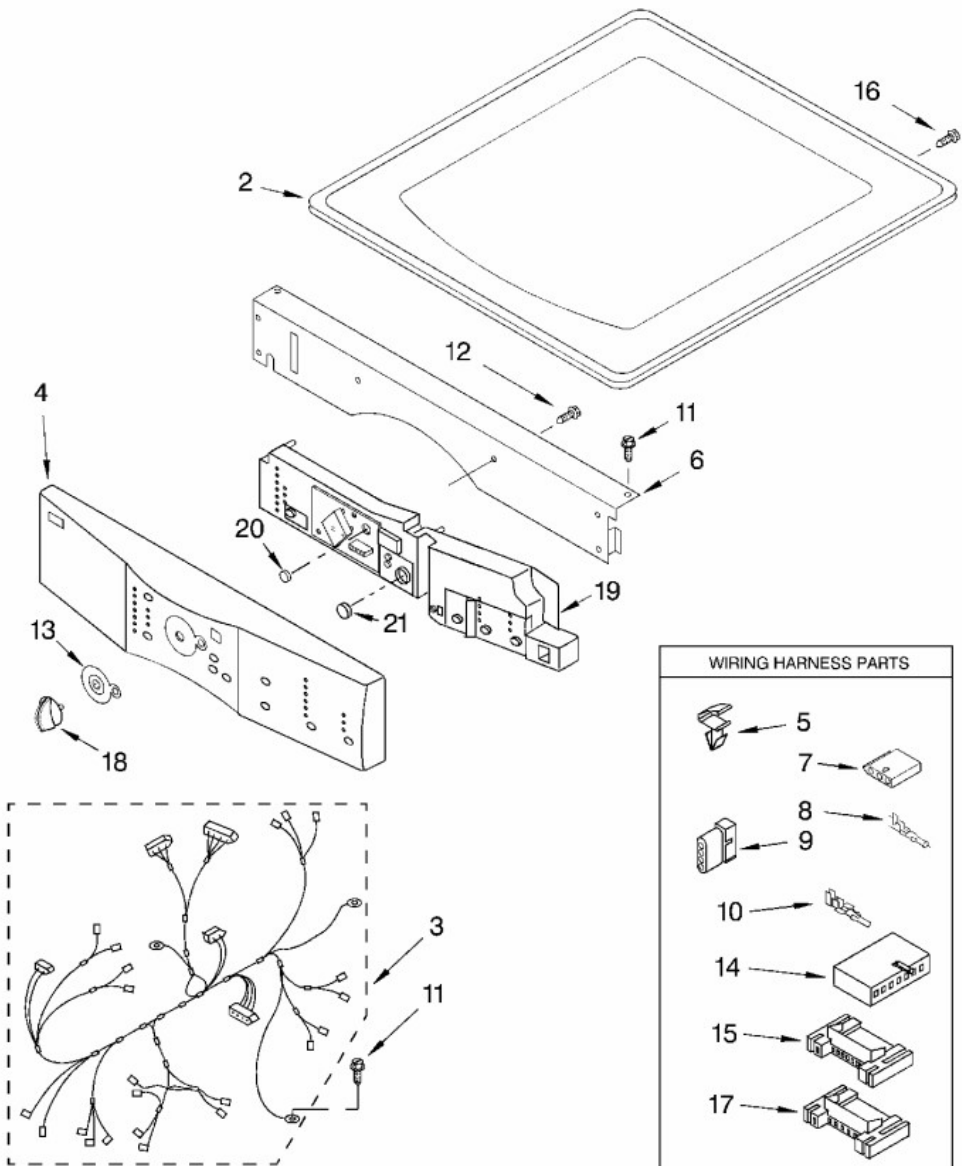

## Secadora Whirlpool 7MGW9200MWO


<b>No. Ilus.</b>	<b>DESCRIPCIÓN</b>	<b>No. de Parte</b>
<b>2</b>	Top	3979305
<b>3</b>	Harness, Main	8299950
<b>4</b>	Panel, Console	8530587
<b>5</b>	Clip, Harness	3394427
<b>6</b>	Bracket, Console	8519271
<b>7</b>	Connector, Sensor	353424
<b>8</b>	Terminal	94614
<b>9</b>	Plug, Terminal	3936144
<b>10</b>	Terminal	596797
<b>11</b>	Screw, 8-18 x 1/2	488729
<b>12</b>	Screw, 8-18 x 1/2	488787
<b>13</b>	Bezel, Cycle	8519406
<b>14</b>	Connector, 7-Circuit	3936150
<b>15</b>	Connector, (Motor)	3395683
<b>16</b>	Screw, 8-18 x 1/2	8281225
<b>17</b>	Connector, 5-Circuit	2203186
<b>18</b>	Knob, Assembly	8181859
<b>19</b>	User Interface	8530589
<b>20</b>	Button, Start	8530591
<b>21</b>	Button, Pause/Cancel	8530592

Distribuidor Autorizado

**SurteRápido.com**

Venta de Refacciones  
Electrodomesticas

# Secadora Whirlpool 7MGW9200MW0

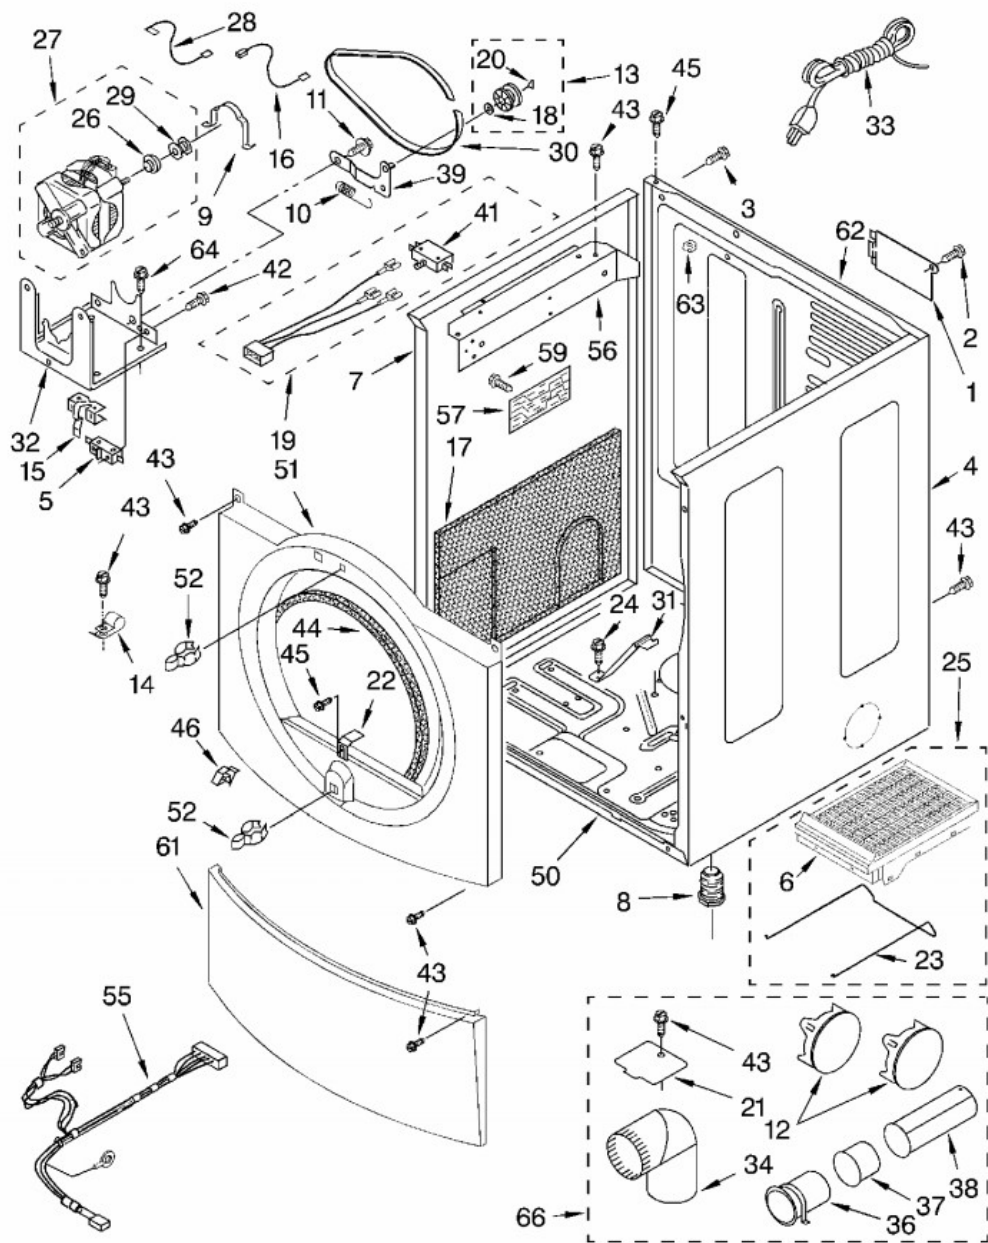



## Secadora Whirlpool 7MGW9200MWO

<b>No. Ilus.</b>	<b>DESCRIPCIÓN</b>	<b>No. de Parte</b>
<b>1</b>	Cover, Terminal Block	8317340
<b>2</b>	Screw, 8-18 x 3/8	90767
<b>3</b>	Screw, 10-32 x 5/8 (Ground)	4331106
<b>4</b>	Panel, Side (R.H.)	3979364
<b>5</b>	Switch, Broken Belt	279782
<b>6</b>	Dry Rack (Top)	8521959
<b>7</b>	Panel, Side (L.H.)	3979308
<b>8</b>	Foot, Dryer	3392100
	Foot - Optional	279810
<b>9</b>	Clamp, Motor (2)	343481
<b>10</b>	Spring, Idler	3387374
<b>11</b>	Retainer, Idler	3389420
<b>12</b>	Plug, Multivent	49252
<b>13</b>	Pulley Assembly	279640
<b>14</b>	Bracket, Gas Pipe	3978776
<b>15</b>	Lever, Snap Switch	8066120
<b>16</b>	Wire, Belt Switch	3394081
<b>17</b>	Sound Panel	8528076
<b>18</b>	Washer, Thrust	233520
<b>19</b>	Wire, Jumper (Includes Illus. 41)	8283288
<b>20</b>	Tri Ring	690997
<b>21</b>	Cover-Plate	3394331
<b>22</b>	Ramp, Door	8529053
<b>23</b>	Dry Rack Support	8521961
<b>24</b>	Screw, 8-18 x 3/8	489069
<b>25</b>	Dry Rack Assembly	8521957
<b>26</b>	Restrainer, Belt	3393657
<b>27</b>	Motor Assembly 60 HZ.	279787



## Secadora Whirlpool 7MGW9200MWO


<b>No. Ilus.</b>	<b>DESCRIPCIÓN</b>	<b>No. de Parte</b>
<b>28</b>	Wire, Jumper (Broken Belt Switch)	3398948
<b>29</b>	Pulley 60 HZ.	3389729
<b>30</b>	Belt, Drive	661570
<b>31</b>	Bracket, Burner	8529757
<b>32</b>	Bracket, Motor	3387118
<b>33</b>	Cord, Power	3401402
<b>34</b>	4` - 90 Elbow	49026
<b>36</b>	Exhaust Pipe & Bracket	3395532
<b>37</b>	Exhaust Pipe (Short)	3395534
<b>38</b>	Exhaust Pipe (Long)	3395535
<b>39</b>	Idler Bracket	3388674
<b>41</b>	Switch, Door	8519323
<b>42</b>	Screw, 6-20 x 1 1/16	98129
<b>43</b>	Screw, 8-18 x 1/2	488729
<b>44</b>	Seal, Front Panel	3387242
<b>45</b>	Screw, 10-16 X 1/2	308685
<b>46</b>	Clip, Toe Panel	8519459
<b>50</b>	Base, Cabinet	8519207
<b>51</b>	Front Panel	285918
<b>52</b>	Strike, Door (2)	279570
<b>55</b>	Harness, Digital Interface	8299929
<b>56</b>	Bracket, Control	8519273
<b>57</b>	Control Board	3980062
<b>59</b>	Screw, 8-18 x 3/4	3400826
<b>61</b>	Toe, Panel	8519233
<b>62</b>	Panel, Rear	8519219
<b>63</b>	Nut, Push-In	692400
<b>64</b>	Screw, 10-16 x 1/2	681414
<b>66</b>	White	279818

Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones  
Electrodomesticas

# Secadora Whirlpool 7MGW9200MW0

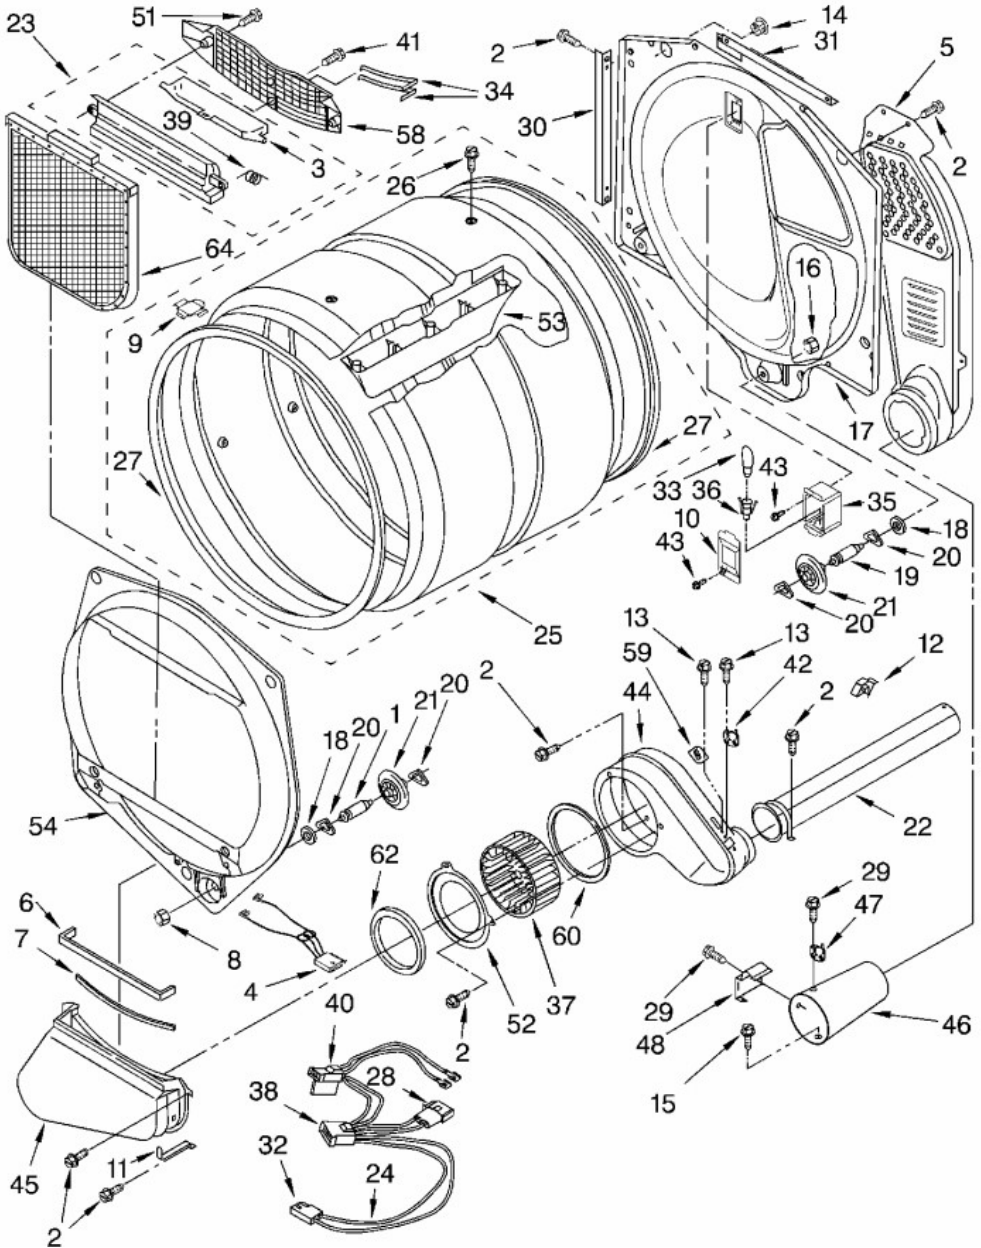




## Secadora Whirlpool 7MGW9200MWO

<b>No. Ilus.</b>	<b>DESCRIPCIÓN</b>	<b>No. de Parte</b>
<b>1</b>	Shaft, R.H. Thread	3399508
<b>2</b>	Screw, 8-18 x 1/2	488729
<b>3</b>	Door, Lint Screen	3394984
<b>4</b>	Harness, Sensor	3406653
<b>5</b>	Air Duct Assembly	3394346
<b>6</b>	Seal, Outlet Housing	697813
<b>7</b>	Seal, Drum Front	697813
<b>8</b>	Nut, 3/8 x 16(R.H.)	3359452
<b>9</b>	Drum Hole Plug	8066086
<b>10</b>	Lens, Drum Light	8532165
<b>11</b>	Bracket, Lint Duct	8529005
<b>12</b>	Clip, Exhaust Pipe	3388229
<b>13</b>	Screw, 8-18 x 5/16	3390646
<b>14</b>	Plug, Rear Bulkhead	8529007
<b>15</b>	Screw, 8-18 x 3/8	489069
<b>16</b>	Nut, 3/8-16 (L.H.)	3387709
<b>17</b>	Bulkhead, Rear	8520836
<b>18</b>	Washer, Support	3387459
<b>19</b>	Shaft, L.H. Thread	3399509
<b>20</b>	Ring, Tri	690997
<b>21</b>	Roller, Support	8536974
<b>22</b>	Exhaust Pipe	279936
<b>23</b>	Housing, Outlet	3394985
<b>24</b>	Harness, Gas	3401850
<b>25</b>	Complete Drum Assembly	8299966
<b>26</b>	Screw, 11-16 x 3/4	63027
<b>27</b>	Seal, Drum	697694
<b>28</b>	Plug, 3-Way	697779

<b>No. Ilus.</b>	<b>DESCRIPCIÓN</b>	<b>No. de Parte</b>
<b>29</b>	Screw, 8-18 x 3/8	90767
<b>30</b>	Channel Bracket, Rear Bulkhead (2)	8519221
<b>31</b>	Bracket, Upper Rear Bulkhead	8519275
<b>32</b>	Plug, 2-Way	717252
<b>33</b>	Bulb, Light	17512
<b>34</b>	Electrode, Sensor	3387223
<b>35</b>	Bracket, Drum Light	3977373
<b>36</b>	Socket Assembly	3403634
<b>37</b>	Wheel, Blower	697772
<b>38</b>	Connector, 3-Position	3403498
<b>39</b>	Spring, Lint Screen Door	3394986
<b>40</b>	Connector, 2-Position	3403499
<b>41</b>	Screw, 8-18 x 1/2	488729
<b>42</b>	Thermistor	3976615
<b>43</b>	Screw, 8-15 x 1/2	488729
<b>44</b>	Housing, Blower	8541568
<b>45</b>	Lint Duct Assembly	8530036
<b>46</b>	Funnel, Burner	8066047
<b>47</b>	Thermostat, High-Limit 205 F (96 C)	3403140
<b>48</b>	Sensor, Radiant	338906
<b>51</b>	Screw, 10-16 x 1	3387230
<b>52</b>	Cover, Blower (Includes Illus. No. 62)	279780
<b>53</b>	Baffle, Drum	279981
<b>54</b>	Bulkhead, Front	8519245
<b>58</b>	Grill, Outlet	8299979
<b>59</b>	Thermal Fuse	3392519
<b>60</b>	Seal, Cover Plate	697770
<b>62</b>	Seal, Lint Duct	697769
<b>64</b>	Lint, Screen	3390721




Secadora Whirlpool 7MGW9200MW0

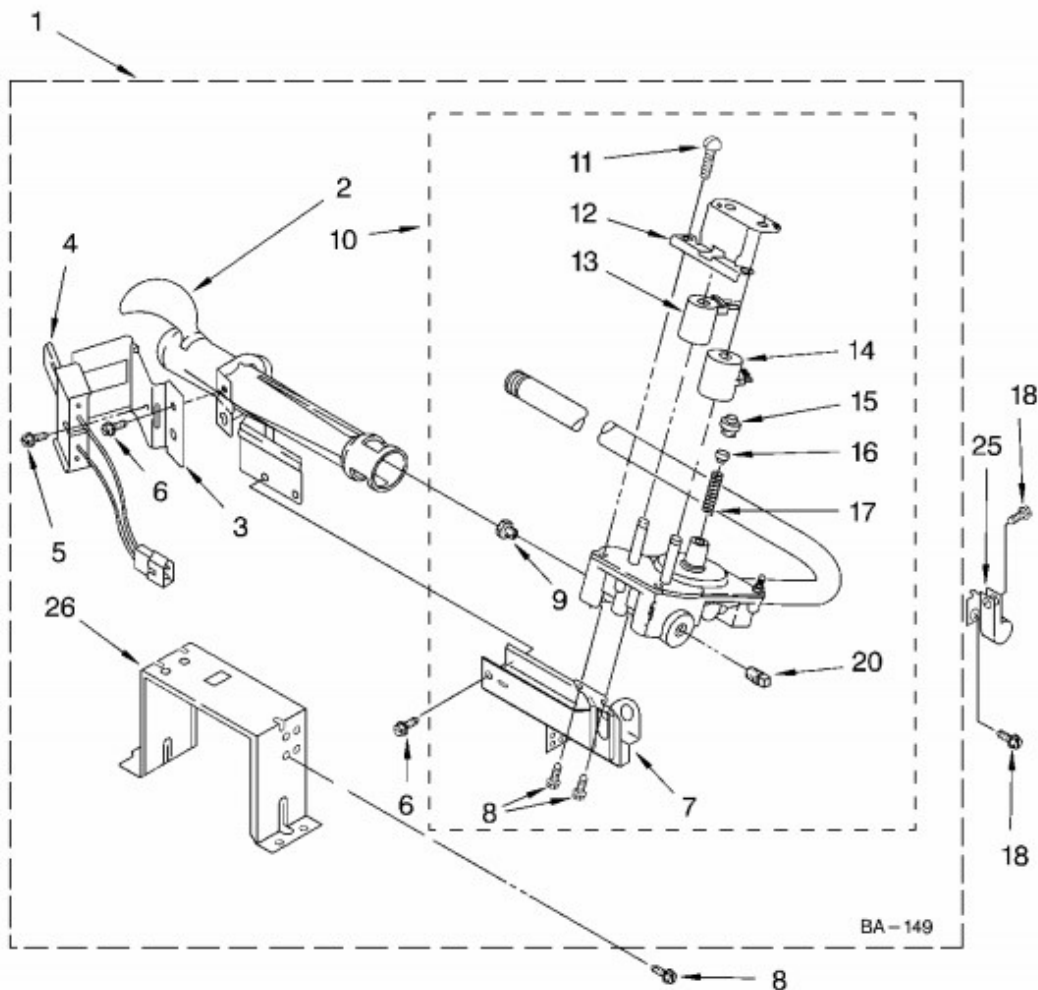

<b>No. Ilus.</b>	<b>DESCRIPCIÓN</b>	<b>No. de Parte</b>
<b>1</b>	Burner Assembly 60 Hz.	8318276
<b>2</b>	Tube, Burner	693140
<b>3</b>	Bracket, Ignitor	694298
<b>4</b>	Ignitor	279311
<b>5</b>	Screw & Washer (8-32 x 7/8)	3393909
<b>6</b>	Screw, 10-16 x 1/2	681414
<b>7</b>	Base, Burner	3389871
<b>8</b>	Screw, 8-18 x 3/8	90767
<b>9</b>	Orifice, Burner (Type 1)	234826
	Orifice, Burner (Type 4 (Butane))	229742
	Orifice, Burner (Type 4 (Propane))	234868
<b>10</b>	Valve, Gas 60 Hz. (Complete)	8318281
<b>11</b>	Screw, 8-32 x 1/2 (2)	694421
<b>12</b>	Bracket, Coil	694538
<b>13</b>	Coil, 60 Hz. (2 Terminal) (Main)	694540
<b>14</b>	Coil, 60 Hz. (Split) (3 Terminal)	694539
<b>15</b>	Leak, Limiter	694424
<b>16</b>	Screw, Regulator Adjustment	694423
<b>17</b>	Spring, Regulator	694422
<b>18</b>	Screw, 8-18 x 1/2	488729
<b>20</b>	Plug, Pipe	239822
<b>25</b>	Clamp, Pipe	3387561
<b>26</b>	Bracket, Support	3389889
	Following Parts Not Illustrated	
	Conversion Kit (Type (1) to Type	49572

Secadora Whirlpool 7MGW9200MW0

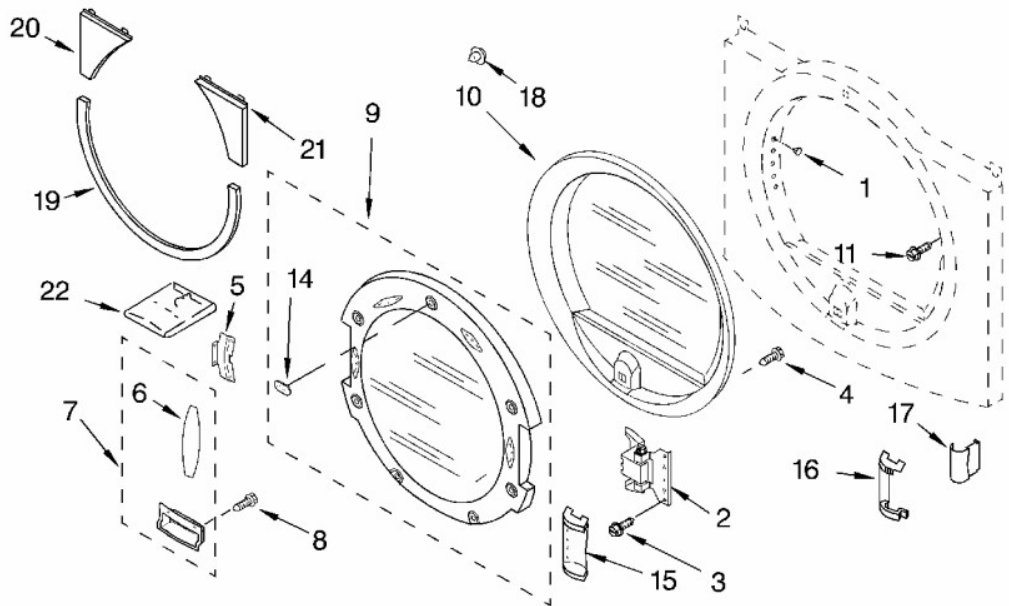




## Secadora Whirlpool 7MGW9200MWO

<b>No. Ilus.</b>	<b>DESCRIPCIÓN</b>	<b>No. de Parte</b>
<b>1</b>	Plug, Hole (5)	3404413
<b>2</b>	Door Hinge Assembly	8519419
<b>3</b>	Screw, 10-32 x 3/8	486146
<b>4</b>	Screw, 8-18 x 5/8	9742177
<b>5</b>	Bracket, Handle	8529539
<b>6</b>	Pad, Door Handle	8529930
<b>7</b>	Handle, Door Assembly (LH)	8529932
	Handle, Door Assembly (RH)	8529934
<b>8</b>	Screw, 10-16 x 1/2	308685
<b>9</b>	Door Assembly (Outer)	8541574
<b>10</b>	Door Assembly (Inner)	8519309
<b>11</b>	Screw, 8-18 x 11/16	355515
<b>14</b>	Badge, Assembly	3955775
<b>15</b>	Filler Handle (LH)	8528289
	Filler Handle (RH)	8528287
<b>16</b>	Cover-Hinge, Stationary (LH)	8528291
	Cover-Hinge Stationary (RH)	8528293
<b>17</b>	Cover-Hinge, Rotating	8528295
<b>18</b>	Clip, Trim Panel	8181929
<b>19</b>	Trim & Clip Assembly (Lower)	8533767
<b>20</b>	Trim & Clip Assembly (LH)	8529526
<b>21</b>	Trim & Clip Assembly (RH)	8529528
<b>22</b>	Kit, Door Reversing	3979304

Secadora Whirlpool 7MGW9200MW0

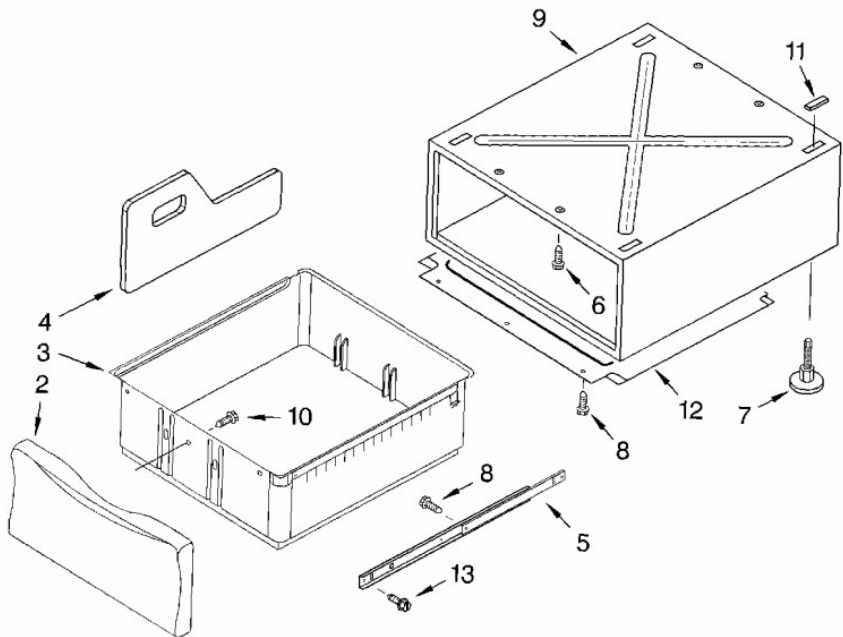



Secadora Whirlpool 7MGGW9200MWO

<b>No. Ilus.</b>	<b>DESCRIPCIÓN</b>	<b>No. de Parte</b>
<b>2</b>	Drawer Front Assembly (White)	8537870
	Drawer Front Assembly (Biscuit)	8537871
	Drawer Front Assembly (Graphite)	8537872
	Drawer Front Assembly (Pewter)	8537908
<b>3</b>	Drawer Bin	8537883
<b>4</b>	Divider, Drawer (Set Of 2)	8181777
<b>5</b>	Slide Assembly	8537850
<b>6</b>	Screw	3400111
<b>7</b>	Foot Assembly	8537852
<b>8</b>	Screw, 6-20 x 3/8	3388228
<b>9</b>	Cabinet (Not Serviced)	(Not Serviced)
<b>10</b>	Screw, 8-18 x 1/2	3400842
<b>11</b>	Pad (4)	8537863
<b>12</b>	Pan, Bottom	8537853
<b>13</b>	Screw	3400618