 


Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas

Secadora Whirlpool 7MLGR3624JT4

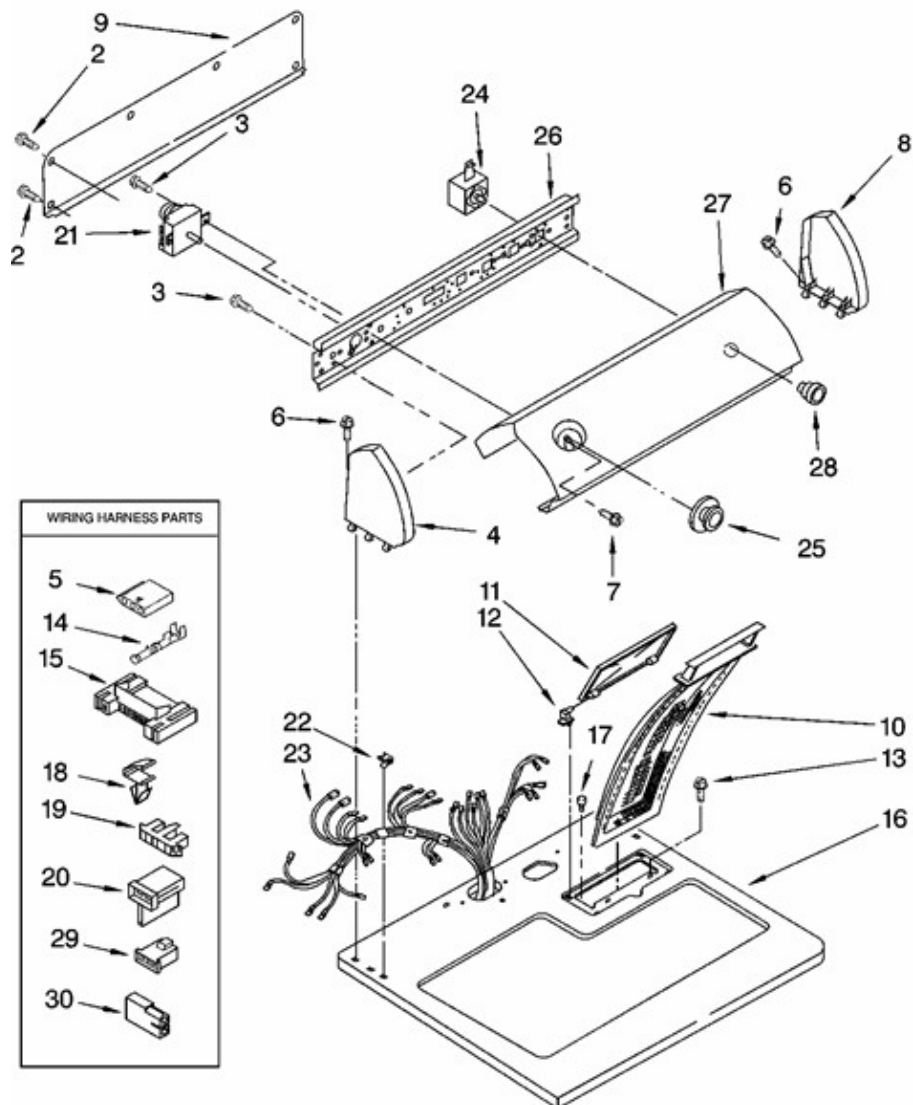

Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas



Secadora Whirlpool 7MLGR3624JT4

No. Ilus.	DESCRIPCIÓN	No. de Parte
2	Screw, Hex Head	489069
3	Screw, 8-18 x 5/16	3390646
4	Cap, End (L.H.) (White)	279962
	Cap, End (L.H.) (Biscuit)	279965
5	Connector	3936144
6	Screw, Console	388326
7	Screw, Grounding	3400859
8	Cap, End (R.H.) (White)	279962
	Cap, End (R.H.) (Biscuit)	279965
9	Panel, Rear Console	8274261
10	Screen, Lint	339392
11	Cover, Lint Screen (White)	8283378
	Cover, Lint Screen (Biscuit)	8283380
12	Hinge, R.H.	3978605
	Hinge, L.H.	3978606
13	Screw, 8-18 x 5/8	487240
14	Terminal	94614
15	Connector (Motor)	3395683
16	Top (White)	8521918
	Top (Biscuit)	8521920
17	Bumper, Lint Lid	17258
18	Clip, Harness	3394427
19	Connector (Timer)	3397269
20	Connector, 2 Position (Gas Valve)	3403499
21	Timer, 60 Hz.	3976575
22	Nut, Push-In (2)	357213
23	Harness, Wiring	8299875
24	Switch, Push-To-Start	3977456

Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas



Secadora Whirlpool 7MLGR3624JT4


No. Ilus.	DESCRIPCIÓN	No. de Parte
25	Timer Knob Assembly (White)	8312687
	Timer Knob Assembly (Biscuit)	8271404
26	Bracket, Control	8271418
27	Panel, Control (White)	8543126
	Panel, Control (Biscuit)	8528133
28	Knob, Push-To-Start (White)	8271341
	Knob, Push-To-Start (Biscuit)	8271349
29	Connector, 3 Position (Gas Valve)	3403498
30	Receptacle (2-Way)	717252

Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas

 Secadora Whirlpool 7MLGR3624JT4

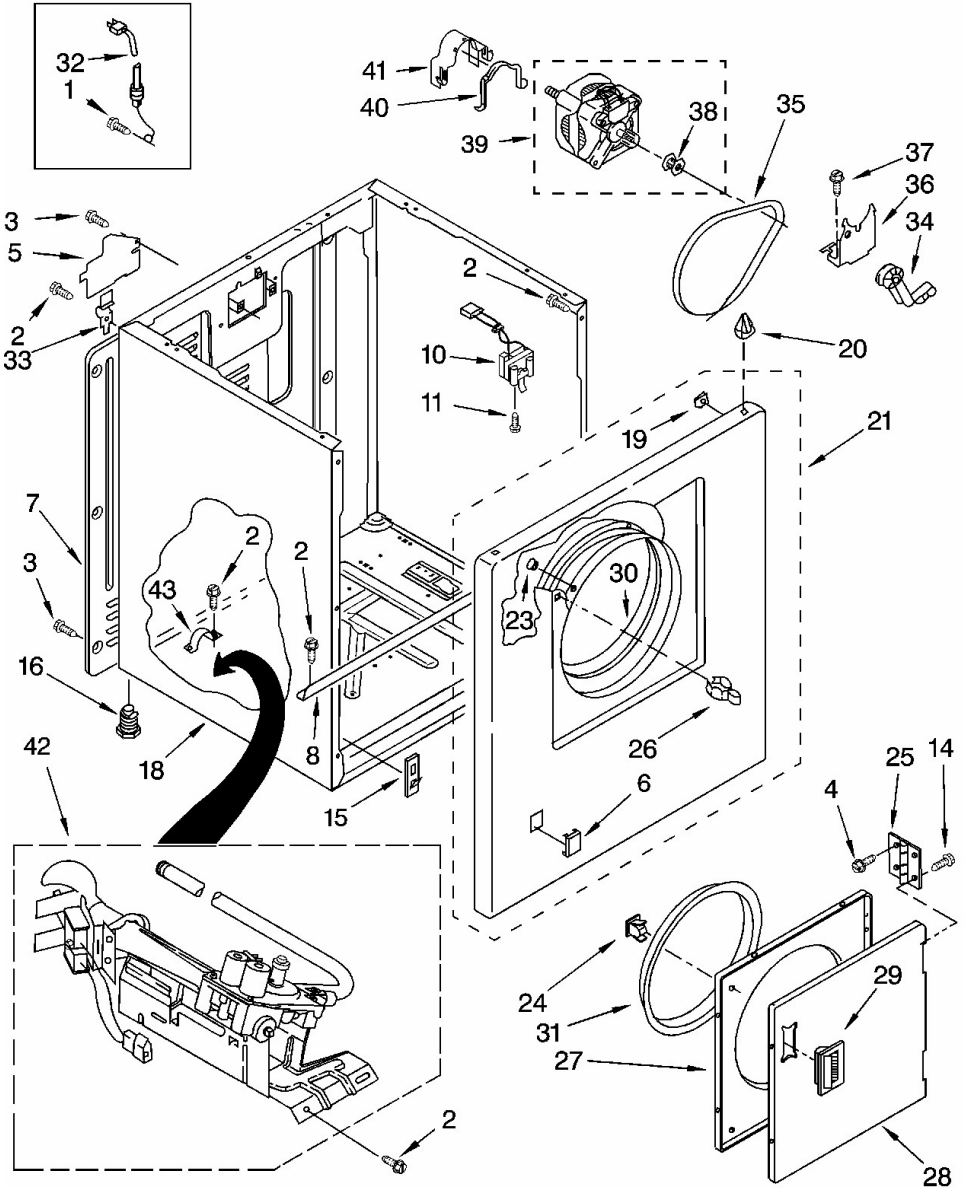

Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas



Secadora Whirlpool 7MLGR3624JT4

No. Ilus.	DESCRIPCIÓN	No. de Parte
1	Screw, 10-32 x 5/8	4331106
2	Screw, 10-16 x 1/2	681414
3	Screw, Hex Head	489069
4	Screw, 8-18 x 1/2	488627
5	Cover, Block	3396795
6	Plug, Front Panel (White)	3394975
	Plug, Front Panel (Biscuit)	3394978
7	Panel, Rear	280040
8	Bracket, Cabinet	8541400
10	Door Switch Assembly	3406102
11	Screw, 6-20 x 7/8	3395530
14	Screw, 8-18 x 3/8	694091
15	Clip, Front Panel	3394083
16	Foot, Dryer (4)	3392100
18	Cabinet (Includes Illus. 8) (White)	8533643
	Cabinet (Includes Illus. 8) (Biscuit)	3977306
19	Clip, Ground (2)	98234
20	Lock, Front Top (2)	18776
21	Front Panel Assembly (White)	280022
	Front Panel Assembly (Biscuit)	280021
23	Clip, Felt Pad	279220
24	Catch, Door	3389441
25	Hinge & Pin Assembly (2)	348023
26	Strike, Door	279570
27	Door, Rear	695656
28	Door, Front (White)	348205
	Door, Front (Biscuit)	3978598

Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas



Secadora Whirlpool 7MLGR3624JT4


No. Ilus.	DESCRIPCIÓN	No. de Parte
29	Handle, Door (White)	686711
	Handle, Door (Biscuit)	3978592
30	Seal & Bearing Assembly	279264
31	Seal, Door	3390734
32	Cord, Power	3401402
33	Hinge, Top (2)	238088
34	Idler & Pulley Assembly	691366
35	Belt, Drive	341241
36	Base, Motor	687079
37	Bolt, 5/16-18 x 3/4	3400500
38	Pulley, 60 Hz.	3394341
39	Motor, 60 Hz.	279827
40	Clamp, Motor	343481
41	Clamp, Motor (W/Shield)	3404162
42	Burner Assembly, 60 Hz.	279990
43	Clamp, Pipe	341029
	ACCESSORY PARTS	
	Dry Rack	689790

Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas

 Secadora Whirlpool 7MLGR3624JT4

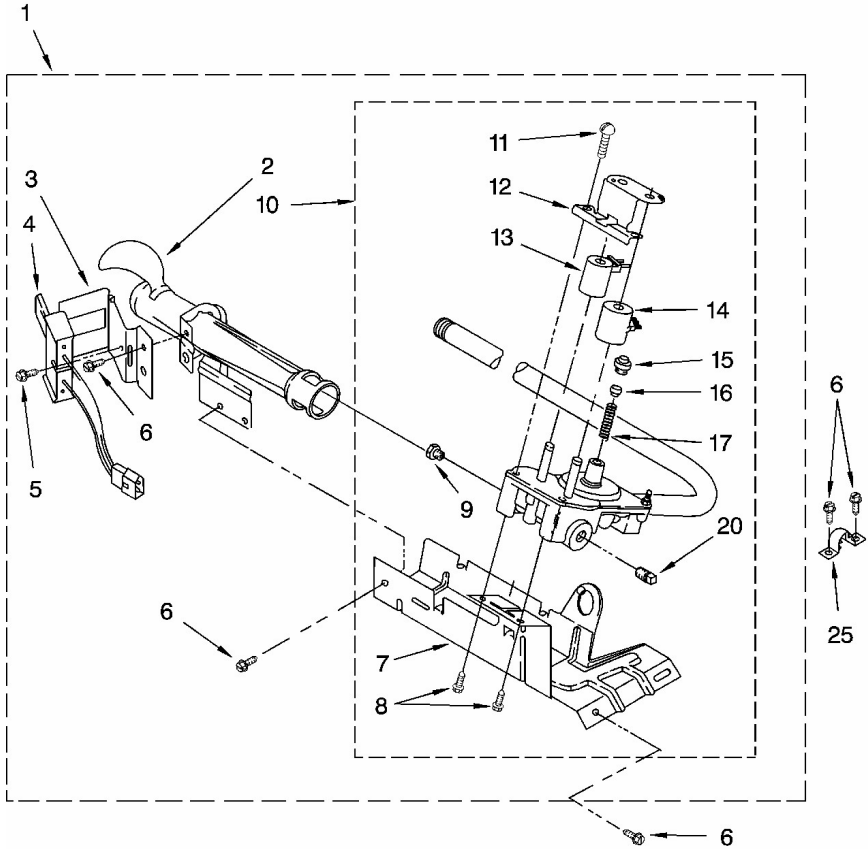

Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas



Secadora Whirlpool 7MLGR3624JT4


No. Ilus.	DESCRIPCIÓN	No. de Parte
1	Burner Assembly 60 Hz. (Type 1)	279990
2	Tube, Burner	693140
3	Bracket, Ignitor	694298
4	Ignitor	279311
5	Screw & Washer (8-32 x 5/8)	3393909
6	Screw, 10-16 x 1/2	681414
7	Base, Burner	693986
8	Screw, 8-18 x 3/8	90767
9	Orifice, Burner (Type 1)	234826
	Orifice, Burner (Type 4 (Butane))	229742
	Orifice, Burner (Type 4 (Propane))	234868
10	Valve, 60 Hz. (Includes Pipe & Illus. 7)	8318277
11	Screw, 8-32 x 1/2 (2)	694421
12	Bracket, Coil	694538
13	Coil, 60 Hz. (2 Terminal) (Main)	694540
14	Coil, 60 Hz. (Split) (3 Terminal)	694539
15	Leak Limiter	694424
16	Screw, Regulator Adjustment	694423
17	Spring, Regulator	694422
20	Plug, Pipe	239822
25	Clamp, Pipe	341029
	Conversion Kit L.P.G.	49572

Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas

 Secadora Whirlpool 7MLGR3624JT4

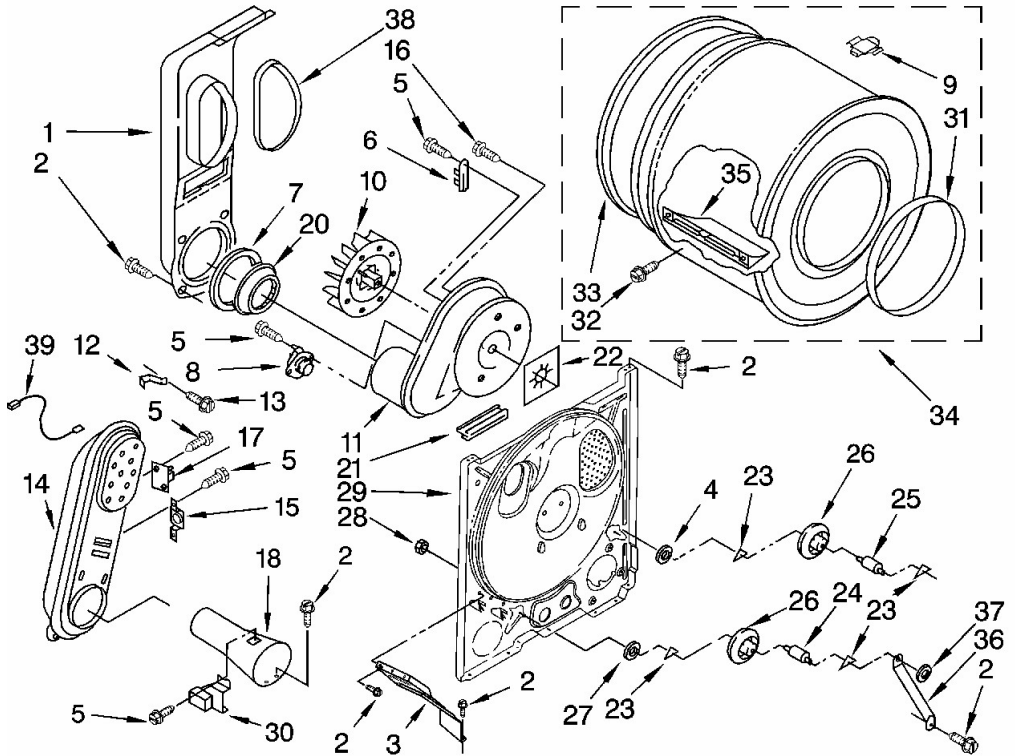

Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas



Secadora Whirlpool 7MLGR3624JT4

No. Ilus.	DESCRIPCIÓN	No. de Parte
1	Lint Chute Assembly	279505
2	Screw, 10-16 x 1/2	681414
3	Bracket, Bulkhead	3406022
4	Washer, Support	3388703
5	Screw, 8-18 x 3/8	90767
6	Fuse, Thermal	3392519
7	Seal, Lint Chute	347139
8	Thermostat, 150 F(60C)	694674
9	Drum Hole Plug	8066086
10	Wheel, Blower (Includes Illus. 22)	279711
11	Housing, Blower	8557384
12	Clip	279771
13	Screw, 8-18 x 5/8	489463
14	Box, Heater	279980
15	Thermostat, 205 F (96C)	3403140
16	Screw, 8-18 x 1/2	488729
17	Kit, Thermal Cut-Off (Includes Illus. 15)	280010
18	Funnel, Burner	8066048
20	Shield, Exhaust	696302
21	Pad, Blower Housing	786068
22	Seal, Blower Shaft	3394196
23	Ring, Tri	690997
24	Shaft, L.H.	3399506
25	Shaft, R.H.	339489
26	Roller, Support	349241T
27	Washer, Support	348197
28	Nut, 3/8-16	3359452
29	BULKHEAD	279793

Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas



Secadora Whirlpool 7MLGR3624JT4

No. Ilus.	DESCRIPCIÓN	No. de Parte
30	Sensor, Radiant	338906
31	Ring, Bearing	3394508
32	Screw, 11-16 x 3/4	63027
33	Seal, Rear Drum	239087
34	Drum Assembly	3396775
35	Baffle, Drum	342847
36	Bracket, Support	3976435
37	Clip	90296
38	Seal	339956
39	Wire, Jumper	3401707