


Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas

Secadora Whirlpool 7MMGDC400DW03

TOP AND CONSOLE PARTS

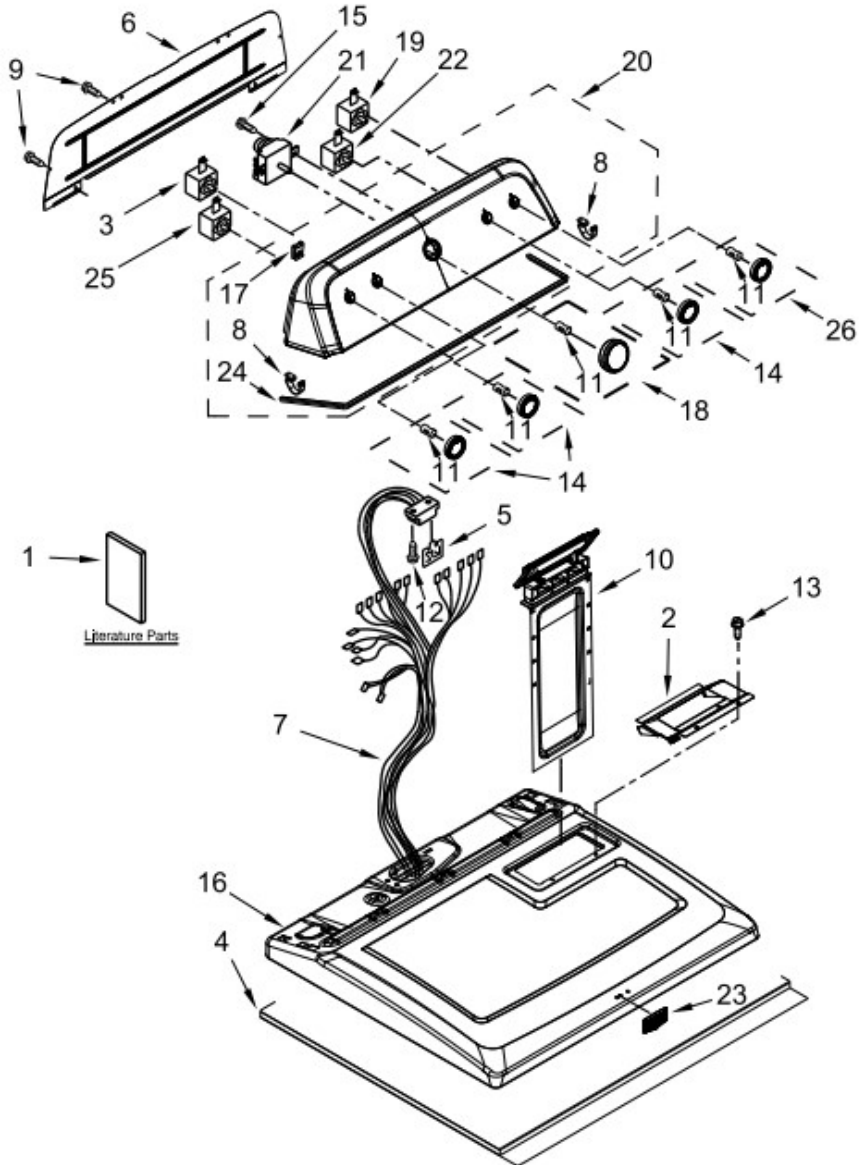



Secadora Whirlpool 7MMGDC400DW03

TOP AND CONSOLE PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts
	W10652705	Use and Care Guide
	W10658641	Installation Instructions
	W10876314	Wiring Diagram
2	W10662472	Collar, Lint Chute
3	W10627711	Switch, Rotary (Signal)
4	W10836097	Panel, Dampening
5	W10476828	Control, Electronic
6	W10416486	Panel, Rear Console
7	W10865754	Harness, Main
8	8312709	Clip, Console

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
9	693995	Screw
10		Lint Screen
	W10508973	White
11		Knob, Push To Start
	W10565871	Grey
12	3393008	Screw
13	688983	Screw
14		Assembly, Control Knob
	W10562155	Grey
15	3348629	Screw
16		Top
	W10513432	White
17	W10298336	Nut, "U"

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
18		Assembly, Timer Knob
	W10558463	Grey
19	W10563095	Switch, Rotary (Push To Start)
20		Assembly, Console
	W10652553	White
21	W10642928	Assembly, Timer
22	W10562713	Switch, Rotary (Temperature)
23	W10492808	Badge
24	W10588162	Seal, Console
25	W10563094	Switch, Rotary (Wrinkle Control)


Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas

Secadora Whirlpool 7MMGDC400DW03

CABINET PARTS

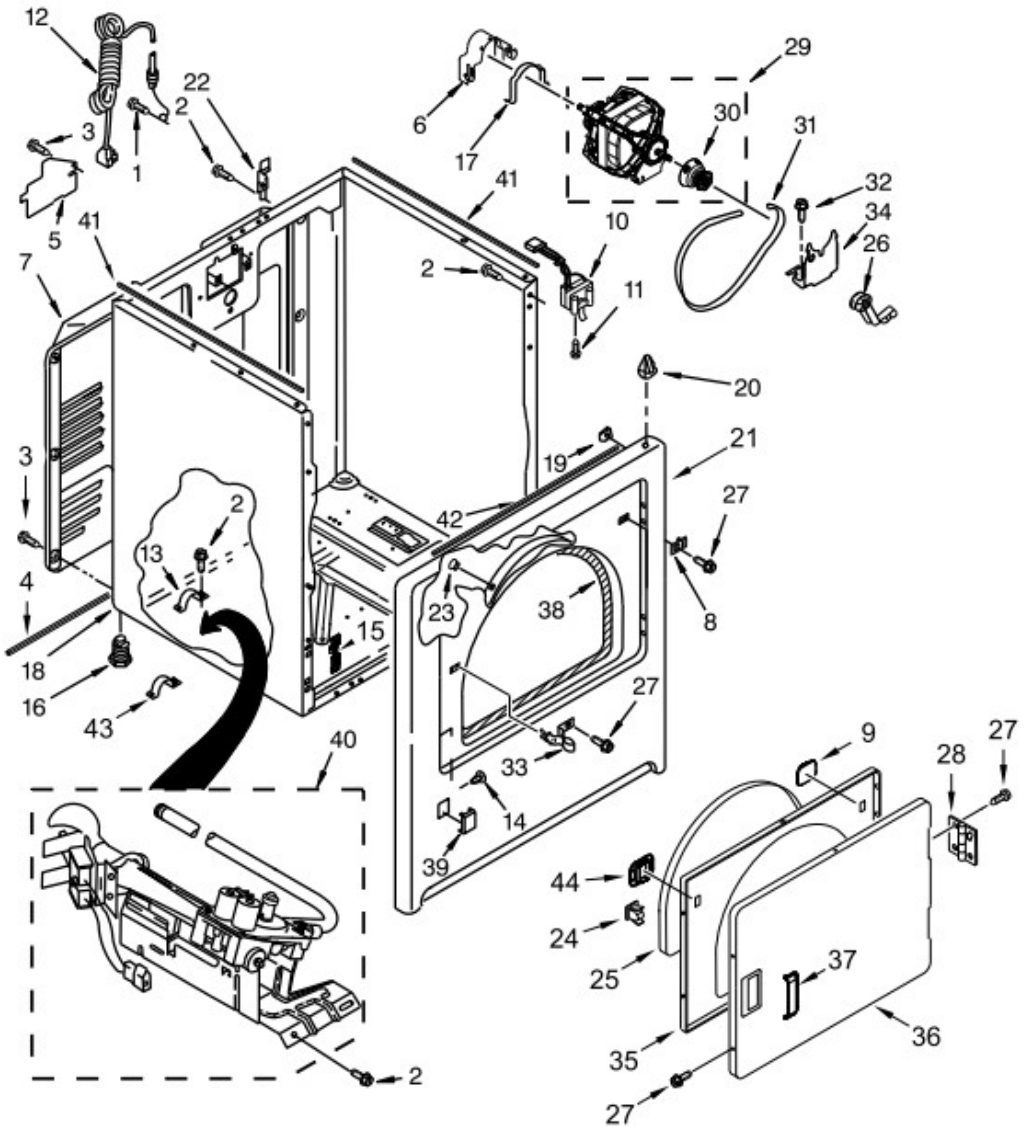



Secadora Whirlpool 7MMGDC400DW03

CABINET PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	3390631	Screw	17	3404162	Clamp, Motor (With Shield)	32	3400500	Bolt
2	343641	Screw	18		Cabinet	33	3403431	Strike, Door
3	693995	Screw		8530603	White	34	348780	Base, Motor
4	W10841728	Seal, Spill Guard	19	98234	Clip, Ground	35	W10463967	Door, Inner
5	3396795	Cover, Terminal Block	20	8066092	Lock, Front Top	36		Door, Front
6	W10121316	Clamp, Motor Mount	21		Panel, Front		W10714510	White
7	W10571724	Panel, Rear		W10664698	White	37		Handle, Door
8	W10567345	Plug, Strike	22	8066217	Hinge, Top		W10714516	White
9	W10529198	Cover, Door Catch	23	685203	Clip, Felt Pad	38	W10803476	Assembly, Seal and Bearing
10	W10569603	Switch, Door	24	W10610880	Assembly, Door Catch	39		Plug, Front Panel
11	697773	Screw	25	W10730752	Seal, Door		8564457	White
12	344020	Cord, Power	26	691366	Idler Assembly	40	W10336852	Burner Assembly (60 Hz) (Type 1 and 2)
13	341029	Clamp, Pipe	27	342055	Screw	41	W10316529	Seal, Foam
14	3404413	Plug, Hole (White)	28	W10362431	Assembly, Hinge and Pin	42	W10316619	Seal, Spill Guard
15	W10775448	Clip, Front Panel	29	W10396032	Assembly, Motor	43	W10727507	Clamp, Pipe
16	W10561321	Foot, Dryer	30	8066184	Pulley, Motor	44	W10529197	Bezel, Door Catch
			31	W10198086	Belt, Drive			


Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas

Secadora Whirlpool 7MMGDC400DW03

BULKHEAD PARTS

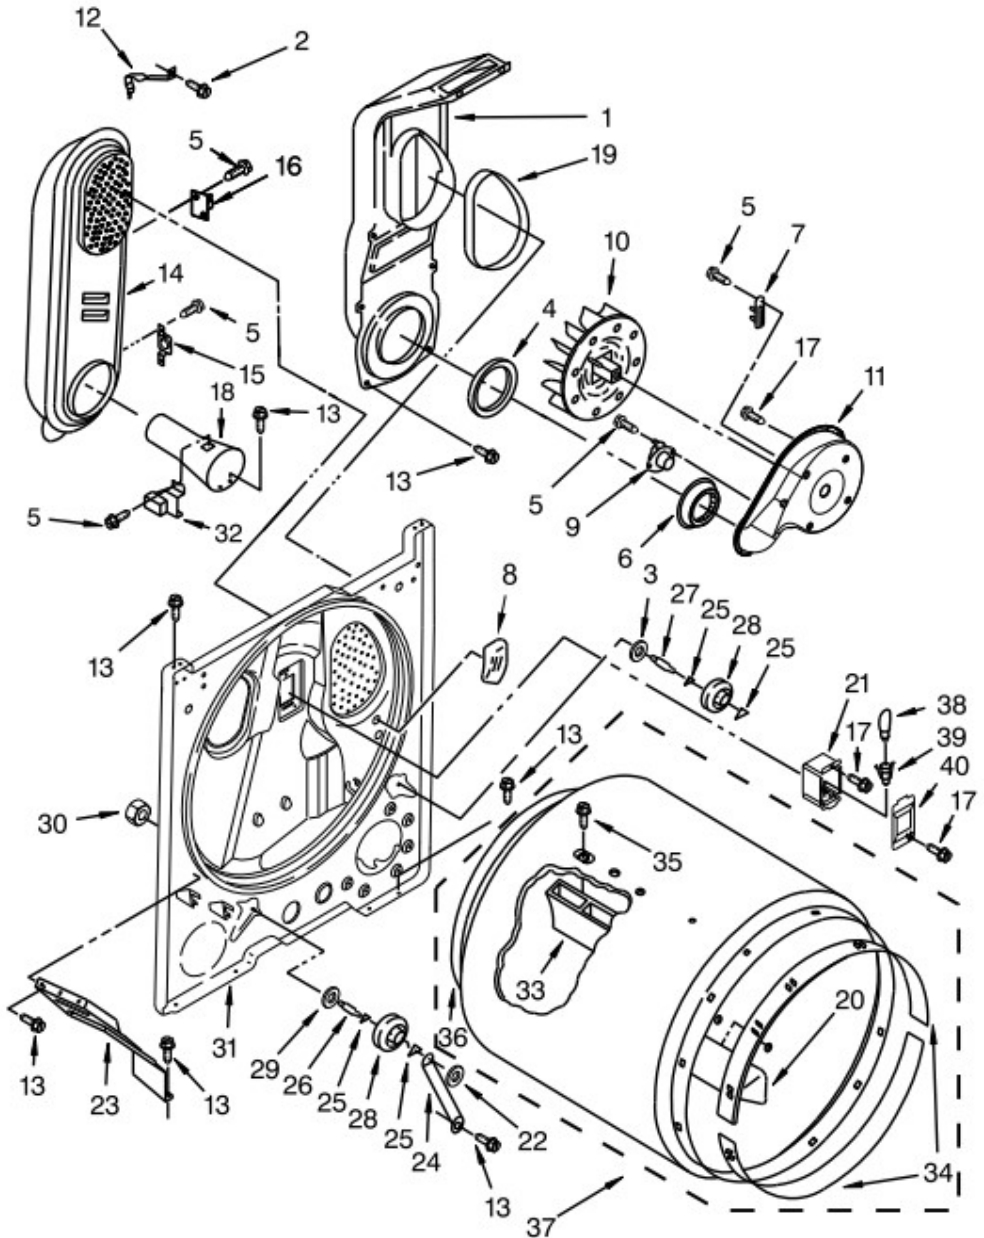




Secadora Whirlpool 7MMGDC400DW03

BULKHEAD PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	348368	Assembly, Lint Chute	15	W10423382	Thermostat, High Limit SPST (180F)	27	W10359269	Shaft, Drum Roller - Right Hand Thread
2	489463	Screw	16	W10480709	Kit, Thermal Cut-Off (Includes Thermostat)	28	W10314171	Roller, Support
3	3388703	Washer	17	3390647	Screw	29	348197	Washer
4	347139	Seal, Lint Chute	18	8066049	Funnel, Burner Light	30	W10298789	Nut, Hex
5	90767	Screw	19	339956	Seal	31	3403414	Bulkhead
6	W10389567	Shield, Exhaust	20	3403636	Baffle, Drum (Short)	32	338906	Sensor, Radiant
7	3392519	Fuse, Thermal (91C)	21	8578825	Bracket, Drum Light	33	692490	Baffle, Drum (Long)
8	W10681051	Pad, Sensor	22	90296	Nut, Push On	34	692526	Bearing, Ring
9	8318268	Thermostat	23	3406022	Bracket, Bulkhead Chute	35	W10219342	Screw
10	694089	Wheel, Blower	24	3976434	Bracket, Support	36	W10725245	Seal, Rear Drum
11	8577230	Housing, Blower	25	W10512946	Washer, Tri Ring	37	W10757750	Assembly, Drum (Complete)
12	3398161	Clip, Heater Box	26	W10359270	Shaft, Drum Roller - Left Hand Thread	38	3406124	Bulb, Light
13	343641	Screw				39	W10214261	Socket, Light
14	8530285	Box, Heater (96C)				40	3402841	Lens, Drum Light

BURNER ASSEMBLY PARTS

USE WITH TYPE 1 - NATURAL, TYPE 2 - MIXED,
AND TYPE 4 - LIQUEFIED PROPANE AND BUTANE GASES

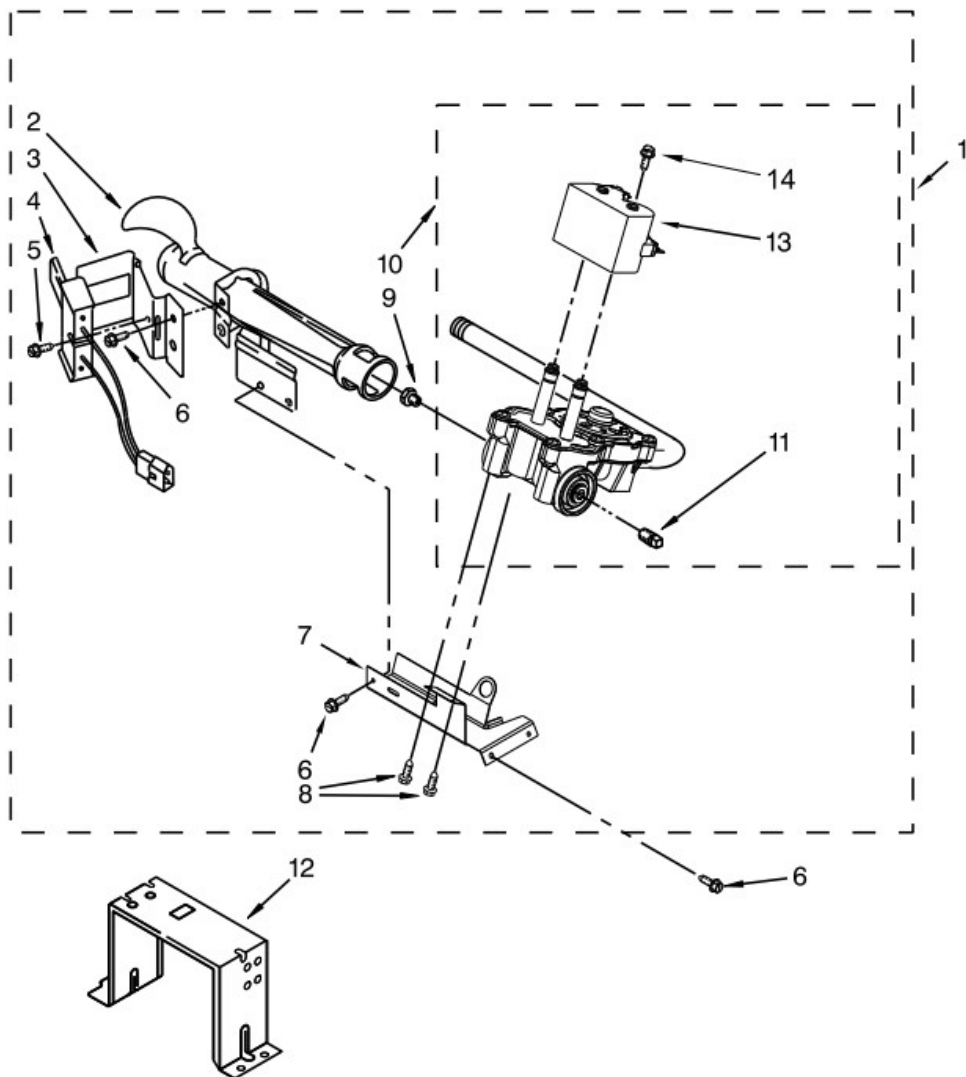



Secadora Whirlpool 7MMGDC400DW03

BURNER ASSEMBLY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10336852	Burner Assembly (60 Hz) (Type 1 and 2)
2	688617	Tube, Burner
3	694298	Bracket, Ignitor
4	686590	Ignitor
5	W10366705	Screw
6	343641	Screw

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
7	693986	Base, Burner
8	3387057	Screw
9		Orifice, Burner
	234826	Type 1 (Natural)
10	W10304604	Valve, Gas (60 Hz)
11	W10295523	Pipe Plug

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
12	3389889	Bracket, Support
13	W10328463	Coil (60 Hz)
14	326049536	Screw
		Following Parts Not Illustrated
	49572A	Conversion Kit (Type 1 and 2) to Type (4) L.P.G.