


Secadora Maytag 7MMGDX655EW1



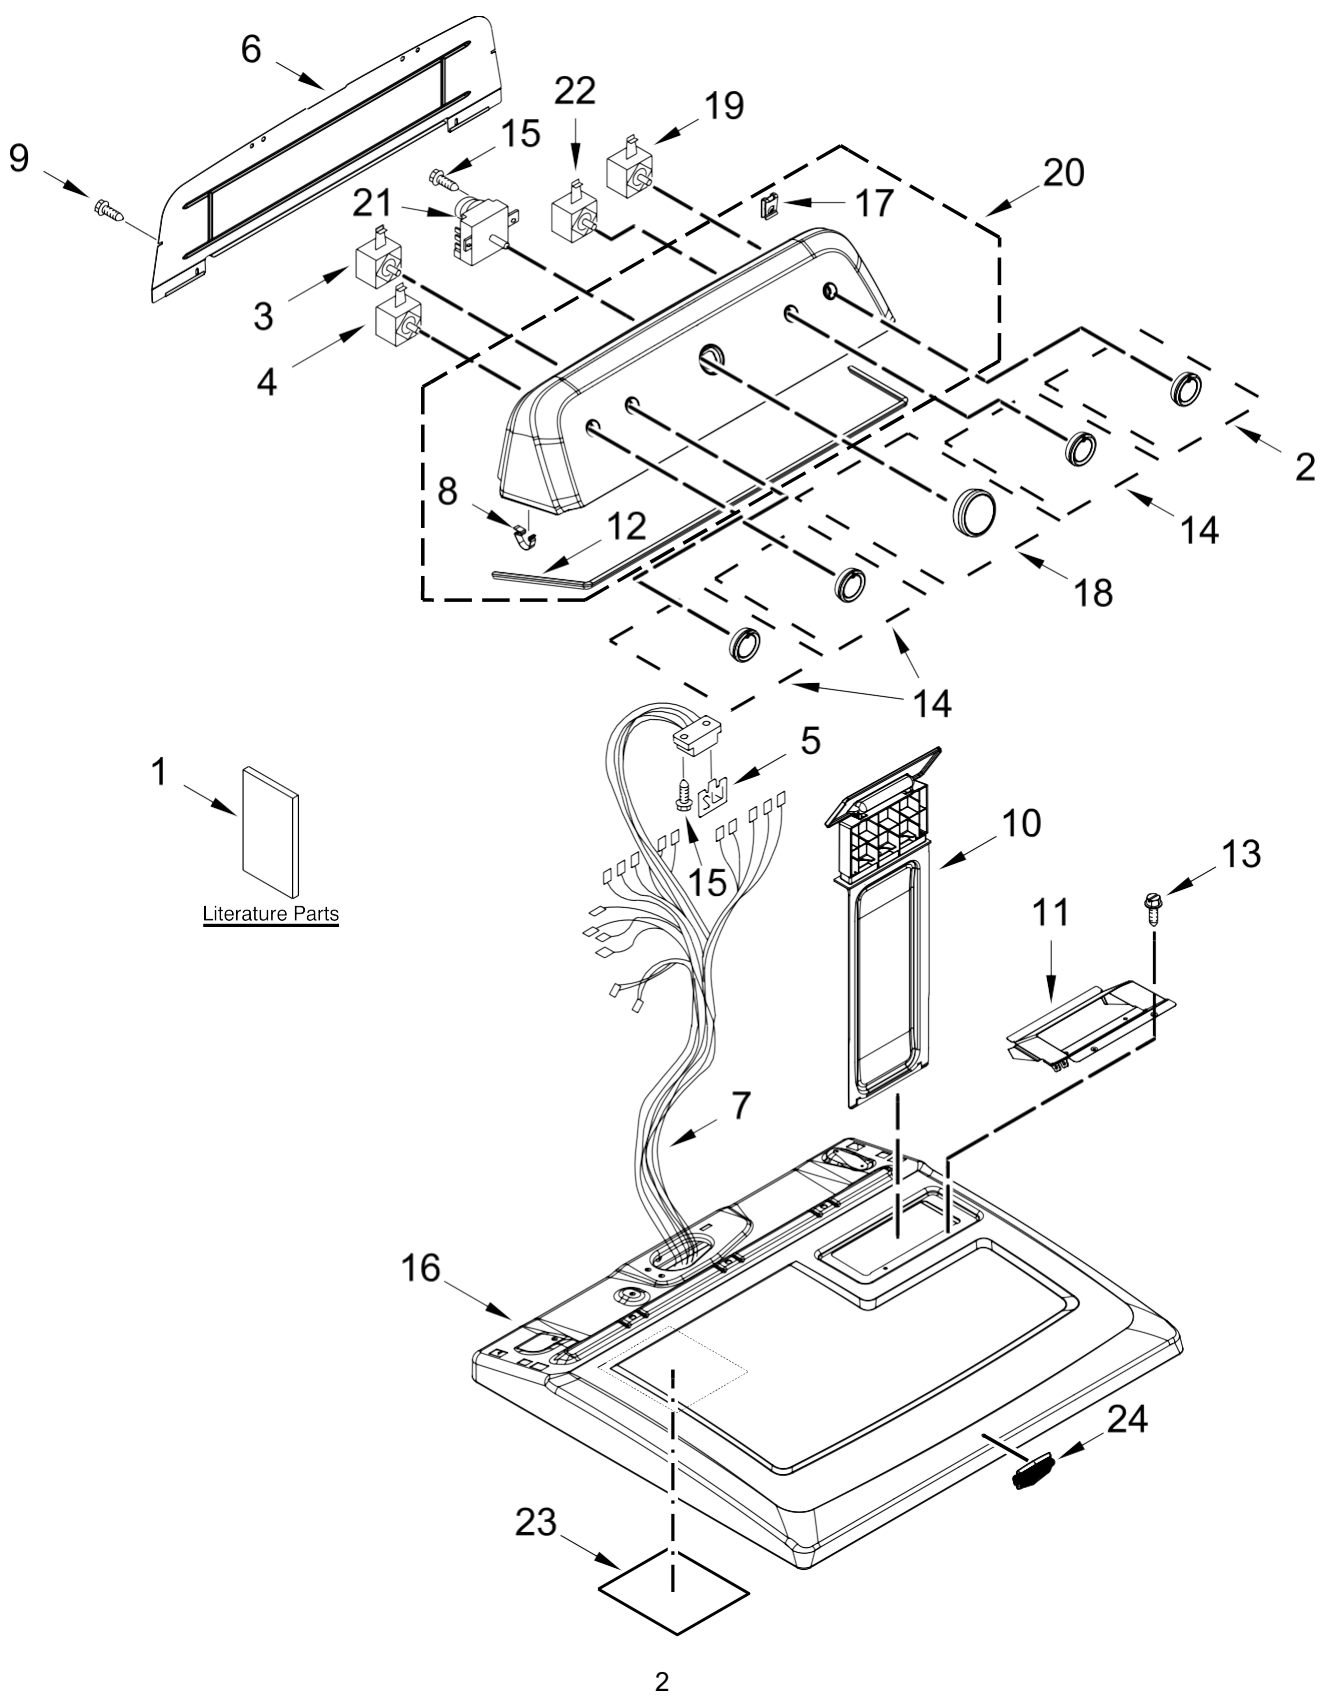


Secadora Maytag 7MMGDX655EW1

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts
	W10807513	Installation Instructions
	W10807509	Use and Care Guide
	W10876314	Wiring Diagram
2		Assembly, Push To Start Knob
	W10565871	Grey
3	W10627711	Switch, Rotary(Signal)
4	W10562713	Switch, Rotary (Temperature)
5	W10476828	Control, Electronic
6	W10416486	Panel, Rear Console
7	W10865754	Harness, Main
8	8312709	Clip, Console

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
9	8533974	Screw
10		Lint Screen
	W10508973	White
11	W10662472	Collar, Lint Chute
12	W10588162	Seal, Console
13	688983	Screw
14		Assembly, Control Knob
	W10562155	Grey
15	3348629	Screw
16		Top
	W10695517	White
17	W10298336	Nut, "U"
18		Assembly, Timer Knob
	W10558463	Grey

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
19	W10563095	Switch, Rotary (Push To Start)
20		Assembly, Console
	W10789662	White
21	W10642928	Assembly, Timer
22	W10563094	Switch, Rotary (Wrinkle Control)
23	W10836097	Panel, Dampening
24	W10612925	Badge

Secadora Maytag 7MMGDX655EW1

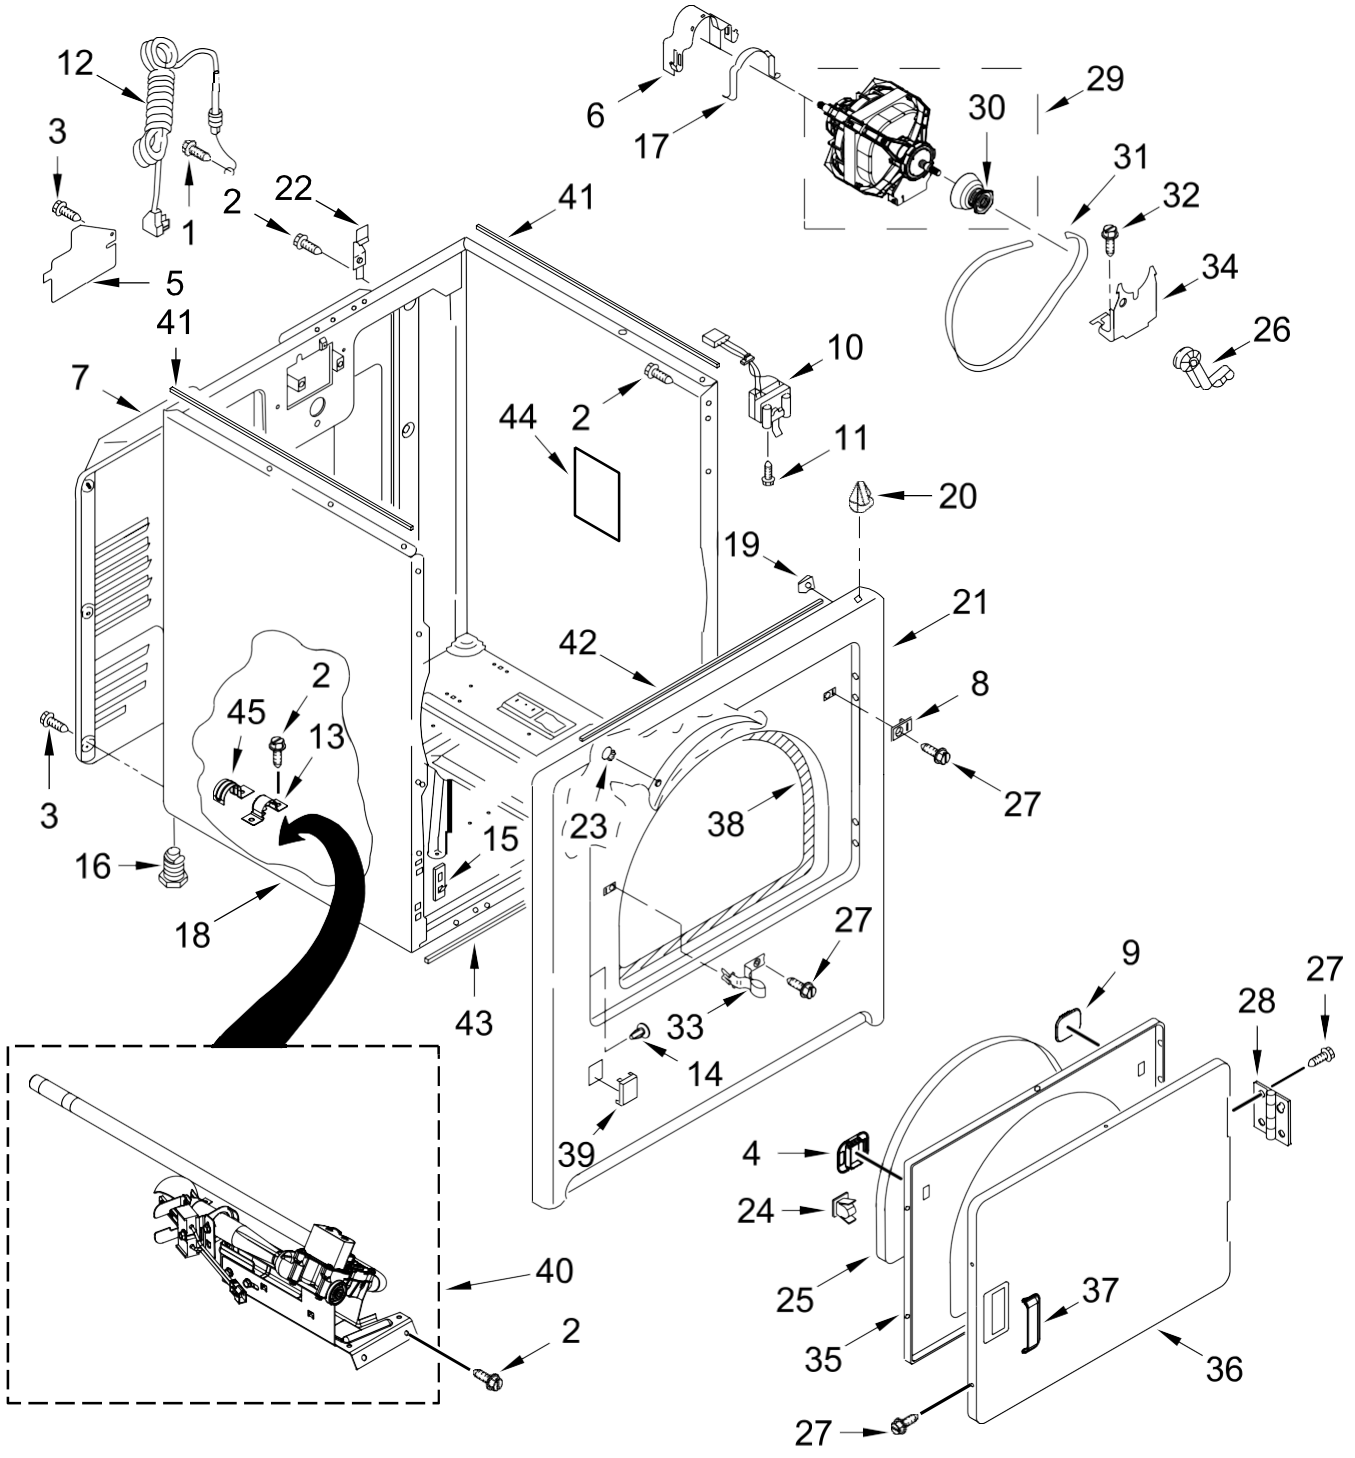




Secadora Maytag 7MMGD655EW1

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	3390631	Screw
2	343641	Screw
3	693995	Screw
4	W10529197	Bezel, Door Catch
5	3396795	Cover, Terminal Block
6	W10121316	Clamp, Motor Mount
7	W10571724	Panel, Rear
8	W10567345	Plug, Strike
9	W10529198	Cover, Door Catch
10	W10569603	Switch, Door
11	697773	Screw
12	344020	Cord, Power
13	341029	Clamp, Pipe
14	3404413	Plug, Hole (White)
15	W10775448	Clip, Front Panel
16	W10561321	Foot, Dryer
17	3404162	Clamp, Motor (With Shield)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
18		Cabinet
	8530603	White
19	98234	Clip, Ground
20	8066092	Lock, Front Top
21		Panel, Front
	W10664698	White
22	8066217	Hinge, Top
23	685203	Clip, Felt Pad
24	W10610880	Assembly, Door Catch
25	W10730752	Seal, Door
26	691366	Idler Assembly
27	342055	Screw
28	W10362431	Assembly, Hinge and Pin
29	W10396032	Assembly, Motor
30	8066184	Pulley, Motor
31	W10198086	Belt, Drive
32	3400500	Bolt
33	3403431	Strike, Door

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
34	348780	Base, Motor
35	W10463967	Door, Inner
36		Door, Outer
	W10714510	White
37		Handle, Door
	W10714516	White
38	W10803476	Assembly, Seal and Bearing
39		Plug, Front Panel
	8564457	White
40	W10336852	Burner Assembly (60 Hz) (Type 1 and 2)
41	W10316529	Seal, Foam
42	W10316619	Seal, Spill Guard
43	W10841728	Seal, Spill Guard
44	W10836097	Panel, Dampening
45	W10727507	Clamp, Pipe

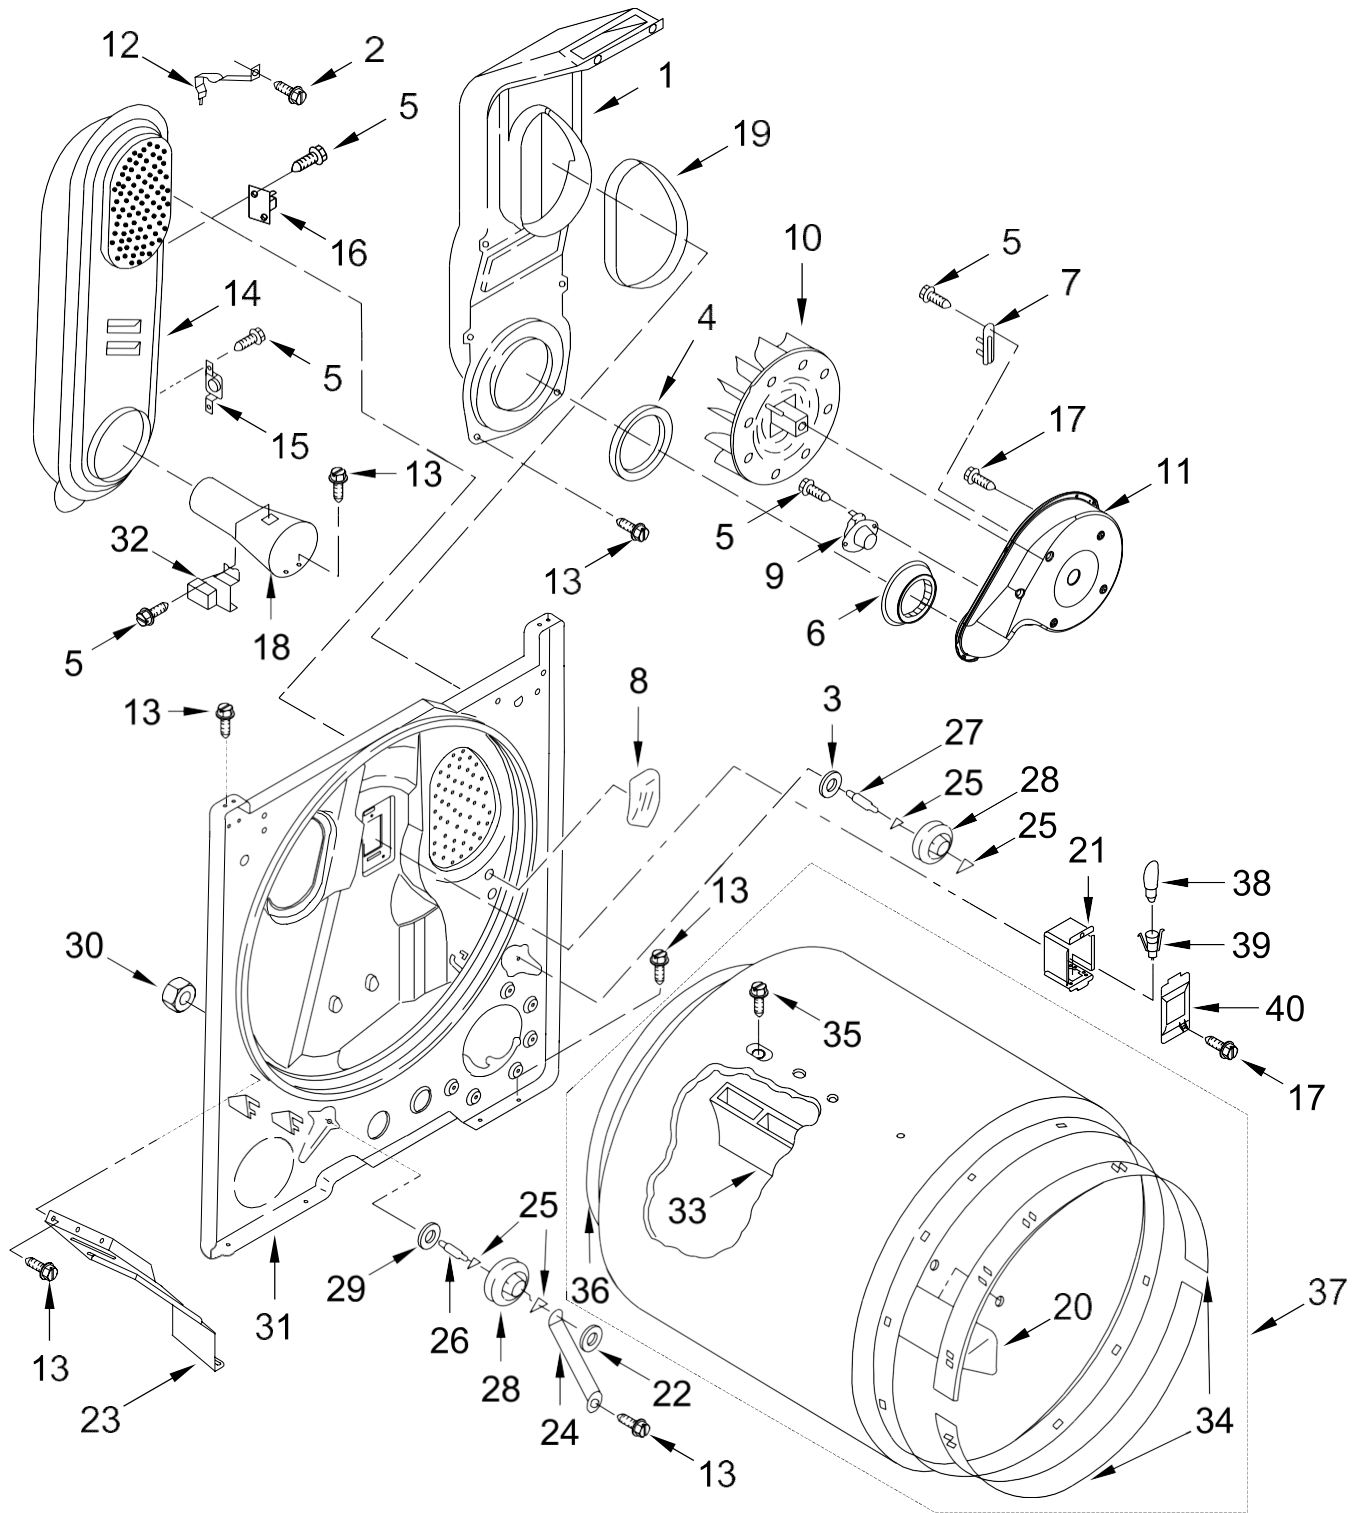




Secadora Maytag 7MMGD655EW1

<u>Illus.</u> <u>No.</u>	<u>Part No.</u> <u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u> <u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u> <u>Description</u>
1	348368 Assembly, Lint Chute	15	W10423382 Thermostat, High Limit SPST (180F)	27	W10359269 Shaft, Drum Roller - Right Hand Thread
2	489463 Screw	16	W10480709 Kit, Thermal Cut-Off (Includes Thermostat)	28	W10314171 Roller, Support
3	3388703 Washer	17	3390647 Screw	29	348197 Washer
4	347139 Seal, Lint Chute	18	8066049 Funnel, Burner Light	30	W10298789 Nut, Hex
5	90767 Screw	19	339956 Seal	31	3403414 Bulkhead
6	W10389567 Shield, Exhaust	20	3403636 Baffle, Drum (Short)	32	338906 Sensor, Radiant
7	3392519 Fuse, Thermal (91C)	21	8578825 Bracket, Drum Light	33	692490 Baffle, Drum (Long)
8	W10681051 Pad, Sensor	22	90296 Nut, Push On	34	692526 Bearing, Ring
9	8318268 Thermostat	23	3406022 Bracket, Bulkhead Chute	35	W10219342 Screw
10	694089 Wheel, Blower	24	3976434 Bracket, Support	36	W10725245 Seal, Rear Drum
11	8577230 Housing, Blower	25	W10512946 Washer, Tri Ring	37	W10757750 Assembly, Drum (Complete)
12	3398161 Clip, Heater Box	26	W10359270 Shaft, Drum Roller - Left Hand Thread	38	3406124 Bulb, Light
13	343641 Screw			39	W10214261 Socket, Light
14	8530285 Box, Heater (96C)			40	3402841 Lens, Drum Light

USE WITH TYPE 1 - NATURAL, TYPE 2 - MIXED,
AND TYPE 4 - LIQUEFIED PROPANE AND BUTANE GASES

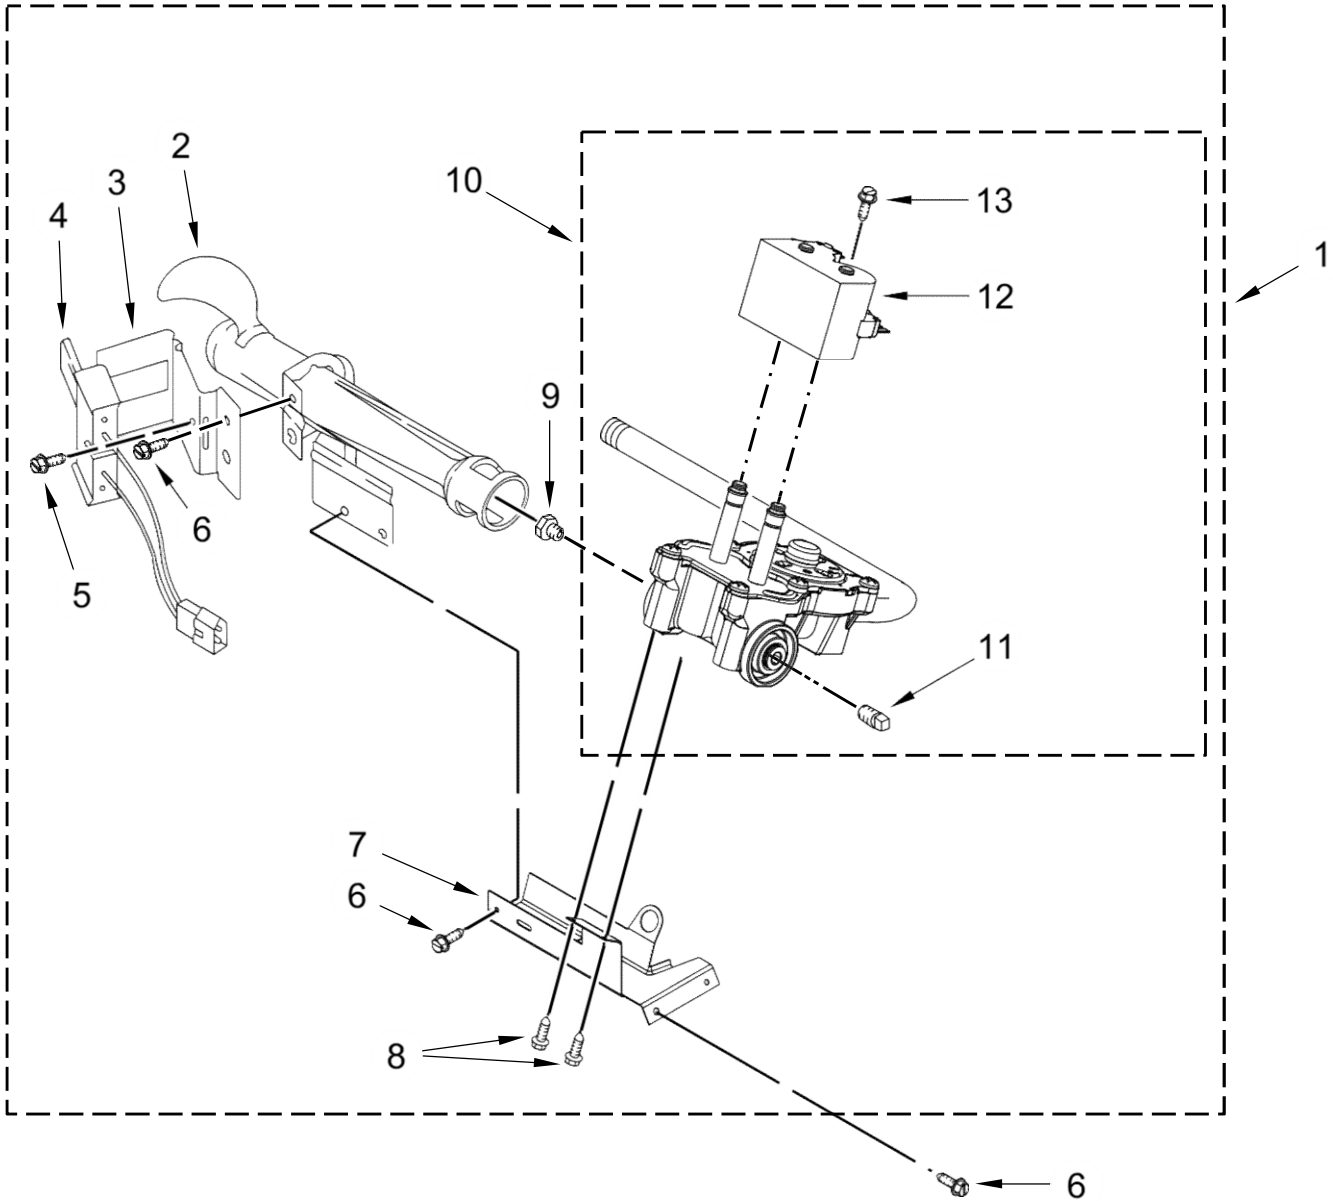



Secadora Maytag 7MMGDX655EW1

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10336852	Burner Assembly (60 Hz) (Type 1 and 2)
2	688617	Tube, Burner
3	694298	Bracket, Ignitor
4	686590	Ignitor
5	W10366705	Screw

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
6	343641	Screw
7	693986	Base, Burner
8	3387057	Screw
9		Orifice, Burner 234826 Type 1 (Natural)
10	W10622159	Valve, Gas

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
11	W10295523	Pipe Plug
12	W10328463	Coil (60 Hz)
13	326049536	Screw
		Following Parts Not Illustrated
	49572A	Conversion Kit (Type 1 and 2) to Type (4) L.P.G.



Secadora Maytag 7MMGD655EW1

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	80047	Kit, Dryer Repair
	W10322470A	Dry Rack
		Power Cords
	PT600L	6', 30 Amp, 4 Wire, Dryer Cord
	PT400L	4', 30 Amp, 4 Wire, Dryer Cord
	PT220L	4', 30 Amp, 4 Wire, Dryer Cord

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	350938	Gray Primer