

## EXPLOSIONADO DE PARTES




## SECADORAS DE IMPORTACIÓN

**Modelo:**

**7MMGL6741TW0**

# SECADORA 7MMGL6741TW0

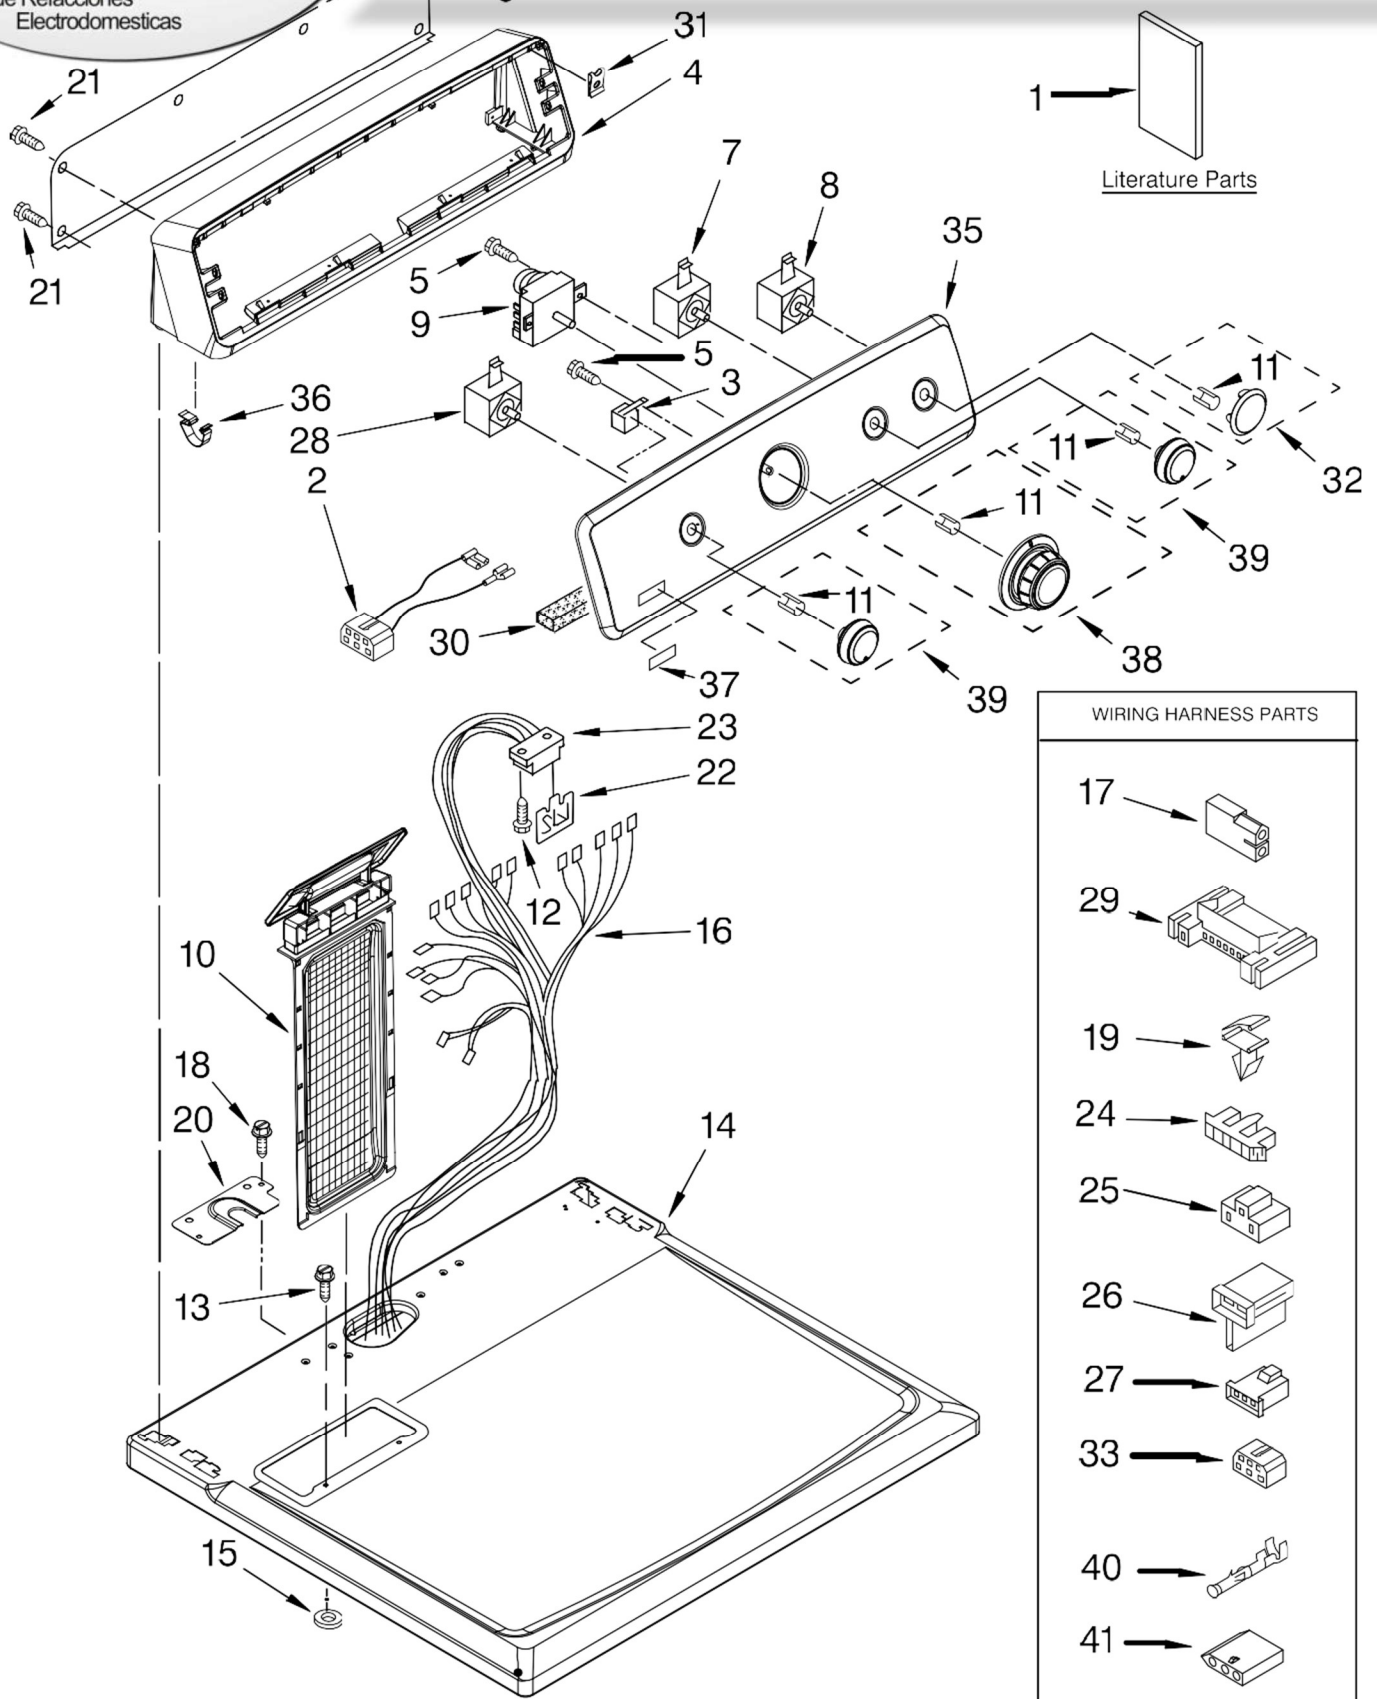

IMPORTANT: All Part Numbers Listed Are Whirlpool Numbers. Source Parts Through Whirlpool.

# SECADORA 7MMGL6741TW0


Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	W10118200	Sheet, Cycle Feature
	W10118198	Use & Care Guide
	W10119084	Wiring Diagram
2	W10119726	Wire, Jumper (Buzzer On/Off)
3	694419	Buzzer, Mini
4	8579716	Shell, Console (Includes Item: 36)
5	8533971	Screw, 8-18 x 5/8
6	W10112576	Panel, Rear Console
7	8530169	Switch, Temperature
8	3398094	Switch, Push-To-Start
9	8566184	Timer Assembly 60 HZ.
10		Screen, Lint
	8565972	White

Illus. No.	Part No.	DESCRIPTION
11	8536939	Clip, Spring
12	359625	Screw, 8-18 x 1/2
13	688983	Screw, 8-18 x 5/8
14	8579698	Top
15	237446	Washer (Top/chute)
16	W10120796	Harness, Wiring
17	717252	Plug, 2-way
18	337686	Screw, 8-18 x 3/8
19	3394427	Clip-Harness
20	8565981	Bracket-Harness
21	693995	Screw, Hex Washer Head
22	8558178	Control, Electronic
23	3391885	Connector, Edge
24	3397269	Connector-Timer
25	3401144	Connector, (PTS Relay)
26	3403499	Connector, 2-Position (Gas Valve)
27	3403498	Connector, 3-Position (Gas Valve)

Illus. No.	Part No.	DESCRIPTION
28	3405156	Switch Rotary (Twist Mount)
29	3395683	Connector, Motor
30	W10112267	Foam-Seal Control Bracket
31	W10123148	Nut-U Type
32	W10112574	Knob, Push-To-Start
33	3347243	Connector 6-Circuit
35	W10116405	Panel, Control (Includes: Item: & 37)
36	8312709	Clip-Console
37	W10112569	Badge Assembly
38	W10112573	Timer Knob Assembly
39	W10112572	Knob, Control (2)
40	94614	Terminal, Female
41	3936144	Connector

IMPORTANT: All Part Numbers Listed Are Whirlpool Numbers. Source Parts Through Whirlpool.

# SECADORA 7MMGL6741TW0

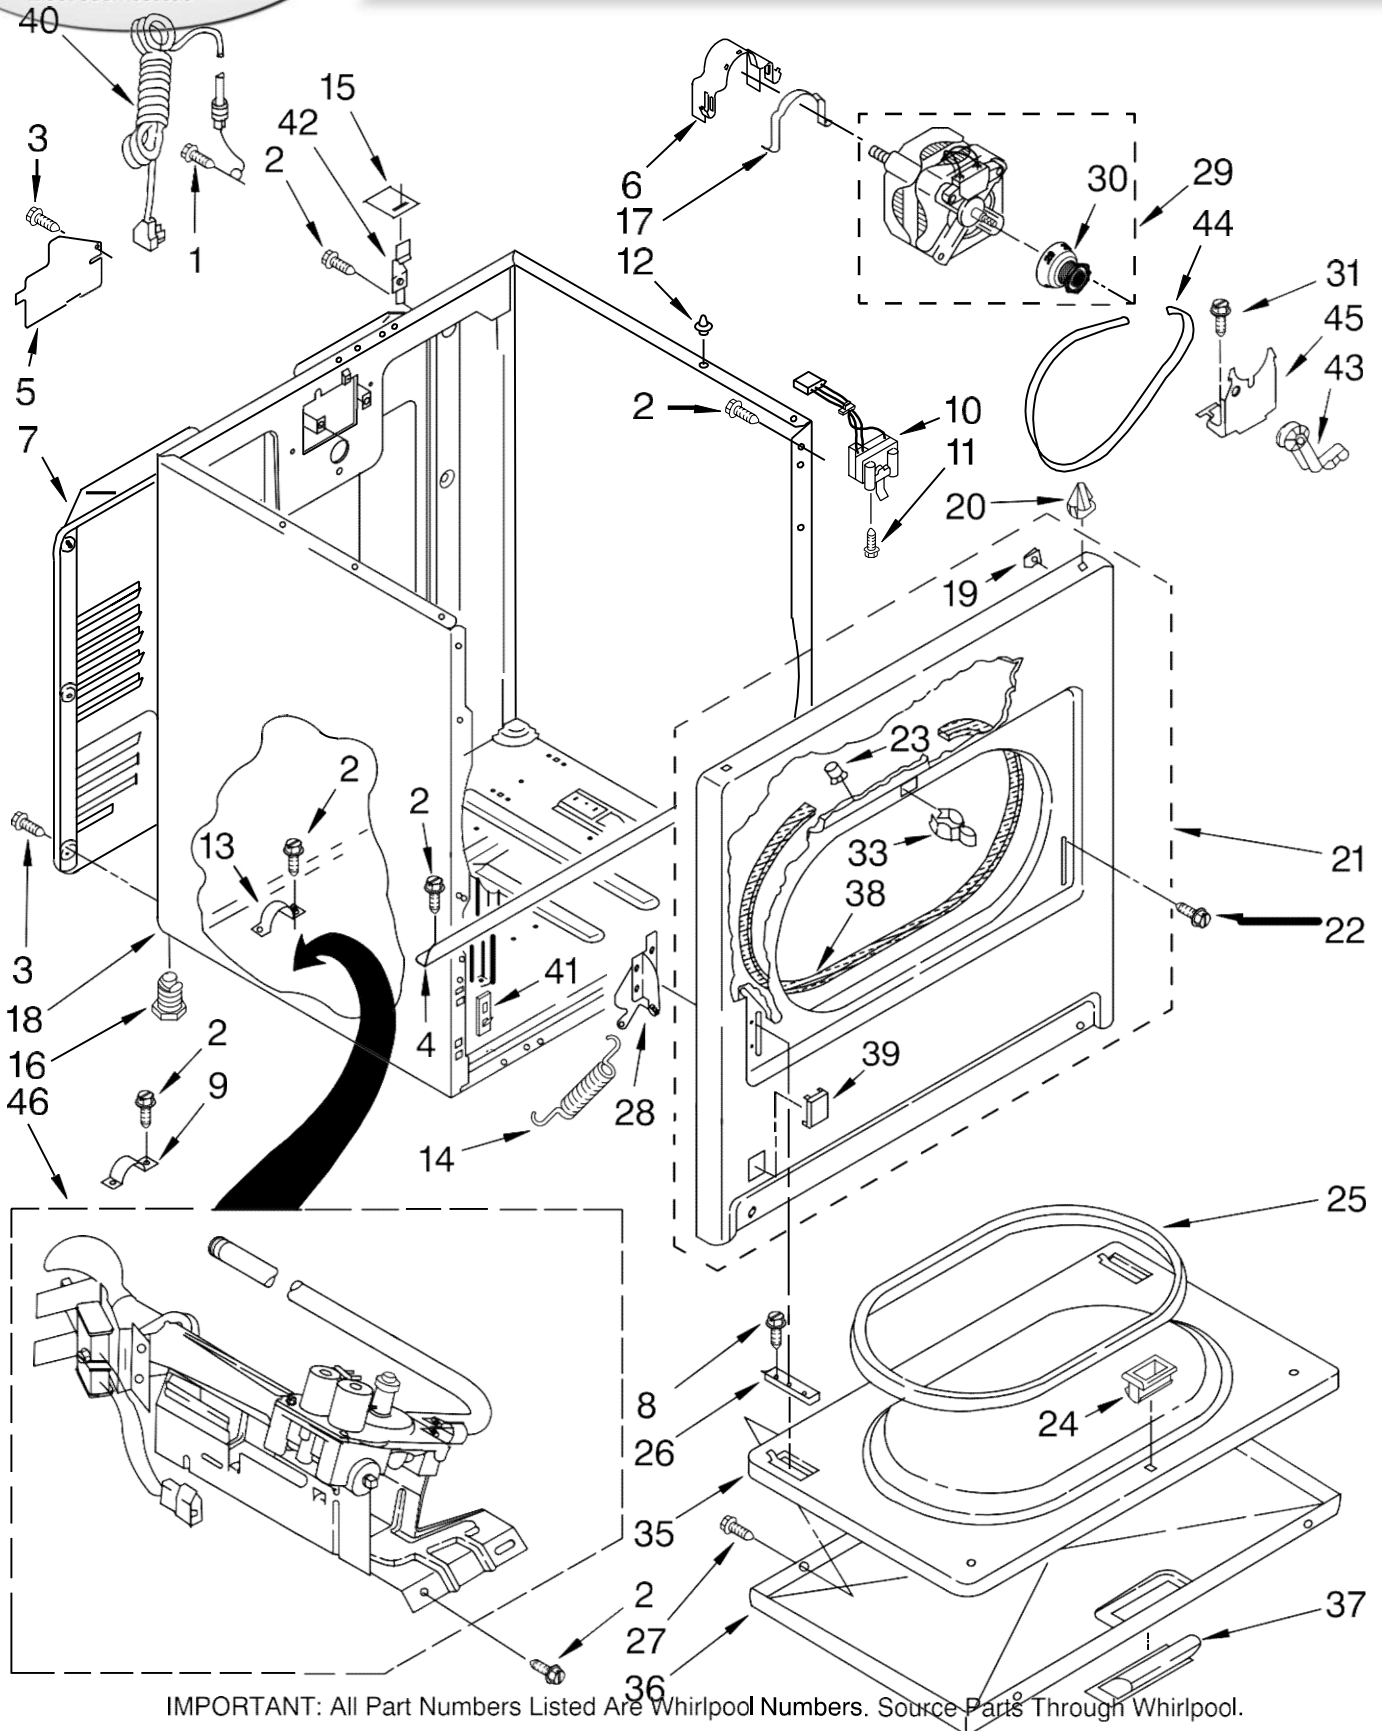

# SECADORA 7MMGL6741TW0


Illus. No.	Part No.	DESCRIPTION
1	697776	Screw, 10-32 x 5/8 (External Ground)
2	343641	Screw, 10-16 x 1/2
3	693995	Screw, Hex Head
4	8541400	Bracket, Cabinet
5	3396795	Cover, Block
6	3404162	Clamp, Motor (W/Shield)
7	3396805	Panel, Rear
8	3357011	Screw, 10-16 x 1/2
9	3980175	Clamp-Elbow
10	3406107	Door Switch Assembly
11	697773	Screw, 6-20 x 7/8
12	98669	Locator, Top
13	341029	Clamp-Pipe
14	W10041960	Spring-Door (2)
15	18849	Pad, Top Hinge
16	3392100	Foot, Dryer
	279810	Foot-Optional (Extended Length) (Package of 2) (Not Included.)

Illus. No.	Part No.	DESCRIPTION
17	660658	Clamp, Motor
18		Cabinet (Includes Illus. 4)
	8530603	White
19	98234	Clip, Ground (2)
20	18776	Lock, Front Top (2)
21	3395197	Panel Front
22	342043	Screw, 8-18 x 3/8
23	685203	Clip, Felt Pad (2)
24	3389441	Catch, Door Assembly
25	3390731	Seal, Door
26	337189	Clip, Hinge (2)
27	694091	Screw, 8-18 x 3/8
28		Hinge, Assembly
	8066056	Hinge, R.H.
	8066057	Hinge, L.H.
29	8066206	Motor Assembly 60 HZ.
30	8066184	Pulley 60 Hz.

Illus. No.	Part No.	DESCRIPTION
31	3400500	Bolt, 5/16-18 x 3/4
33	696144	Strike, Door
35	695737	Door, Rear
36	3393549	Door, Front
37	W10116360	Handle, Door
38	3406129	Seal & Bearing Assembly
39	3394975	Plug, Front Panel
40	344020	Cord, Power
41	3394083	Clip, Front Panel
42	8066217	Hinge, Top (2)
43	691366	Idler & Pulley Assembly
44	8066065	Belt, Drive
45	348780	Base, Motor
46	8318272	Burner Assembly, 60 Hz. (See Pages 7 & 8 For Further Burner Breakdown)

IMPORTANT: All Part Numbers Listed Are Whirlpool Numbers. Source Parts Through Whirlpool.

# SECADORA 7MMGL6741TW0

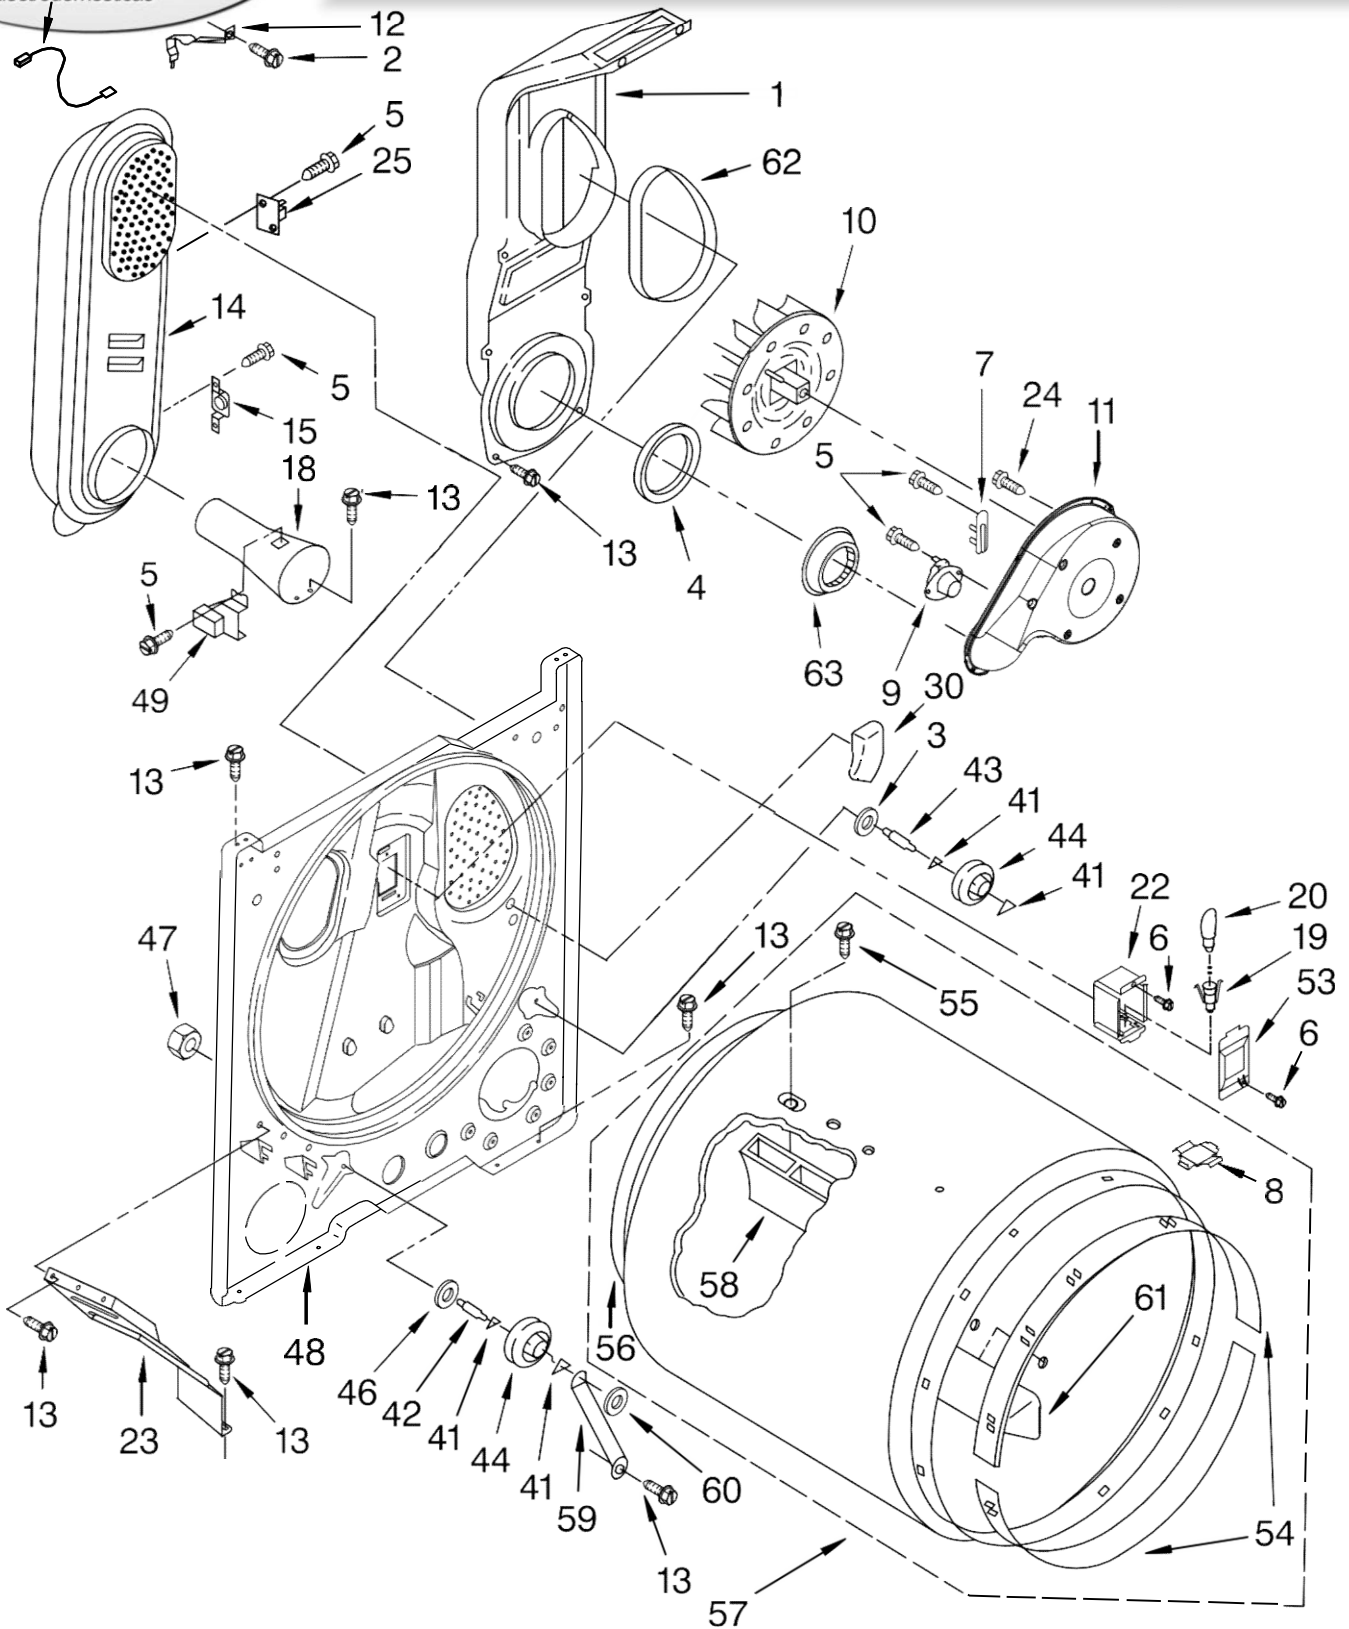


IMPORTANT: All Part Numbers Listed Are Whirlpool Numbers. Source Parts Through Whirlpool.

# SECADORA 7MMGL6741TW0

Illus. No.	Part No.	DESCRIPTION
1	348368	Lint Chute Assembly
2	489463	Screw, 8-18 x 5/8
3	3388703	Washer-Support
4	347139	Seal, Lint Chute
5	90767	Screw, 8-18 x 3/8
6	487909	Screw, 8-15 x 1/2
7	3392519	Thermal-Fuse (91C)
8	8066086	Drum Hole Plug
9	8318268	Thermostat, Internal-Bias
10	694089	Wheel, Blower
11	8577230	Housing, Blower
12	3398161	Clip
13	343641	Screw, 10-16 x 1/2
14	8530285	Box, Heater
15	3403140	Thermostat, 205 F (96 C)
18	8066049	Funnel, Burner
19	3403634	Socket Assembly
20	3406124	Bulb
22	3977373	Bracket, Drum Light
23	3406022	Bracket, Bulkhead
24	3390647	Screw, 8-18 x 1/2
25	280010	Kit, Thermal Cut-Off (Includes Illus. 15)
26	3401707	Wire, Jumper
30	3976479	Pad, Sensor
41	690997	Ring, Tri
42	3399506	Shaft, L.H.
43	3399507	Shaft, R.H.
44	3397590	Roller, Support
46	348197	Washer, Support
47	3359452	Nut, 3/8-16
48	3403414	Bulkhead
49	338906	Sensor, Radiant
53	3402841	Lens, Drum Light
54	692526	Ring, Bearing
55	W10109200	Screw, 11-16 x 3/4
56	3406130	Seal, Rear Drum
57	695587	Drum Assembly
58	692490	Baffle, Drum (2)
59	3976434	Bracket, Support
60	90296	Clip
61	3403636	Baffle, Drum (1)
62	339956	Seal
63	696302	Shield, Exhaust

IMPORTANT: All Part Numbers Listed Are Whirlpool Numbers. Source Parts Through Whirlpool.

# SECADORA 7MMGL6741TW0

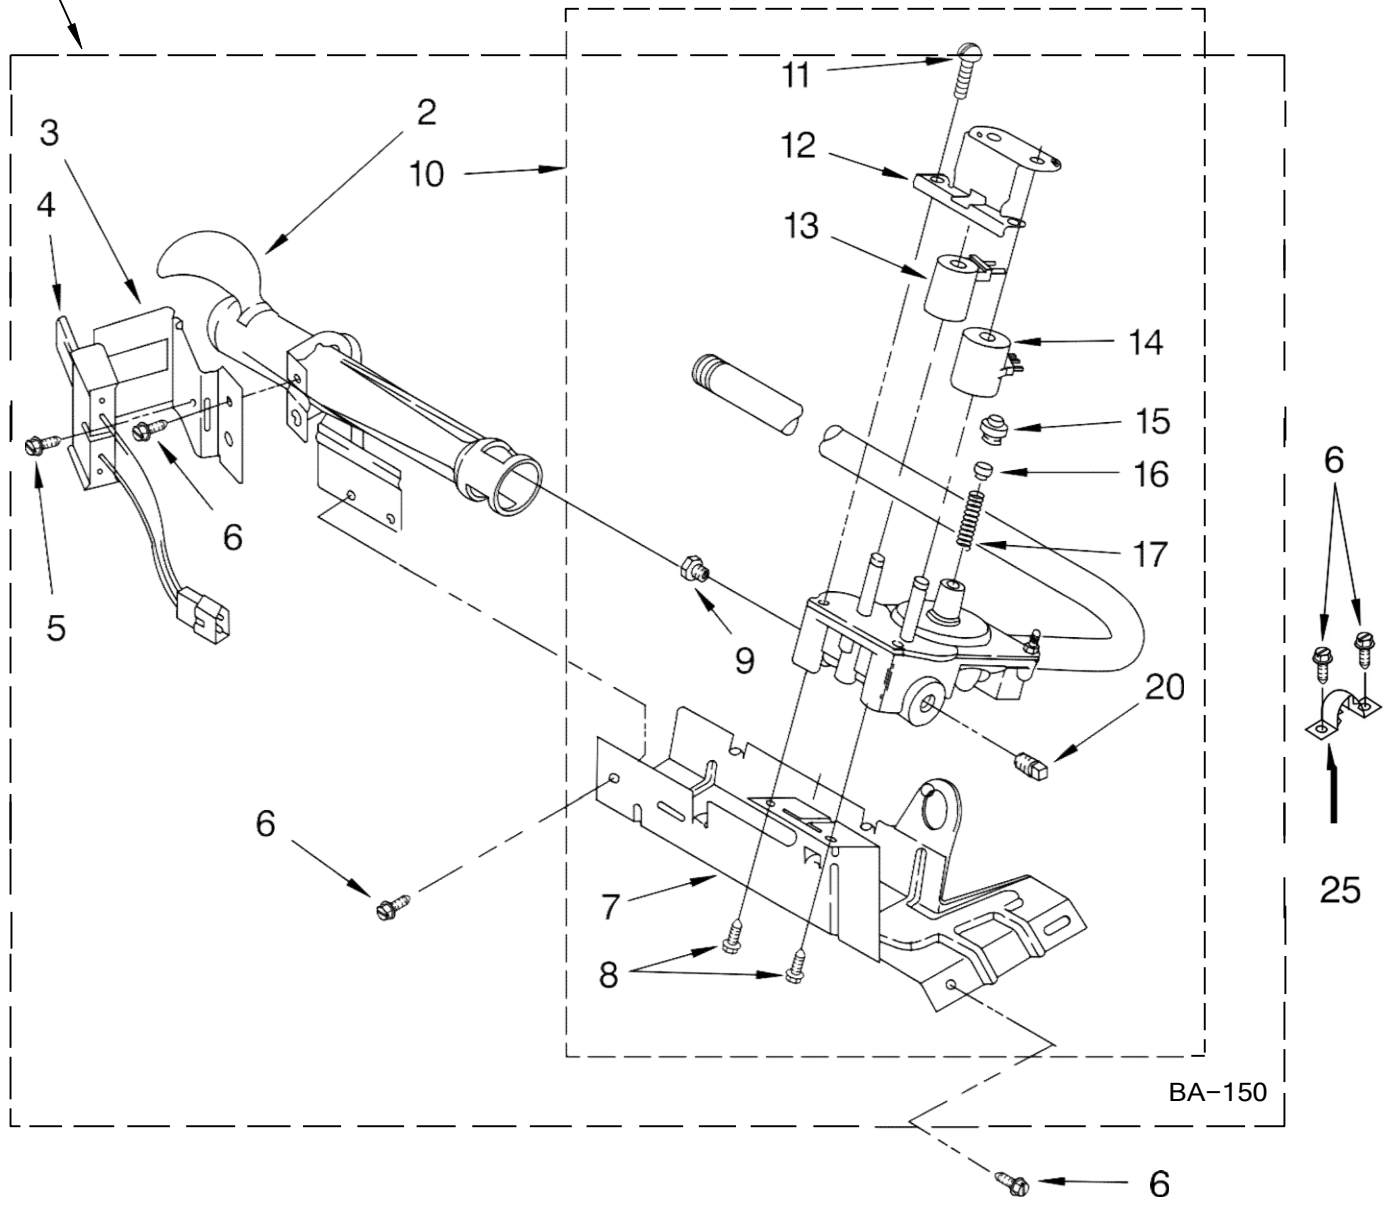

IMPORTANT: All Part Numbers Listed Are Whirlpool Numbers. Source Parts Through Whirlpool.



# SECADORA 7MMGL6741TW0

Illus. No.	Part No.	DESCRIPTION
1	8318272	Burner Assembly 60 Hz. (Type 1) (White Rodgers)
2	688617	Tube, Burner
3	694298	Bracket, Ignitor
4	686590	Ignitor
5	3393909	Screw & Washer  (8-32 x 5/8)
6	343641	Screw, 10-16 x 1/2
7	693986	Base, Burner
8	3387057	Screw, 8-18 x 3/8
9		Orifice, Burner 234826 Type 1 229742 Type 4 (Butane) 234868 Type 4 (Propane)
10	8318277	Valve, 60 Hz. (Includes Pipe & Illus. #7)
11	694421	Screw, 8-32 x 1/2 (2)
12	694538	Bracket, Coil
13	694540	Coil, 60 Hz. (2 Terminal) (Main)
14	694539	Coil, 60 Hz. (Split) (3 Terminal) (Pilot Position)
15	694424	Leak Limiter
16	694423	Screw, Regulator Adjustment
17	694422	Spring, Regulator
20	239822	Plug, Pipe
25	341029	Clamp, Pipe

---

### Following Parts Not Illustrated

---

694572 Conversion Kit  
(Type 1)  
to Type (4) L.P.G.

IMPORTANT: All Part Numbers Listed Are Whirlpool Numbers. Source Parts Through Whirlpool.