


Distribuidor Autorizado


 
 
 
SurteRápido.com

Venta de Refacciones
Electrodomesticas

Secadora Whirlpool 7MWG45500ST0

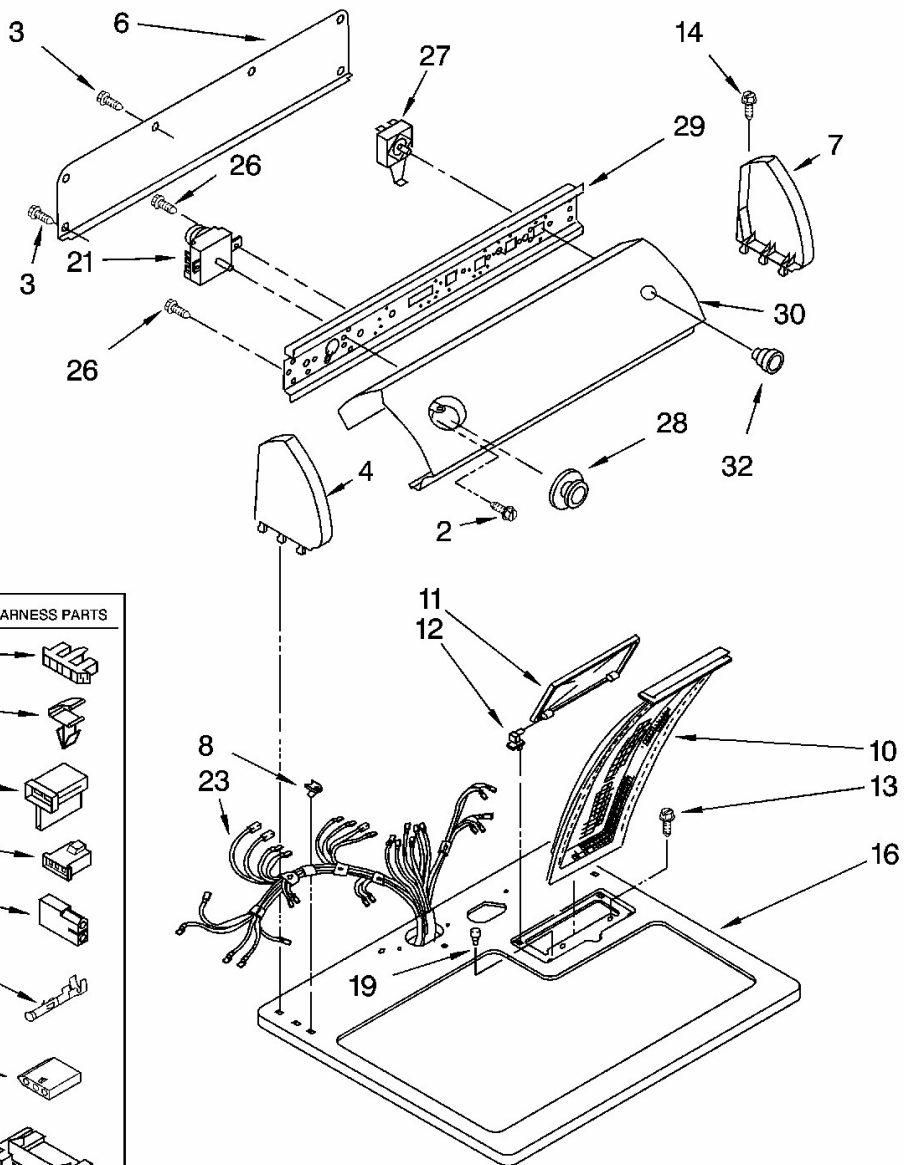

WIRING HARNESS PARTS

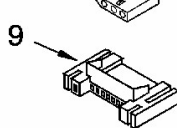

Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas

Secadora Whirlpool 7MWG45500ST0

No. Ilus.	DESCRIPCIÓN	No. de Parte
2	Screw, Grounding	3400859
3	Screw, Hex Head	489069
4	Cap, End (L.H.) (White)	279962
	Cap, End (L.H.) (Biscuit)	279965
5	Connector	3936144
6	Panel, Rear Console	8274261
7	Cap, End (R.H.) (White)	279962
	Cap, End (R.H.) (Biscuit)	279965
8	Nut, Push-In (2)	357213
9	Housing, Connector (Motor)	3395683
10	Screen, Lint	339392
11	Cover, Lint Screen (White)	8283378
	Cover, Lint Screen (Biscuit)	8283380
12	Hinge, R.H.	3978605
	Hinge, L.H.	3978606
13	Screw, 8-18 x 5/8	487240
14	Screw, Console	388326
15	Connector (Timer)	3397269
16	Top (White)	8521918
	Top (Biscuit)	8521920
17	Clip, Harness	3394427
18	Terminal	94614
19	Bumper, Lint Lid	17258
21	Timer Assembly, 60 Hz.	3976584
23	Harness, Wiring	8299876
24	Connector, 2-Position (Gas Valve)	3403499
25	Connector, 3-Position (Gas Valve)	3403498

Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas

Secadora Whirlpool 7MWG45500ST0


<u>No. Ilus.</u>	<u>DESCRIPCIÓN</u>	<u>No. de Parte</u>
26	Screw, 8-18 x 5/16	3390646
27	Switch, Push-To-Start	3977456
28	Timer Knob Assembly (White)	8566064
	Timer Knob Assembly (Biscuit)	8271404
29	Bracket, Control	8544895
30	Panel, Control (White)	8543036
	Panel, Control (Biscuit)	3977835
31	Receptacle, Latching (2-Way)	717252
32	Knob, Push-To-Start (White)	8566068
	Knob, Push-To-Start (Biscuit)	8271349
	ACCESSORY PARTS	
	Dry Rack	689790

Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas

Secadora Whirlpool 7MWG4550ST0

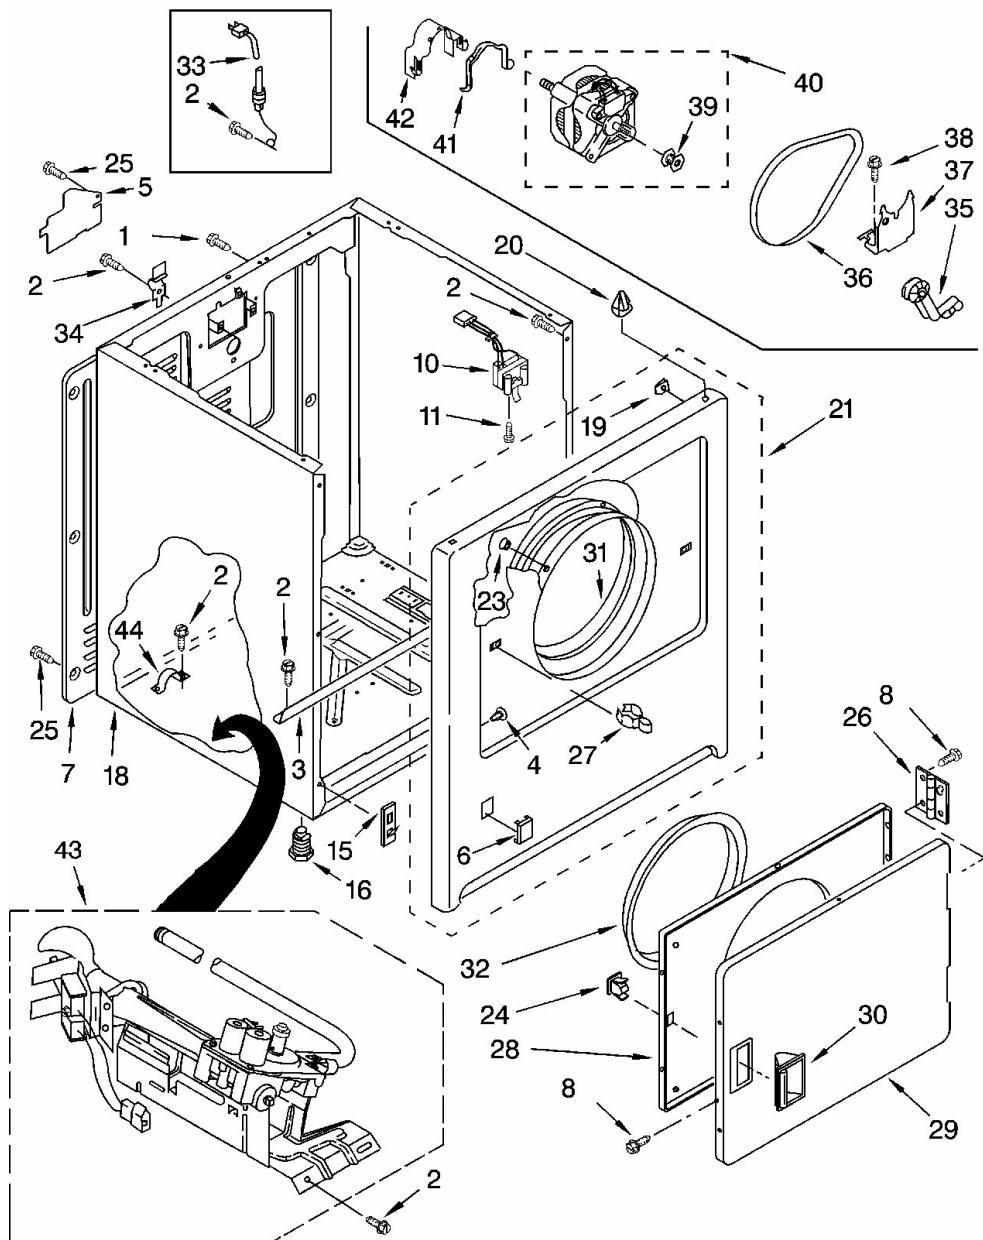

Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas

Secadora Whirlpool 7MWG45500ST0

No.Illus.	DESCRIPCIÓN	No. de Parte
1	Screw, 10-32 x 5/8	4331106
2	Screw, 10-16 x 1/2	681414
3	Bracket, Cabinet	8541400
4	Plug, Hinge Hole (4) (White)	3404415
	Plug, Hinge Hole (4) (Biscuit)	3404415
5	Cover, Block	3396795
6	Plug, Front Panel (White)	3394978
	Plug, Front Panel (Biscuit)	3394978
7	Panel, Rear	280040
8	Screw, 8-18 x 1/2	488627
10	Door Switch Assembly	3406105
11	Screw, 6-20 x 7/8	3395530
15	Clip, Front Panel	3394083
16	Foot, Dryer	3392100
	Foot - Optional (279810
18	Cabinet (Includes Illus. 3) (White)	8533643
	Cabinet (Includes Illus. 3) (Biscuit)	3977306
19	Clip, Ground (2)	98234
20	Lock, Front Top (2)	18776
21	Front Panel Assembly (White)	279846
	Front Panel Assembly (Biscuit)	279932
23	Clip, Felt Pad	279220
24	Catch, Door	279570
25	Screw, Hex Head	489069
26	Hinge & Pin Assembly	3405514
27	Strike, Door	279570
28	Door, Rear	3403371

Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas

Secadora Whirlpool 7MWG45500ST0


<u>No. Ilus.</u>	<u>DESCRIPCIÓN</u>	<u>No. de Parte</u>
29	Door, Front (White)	3403361
	Door, Front (Biscuit)	3403363
30	Handle, Door (White)	8566071
	Handle, Door (Biscuit)	3405189
31	Seal & Bearing Assembly	279264
32	Seal, Door	3405245
33	Cord, Power	3401402
34	Hinge, Top (2)	238088
35	Idler & Pulley Assembly	691366
36	Belt, Drive	341241
37	Base, Motor	687079
38	Bolt, 5/16-18 x 3/4	3400500
39	Pulley, 60 Hz.	3394341
40	Motor, 60 Hz.	279827
41	Clamp, Motor	343481
42	Clamp, Motor (W/Shield)	3404162
43	Burner Assembly, 60 Hz. (Refer To Pages 5 & 6 For Further Break	279990
44	Clamp, Pipe	341029

Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas

Secadora Whirlpool 7MWG4550ST0

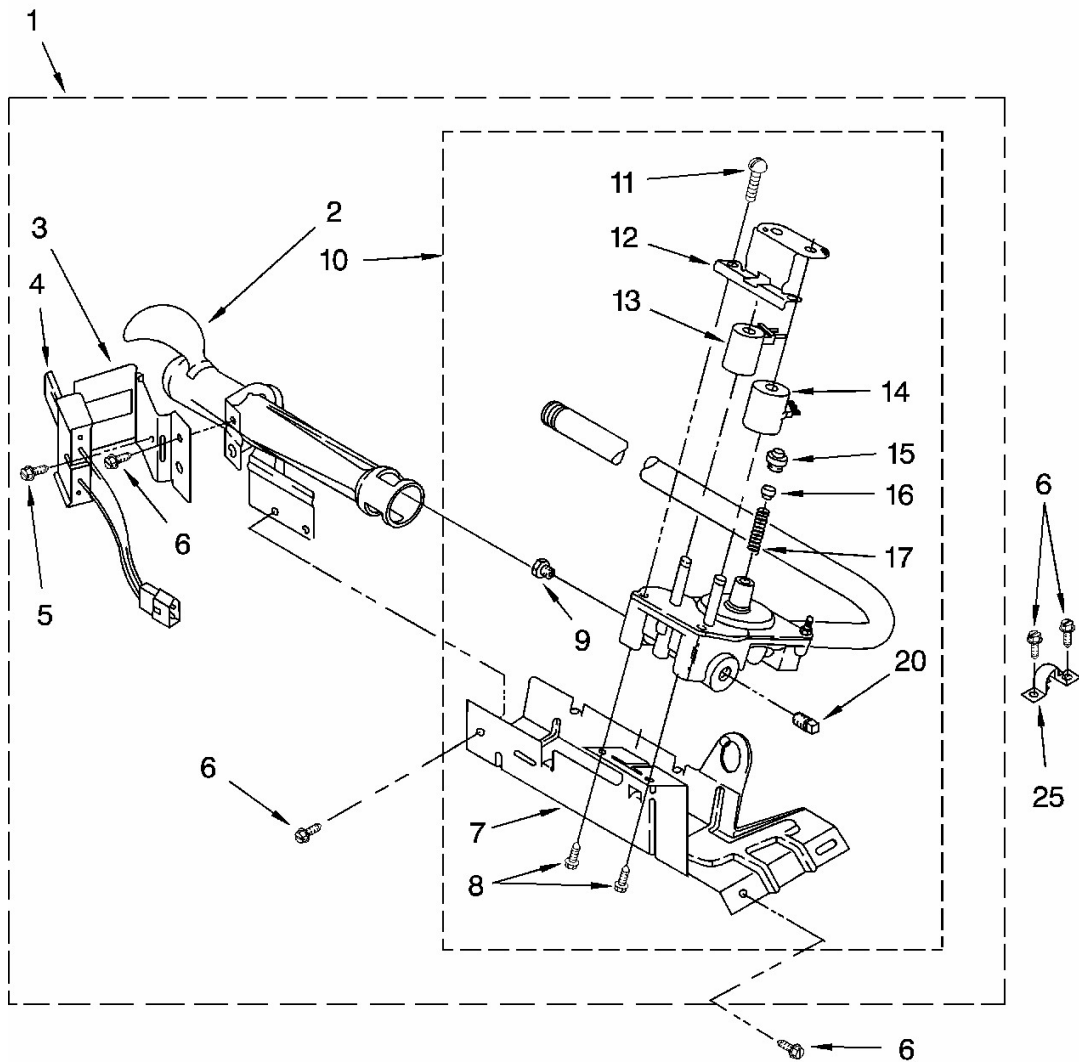

Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas

Secadora Whirlpool 7MWG45500ST0


No. Ilus.	DESCRIPCIÓN	No. de Parte
1	Burner Assembly 60 Hz.	279990
2	Tube, Burner	693140
3	Bracket, Ignitor	694298
4	Ignitor	279311
5	Screw & Washer (8-32 x 5/8)	3393909
6	Screw, 10-16 x 1/2	681414
7	Base, Burner	693986
8	Screw, 8-18 x 3/8	90767
9	Orifice, Burner (Type 1)	234826
	Orifice, Burner (Type 4 (Butane))	229742
	Orifice, Burner (Type 4 (Propane))	234868
10	Valve, 60 Hz. (Includes Pipe & Illus. 7)	8318277
11	Screw, 8-32 x 1/2 (2)	694421
12	Bracket, Coil	694538
13	Coil, 60 Hz. (2 Terminal) (Main)	694540
14	Coil, 60 Hz. (Split) (3 Terminal) (Pilot Position)	694539
15	Leak Limiter	694424
16	Screw, Regulator Adjustment	694423
17	Spring, Regulator	694422
20	Plug, Pipe	239822
25	Clamp, Pipe	341029
	Conversion Kit L.P.G.	49572

Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas

Secadora Whirlpool 7MWG4550ST0

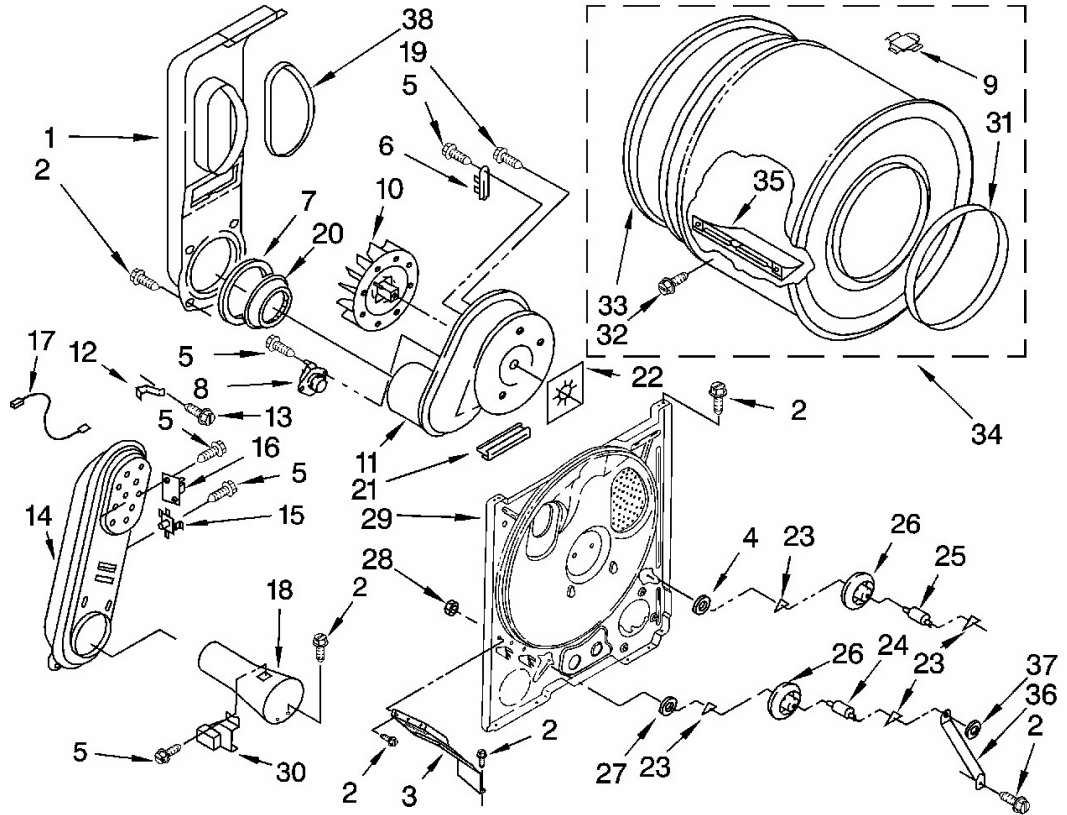

Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas

Secadora Whirlpool 7MWG45500ST0

No.Illus.	DESCRIPCIÓN	No. de Parte
1	Lint Chute Assembly	279505
2	Screw, 10-16 x 1/2	681414
3	Bracket, Bulkhead	3406022
4	Washer, Support	3388703
5	Screw, 8-18 x 3/8	90767
6	Fuse, Thermal	3392519
7	Seal, Lint Chute	347139
8	Thermostat, Internal-Bias	3387134
9	Drum Hole Plug	8066086
10	Wheel, Blower (Includes Illus. 22)	279711
11	Housing, Blower	8557384
12	Clip	279771
13	Screw, 8-18 x 5/8	489463
14	Box, Heater	279980
15	Thermostat, 205 F (96 C)	3403140
16	Kit, Thermal Cut-Off (Includes Illus. 15)	280010
17	Wire, Jumper	3401707
18	Funnel, Burner	8066048
19	Screw, 8-18 x 1/2	488729
20	Shield, Exhaust	696302
21	Pad, Blower Housing	786068
22	Seal, Blower Shaft	3394196
23	Ring, Tri	690997
24	Shaft, L.H.	3399506
25	Shaft, R.H.	339489
26	Roller, Support	349241T
27	Washer, Support	348197

Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas

Secadora Whirlpool 7MWG45500ST0

<u>No. Ilus.</u>	<u>DESCRIPCIÓN</u>	<u>No. de Parte</u>
28	Nut, 3/8-16	3359452
29	BULKHEAD	279793
30	Sensor, Radiant	338906
31	Ring, Bearing	3394509
32	Screw, 11-16 x 3/4	63027
33	Seal, Rear Drum	239087
34	Drum Assembly	697760
35	Baffle, Drum	342847
36	Bracket, Support	3976435
37	Clip	90296
38	Seal	339956