

PARTS LIST

for




29" GAS DRYER

Models:

7MWGD1500AQ0 (White)


**FOR CUSTOMER SATISFACTION ALWAYS USE
FACTORY SPECIFICATION PARTS**

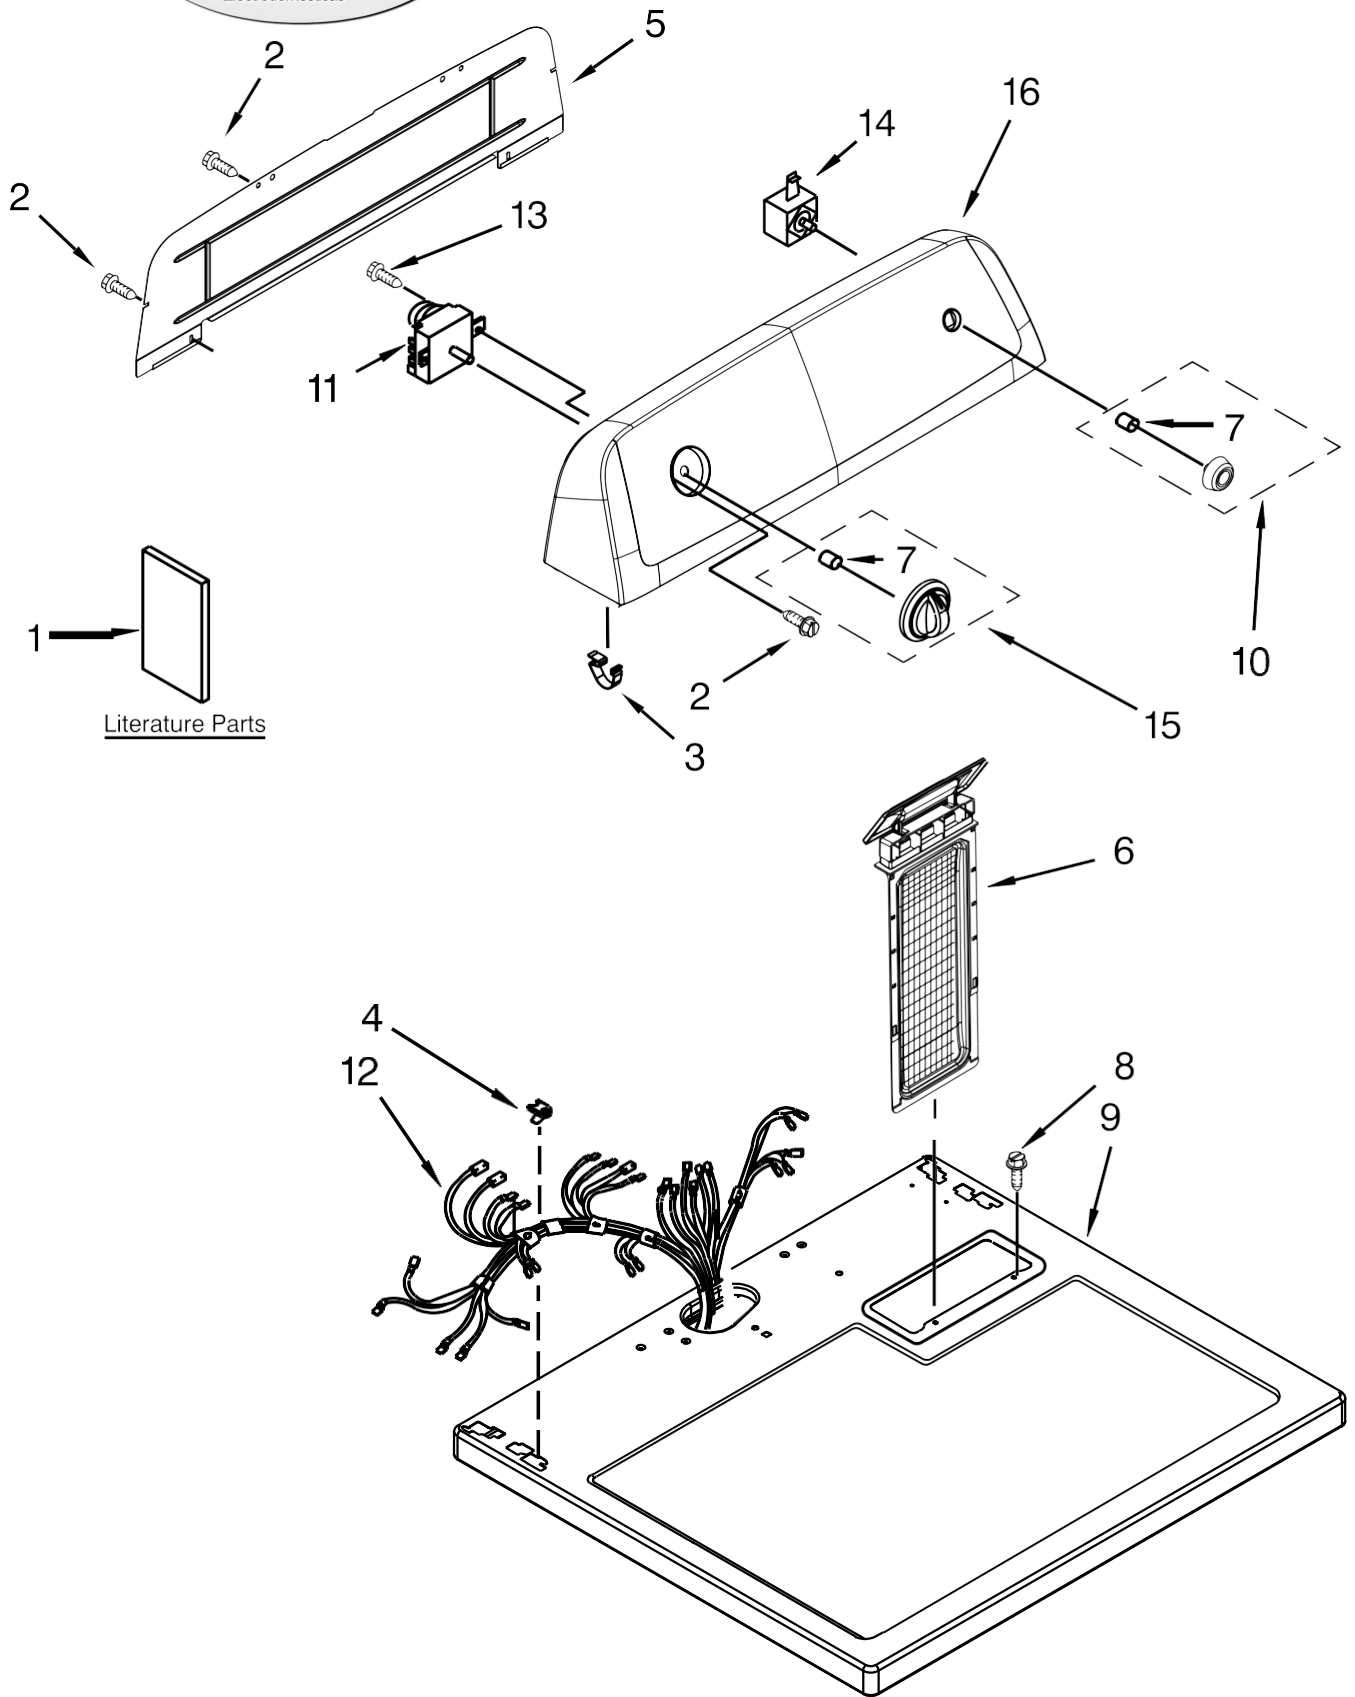

Literature Parts




<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts
	W10096991	Use & Care Guide
	W10329763	Instructions, Installation
	W10185990	Wiring Diagram
2	693995	Screw
3	8312709	Clip, Console
4	W10298336	Nut, "U"
5	W10416486	Panel, Rear Console
6	8558463	Lint Screen
7	8536939	Clip, Spring
8	688983	Screw
9	8559800	Top
10		Knob, Push-To-Start
	W10453948	White
11	W10436306	Timer Assembly (60 Hz.)
12	W10450287	Harness, Wiring
13	3348629	Screw
14	W10420741	Switch, Push To Start
15		Knob, Timer
	W10453946	White
16		Console
	W10517276	White

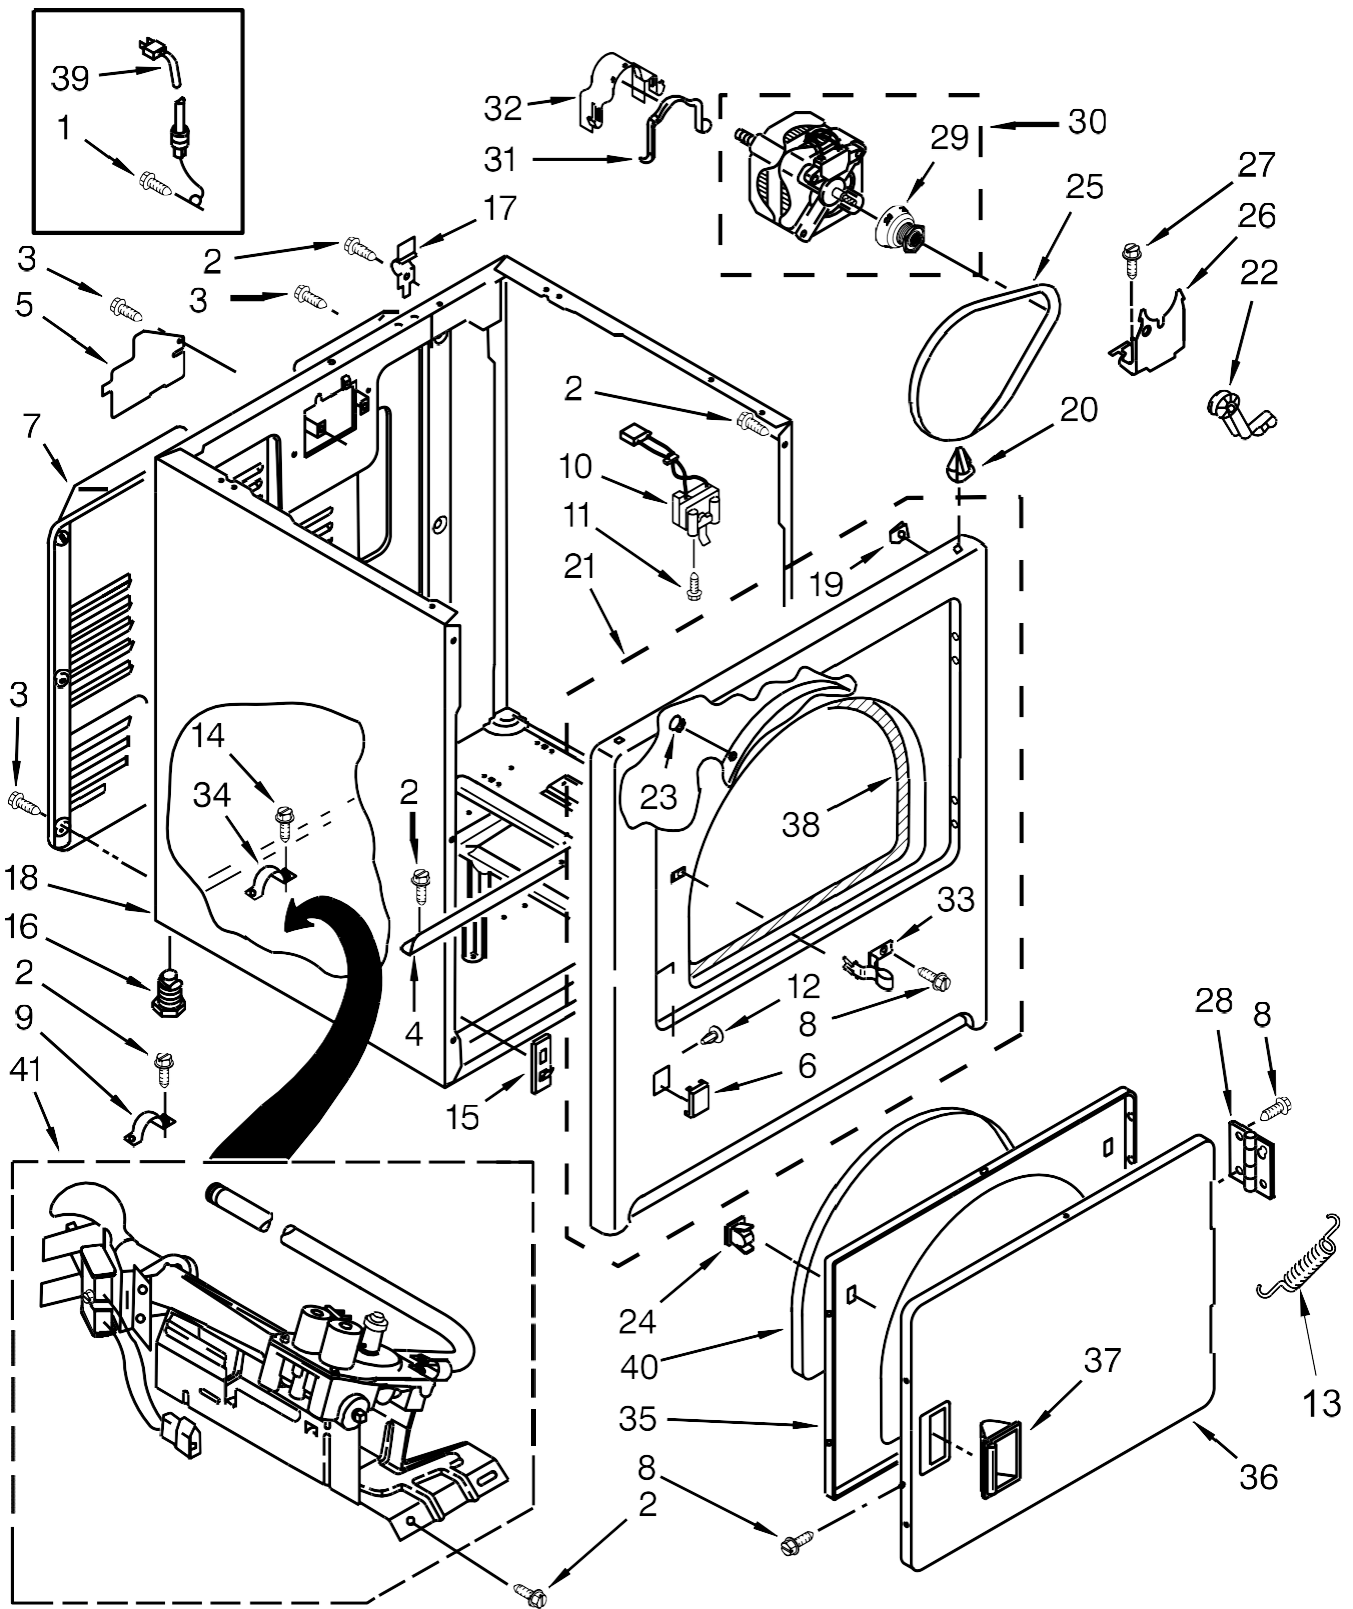




Secadora Whirlpool 7MWGD1500AQ0

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	8533974	Screw			
2	343641	Screw			
3	693995	Screw	33	696144	Strike, Door
4	W10236073	Bracket, Cabinet	34	341029	Clamp, Pipe
5	3396795	Cover, Terminal Block	35	695737	Door, Rear
6	8564457	White	36		Door, Outer
7	3396805	Panel, Rear Door Spring		3393549	White
8	342055	Screw	37	W10095180	Handle, Door
9	3980175	Clamp, Elbow	38	3406129	Seal & Bearing Assembly
10	3406109	Switch, Door	39	W10440460	Cord, Power
11	697773	Screw	40	3390731	Seal, Door
12	8066086	Plug, Drum Hole	41	W10336852	Burner Assembly (60 Hz)
13	W10041960	Spring, Door			
14	3390631	Screw			
15	3394083	Clip, Front Panel			
16	3392100	Foot, Dryer			
17	8066217	Hinge, Top			
18		Cabinet			
	8530603	White			
19	98234	Clip, Ground			
20	8066092	Lock, Front Top			
21		Panel, Front			
	3395197	White			
22	691366	Idler Assembly			
23	685203	Clip, Felt Pad			
24	3389441	Door Catch Assembly			
25	W10131364	Belt, Drive			
26	348780	Base, Motor			
27	3400500	Bolt			
28		Hinge, Spring Assembly			
	8066056	Right Side			
	8066057	Left Side			
29	8066184	Pulley, Motor			
30	W10396029	Motor Assembly			
31	W10121316	Clamp, Motor Mount			
32	3404162	Clamp, Motor (With Shield)			

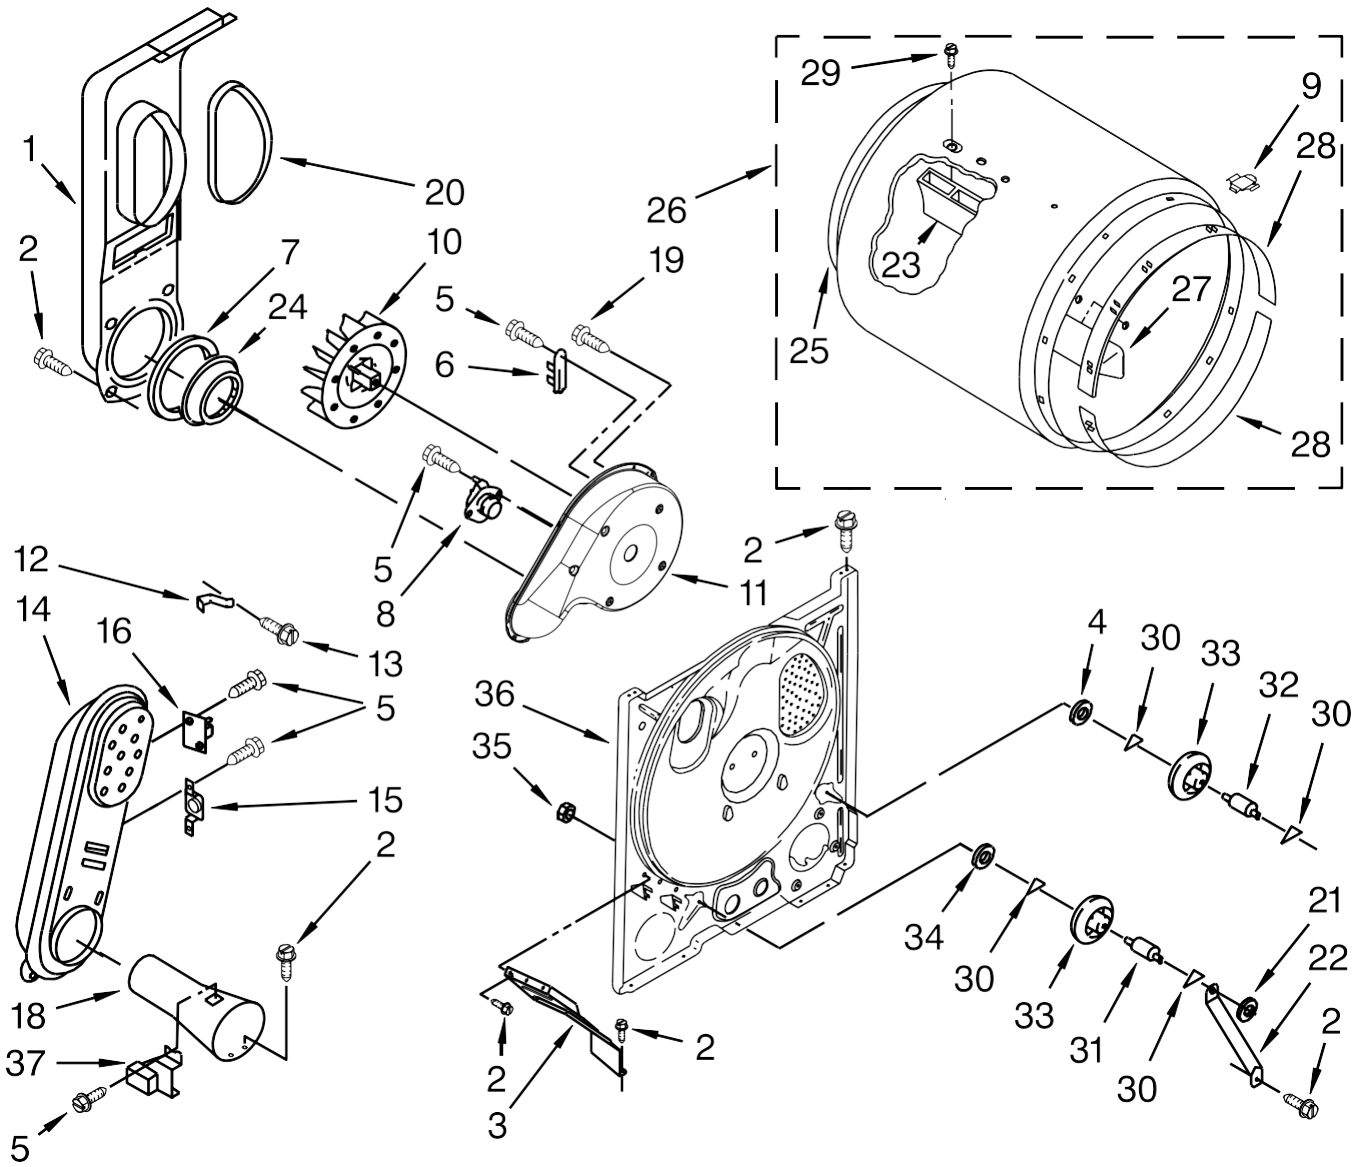

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	348368	Lint Chute Assembly
2	343641	Screw
3	3406022	Bracket, Bulkhead Chute
4	691369	Washer
5	90767	Screw
6	3392519	Fuse, Thermal (91C)
7	347139	Seal, Lint Chute
8	W10423382	Thermostat H.L SPST (180)
9	8066086	Plug, Drum Hole
10	694089	Wheel, Blower
11	8577230	Housing, Blower
12	8066155	Clip, Heater Box
13	489463	Screw
14	8530285	Box, Heater (96~C)
16	3977394	Thermal Cut-Off
18	8066049	Funnel, Burner Light
19	3390647	Screw
20	339956	Seal
21	90296	Nut, Push On
22	3976434	Bracket, Support
23	692490	Baffle, Drum
24	696302	Shield, Exhaust
25	W10352407	Seal, Rear Drum
26	695587	Drum Assembly Complete
27	3403636	Baffle, Drum
28	692526	Bearing, Ring
29	W10219342	Screw
30	690997	Washer, Tri Ring
31	W10359270	Shaft, Drum Roller - Left Hand Thread
32	W10359269	Shaft, Drum Roller - Right Hand Thread
33	3397590	Roller, Support
34	348197	Washer
35	W10298789	Nut, Hex
36	3403491	Bulkhead
37	338906	Sensor, Radiant

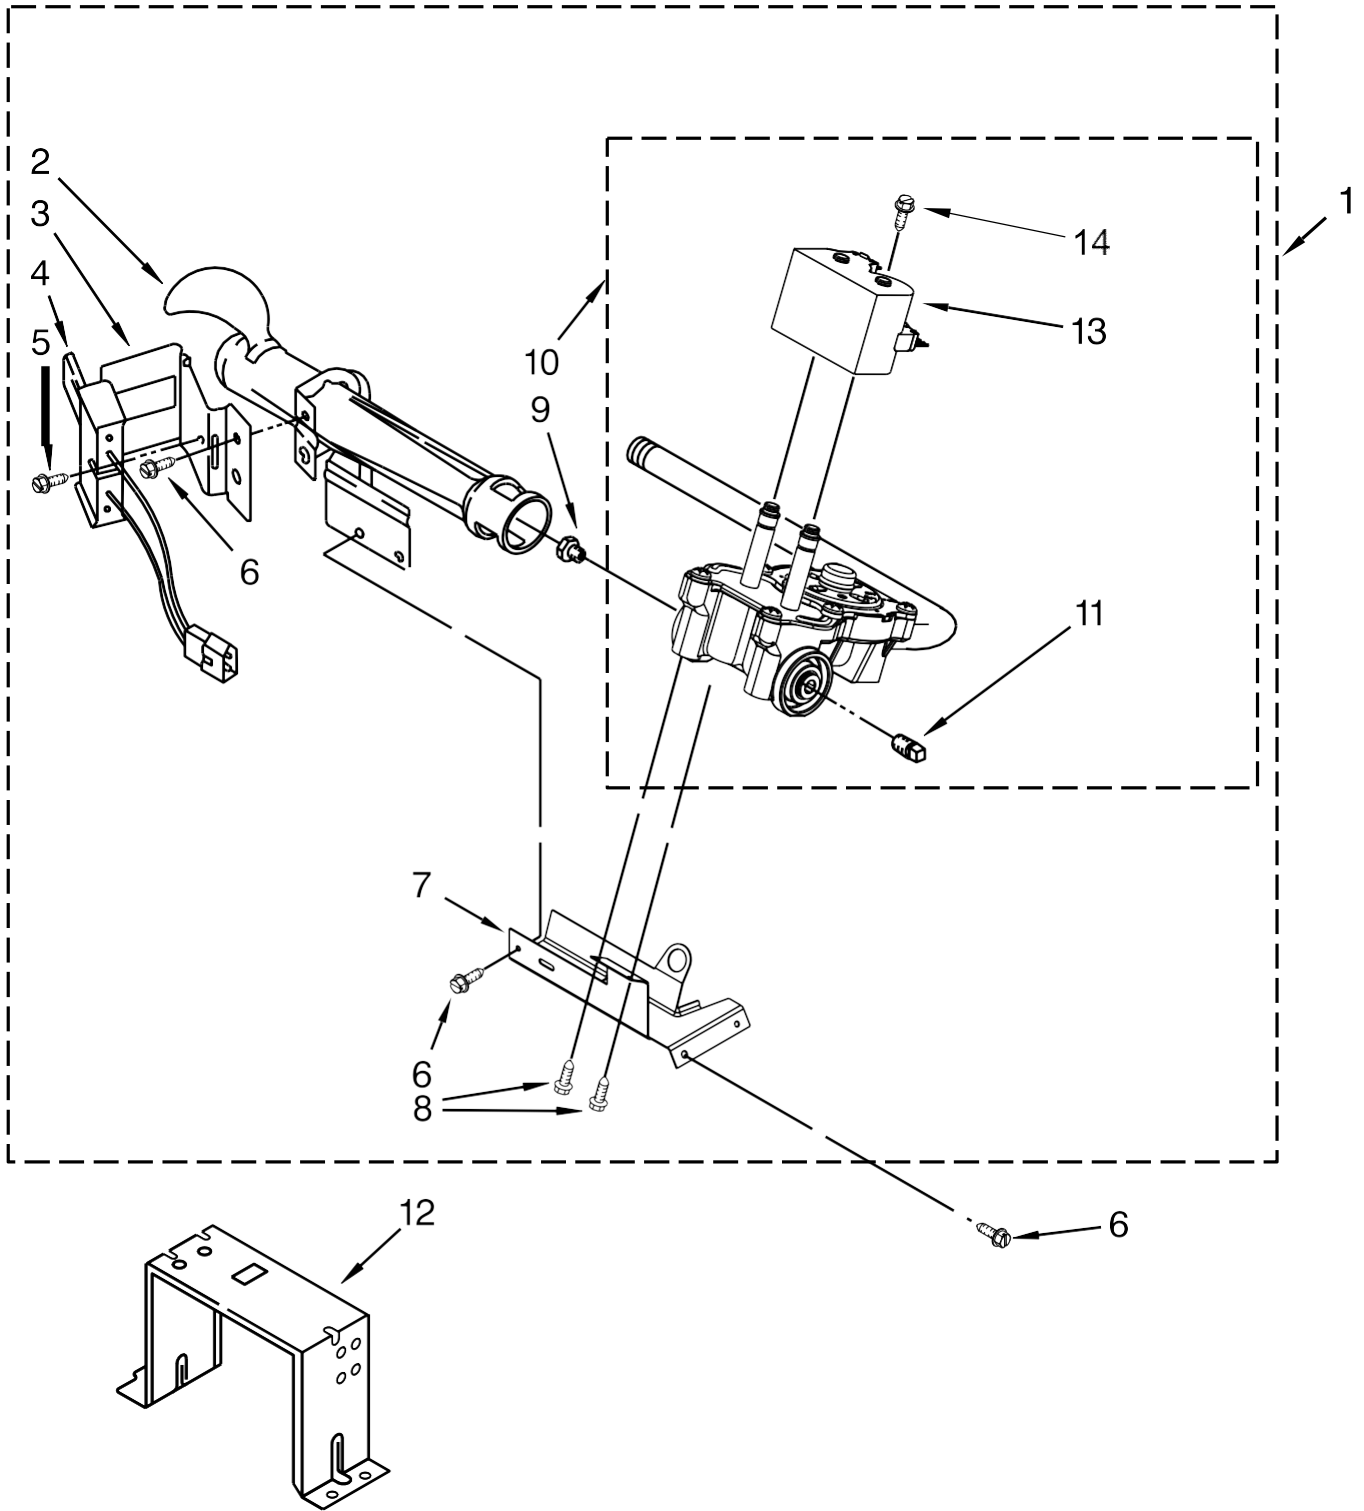



Secadora Whirlpool 7MWGD1500AQ0

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10336852	Burner Assembly (60 Hz)
2	688617	Tube, Burner
3	694298	Bracket, Ignitor
4	686590	Ignitor
5	3393909	Screw
6	343641	Screw
7	3389871	Base, Burner
8	3387057	Screw
9	234826	Orifice, Burner Type 1
10	W10304604	Valve, Gas 60 Hz.
11	W10295523	Pipe Plug
12	3389889	Bracket, Support
13	W10328463	Coil, 60 Hz.
14	326049536	Screw
		Following Parts Not Illustrated
	W10307153	CONVERSION KIT (TYPE 1 AND 2) TO TYPE (4) L.P.G.

OPTIONAL PARTS (NOT INCLUDED)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	279948	Kit, Dryer Repair
	8522199	Kit, Dryer Vent Testing
	689790	Dry Rack

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	350938	Gray Primer

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White