


<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts
	W10329763	Instructions, Installation
	W10536125	Use & Care Guide
	8576796	Wiring Diagram
2	3977456	Switch, Push-To-Start
3	694419	Buzzer, Mini
4		End Cap (L.H.)
	8566035	White
5		Knob, Timer
	8566061	White
6	W10103406	Panel, Rear (Console)
7	3405152	Switch, PTS
8		End Cap (R.H.)
	8566032	White
9	693995	Screw
10	8557857	Lint Screen
11	8536939	Clip, Spring
12	3348629	Screw
13	688983	Screw
14	8312709	Clip, Console
15	8299876	Harness, Wiring (Complete)
16		Top
	8559800	White
17		Knob, Push-To-Start
	8566065	White
18		Knob, Control
	8565944	White
19		Console
	W10518936	White
20	3390631	Screw
21	3977678	Timer Assembly (60 Hz.)
22	8566052	Bracket, Control
23	W10123956	Panel, Dampening
24	3401695	Wire, Jumper (Buzzer On/Off)
25	W10203571	Jumper, Push-To-Start






Secadora Whirlpool 7MWGD1601AW0

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	8533974	Screw	30	8066184	Pulley, Motor
2	343641	Screw	31	3400500	Bolt
3	693995	Screw	32	348780	Base, Motor
4	W10236073	Bracket, Cabinet	33	696144	Strike, Door
5	3396795	Cover, Terminal Block	34	W10131364	Belt, Drive
6	3404162	Clamp, Motor (With Shield)	35	695737	Door, Rear
7	3396805	Panel, Rear Door Spring	36		Door, Outer
8	3390647	Screw		3393549	White
9	3980175	Clamp, Elbow	37	W10095180	Handle, Door
10	3406109	Switch, Door	38	3406129	Seal & Bearing Assembly
11	697773	Screw	39	8564457	Plug, Front Panel
12	341029	Clamp, Pipe	40	691366	Idler Assembly
13	3357011	Screw	41	W10440460	Cord, Power
14	W10041960	Spring, Door	42	3394083	Clip, Front Panel
15	8066217	Hinge, Top	43	W10336852	Burner Assembly (60 Hz)
16	3392100	Foot, Dryer			
	279810	Foot, Optional (Extended Length Package Of 2) (Not Included)			
17	342043	Screw			
18		Cabinet			
	8530603	White			
19	98234	Clip, Ground			
20	8066092	Lock, Front Top			
21		Panel, Front			
	3395197	White			
22	W10121316	Clamp, Motor Mount			
23	685203	Clip, Felt Pad			
24	3389441	Door Catch Assembly			
25	3390731	Seal, Door			
26	337189	Clip, Hinge			
27	342055	Screw			
28		Hinge, Spring Assembly			
	8066056	Right Side			
	8066057	Left Side			
29	W10396032	Motor Assembly			

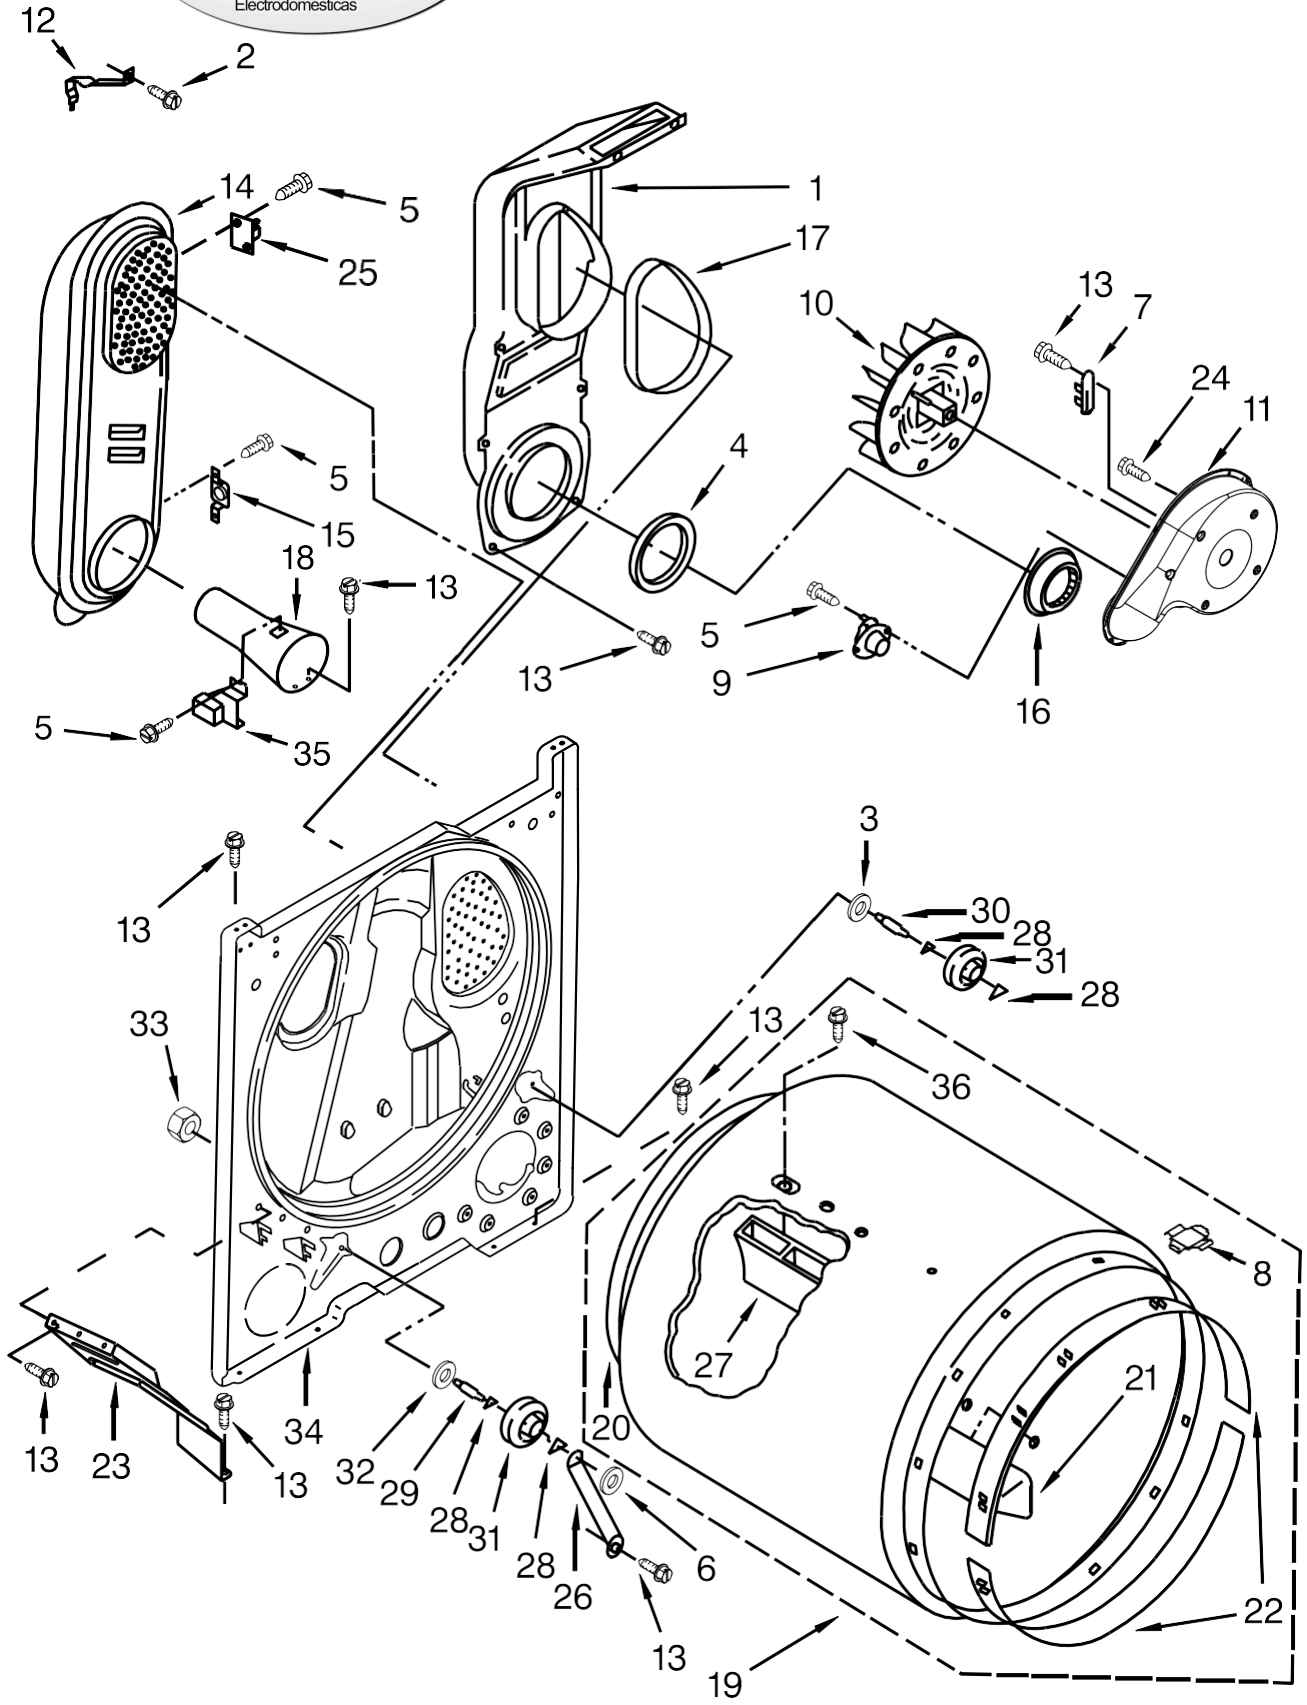

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	348368	Lint Chute Assembly	35	338906	Sensor, Radiant
2	489463	Screw	36	W10219342	Screw
3	3388703	Washer			
4	347139	Seal, Lint Chute			
5	90767	Screw			
6	90296	Nut, Push On			
7	3392519	Fuse, Thermal (91C)			
8	8066086	Plug, Drum Hole			
9	3387134	Thermostat			
10	694089	Wheel, Blower			
11	8577230	Housing, Blower			
12	8066155	Clip, Heater Box			
13	343641	Screw			
14	8530285	Box, Heater (96~C)			
15	W10423382	Thermostat H.L SPST (180)			
16	696302	Shield, Exhaust			
17	339956	Seal			
18	8066049	Funnel, Burner Light			
19	695587	Drum Assembly Complete			
20	W10352407	Seal, Rear Drum			
21	3403636	Baffle, Drum			
22	692526	Bearing, Ring			
23	3406022	Bracket, Bulkhead Chute			
24	3390647	Screw			
25	3977394	Thermal Cut-Off			
26	3976434	Bracket, Support			
27	692490	Baffle, Drum			
28	690997	Washer, Tri Ring			
29	W10359270	Shaft, Drum Roller - Left Hand Thread			
30	W10359269	Shaft, Drum Roller - Right Hand Thread			
31	3397590	Roller, Support			
32	348197	Washer			
33	W10298789	Nut, Hex			
34	3403491	Bulkhead			

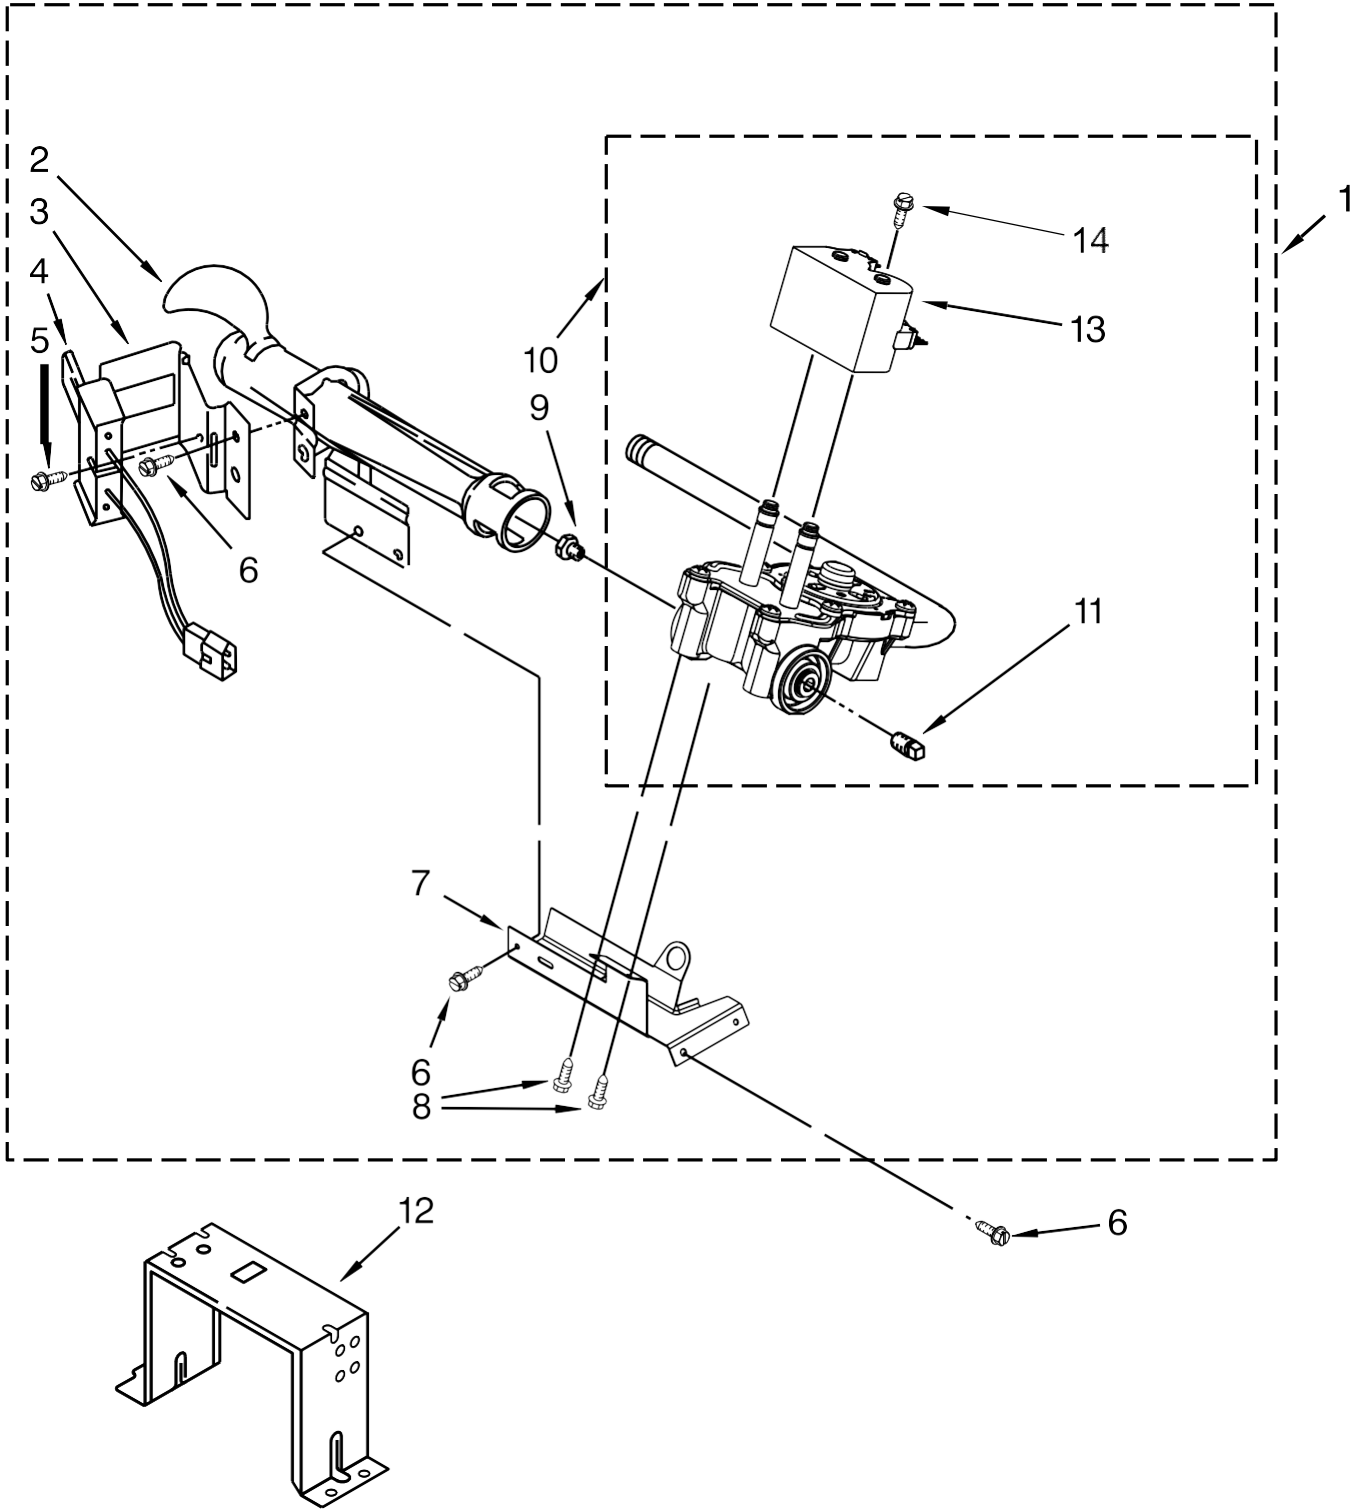

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10336852	Burner Assembly (60 Hz)
2	688617	Tube, Burner
3	694298	Bracket, Ignitor
4	686590	Ignitor
5	3393909	Screw
6	343641	Screw
7	693986	Base, Burner
8	3387057	Screw
9	234826	Orifice, Burner Type 1
10	W10304604	Valve, Gas 60 Hz.
11	W10295523	Pipe Plug
12	3389889	Bracket, Support
13	W10328463	Coil, 60 Hz.
14	326049536	Screw
		Following Parts Not Illustrated
	49572A	Conversion Kit (Type 1 and 2) to Type (4) L.P.G.