



Secadora Whirlpool 7MWGD1601AW2

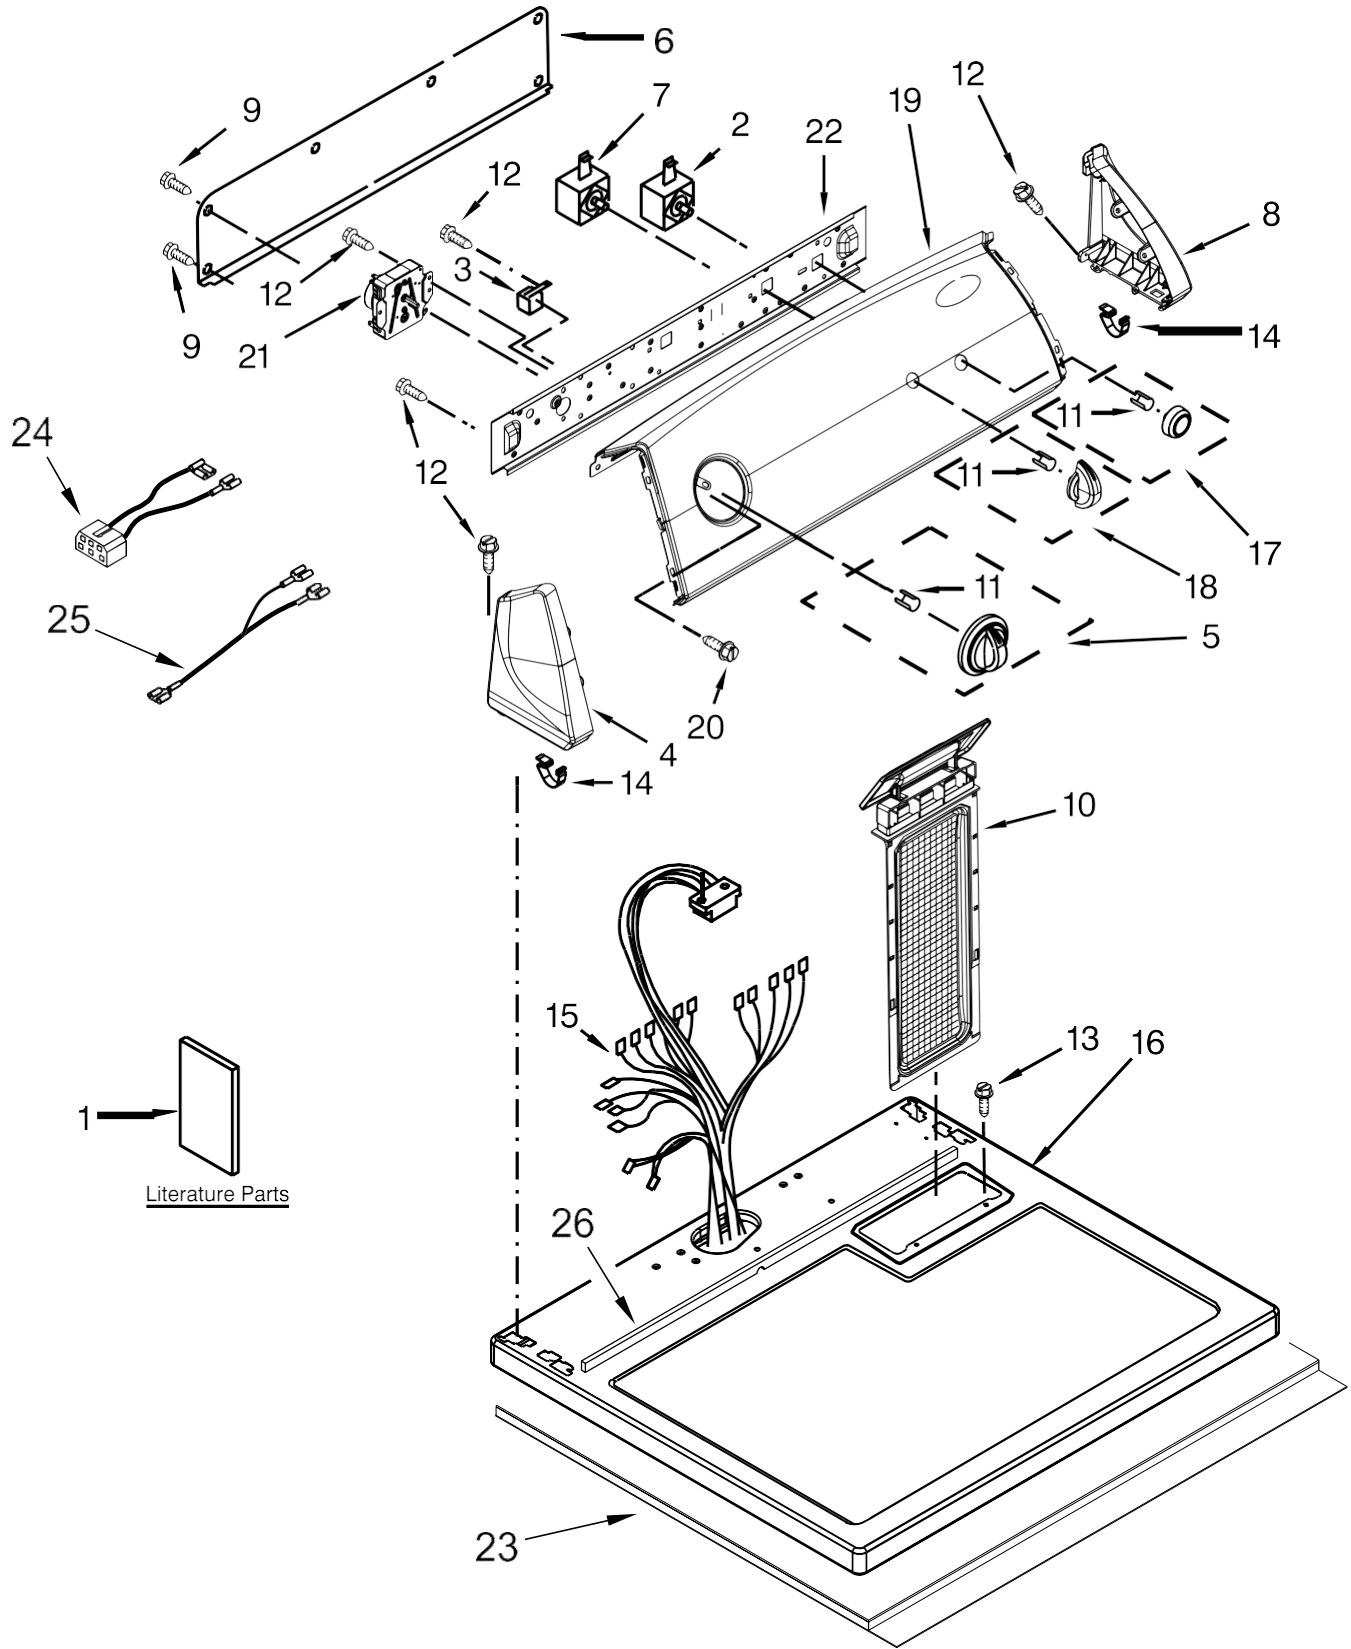



Secadora Whirlpool 7MWGD1601AW2

<u>Illus.</u> <u>No.</u>	<u>Part No.</u> <u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u> <u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u> <u>Description</u>
1	Literature Parts W10329763 Instructions, Installation	8	End Cap (Right) 8566032 White	18	Assembly, Control Knob 8565944 White
	W10536125 Use & Care Guide	9	693995 Screw	19	Console W10518936 White
	8576796 Wiring Diagram	10	8557857 Lint Screen	20	3390631 Screw
2	3977456 Switch, Push-To-Start	11	8536939 Clip, Spring	21	3977678 Timer Assembly (60 Hz.)
3	694419 Buzzer, Mini	12	3348629 Screw	22	8566052 Bracket, Control
4	End Cap (Left) 8566035 White	13	688983 Screw	23	W10123956 Panel, Dampening
5	Assembly, Timer Knob 8566061 White	14	8312709 Clip, Console	24	3401695 Wire, Jumper (Buzzer On/Off)
6	W10103406 Panel, Rear (Console)	15	8299876 Harness, Wiring (Complete)	25	W10203571 Jumper, Push-To-Start
7	3405152 Switch, Rotary	16	8559800 White	26	W10316616 Seal, Foam
		17	Assembly, Push-To-Start Knob 8566065 White		

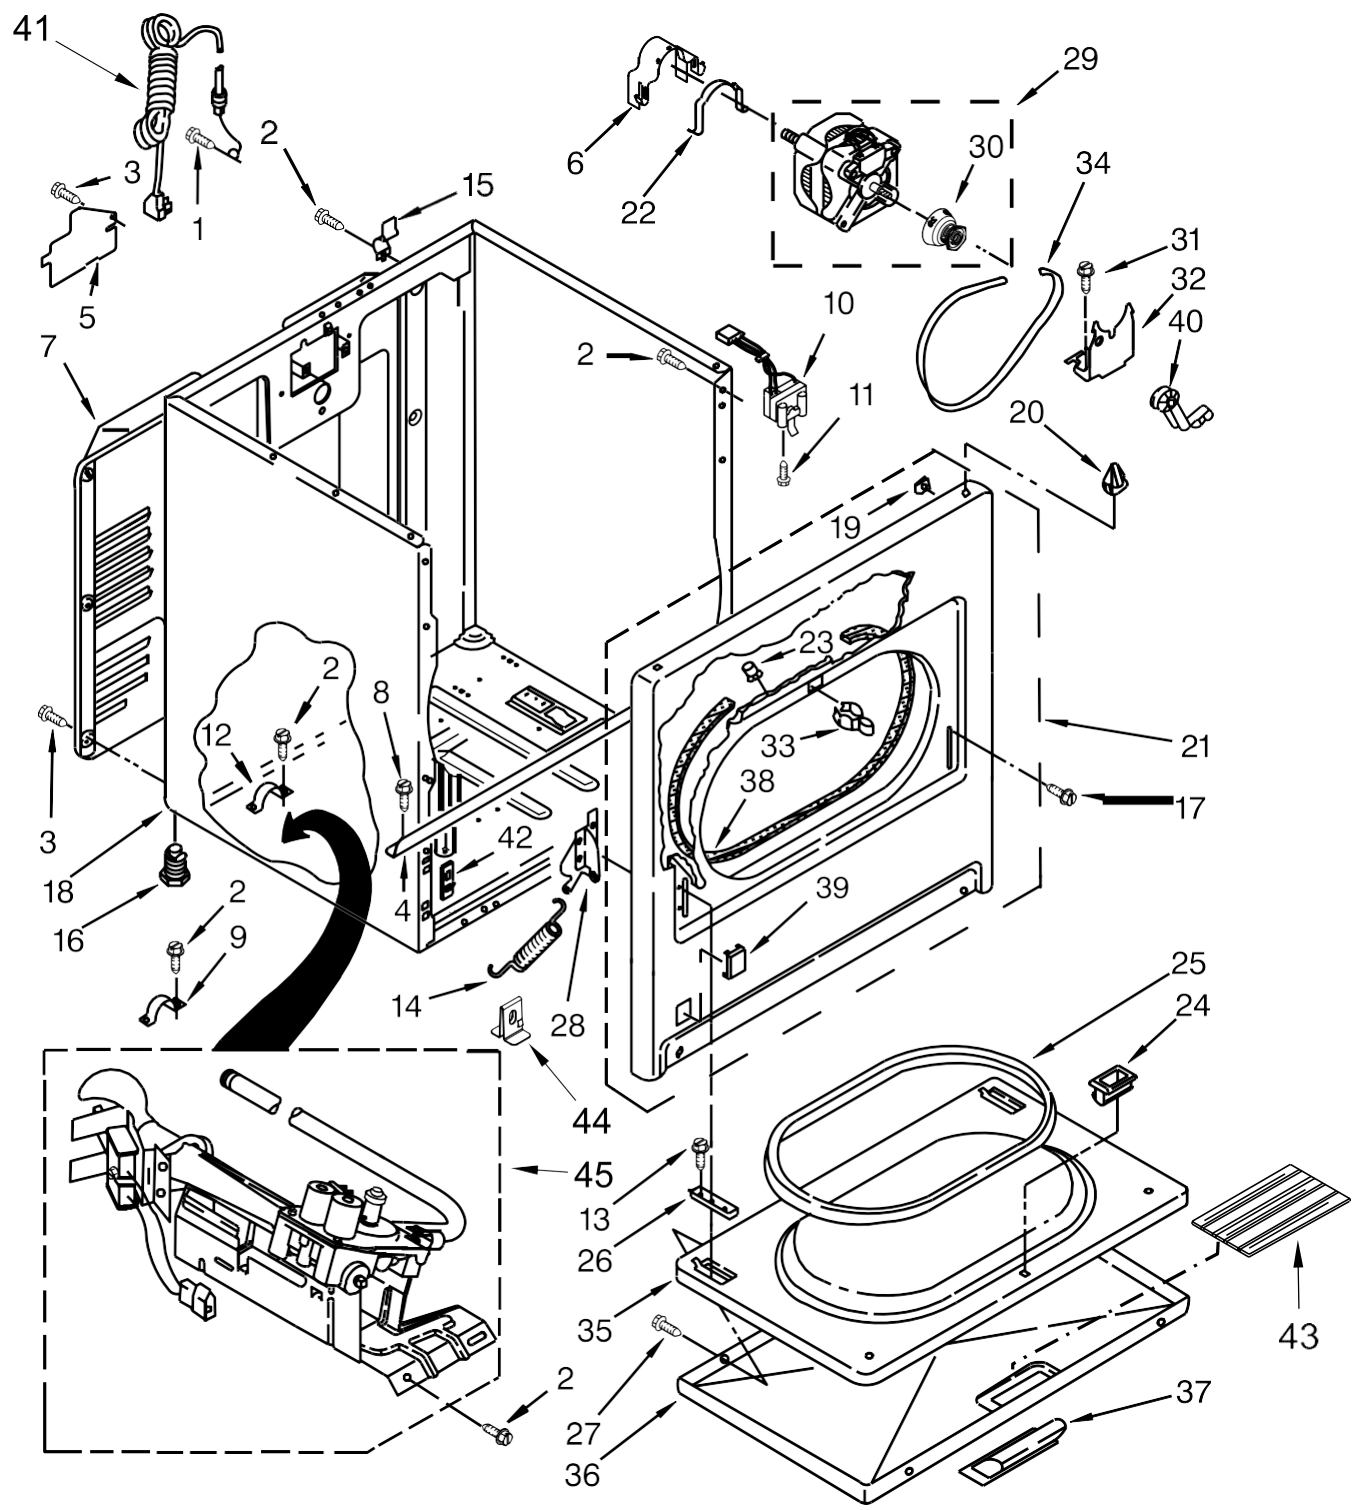




Secadora Whirlpool 7MWGD1601AW2

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	8533974	Screw
2	343641	Screw
3	693995	Screw
4	W10236073	Bracket, Cabinet
5	3396795	Cover, Terminal Block
6	3404162	Clamp, Motor (With Shield)
7	W10571724	Panel, Rear
8	3390647	Screw
9	3980175	Clamp, Elbow
10	W10237959	Switch, Door
11	697773	Screw
12	341029	Clamp, Pipe
13	3357011	Screw
14	W10041960	Spring, Door
15	8066217	Hinge, Top
16	3392100	Foot, Dryer
	279810	Foot, Optional (Extended Length Package Of 2) (Not Included)
17	342043	Screw

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
18		Cabinet
	8530603	White
19	98234	Clip, Ground
20	8066092	Lock, Front Top
21		Panel, Front
	3395197	White
22	W10121316	Clamp, Motor Mount
23	685203	Clip, Felt Pad
24	3389441	Assembly, Door Catch
25	W10389571	Seal, Door
26	337189	Clip, Hinge
27	342055	Screw
28		Hinge, Spring Assembly
	8066056	Hinge, Door (Right)
	8066057	Hinge, Door (Left)
29	W10396032	Assembly, Motor
30	8066184	Pulley, Motor
31	3400500	Bolt
32	348780	Base, Motor

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
33	696144	Strike, Door
34	W10131364	Belt, Drive
35	695737	Door, Rear
36		Door, Outer
	3393549	White
37	W10095180	Handle, Door
38	W10568603	Assembly, Seal and Bearing
39		Plug, Hinge Hole
	8564457	White
40	691366	Assembly, Idler
41	W10440460	Cord, Power
42	3394083	Clip, Front Panel
43	W10595510	Tape, Foil
44	W10575896	Clip, Spring
45	8318272	Burner Assembly (60 Hz) (Type 1) (White Rodgers)

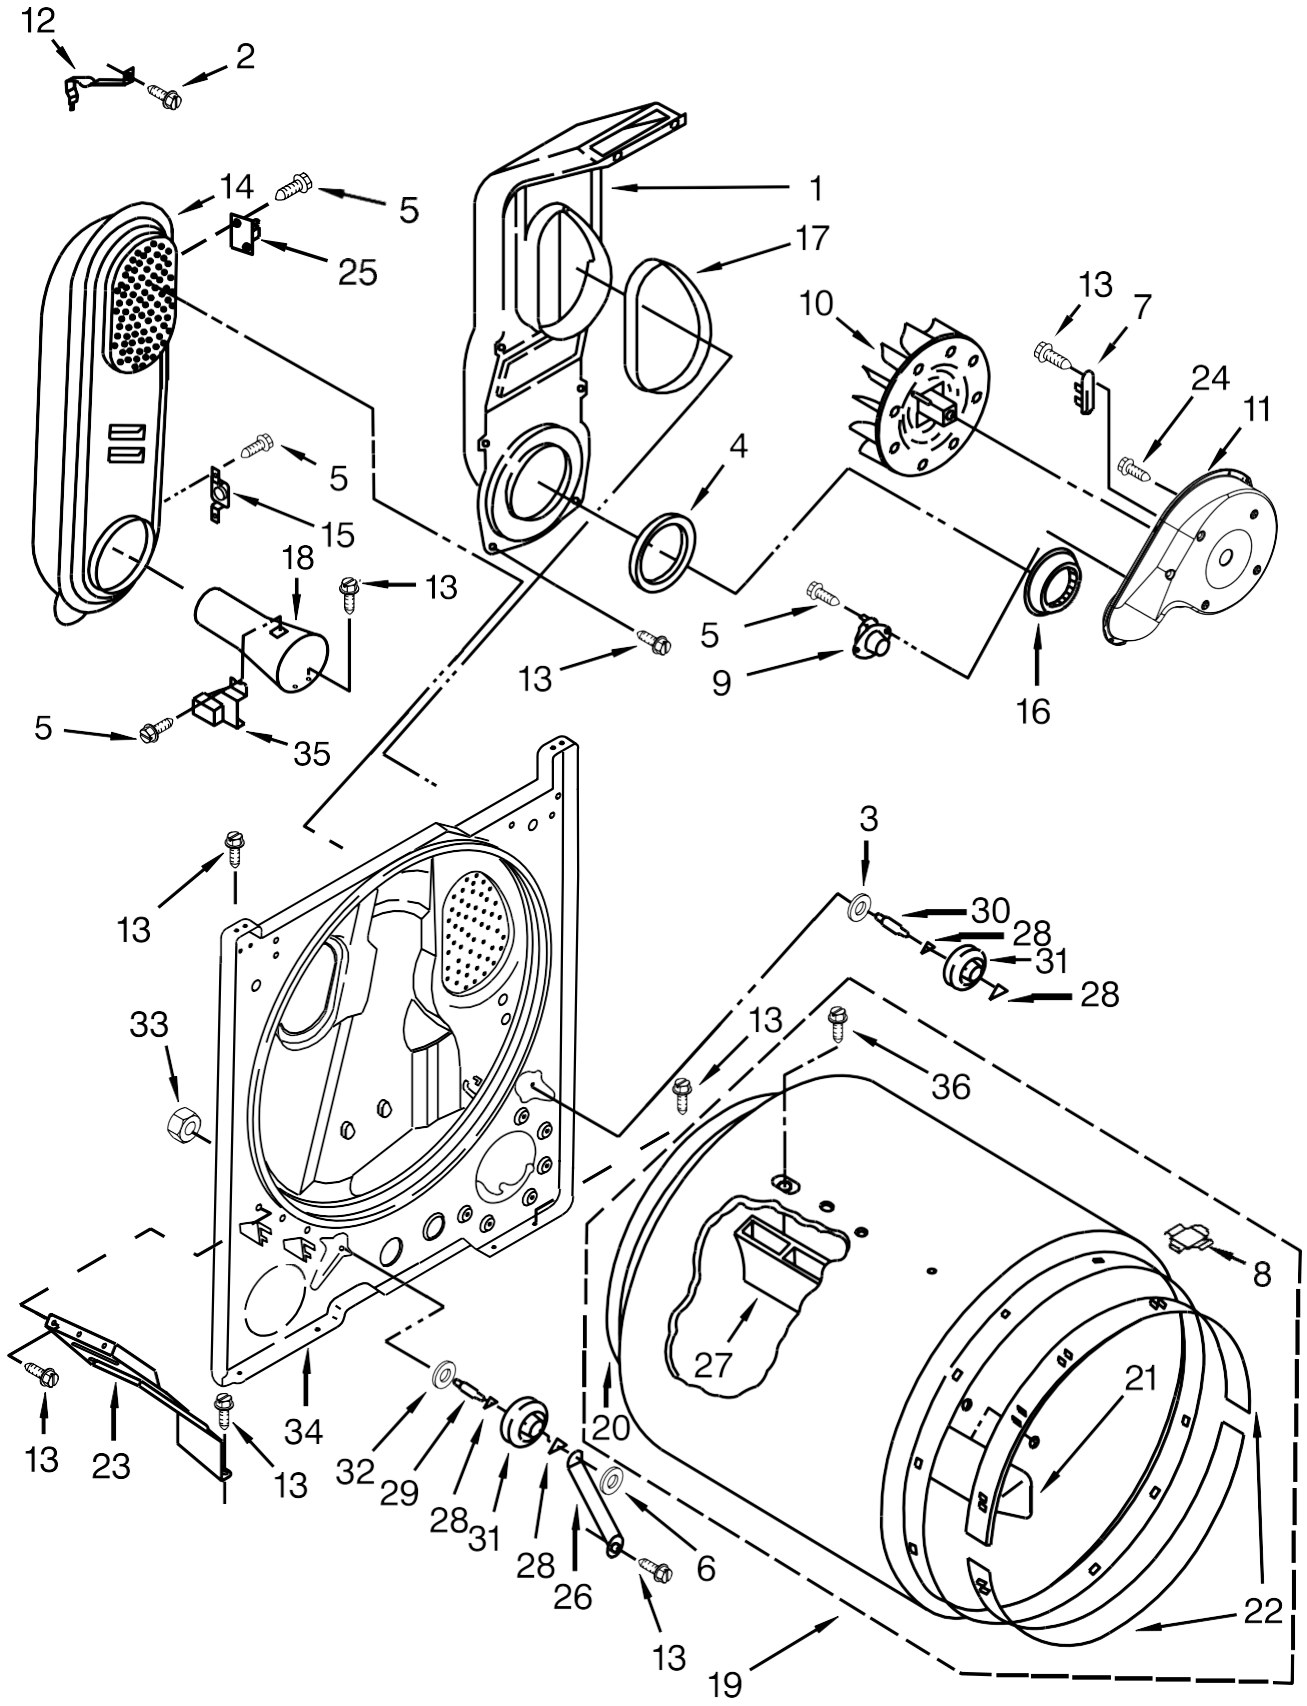




Secadora Whirlpool 7MWGD1601AW2

<u>Illus. No.</u>	<u>Part No. Description</u>
1	348368 Assembly, Lint Chute
2	489463 Screw
3	3388703 Washer
4	347139 Seal, Lint Chute
5	90767 Screw
6	90296 Nut, Push On
7	3392519 Fuse, Thermal (91C)
8	8066086 Plug, Drum Hole
9	3387134 Thermostat
10	694089 Wheel, Blower
11	8577230 Housing, Blower
12	8066155 Clip, Heater Box
13	343641 Screw
14	8530285 Box, Heater (96C)
15	W10423382 Thermostat H.L SPST (180F)

<u>Illus. No.</u>	<u>Part No. Description</u>
16	W10389567 Shield, Exhaust
17	339956 Seal
18	8066049 Funnel, Burner Light
19	W10389436 Assembly, Drum (Complete)
20	W10389561 Seal, Rear Drum
21	3403636 Baffle, Drum (Short)
22	692526 Bearing, Ring
23	3406022 Bracket, Bulkhead Chute
24	3390647 Screw
25	3977394 Thermal Cut-Off
26	3976434 Bracket, Support
27	692490 Baffle, Drum (Long)
28	W10512946 Washer, Tri Ring
29	W10359270 Shaft, Drum Roller - Left Hand Thread

<u>Illus. No.</u>	<u>Part No. Description</u>
30	W10359269 Shaft, Drum Roller - Right Hand Thread
31	3397590 Roller, Support
32	348197 Washer
33	W10298789 Nut, Hex
34	3403491 Bulkhead
35	338906 Sensor, Radiant
36	W10219342 Screw

AND TYPE 4 LIQUEFIED PROPANE AND BUTANE GASES
 USE WITH TYPE 1 - NATURAL

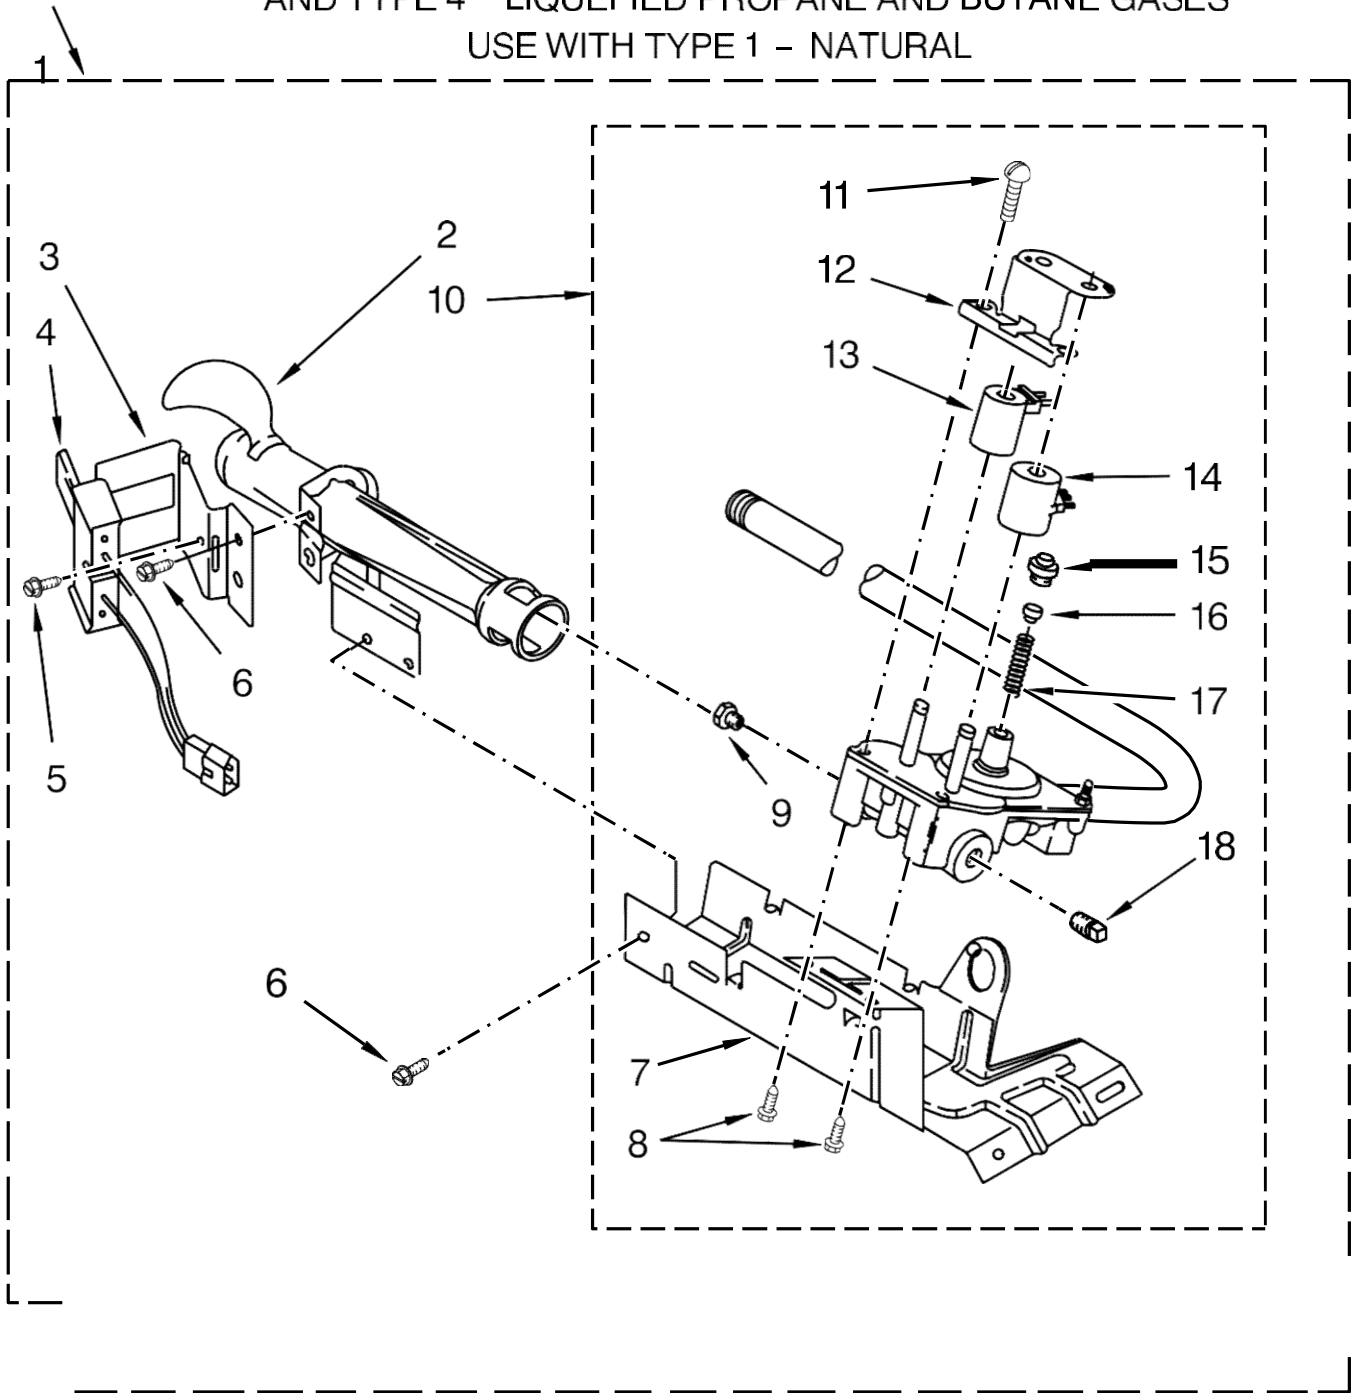



Secadora Whirlpool 7MWGD1601AW2

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	8318272	Burner Assembly (60 Hz) (Type 1) (White Rodgers)
2	688617	Tube, Burner
3	694298	Bracket, Ignitor
4	686590	Ignitor
5	W10366705	Screw
6	343641	Screw
7	693986	Base, Burner
8	3387057	Screw

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
9		Orifice, Burner
	234826	Type 1 (Natural)
	229742	Type 4 (Butane)
	234868	Type 4 (Propane)
10	8318277	Valve, Gas (60 Hz)
11	694421	Screw, Coil
12	694538	Bracket, Coil
13	694540	Coil, 60 Hz. (2 Terminal) (Main)
14	694539	Coil, 60 Hz (Split) (3 Terminal) (Pilot Position)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
15	694424	Leak, Limiter
16	694423	Screw, Regulator Adjustment
17	694422	Spring, Regulator
18	239822	Plug, Pipe
		Following Parts Not Illustrated
	694572	Conversion Kit (Type 1 and 2) to Type (4) L.P.G.



Secadora Whirlpool 7MWGD1601AW2

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	279948	Kit, Dryer Repair
	346764	Kit, Hold Down
	W10071550A	Dryer Rack
	8522199	Kit, Dryer Vent Testing

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	350938	Gray Primer