



Secadora Whirlpool 7MWGD1705YM1

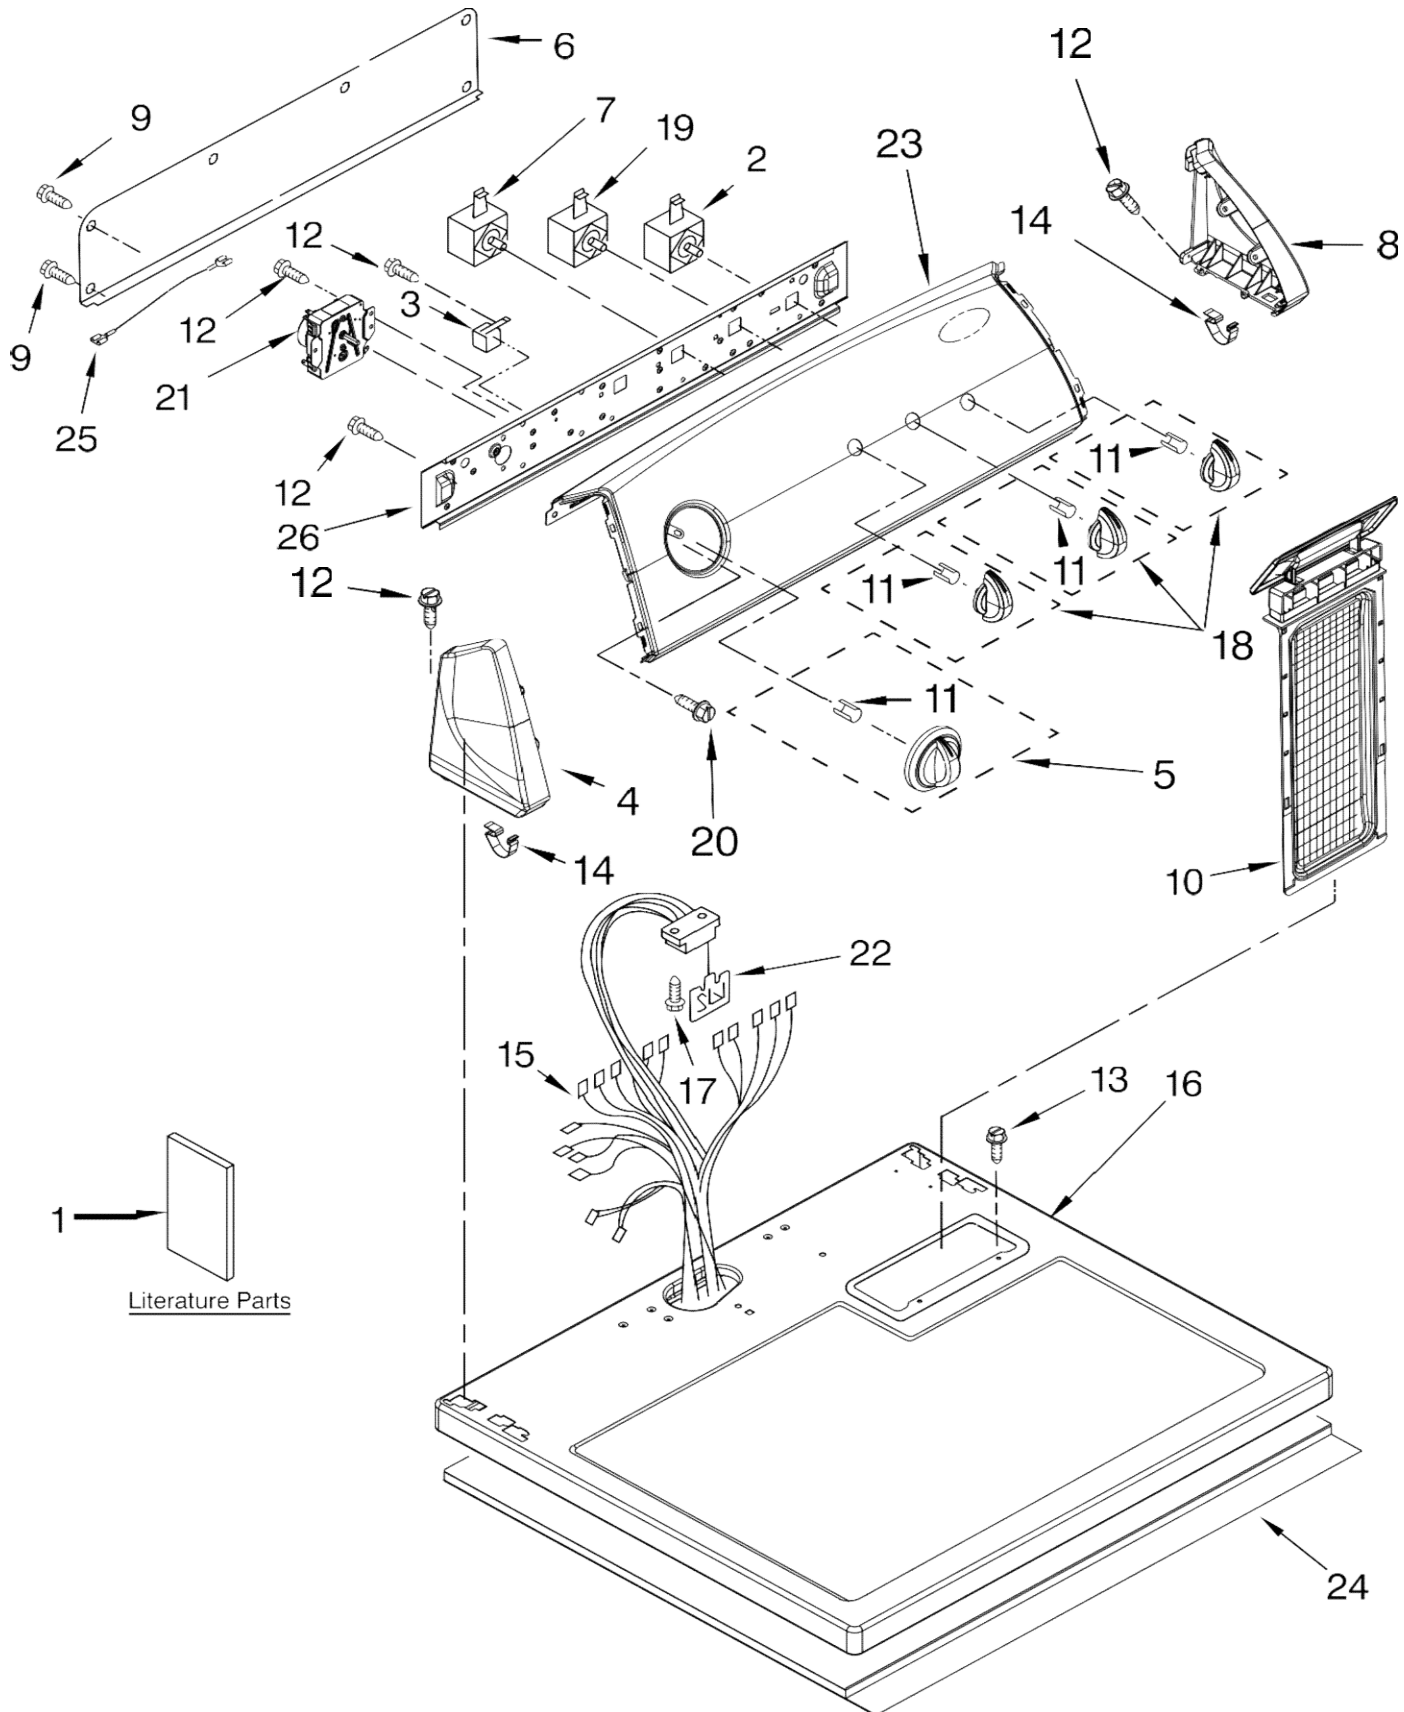

1
 Literature Parts

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	W10329763	Instructions, Installation
	W10368973	Use & Care Guide
	W10118081	Wiring Diagram
2	W10117655	Switch, Push To Start
3	694419	Buzzer, Mini
4	8566035	Cap, End (L.H.)
5	W10034750	Knob, Timer Assembly
6	W10103406	Panel, Rear Console
7	8530169	Switch, Temperature
8	8566032	Cap, End (R.H.)
9	693995	Screw, Hex Washer Head
10	8557857	Screen, Lint
11	8536939	Clip, Spring
12	3348629	Screw, 8-18 x 5/16
13	688983	Screw, 8-18 x 5/8
14	8312709	Clip-Console
15	8576542	Harness, Wiring
16	8559800	Top
17	359625	Screw, 8-18 x 1/2
18	W10034380	Knob, Control (3)
19	3405156	Switch, Rotary (Twist Mount)
20	3400818	Screw, Grounding
21	8566184	Timer Assembly (60 Hz.)
22	8558178	Control, Electronic
23	W10354025	Panel & Console Assembly
24	W10123956	Panel, Dampening
25	W10113080	Jumper, Buzzer
26	8566052	Bracket, Control

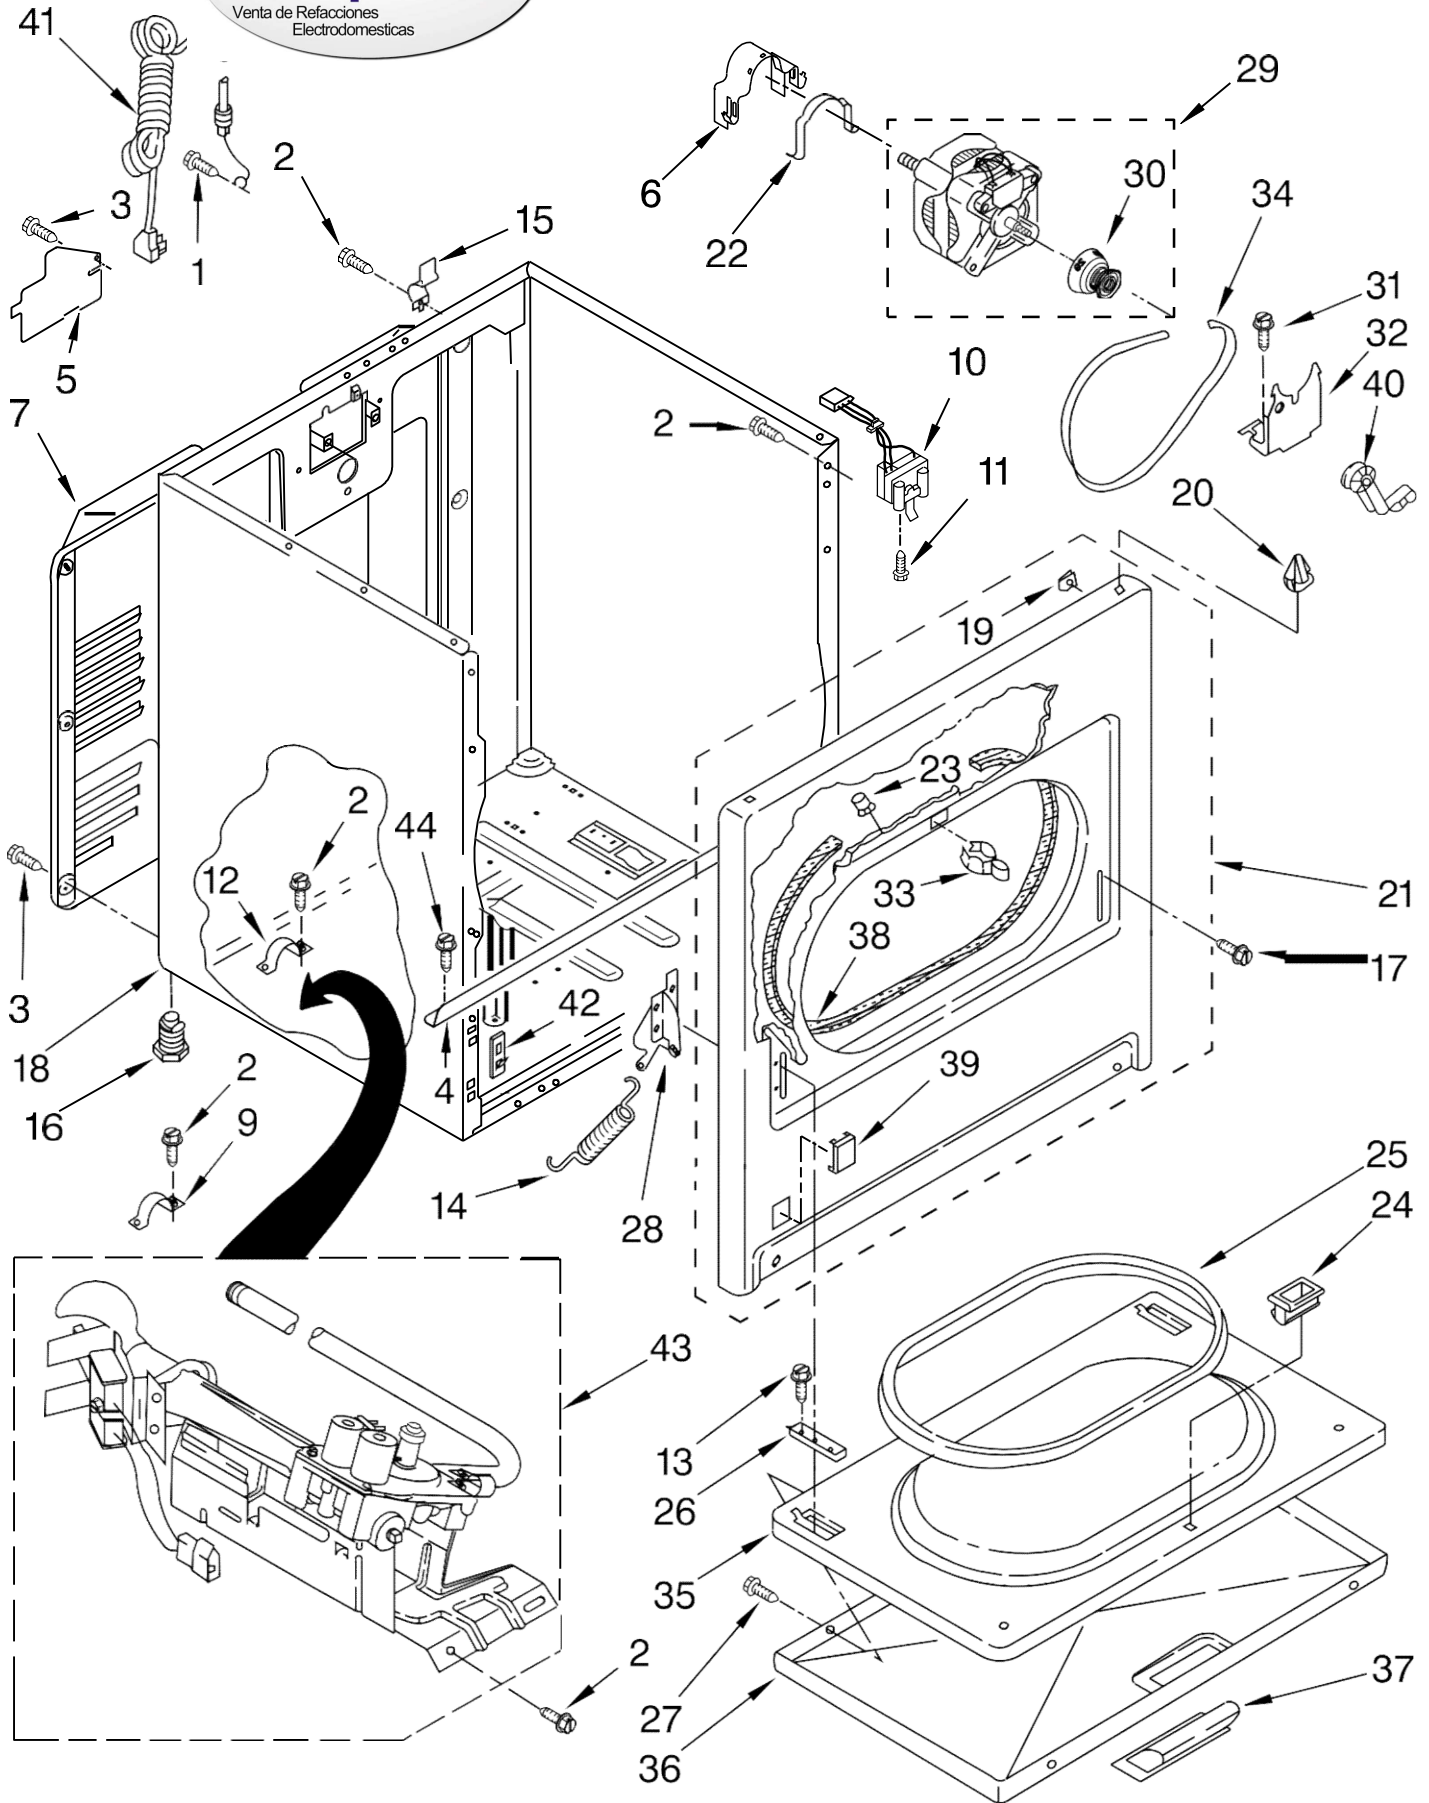


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST



Secadora Whirlpool 7MWGD1705YM1

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	8533974	Screw, 10-32 x 5/8 (External Ground)	17	342043	Screw, 10-32 x 3/8	31	3400500	Bolt, 5/16-18 x 3/4
2	343641	Screw, 10-16 x 1/2	18	8530603	Cabinet (Includes Illus. 4)	32	348780	Base, Motor
3	693995	Screw, Hex Head				33	696144	Strike, Panel
4	W10236073	Bracket, Cabinet	19	98234	Clip, Ground	34	W10131364	Belt, Drive
5	3396795	Cover, Block	20	690363	Lock, Front Top	35	695737	Door, Rear
6	3404162	Clamp, Motor (VVT/STRIKER)	21	3395197	Panel, Front	36	3393549	Door, Front
7	3396805	Panel, Rear	22	W10121316	Clamp, Motor	37	W10095180	Handle, Door
9	3980175	Clamp-Elbow	23	685203	Clip, Felt Pad	38	3406129	Seal & Bearing Assembly
10	3406107	Door Switch Assembly	24	3389441	Catch, Door Assembly	39	8564457	Plug, Front Panel
11	697773	Screw, 6-20 x 7/8	25	3390731	Seal, Door	40	691366	Idler & Pulley Assembly
12	341029	Clamp, Pipe	26	337189	Clip, Hinge (2)	41	W10440460	Cord, Power
13	3357011	Screw, 10-16 x 1/2	27	342055	Screw, 8-18 x 5/8	42	3394083	Clip, Front Panel
14	W10041960	Spring, Door (2)	28	8066056	Hinge, R.H.	43	W10336852	Burner Assembly, 60 Hz.
15	8066217	Hinge, Top		8066057	Hinge, L.H.			(See Pages 7 & 8 For Further Burner Breakdown)
16	3392100	Foot, Dryer	29	8066206	Motor Assembly 60 Hz.			
	279810	Foot-Optional (Extended Length) (Package of 2) (Not Included.)	30	8066184	Pulley, 60 Hz.	44	3390647	Screw, 8-18 x 1/2


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

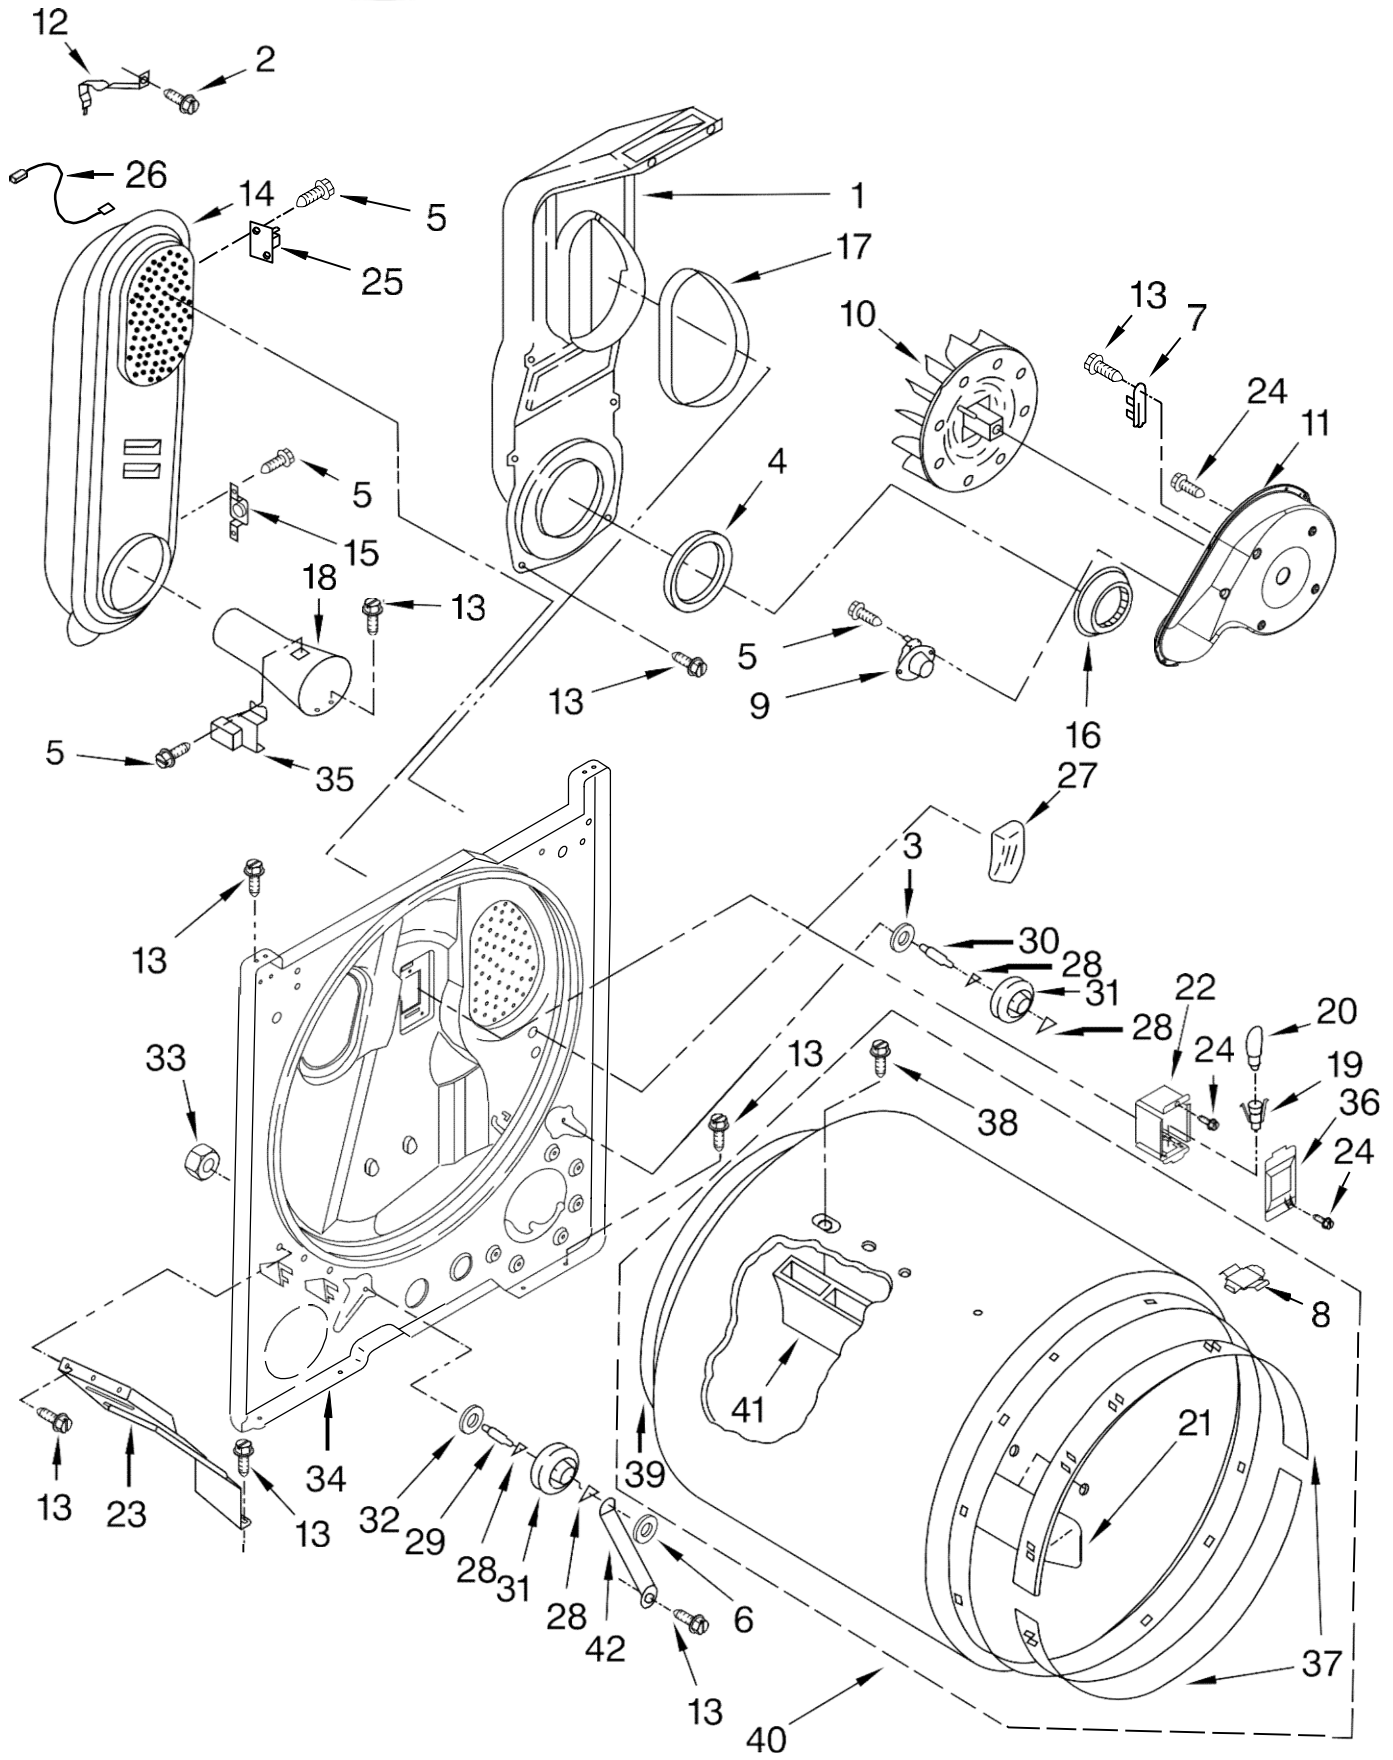

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

Illus. No.	Part No.	DESCRIPTION
1	348368	Lint Chute Assembly
2	489463	Screw, 8-18 x 5/8
3	3388703	Washer-Support
4	347139	Seal, Lint Chute
5	90767	Screw, 8-18 x 3/8
6	90296	Clip
7	3392519	Thermal Fuse (91°C)
8	8066086	Drum Hole Plug
9	8318268	Thermostat, Internal-Bias
10	694089	Wheel, Blower (Includes Illus. 21)
11	8577230	Housing, Blower
12	3398161	Clip
13	343641	Screw, 10-16 x 1/2
14	8530285	Box, Heater
15	W10423382	Thermostat, 180 F (82°C)
16	696302	Shield, Exhaust
17	339956	Seal
18	8066049	Funnel, Burner
19	W10214261	Socket Assembly
20	3406124	Bulb
21	3403636	Baffle, Drum (1)
22	3977373	Bracket, Drum Light
23	3406022	Bracket, Bulkhead
24	3390647	Screw, 8-18 x 1/2
25	280010	Kit, Thermal Cut-Off (Includes Illus. 15)
26	3401707	Wire, Jumper
27	3976479	Pad, Sensor
28	690997	Ring, Tri
29	W10359270	Shaft, L.H.
30	W10359269	Shaft, R.H.
31	3397590	Roller, Support
32	348197	Washer, Support
33	W10298789	Nut, 3/8-16
34	3403414	Bulkhead
35	338906	Sensor, Radiant
36	3402841	Lens, Drum Light
37	692526	Ring, Bearing
38	W10219342	Screw, 8-16 x 1/2
39	W10352407	Seal, Rear Drum
40	695587	Drum Assembly
41	692490	Baffle, Drum
42	3976434	Bracket, Support

USE WITH TYPE 1 - NATURAL, TYPE 2 - MIXED,
 AND TYPE 4 - LIQUEFIED PROPANE AND BUTANE GASES

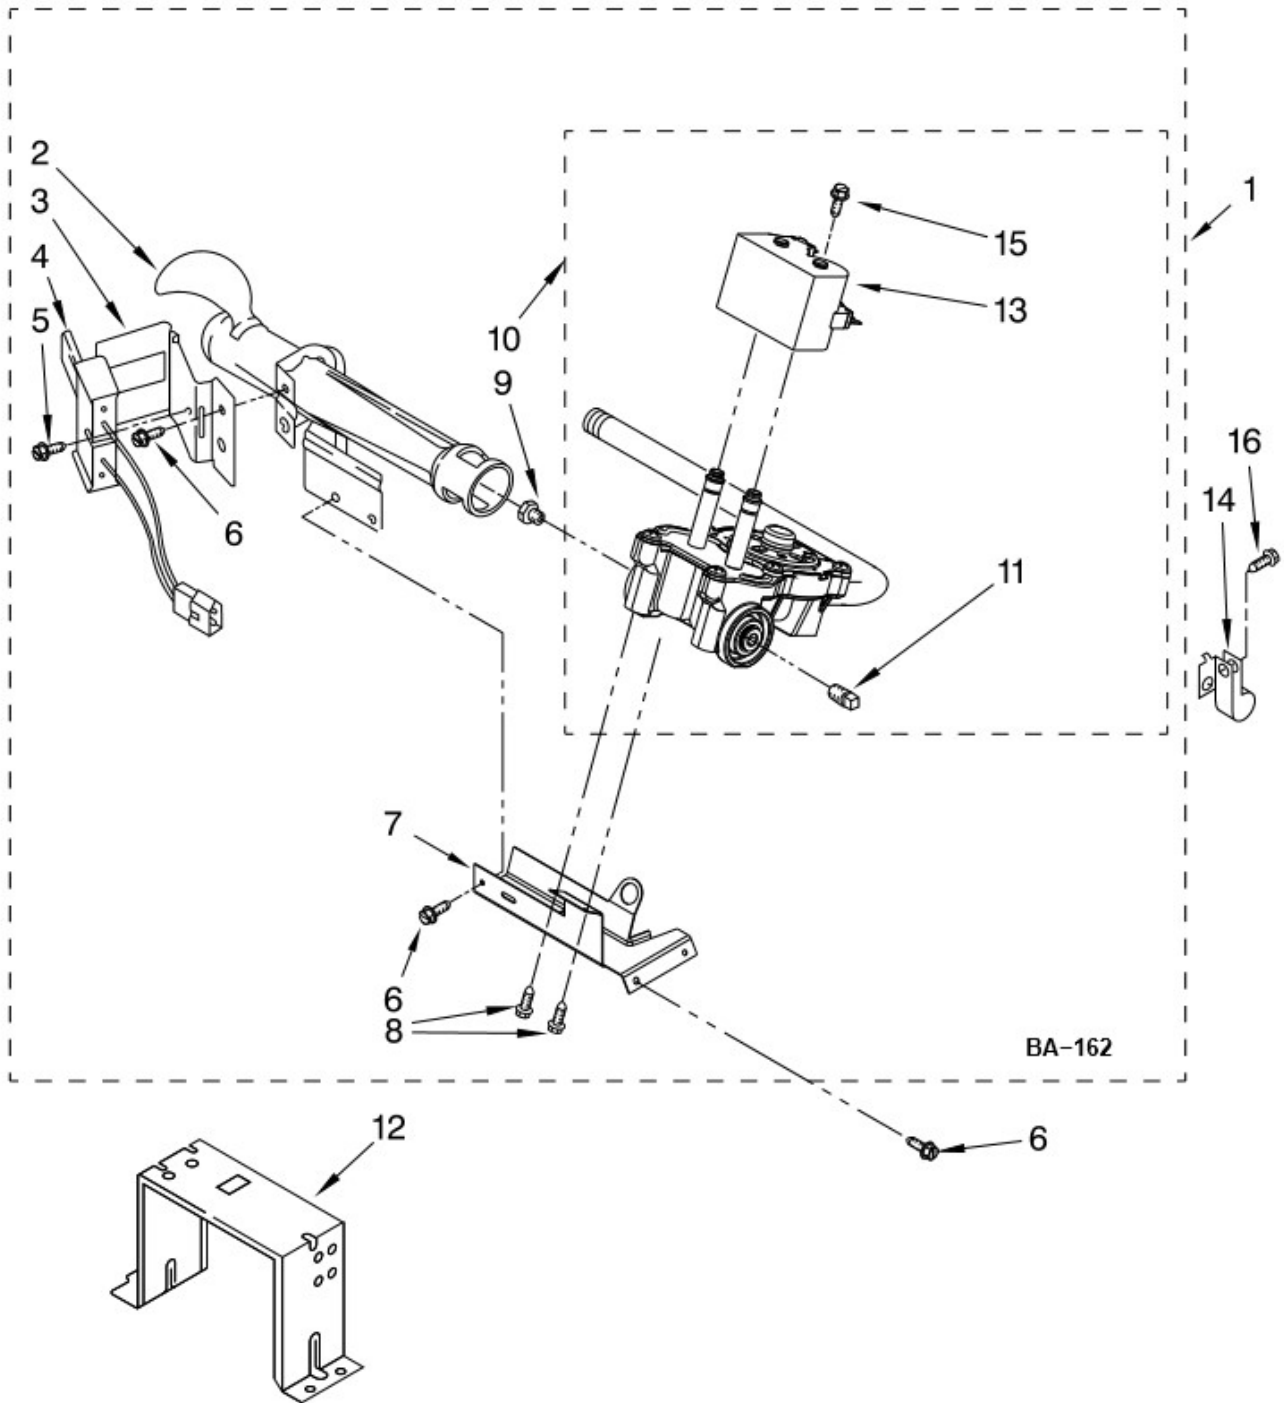



Secadora Whirlpool 7MWGD1705YM1

USE WITH TYPE 1 – NATURAL, TYPE 2 – MIXED,
AND TYPE 4 – LIQUEFIED PROPANE AND BUTANE GASES

Illus. No.	Part No.	DESCRIPTION
1	W10336852	Burner Assembly 60 Hz. (Type 1 & 2)
2	688617	Tube, Burner
3	694298	Bracket, Ignitor
4	686590	Ignitor
5	3393909	Screw & Washer (8-32 x 5/8)
6	343641	Screw, 10-16 x 1/2
7	693986	Base, Burner
8	3387057	Screw, 8-18 x 3/8 (3)
9	234826	Orifice, Burner Type 1
10	W10304604	Valve, Gas 60 Hz. (Complete) (Includes Pipe & Illus. No. 7)
11	W10295523	Plug, Pipe
12	3389889	Bracket, Support
13	W10328463	Coil, 60 Hz.
14	3978776	Clamp, Pipe
15	326049536	Screw, Coil
16	3390647	Screw, 8-18 x 1/2

Following Parts Not Illustrated

49572A Conversion Kit
(Type 1 and 2)
to Type (4) L.P.G.

BA-162

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST



Secadora Whirlpool 7MWGD1705YM1

Illus.	Part	
No.	No.	DESCRIPTION

ACCESSORY PARTS

	279948 Kit, Dryer Repair	
	346764 Kit, Hold-Down (Gas Dryer Mobile Home Installation)	
	W10071550A Dry Rack	
	8522199 Kit, Dryer Vent Testing	

PAINT, TOUCH-UP (1/2oz.)

	72017 White	
--	-------------	--

PAINT, PRESSURIZED SPRAY (12 oz.)

	350930 White	
	350938 Primer, Gray	

PAINT, BULK (1 qt.)

	799344 White (Uncut)	
--	----------------------	--

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST