



Secadora Whirlpool 7MWGD1705YM03

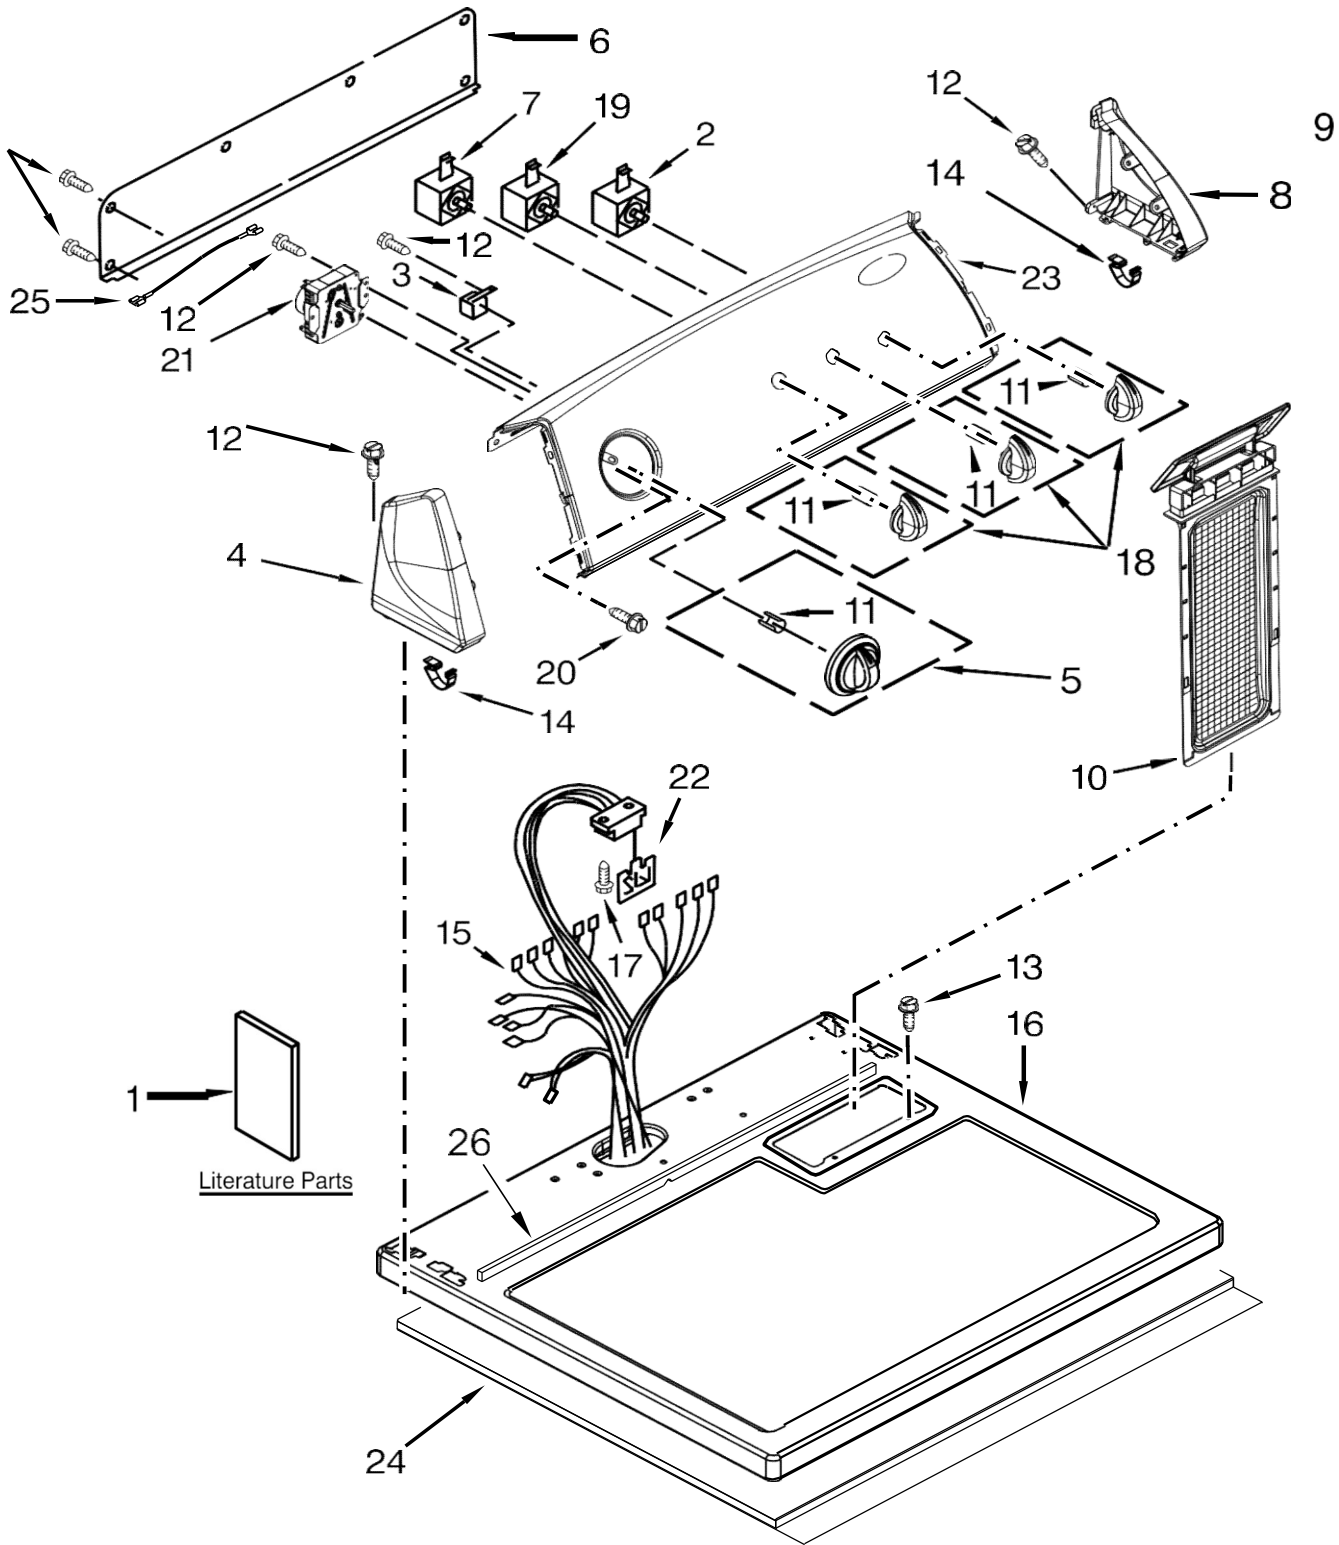



Secadora Whirlpool 7MWGD1705YM03

<u>Illus.</u> <u>No.</u>	<u>Part No.</u> <u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u> <u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u> <u>Description</u>
1	Literature Parts W10329763 Instructions, Installation W10368973 Use & Care Guide W10118081 Wiring Diagram	8	End Cap (Right) 8566032 White	18	Assembly, Control Knob W10034380 White/Metallic
2	W10117655 Switch, Push ToStart	9	693995 Screw	19	3405156 Switch, Wrinkle Guard
3	694419 Buzzer, Mini	10	8557857 Lint Screen	20	3400818 Screw
4	End Cap (Left) 8566035 White	11	8536939 Clip, Spring	21	8566184 Assembly, Timer (60 Hz.)
5	Assembly, Timer Knob W10034750 White/Metallic	12	3348629 Screw	22	W10476828 Control, Electronic
6	W10103406 Panel, Rear (Console)	13	688983 Screw	23	W10354025 Assembly, Panel and Bracket
7	8530169 Switch, Rotary Temperature	14	8312709 Clip, Console	24	W10123956 Panel, Dampening
		15	8576542 Harness, Wiring	25	W10113080 Wire, Jumper (Buzzer)
		16	Top 8559800 White	26	W10316616 Seal, Foam
		17	359625 Screw		

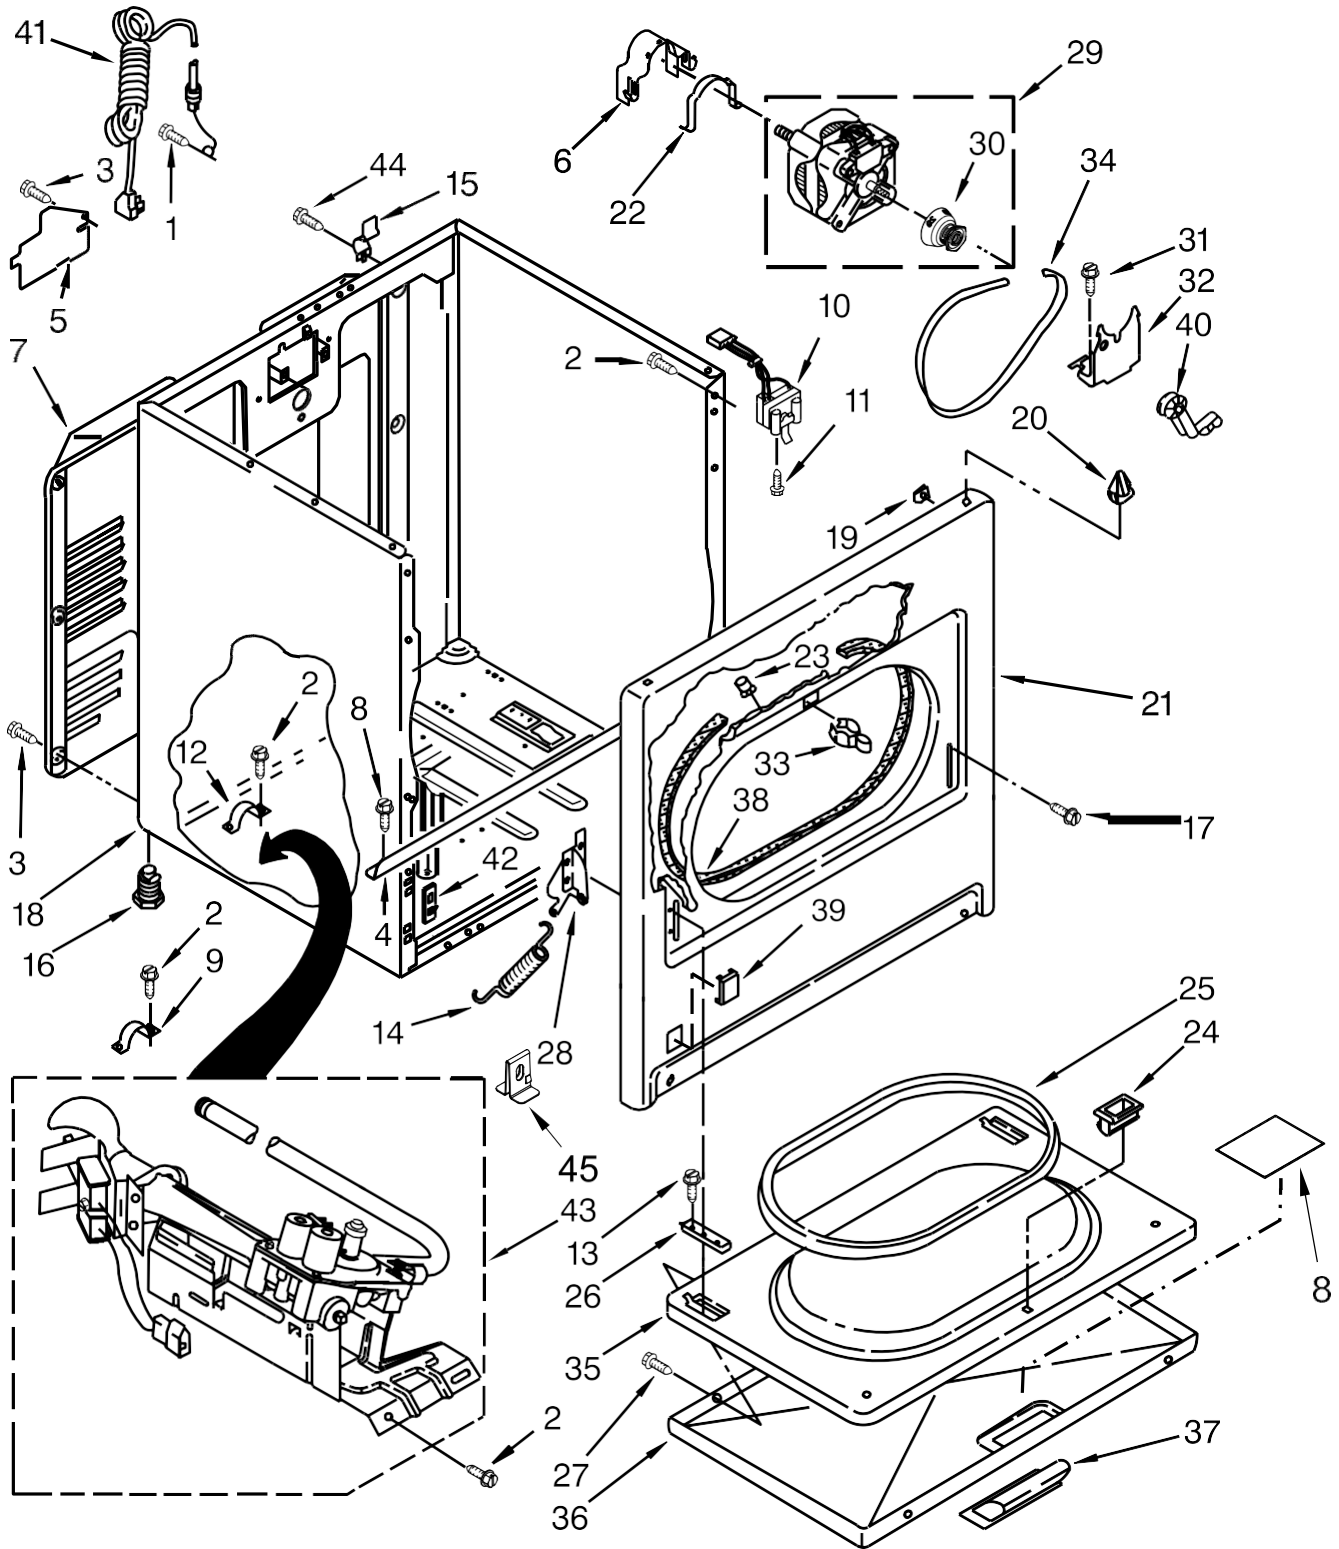




Secadora Whirlpool 7MWGD1705YM03

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	8533974	Screw
2	343641	Screw
3	693995	Screw
4	W10236073	Bracket, Cabinet
5	3396795	Cover, Terminal Block
6	3404162	Clamp, Motor (With Shield)
7	W10571724	Panel, Rear
8	W10595510	Tape, Foil
9	3980175	Clamp, Elbow
10	W10569603	Switch, Door
11	697773	Screw
12	341029	Clamp, Pipe
13	3357011	Screw
14	W10041960	Spring, Door
15	8066217	Hinge, Top
16	3392100	Foot, Dryer
	279810	Foot, Optional (Extended Length Package Of 2) (Not Included)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
17	342043	Screw
18		Cabinet
	8530603	White
19	98234	Clip, Ground
20	8066092	Lock, Front Top
21		Panel, Front
	3395197	White
22	W10121316	Clamp, Motor Mount
23	685203	Clip, Felt Pad
24	3389441	Assembly, Door Catch
25	W10389571	Seal, Door
26	337189	Clip, Hinge
27	342055	Screw
28	8066056	Hinge, Door (Right)
	8066057	Hinge, Door (Left)
29	W10396032	Assembly, Motor
30	8066184	Pulley, Motor
31	3400500	Bolt

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
32	348780	Base, Motor
33	696144	Strike, Door
34	W10131364	Belt, Drive
35	695737	Door, Rear
36		Door, Front
	3393549	White
37	W10095180	Handle, Door
38	W10568603	Assembly, Seal and Bearing
39		Plug, Front Panel
	8564457	White
40	691366	Assembly, Idler
41	W10440460	Cord, Power
42	3394083	Clip, Front Panel
43	8318272	Burner Assembly (60 Hz) (Type 1) (White Rodgers)
44	3390647	Screw
45	W10575896	Clip, Spring

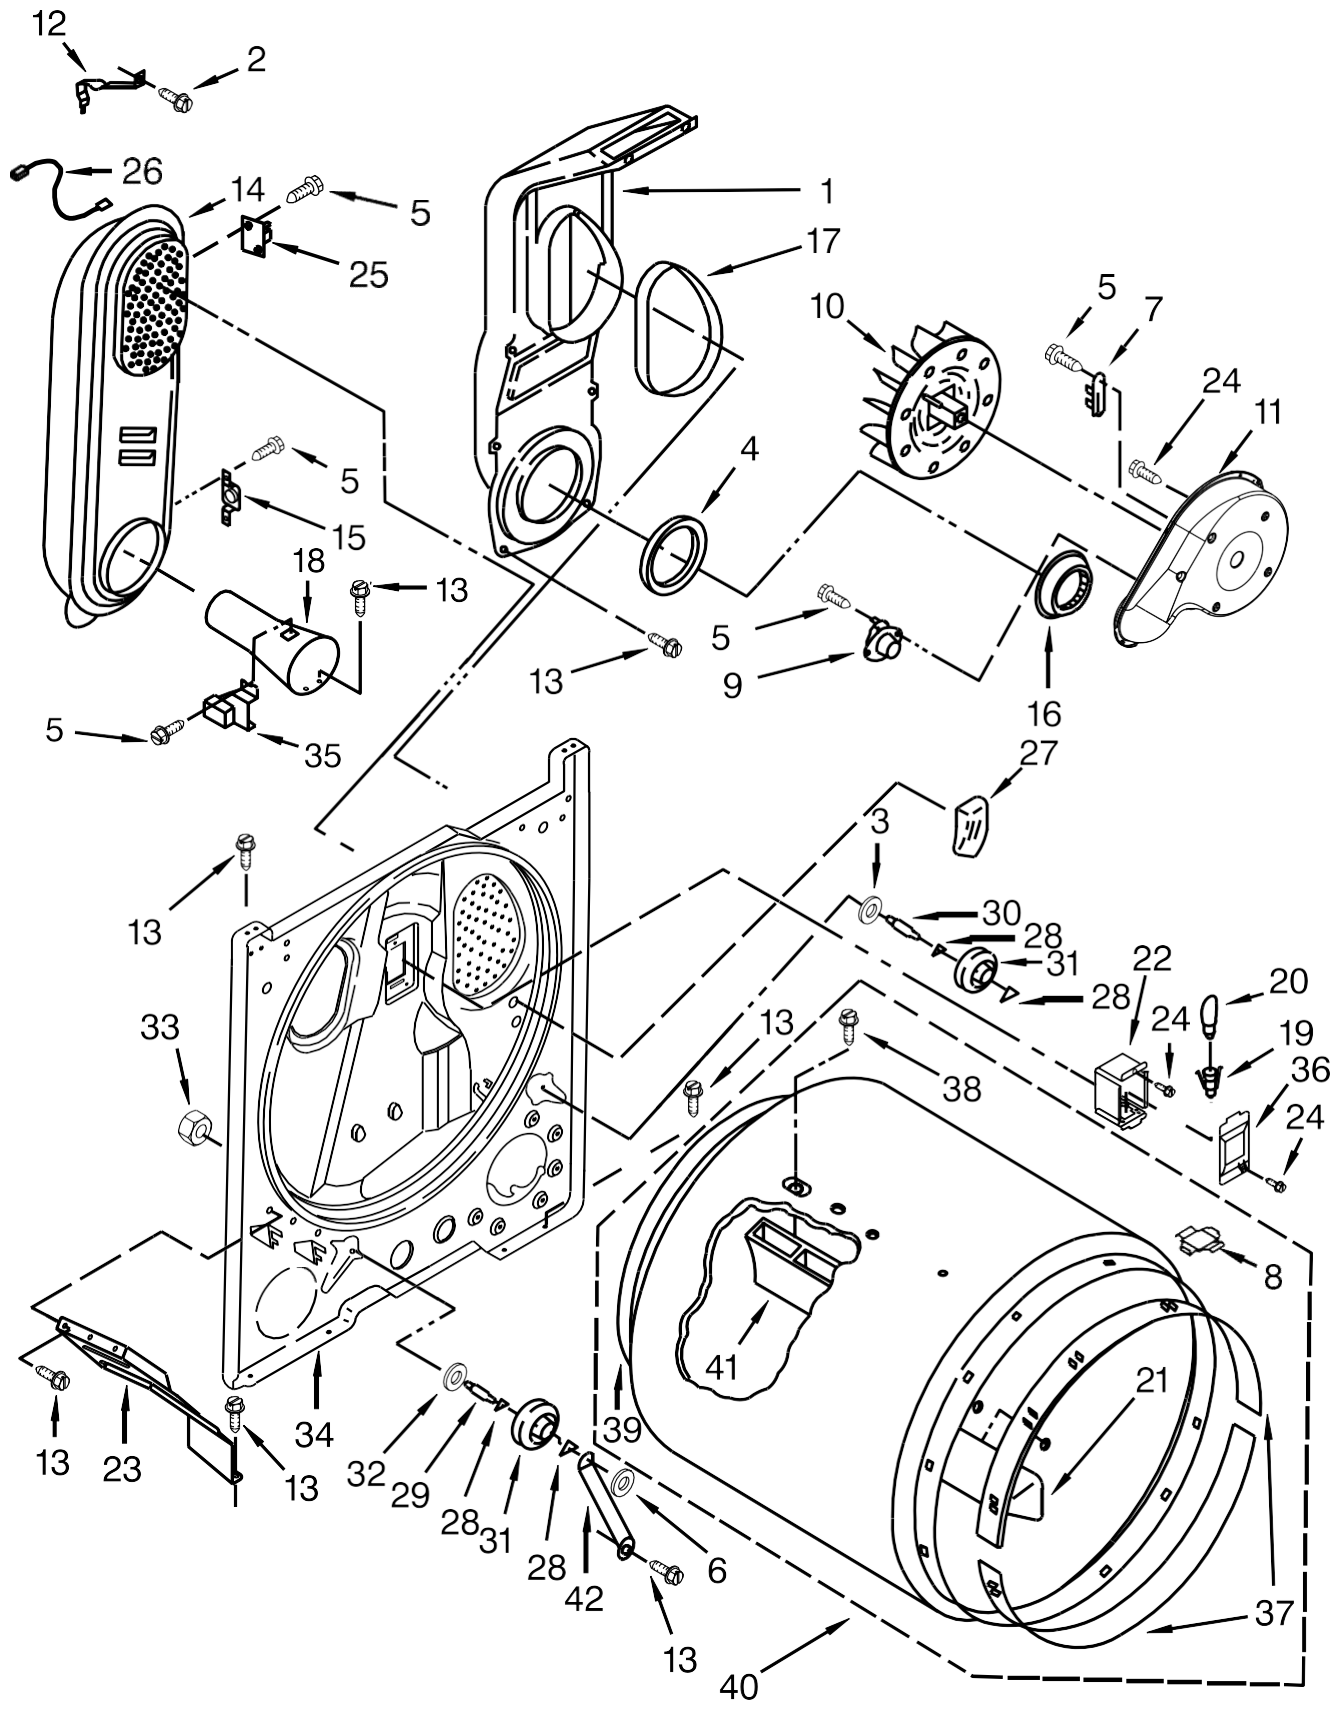




Secadora Whirlpool 7MWGD1705YM03

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	348368	Assembly, Lint Chute
2	489463	Screw
3	3388703	Washer
4	347139	Seal, Lint Chute
5	90767	Screw
6	90296	Nut, Push On
7	3392519	Fuse, Thermal (91C)
8	8066086	Plug, Drum Hole
9	8318268	Thermostat
10	694089	Wheel, Blower
11	8577230	Housing, Blower
12	3398161	Clip, Heater Box
13	343641	Screw
14	8530285	Box, Heater (96C)
15	W10423382	Thermostat H.L SPST (180F)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
16	W10389567	Shield, Exhaust
17	339956	Seal
18	8066049	Funnel, Burner Light
19	W10214261	Socket, Light
20	3406124	Bulb, Light
21	3403636	Baffle, Drum (Short)
22	3977373	Bracket, Drum Light
23	3406022	Bracket, Bulkhead Chute
24	3390647	Screw
25	3977394	Thermal Cut-Off
26	3401707	Jumper, Wire
27	3976479	Pad, Sensor
28	W10512946	Washer, Tri Ring
29	W10359270	Shaft, Drum Roller - Left Hand Thread

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
30	W10359269	Shaft, Drum Roller - Right Hand Thread
31	3397590	Roller, Support
32	348197	Washer
33	W10298789	Nut, Hex
34	3403414	Bulkhead
35	338906	Sensor, Radiant
36	3402841	Lens, Drum Light
37	692526	Bearing, Ring
38	W10219342	Screw
39	W10389561	Seal, Rear Drum
40	W10389436	Assembly, Drum (Complete)
41	692490	Baffle, Drum (Long)
42	3976434	Bracket, Support

USE WITH TYPE 1 - NATURAL
 AND TYPE 4 LIQUEFIED PROPANE AND BUTANE GASES

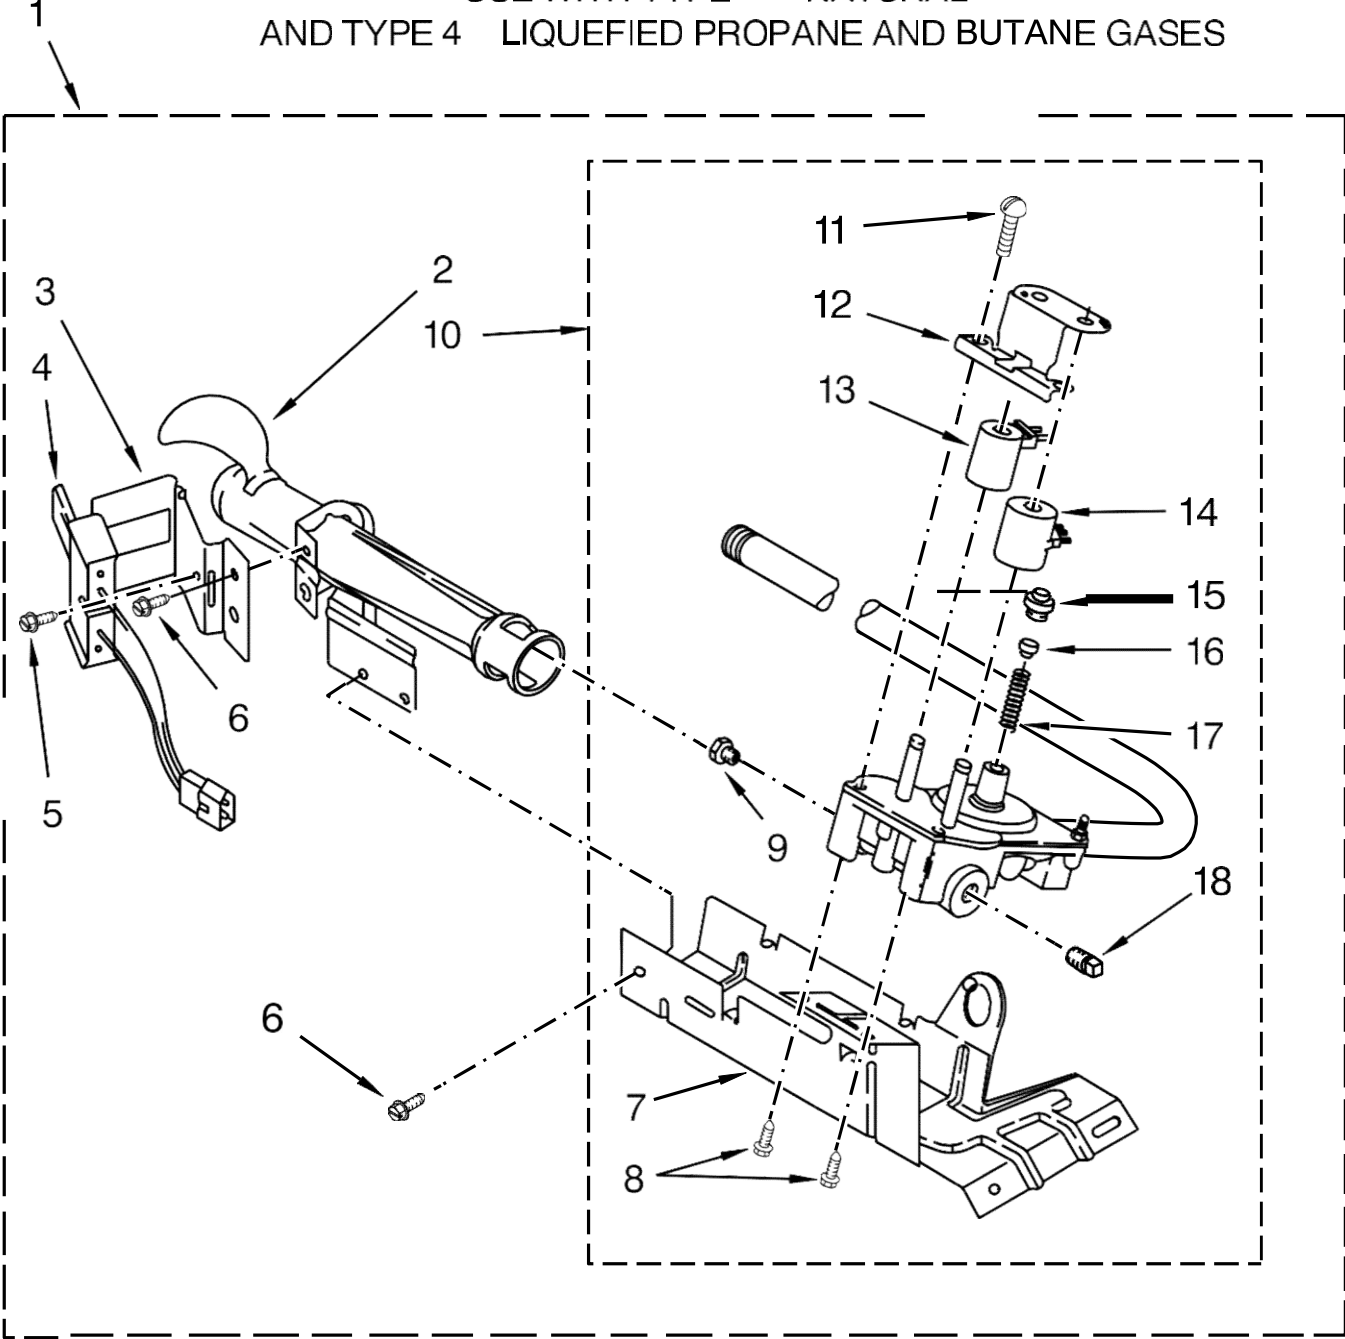



Secadora Whirlpool 7MWGD1705YM03

<u>Illus.</u> <u>No.</u>	<u>Part No.</u> <u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u> <u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u> <u>Description</u>
1	8318272 Burner Assembly (60 Hz) (Type 1) (White Rodgers)	9	Orifice, Burner	15	694424 Leak, Limiter
2	688617 Tube, Burner		234826 Type 1 (Natural)	16	694423 Screw, Regulator Adjustment
3	694298 Bracket, Ignitor		229742 Type 4 (Butane)	17	694422 Spring, Regulator
4	686590 Ignitor	10	234868 Type 4 (Propane)	18	239822 Plug, Pipe
5	W10366705 Screw	11	8318277 Valve, Gas (60 Hz)		Following Parts Not Illustrated
6	343641 Screw	12	694421 Screw, Coil		694572 Conversion Kit (Type 1 and 2) to Type (4) L.P.G.
7	693986 Base, Burner	13	694538 Bracket, Coil		
8	3387057 Screw	14	694540 Coil, 60 Hz. (2 Terminal) (Main)		
			694539 Coil, 60 Hz (Split) (3 Terminal) (Pilot Position)		



Secadora Whirlpool 7MWGD1705YM03

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u> <u>Description</u>
	279948 Kit, Dryer Repair
	346764 Kit, Hold Down
	W10071550A Dryer Rack
	8522199 Kit, Dryer Vent Testing

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u> <u>Description</u>
	72017 White

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u> <u>Description</u>
	799344 White

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u> <u>Description</u>
	350930 White
	350938 Gray Primer