




Secadora Whirlpool 7MWGD1800DM0

<u>Illus.</u> <u>No.</u>	<u>Part No.</u> <u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u> <u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u> <u>Description</u>
1	Literature Parts	6	W10556829 Panel, Rear (Console)	15	W10640701 Harness, Wiring
	W10658639 Installation Instructions	7	3399640 Switch, Temperature	16	Top
	W10652257 Use and Care Guide	8	End Cap (Right)		8559800 White
	W10185986 Wiring Diagram		W10520780 White	17	Assembly, Control Knob
2	W10117655 Switch, Push ToStart	9	693995 Screw		W10576636 White/Metallic
3	694419 Buzzer, Mini	10	Lint Screen	18	W10316616 Seal, Foam
4	End Cap (Left)		W10641634 White	19	Console
	W10520782 White	11	8536939 Clip, Spring		W10643286 White
5	Assembly, Timer Knob	12	3348629 Screw	20	3400818 Screw
	W10576634 White/Metallic	13	688983 Screw	21	W10185981 Assembly, Timer (60 Hz.)
		14	8312709 Clip, Console	22	W10556828 Bracket, Control



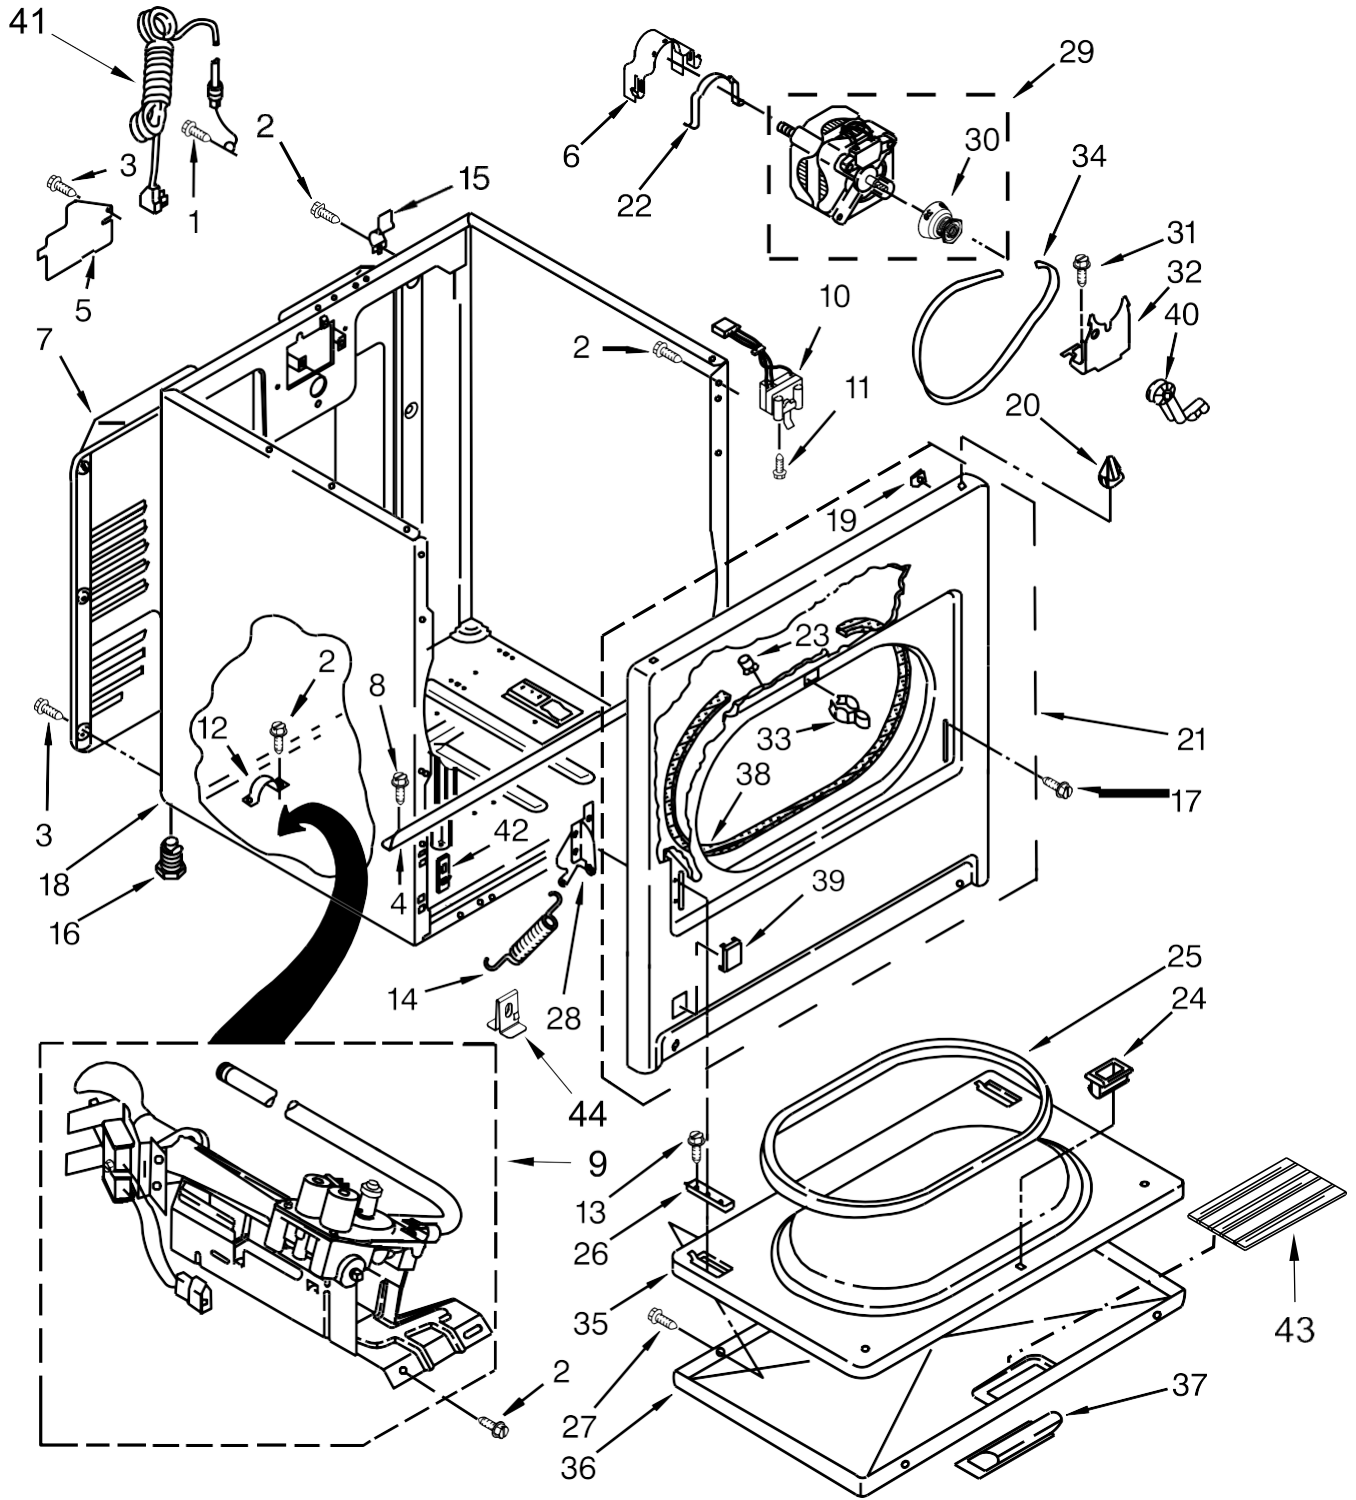


Secadora Whirlpool 7MWGD1800DM0

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	8533974	Screw
2	343641	Screw
3	693995	Screw
4	W10236073	Bracket, Cabinet
5	3396795	Cover, Terminal Block
6	3404162	Clamp, Motor (With Shield)
7	W10571724	Panel, Rear
8	3390647	Screw
9	8318272	Burner Assembly (60 Hz) (Type 1) (White Rodgers)
10	W10237959	Switch, Door
11	697773	Screw
12	341029	Clamp, Pipe
13	3357011	Screw
14	W10041960	Spring, Door
15	8066217	Hinge, Top
16	W10561321	Foot, Dryer
	279810	Foot, Optional (Extended Length Package Of 2) (Not Included)
17	342043	Screw

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
18		Cabinet
	8530603	White
19	98234	Clip, Ground
20	8066092	Lock, Front Top
21		Panel, Front
	W10664692	White
22	W10121316	Clamp, Motor Mount
23	685203	Clip, Felt Pad
24	3389441	Assembly, Door Catch
25	W10389571	Seal, Door
26	337189	Clip, Hinge
27	342055	Screw
28	8066056	Hinge, Door (Right)
	8066057	Hinge, Door (Left)
29	W10396029	Assembly, Motor
30	8066184	Pulley, Motor
31	3400500	Bolt
32	348780	Base, Motor
33	696144	Strike, Door
34	W10131364	Belt, Drive
35	695737	Door, Rear

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
36		Door, Outer
	3393549	White
37	W10095180	Handle, Door
38	W10663510	Assembly, Seal and Bearing
39		Plug, Hinge Hole
	8564457	White
40	691366	Idler Assembly
41	344020	Cord, Power
42	3394083	Clip, Front Panel
43	W10595510	Tape, Foil
44	W10575896	Clip, Spring

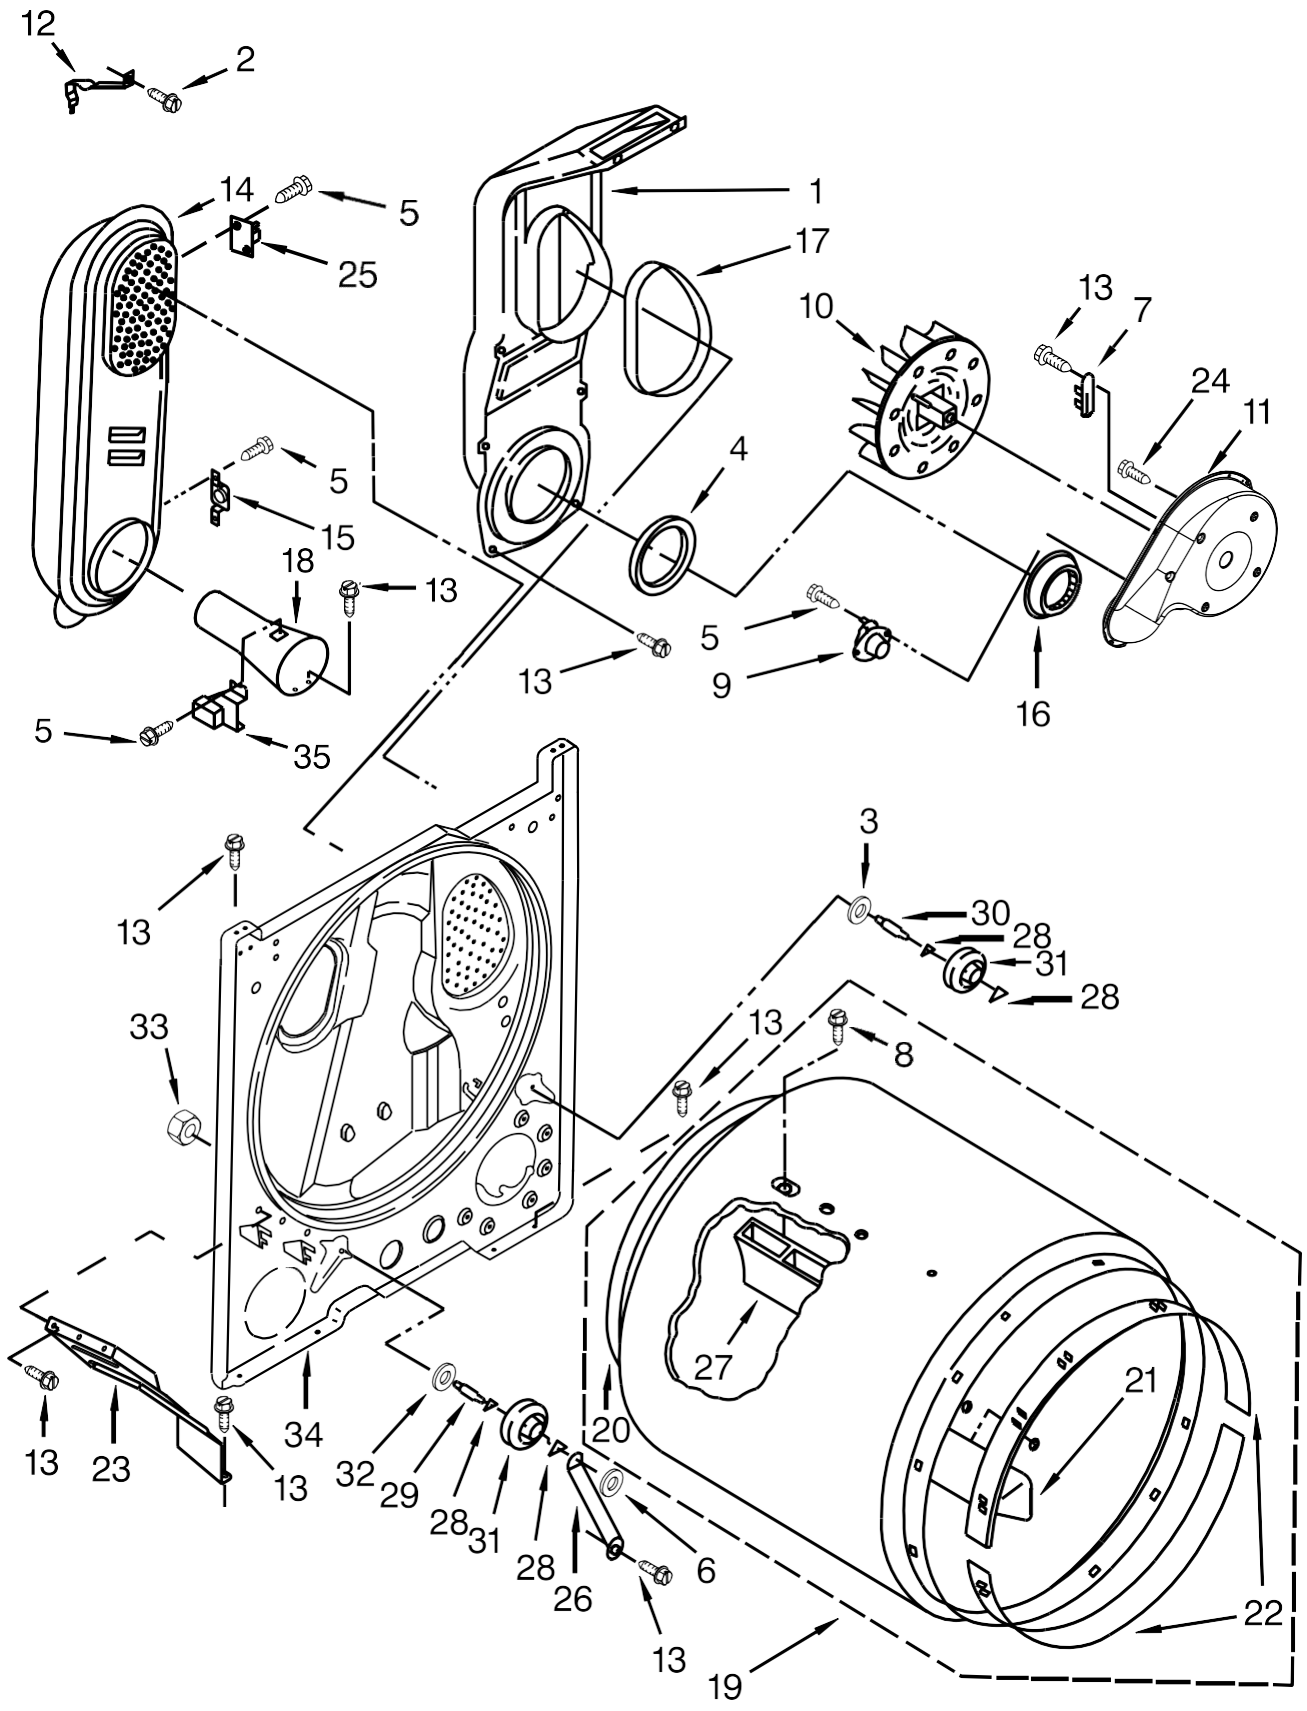




Secadora Whirlpool 7MWGD1800DM0

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	348368	Assembly, Lint Chute
2	489463	Screw
3	3388703	Washer
4	347139	Seal, Lint Chute
5	90767	Screw
6	90296	Nut, Push On
7	3392519	Fuse, Thermal (91C)
8	W10219342	Screw
9	3387134	Thermostat
10	694089	Wheel, Blower
11	8577230	Housing, Blower
12	3398161	Clip, Heater Box
13	3390631	Screw
14	8530285	Box, Heater (96C)
15	W10423382	Thermostat H.L SPST (180F)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
16	W10389567	Shield, Exhaust
17	339956	Seal
18	8066049	Funnel, Burner Light
19	W10389436	Assembly, Drum (Complete)
20	W10663495	Seal, Rear Drum
21	3403636	Baffle, Drum (Short)
22	692526	Bearing, Ring
23	3406022	Bracket, Bulkhead Chute
24	3390647	Screw
25	3977394	Thermal Cut-Off
26	3976434	Bracket, Support
27	692490	Baffle, Drum (Long)
28	W10512946	Washer, Tri Ring
29	W10359270	Shaft, Drum Roller - Left Hand Thread

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
30	W10359269	Shaft, Drum Roller - Right Hand Thread
31	3397590	Roller, Support
32	348197	Washer
33	W10298789	Nut, Hex
34	3403410	Bulkhead
35	338906	Sensor, Radiant

USE WITH TYPE 1 - NATURAL
 AND TYPE 4 LIQUEFIED PROPANE AND BUTANE GASES

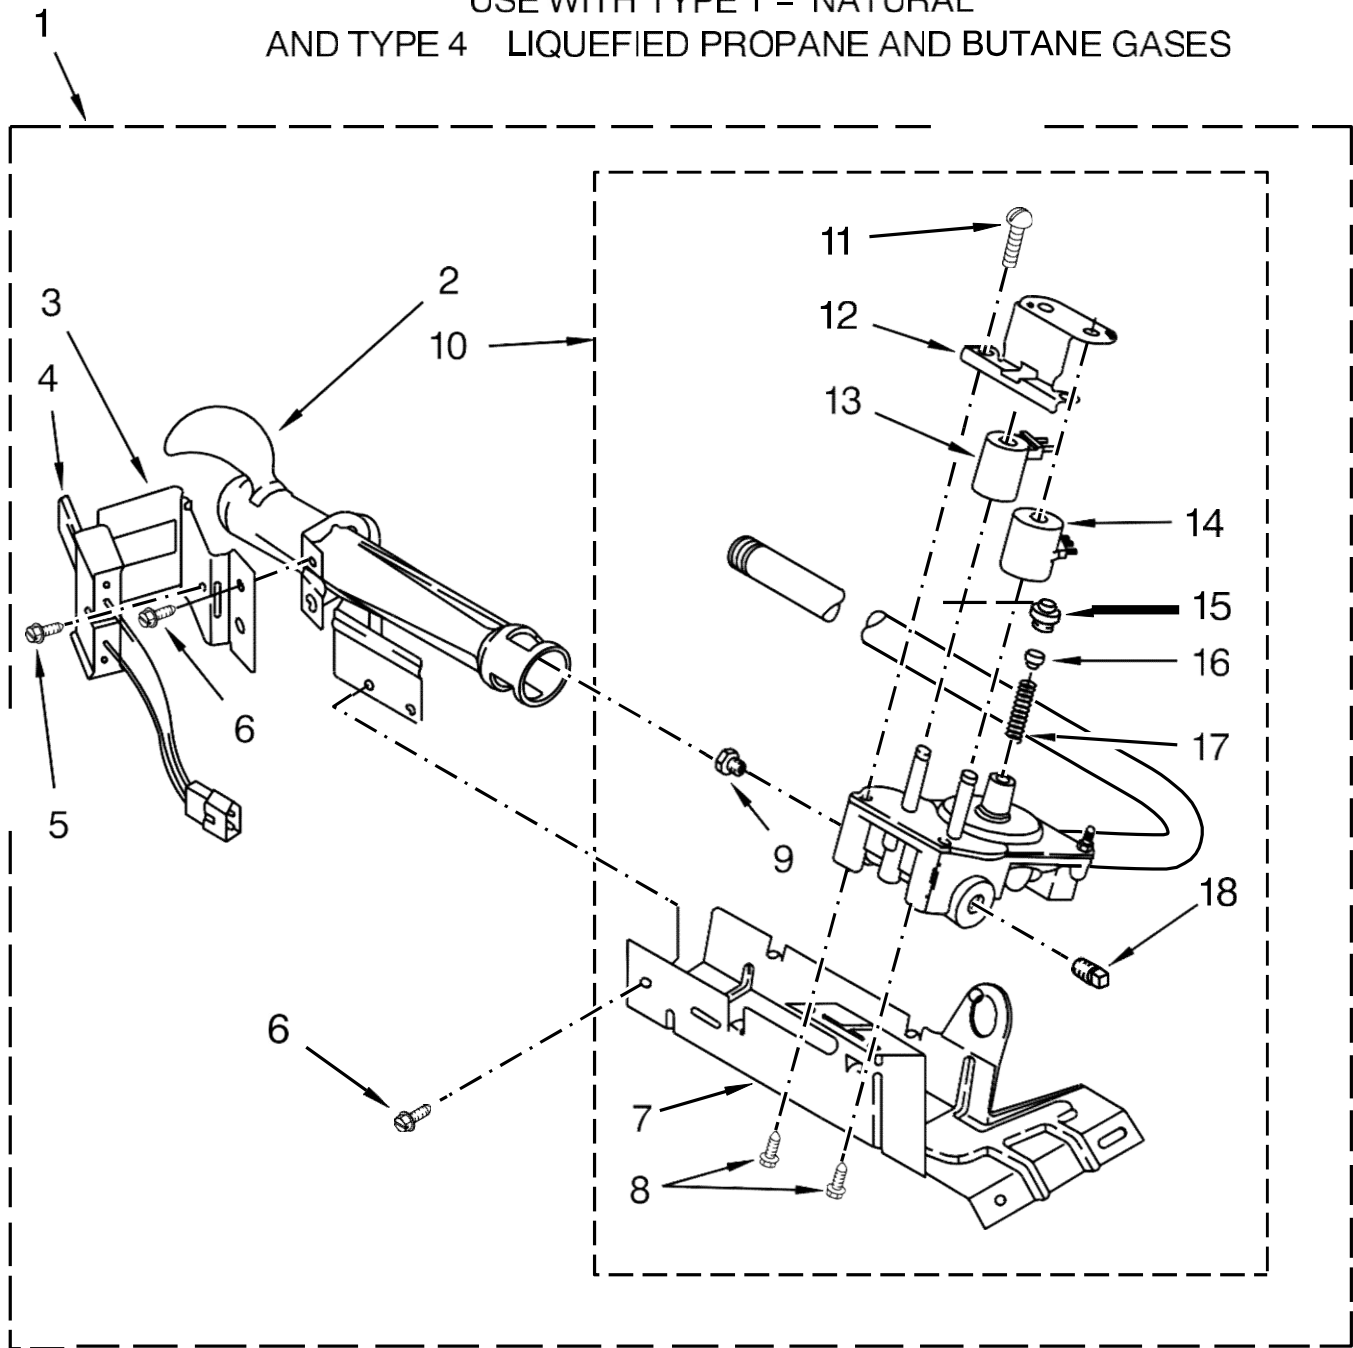



Secadora Whirlpool 7MWGD1800DM0

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	8318272	Burner Assembly (60 Hz) (Type 1) (White Rodgers)
2	688617	Tube, Burner
3	694298	Bracket, Ignitor
4	686590	Ignitor
5	W10366705	Screw
6	343641	Screw
7	693986	Base, Burner
8	3387057	Screw

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
9		Orifice, Burner
	234826	Type 1 (Natural)
	229742	Type 4 (Butane)
	234868	Type 4 (Propane)
10	8318277	Valve, Gas (60 Hz)
11	694421	Screw, Coil
12	694538	Bracket, Coil
13	694540	Coil, 60 Hz. (2 Terminal) (Main)
14	694539	Coil, 60 Hz (Split) (3 Terminal) (Pilot Position)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
15	694424	Leak, Limiter
16	694423	Screw, Regulator Adjustment
17	694422	Spring, Regulator
18	239822	Plug, Pipe
		Following Parts Not Illustrated
	W10307153	Conversion Kit (Type 1 and 2) to Type (4) L.P.G.



Secadora Whirlpool 7MWGD1800DM0

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	279948	Kit, Dryer Repair
	346764	Kit, Hold Down
	W10071550A	Dryer Rack
	8522199	Kit, Dryer Vent Testing

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	350938	Gray Primer