


Secadora Whirlpool 7MWGD1800DM1

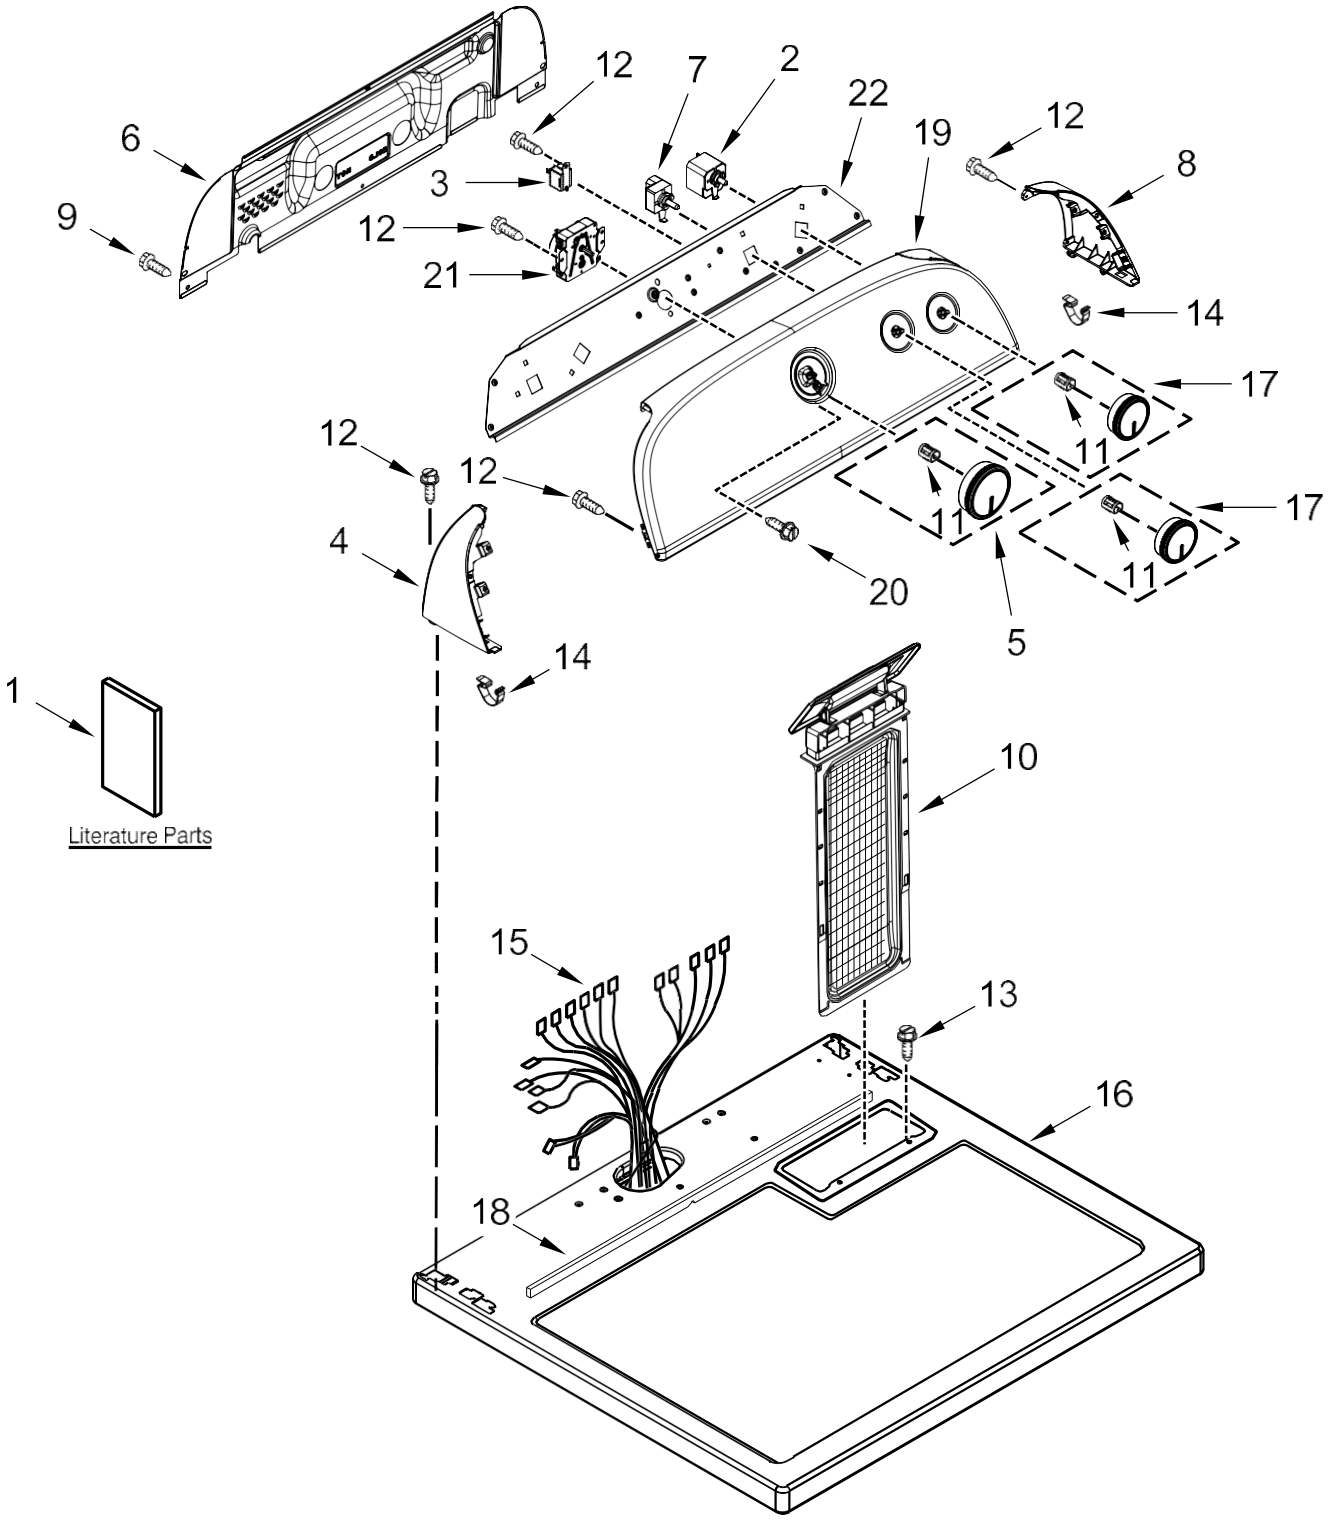




Secadora Whirlpool 7MWGD1800DM1

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	Literature Parts W10658639	Installation Instructions
	W10652257	Use and Care Guide
	W10185986	Wiring Diagram
2	W10117655	Switch, Push ToStart
3	694419	Buzzer, Mini
4	End Cap (Left) W10520782	White
5	Assembly, TimerKnob W10576634	White/Metallic

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
6	W10556829	Panel, Rear (Console)
7	3399640	Switch, Temperature
8	End Cap (Right) W10520780	White
9	693995	Screw
10		Lint Screen
	W10717210	White
11	8536939	Clip, Spring
12	3348629	Screw
13	688983	Screw
14	8312709	Clip, Console

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
15	W10640701	Harness, Wiring
16		Top
	8559800	White
17		Assembly, Control Knob
	W10576636	White/Metallic
18	W10316616	Seal, Foam
19		Console
	W10661114	White
20	3400818	Screw
21	W10185981	Assembly, Timer (60 Hz.)
22	W10556828	Bracket, Control

Secadora Whirlpool 7MWGD1800DM1

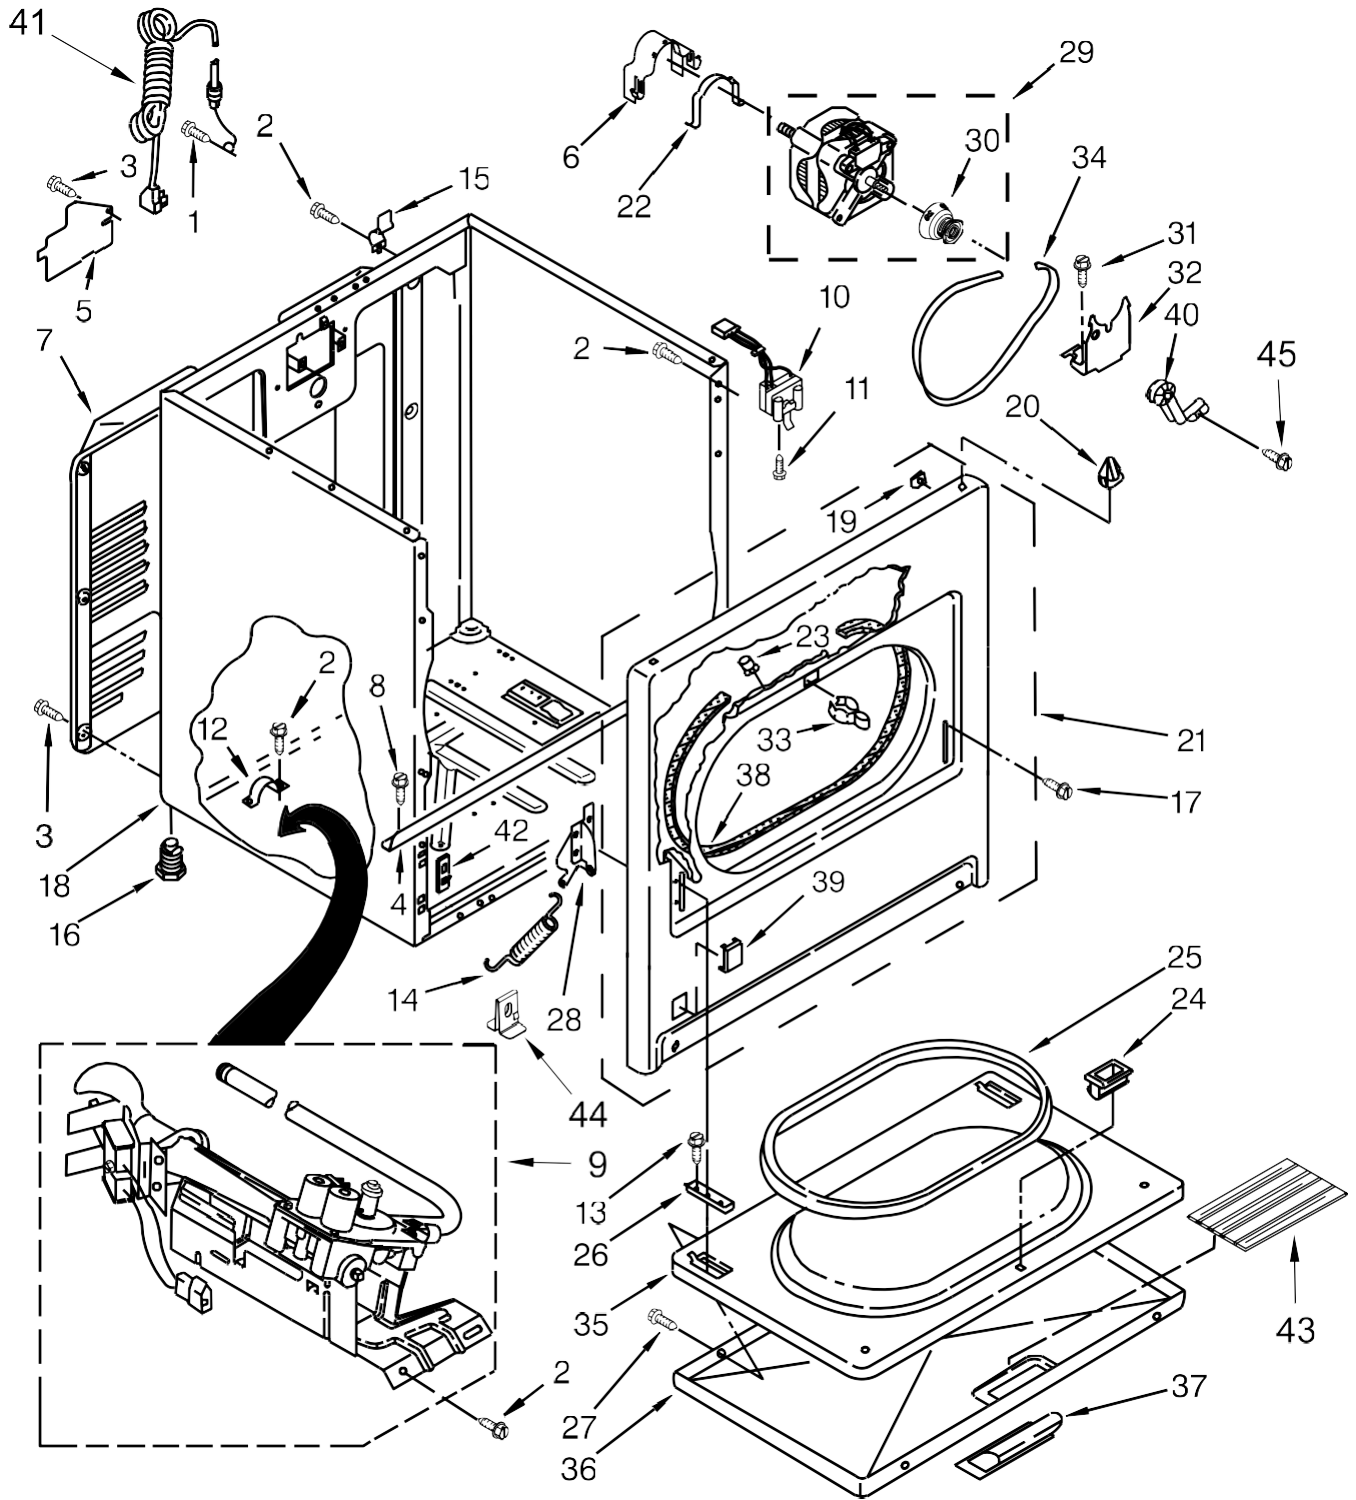




Secadora Whirlpool 7MWGD1800DM1

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	8533974	Screw
2	343641	Screw
3	693995	Screw
4	W10236073	Bracket, Cabinet
5	3396795	Cover, TerminalBlock
6	3404162	Clamp, Motor (With Shield)
7	W10571724	Panel, Rear
8	3390647	Screw
9	W10336852	Burner Assembly (60 Hz) (Type 1 and 2)
10	W10237959	Switch, Door
11	697773	Screw
12	341029	Clamp, Pipe
13	3357011	Screw
14	W10041960	Spring, Door
15	8066217	Hinge, Top
16	W10561321	Foot, Dryer
	279810	Foot, Optional (Extended Length Package Of 2) (Not Included)
17	342043	Screw

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
18		Cabinet
	8530603	White
19	98234	Clip, Ground
20	8066092	Lock, Front Top
21		Panel, Front
	3395197	White
22	W10121316	Clamp, Motor Mount
23	685203	Clip, Felt Pad
24	3389441	Assembly, DoorCatch
25	W10389571	Seal, Door
26	337189	Clip, Hinge
27	342055	Screw
28	8066056	Hinge, Door (Right)
	8066057	Hinge, Door (Left)
29	W10396029	Assembly, Motor
30	8066184	Pulley, Motor
31	3400500	Bolt
32	348780	Base, Motor
33	696144	Strike, Door
34	W10131364	Belt, Drive

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
35	695737	Door, Rear
36		Door, Outer
	3393549	White
37		Handle, Door W10861225
		White
38	W10663510	Assembly, Seal and Bearing
39		Plug, Hinge Hole 8564457
		White
40	691366	Idler Assembly
41	344020	Cord, Power
42	3394083	Clip, Front Panel
43	W10595510	Tape, Foil
44	W10575896	Clip, Spring
45	3393008	Screw

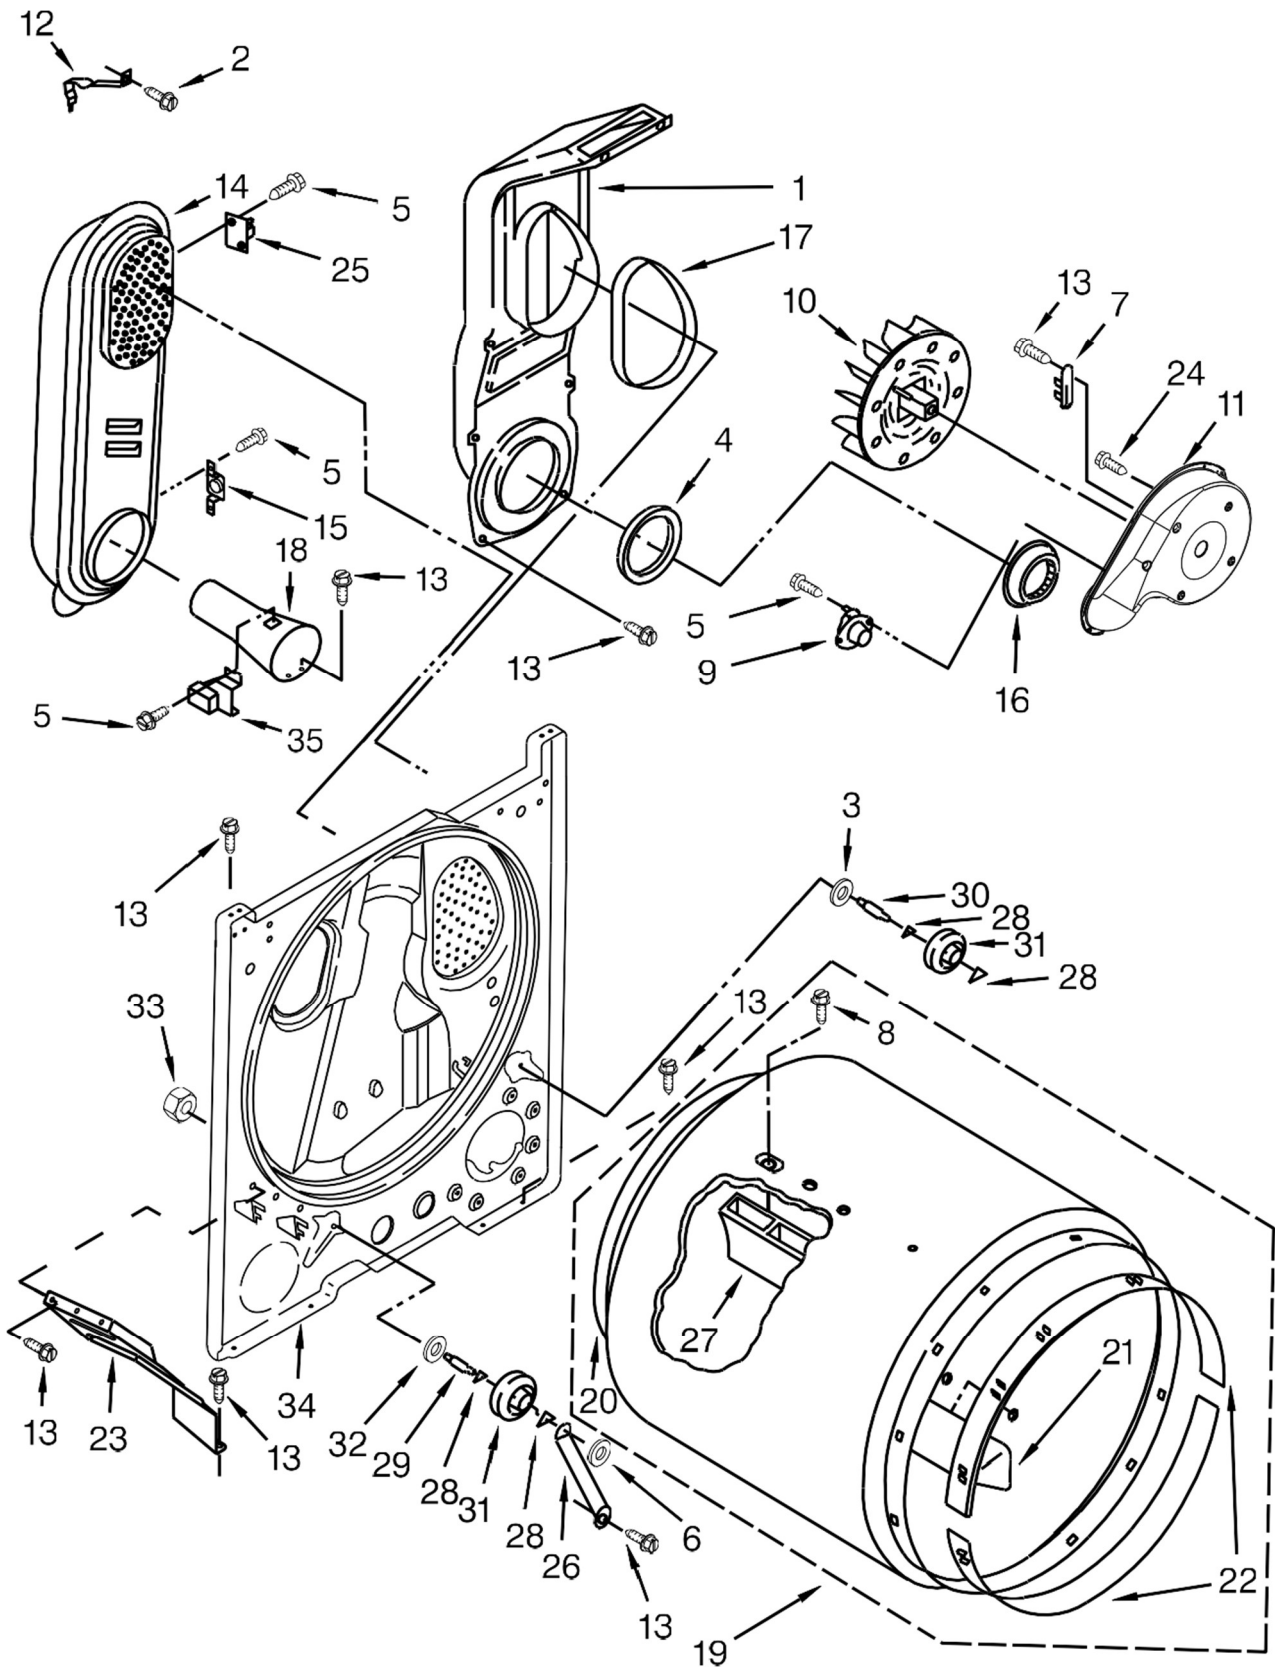




Secadora Whirlpool 7MWGD1800DM1

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	348368	Assembly, Lint Chute
2	489463	Screw
3	3388703	Washer
4	347139	Seal, Lint Chute
5	90767	Screw
6	90296	Nut, Push On
7	3392519	Fuse, Thermal (91C)
8	W10219342	Screw
9	3387134	Thermostat
10	694089	Wheel, Blower
11	8577230	Housing, Blower
12	3398161	Clip, Heater Box
13	3390631	Screw
14	8530285	Box, Heater (96C)
15	W10423382	Thermostat, High Limit SPST (180F)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
16	W10389567	Shield, Exhaust
17	339956	Seal
18	8066049	Funnel, Burner Light
19	W10389436	Assembly, Drum (Complete)
20	W10663495	Seal, Rear Drum
21	3403636	Baffle, Drum (Short)
22	692526	Bearing, Ring
23	3406022	Bracket, Bulkhead Chute
24	3390647	Screw
25	3977394	Thermal Cut-Off
26	3976434	Bracket, Support
27	692490	Baffle, Drum (Long)
28	W10512946	Washer, Tri Ring
29	W10359270	Shaft, Drum Roller -Left Hand Thread

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
30	W10359269	Shaft, Drum Roller - Right Hand Thread
31	3397590	Roller, Support
32	348197	Washer
33	W10298789	Nut, Hex
34	3403410	Bulkhead
35	338906	Sensor, Radiant

USE WITH TYPE 1 - NATURAL, TYPE 2 - MIXED,
 TYPE 4 - LIQUEFIED PROPANE AND BUTANE GASES

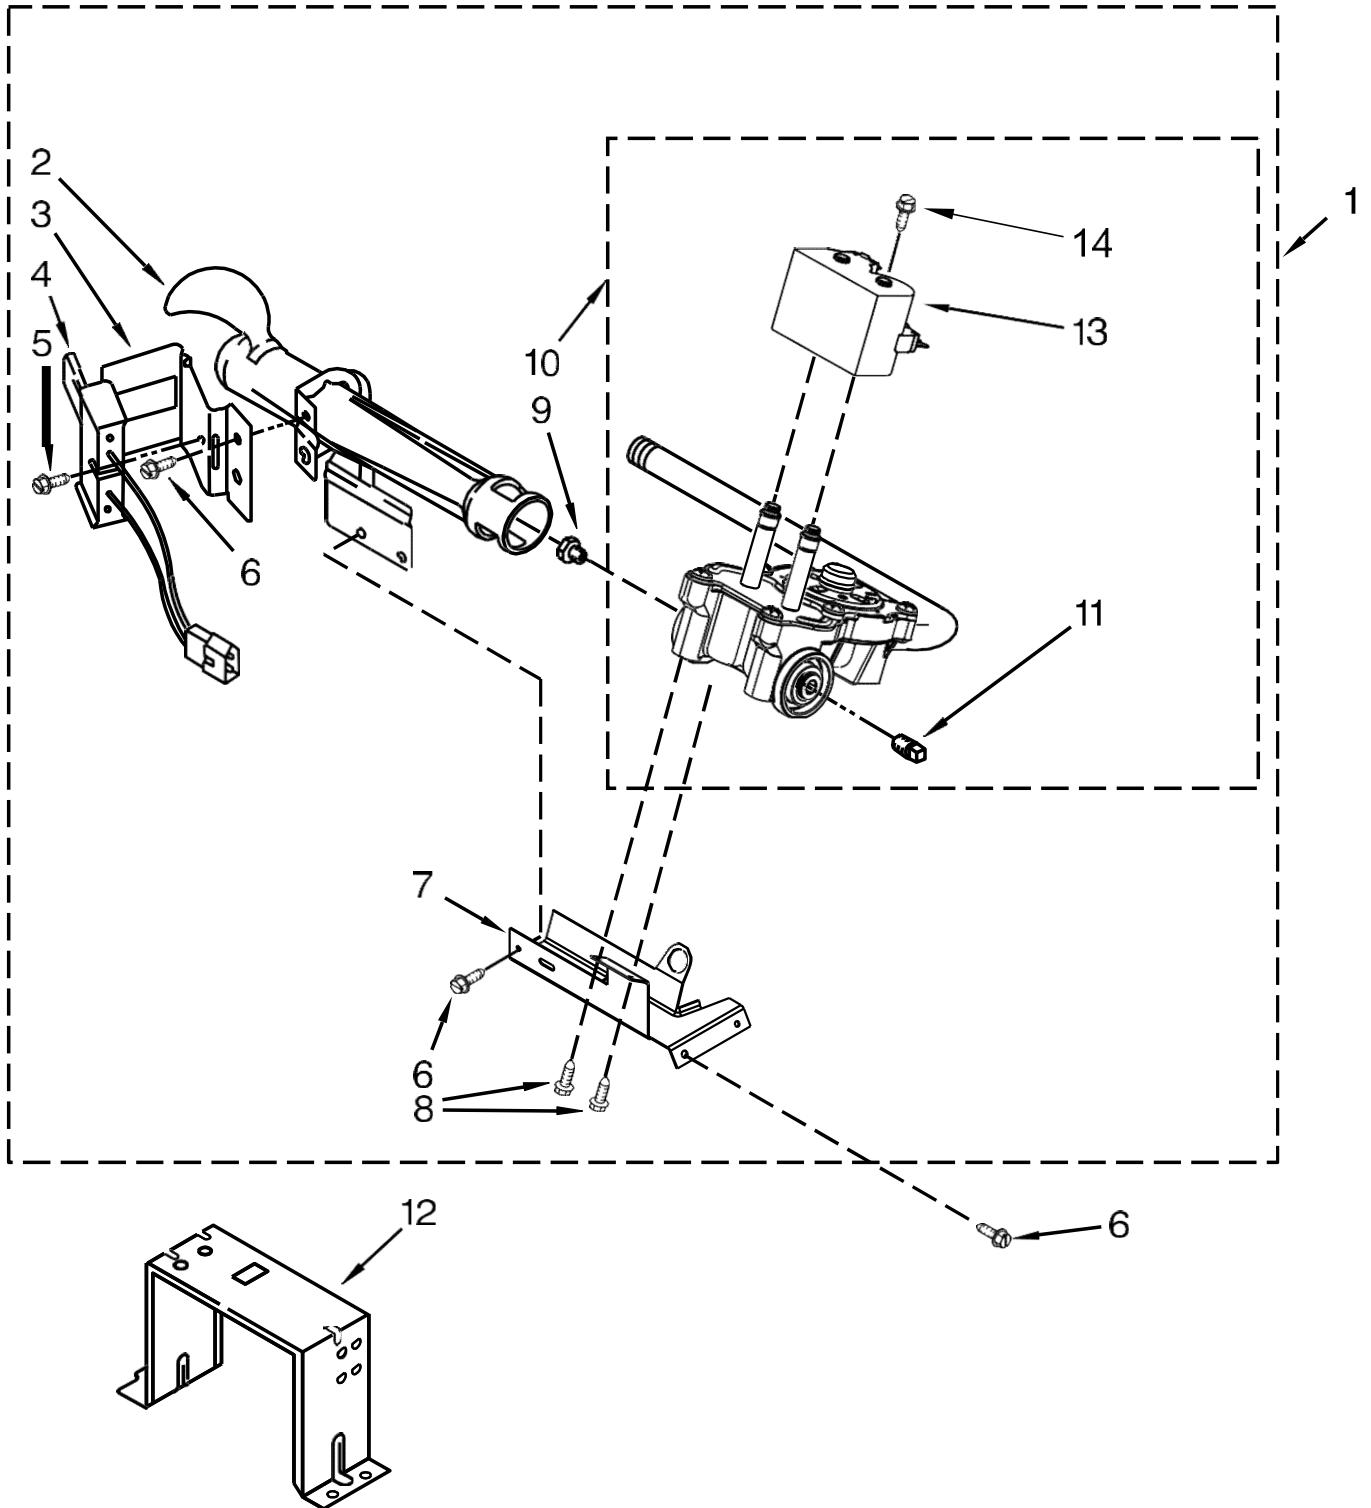



Secadora Whirlpool 7MWGD1800DM1

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10336852	Burner Assembly (60 Hz) (Type 1 and 2)
2	688617	Tube, Burner
3	694298	Bracket, Ignitor
4	686590	Ignitor
5	W10366705	Screw
6	343641	Screw

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
7	693986	Base, Burner
8	3387057	Screw
9		Orifice, Burner 234826 Type 1 (Natural)
10	W10304604	Valve, Gas (60 Hz)
11	W10295523	Pipe Plug

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
12	3389889	Bracket, Support
13	W10328463	Coil (60 Hz)
14	326049536	Screw
		Following Parts Not Illustrated
	W10307153	Conversion Kit (Type 1 and 2) to Type (4) L.P.G.



Secadora Whirlpool 7MWGD1800DM1

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	279948	Kit, Dryer Repair
	346764	Kit, Hold Down
	W10071550A	Dryer Rack
	8522199	Kit, Dryer Vent Testing

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	350938	Gray Primer