


Secadora Whirlpool 7MWGD1930DM0

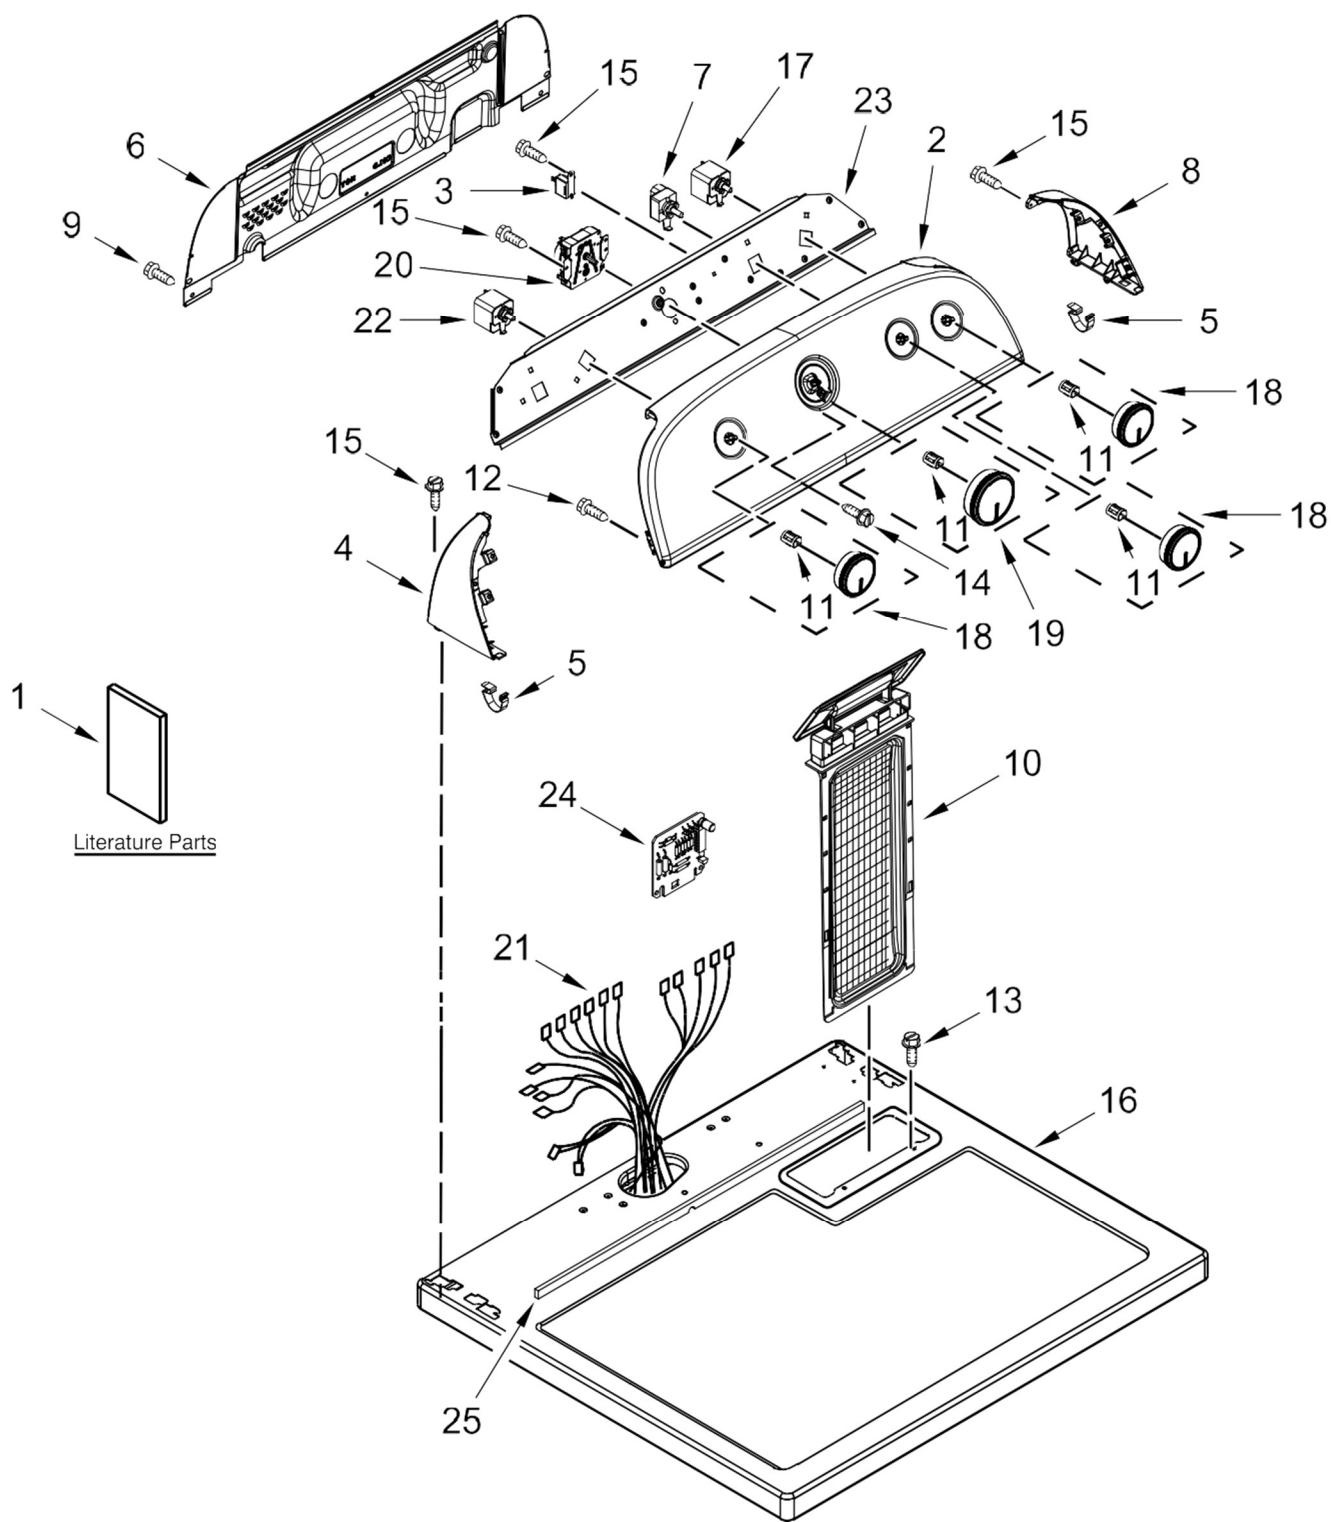




Secadora Whirlpool 7MWGD1930DM0

<u>Illus.</u> <u>No.</u>	<u>Part No.</u> <u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u> <u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u> <u>Description</u>
1	Literature Parts	9	693995 Screw	20	W10185992 Timer Assembly (60 Hz.)
	W10652257 Use and Care Guide	10	Lint Screen	21	W10640708 Harness, Wiring
	W10678653 Instructions, Installation		W10717210 White	22	3405155 Switch, Temperature
	W10663990 Diagram, Wiring	11	8536939 Clip, Spring	23	W10556828 Bracket, Control
2	Assembly, Console	12	3400818 Screw	24	W10476828 Control, Electronic
	W10704155 White	13	688983 Screw	25	W10316616 Seal, Foam
3	694419 Buzzer, Mini	14	8533974 Screw		
4	End Cap (Left)	15	3348629 Screw		
	W10520782 White	16	Top		
5	8312709 Clip, Console		8559800 White		
6	W10556829 Panel, Rear (Console)	17	W10117655 Switch, Push ToStart		
7	3405156 Switch, WrinkleGuard	18	Assembly, Control Knob		
8	End Cap (Right)		W10576636 White/Metallic		
	W10520780 White	19	Assembly, Timer Knob		
			W10576634 White/Metallic		

Secadora Whirlpool 7MWGD1930DM0

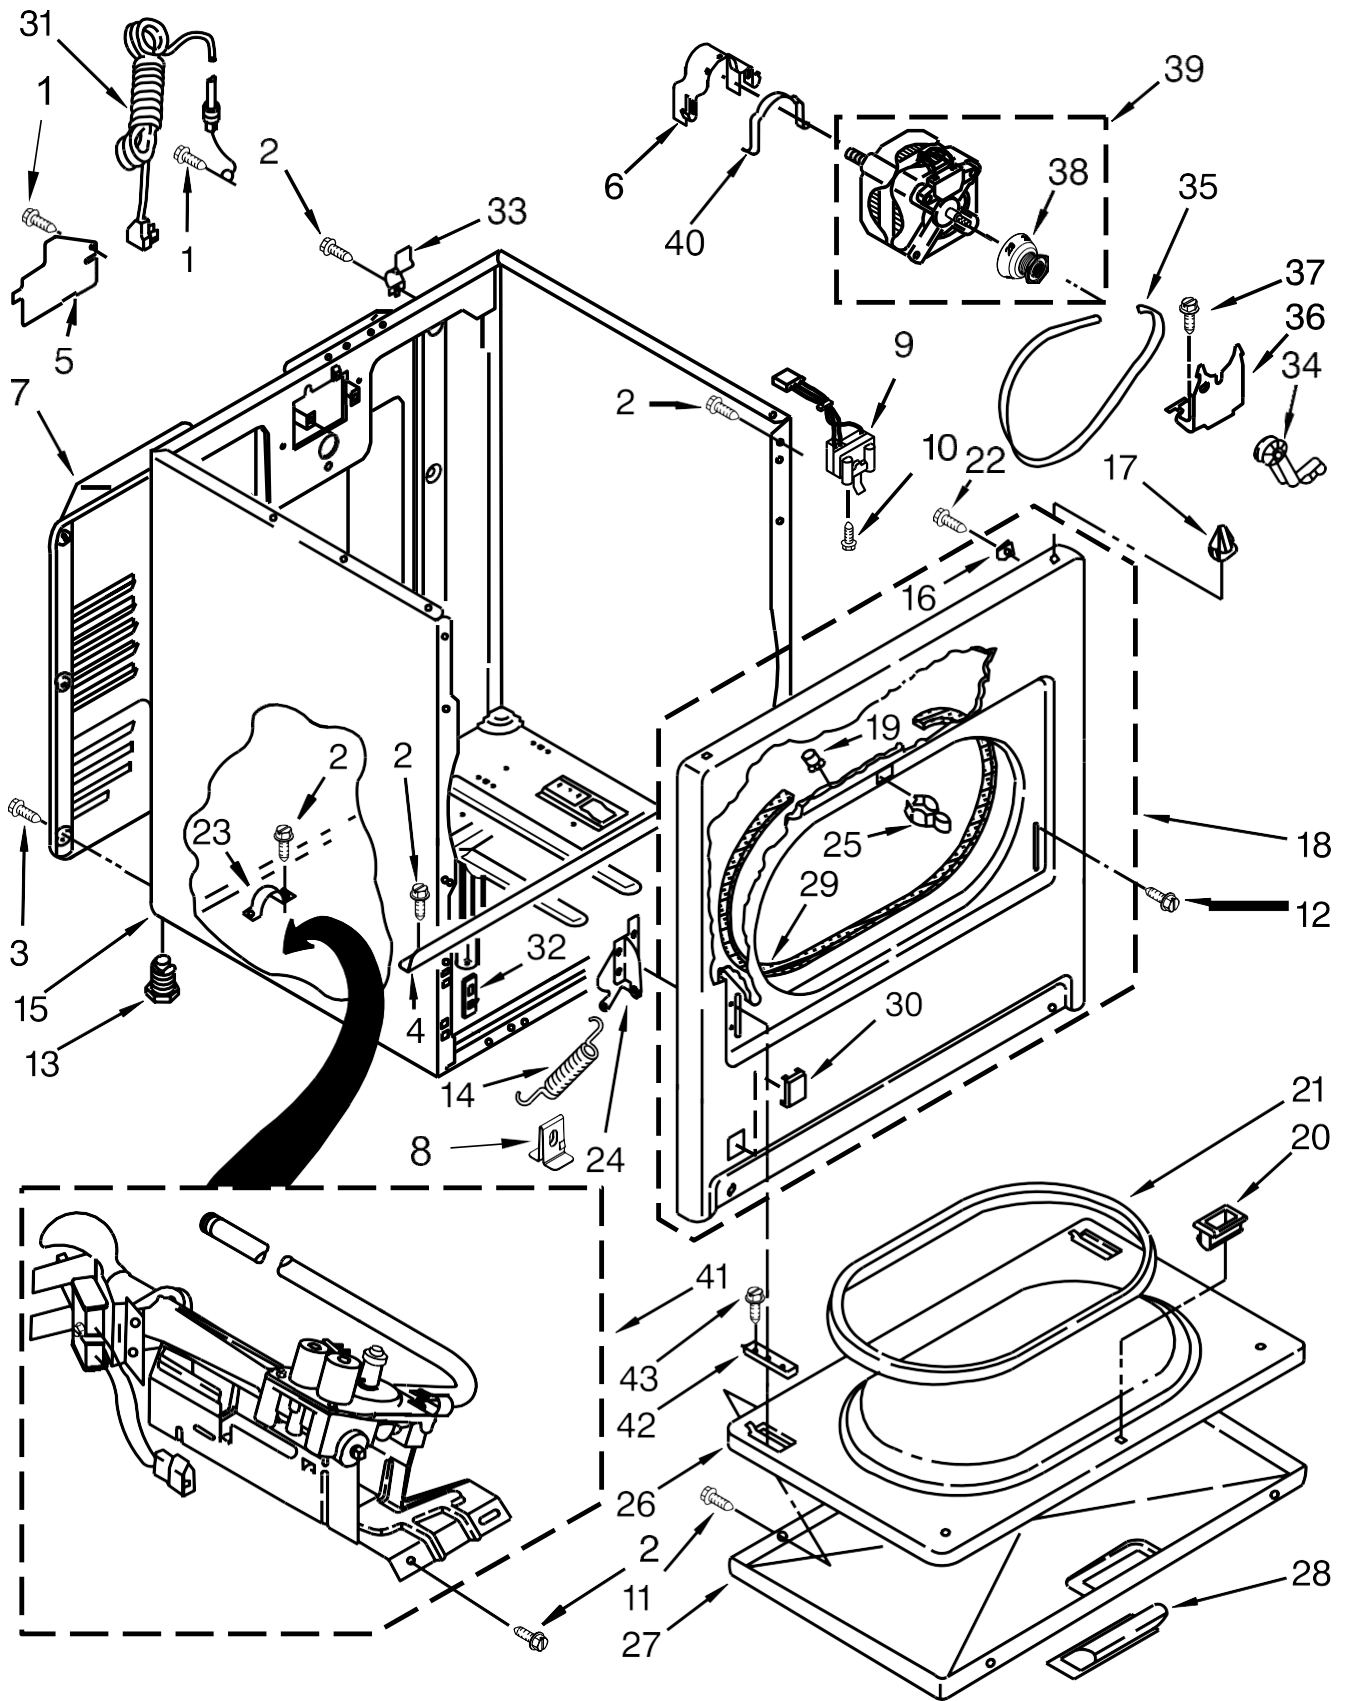




Secadora Whirlpool 7MWGD1930DM0

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	8533974	Screw
2	3390631	Screw
3	693995	Screw
4	W10236073	Bracket, Cabinet
5	3396795	Cover, Terminal Block
6	3404162	Clamp, Motor (With Shield)
7	W10571724	Panel, Rear
8	W10575896	Clip, Spring
9	W10569603	Switch, Door
10	697773	Screw
11	342055	Screw
12	342043	Screw
13	W10561321	Foot, Dryer
14	W10041960	Spring, Door
15		Cabinet
	8530603	White
16	98234	Clip, Ground

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
17	8066092	Lock, Front Top
18		Panel, Front
	3395197	White
19	685203	Clip, Felt Pad
20	3389441	Assembly, Door Catch
21	W10389571	Seal, Door
22	343641	Screw
23	341029	Clamp, Pipe
24	8066056	Hinge, Door (Right)
	8066057	Hinge, Door (Left)
25	696144	Strike, Door
26	695737	Door, Rear
27		Door, Outer
	3393549	White
28	W10095180	Handle, Door
29	W10663510	Assembly, Seal and Bearing

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
30		Plug, Hinge Hole
	8564457	White
31	344020	Cord, Power
32	3394083	Clip, Front Panel
33	8066217	Hinge, Top
34	691366	Idler Assembly
35	W10131364	Belt, Drive
36	348780	Base, Motor
37	3400500	Bolt
38	8066184	Pulley, Motor
39	W10396029	Assembly, Motor
40	W10121316	Clamp, Motor Mount
41	8318272	Burner Assembly (60 Hz) (Type 1) (White Rodgers)
42	337189	Clip, Hinge
43	3357011	Screw

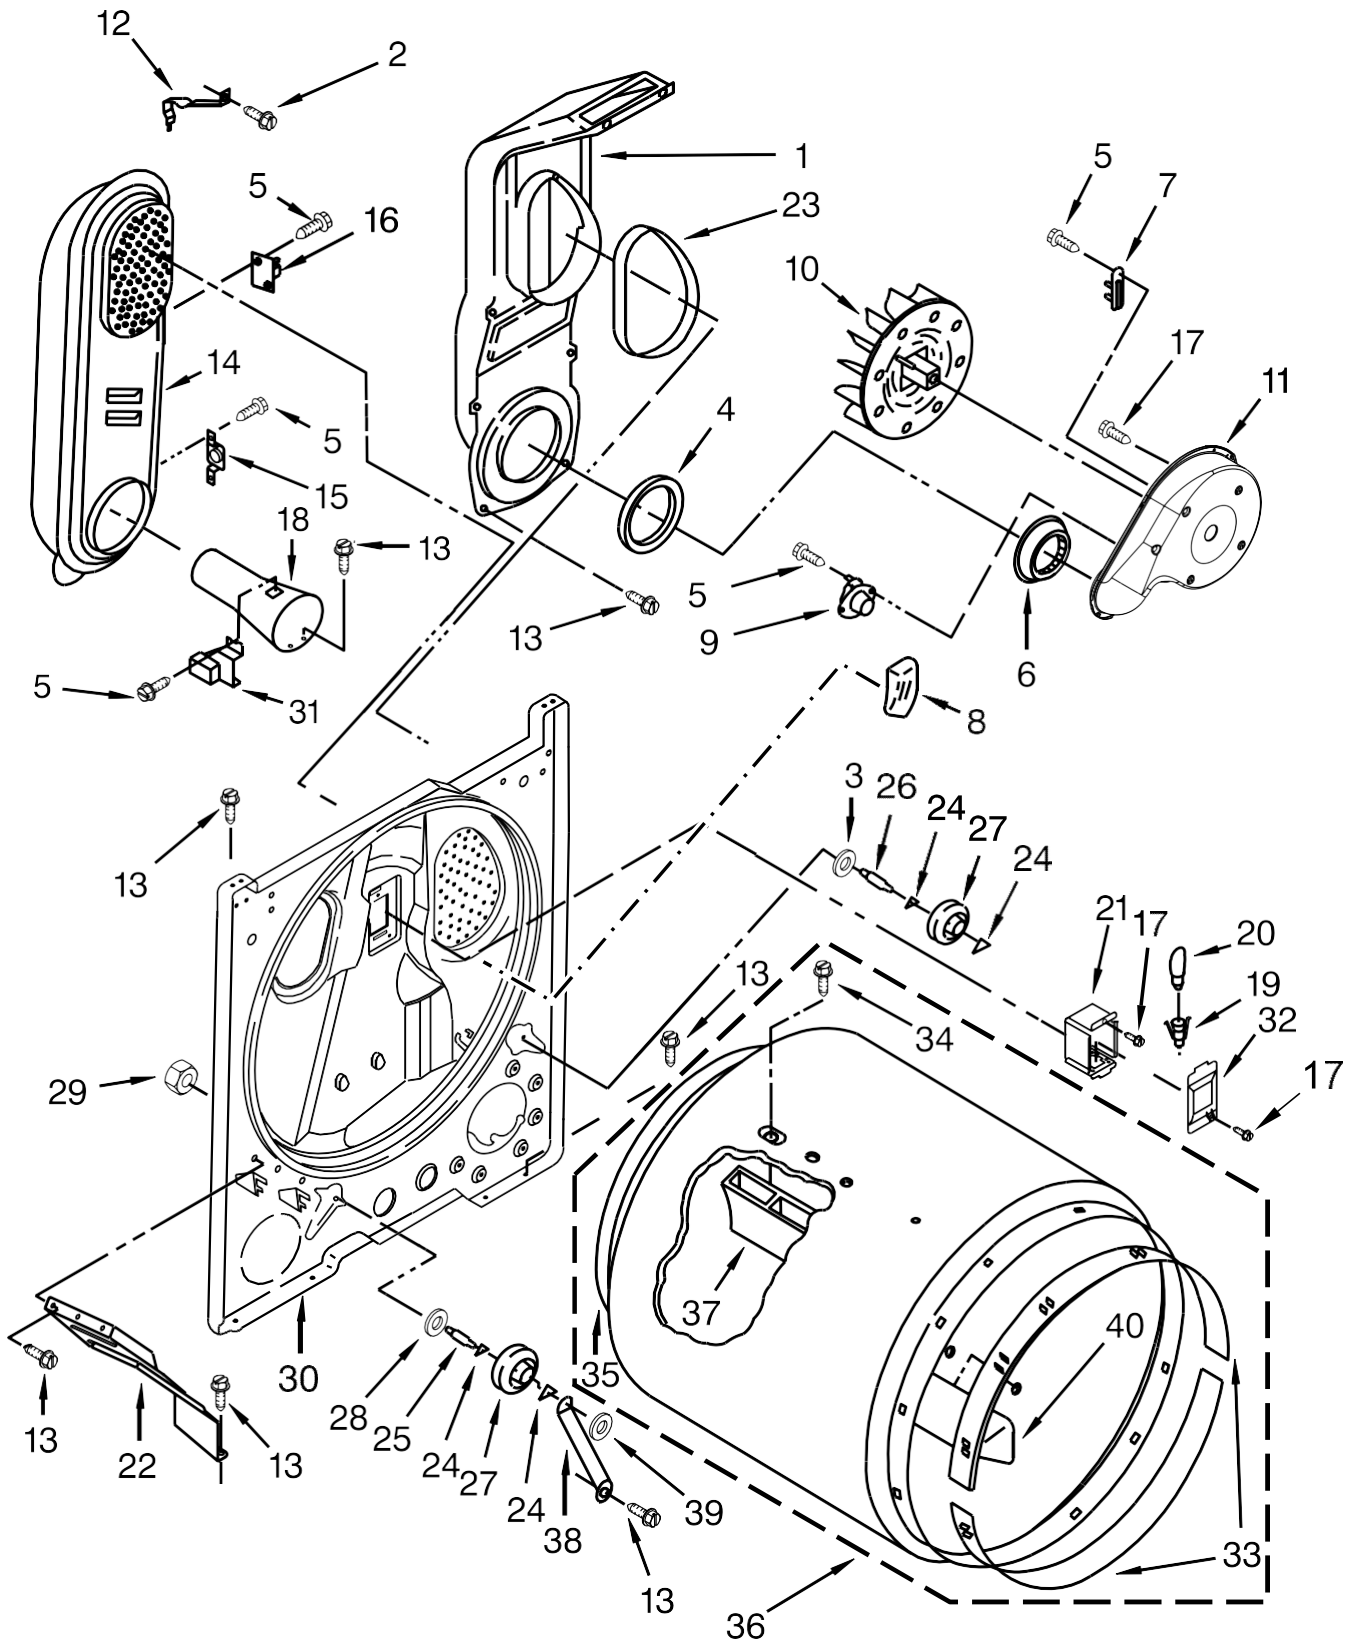




Secadora Whirlpool 7MWGD1930DM0

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	348368	Assembly, Lint Chute
2	489463	Screw
3	3388703	Washer
4	347139	Seal, Lint Chute
5	90767	Screw
6	W10389567	Shield, Exhaust
7	3392519	Fuse, Thermal (91C)
8	3976479	Pad, Sensor
9	8318268	Thermostat
10	694089	Wheel, Blower
11	8577230	Housing, Blower
12	3398161	Clip, Heater Box
13	3390631	Screw
14	8530285	Box, Heater (96C)
15	W10423382	Thermostat H.L SPST (180F)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
16	3977394	Thermal Cut-Off
17	3390647	Screw
18	8066049	Funnel, Burner Light
19	W10214261	Socket, Light
20	3406124	Bulb, Light
21	3977373	Bracket, Drum Light
22	3406022	Bracket, Bulkhead Chute
23	339956	Seal
24	W10512946	Washer, Tri Ring
25	W10359270	Shaft, Drum Roller - Left Hand Thread
26	W10359269	Shaft, Drum Roller - Right Hand Thread
27	3397590	Roller, Support
28	348197	Washer
29	W10298789	Nut, Hex

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
30	3403414	Bulkhead
31	338906	Sensor, Radiant
32	3402841	Lens, Drum Light
33	692526	Bearing, Ring
34	W10219342	Screw
35	W10663495	Seal, Rear Drum
36	W10389436	Assembly, Drum (Complete)
37	692490	Baffle, Drum (Long)
38	3976434	Bracket, Support
39	90296	Nut, Push On
40	3403636	Baffle, Drum (Short)

USE WITH TYPE 1 - NATURAL
 AND TYPE 4 LIQUEFIED PROPANE AND BUTANE GASES

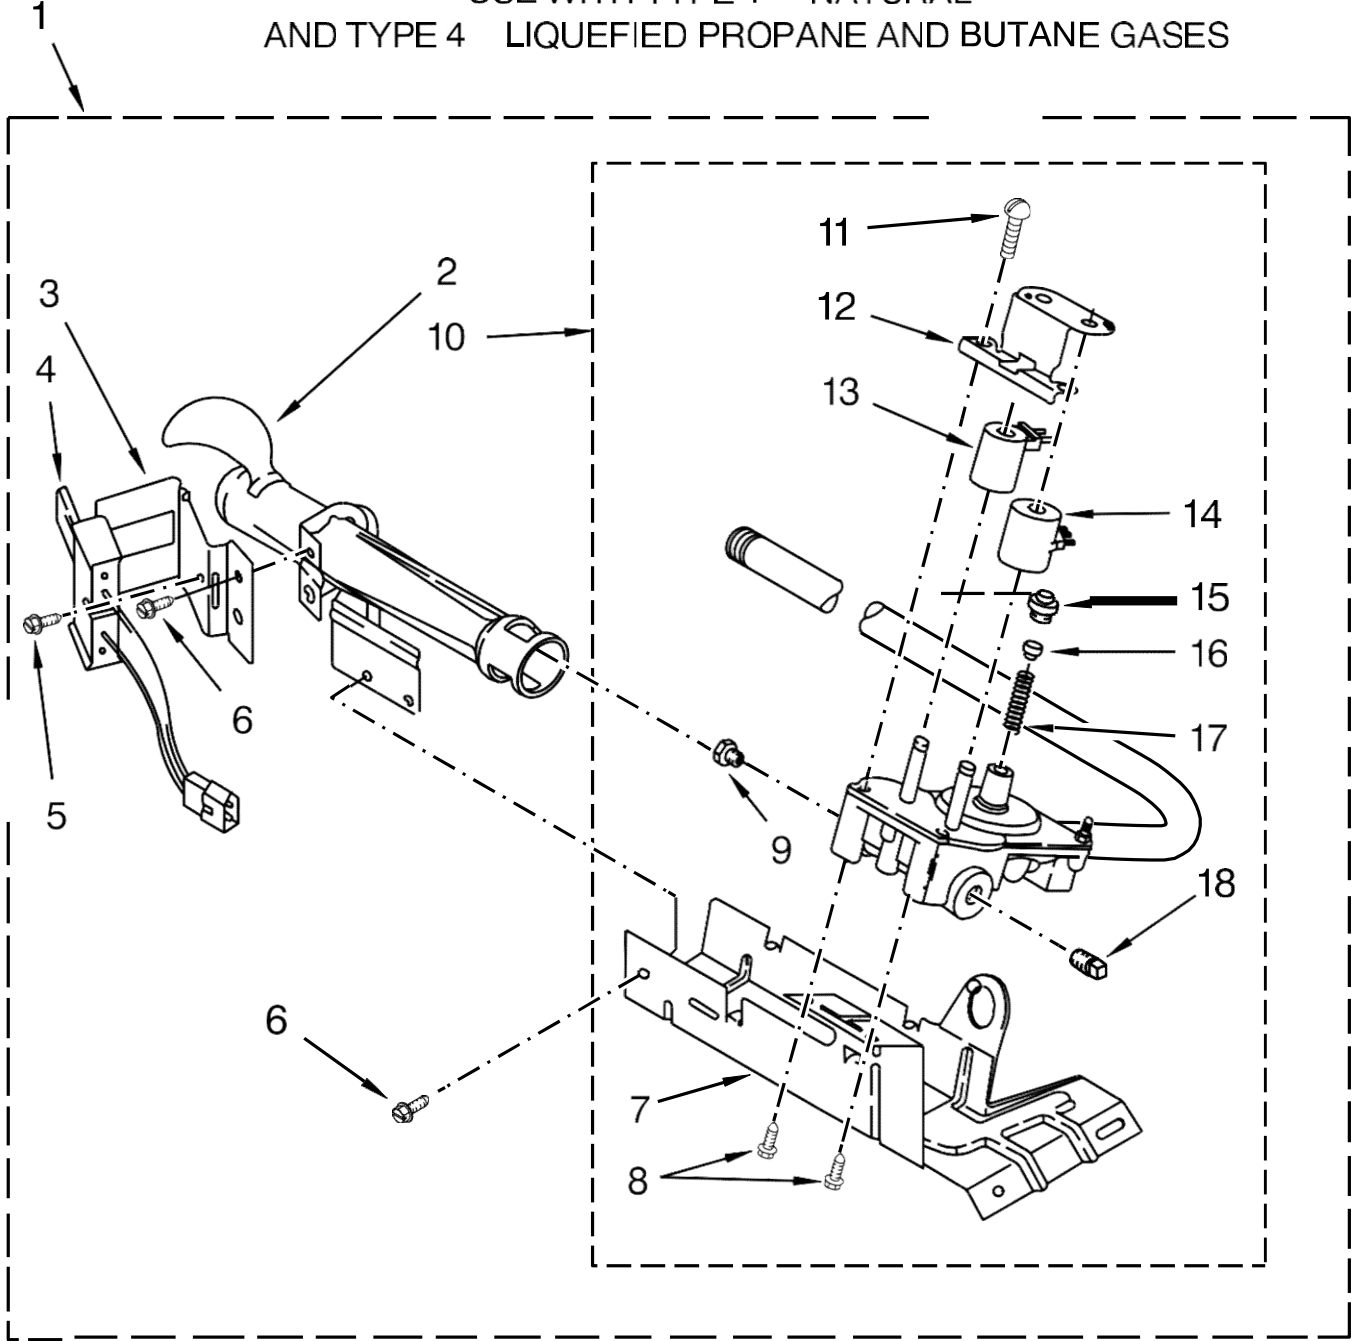



Secadora Whirlpool 7MWGD1930DM0

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	8318272	Burner Assembly (60 Hz) (Type 1) (White Rodgers)
2	688617	Tube, Burner
3	694298	Bracket, Ignitor
4	686590	Ignitor
5	W10366705	Screw
6	343641	Screw
7	693986	Base, Burner
8	3387057	Screw

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
9		Orifice, Burner
	234826	Type 1 (Natural)
	229742	Type 4 (Butane)
	234868	Type 4 (Propane)
10	8318277	Valve, Gas (60 Hz)
11	694421	Screw, Coil
12	694538	Bracket, Coil
13	694540	Coil, 60 Hz. (2 Terminal) (Main)
14	694539	Coil, 60 Hz (Split) (3 Terminal) (Pilot Position)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
15	694424	Leak, Limiter
16	694423	Screw, Regulator Adjustment
17	694422	Spring, Regulator
18	239822	Plug, Pipe
		Following Parts Not Illustrated
	W10307153	Conversion Kit (Type 1 and 2) to Type (4) L.P.G.



Secadora Whirlpool 7MWGD1930DM0

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u> <u>Description</u>
	279948 Kit, Dryer Repair
	346764 Kit, Hold Down
	8522199 Kit, Dryer Vent Testing
	W10071550A Dryer Rack
	W10676169 BAG ASSEMBLY, INCLUDES THE FOLLOWING:
	W10439655 Hose, Inlet (2')
	3976300 Washer, Inlet Hose
	W10336486 Connector, Hose -"Y"

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u> <u>Description</u>
	72017 White

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u> <u>Description</u>
	799344 White

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u> <u>Description</u>
	350930 White
	350938 Gray Primer