




Secadora Whirlpool 7MWGD1930DM2

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts
	W10652257	Use and Care Guide
	W10678653	Instructions, Installation
	W10876321	Wiring Diagram
2		Assembly, Console
	W10704155	White
3	694419	Buzzer, Mini
4		End Cap (Left)
	W10520782	White
5	8312709	Clip, Console
6	W10556829	Panel, Rear (Console)
7	3405156	Switch, Rotary (2 POS)
8		End Cap (Right)
	W10520780	White

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
9	693995	Screw
10		Lint Screen
	W10717210	White
11	8536939	Clip, Spring
12	3400818	Screw
13	688983	Screw
14	8533974	Screw
15	3348629	Screw
16		Top
	8559800	White
17	W10117655	Switch, Push To Start
18		Assembly, Control Knob
	W10576636	White/Metallic
19		Assembly, Timer Knob
	W10576634	White/Metallic

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
20	W10185992	Timer Assembly (60 Hz.)
21	W10865752	Harness, Wiring
22	3405155	Switch, Temperature
23	W10556828	Bracket, Control
24	W10476828	Control, Electronic
25	W10316616	Seal, Foam

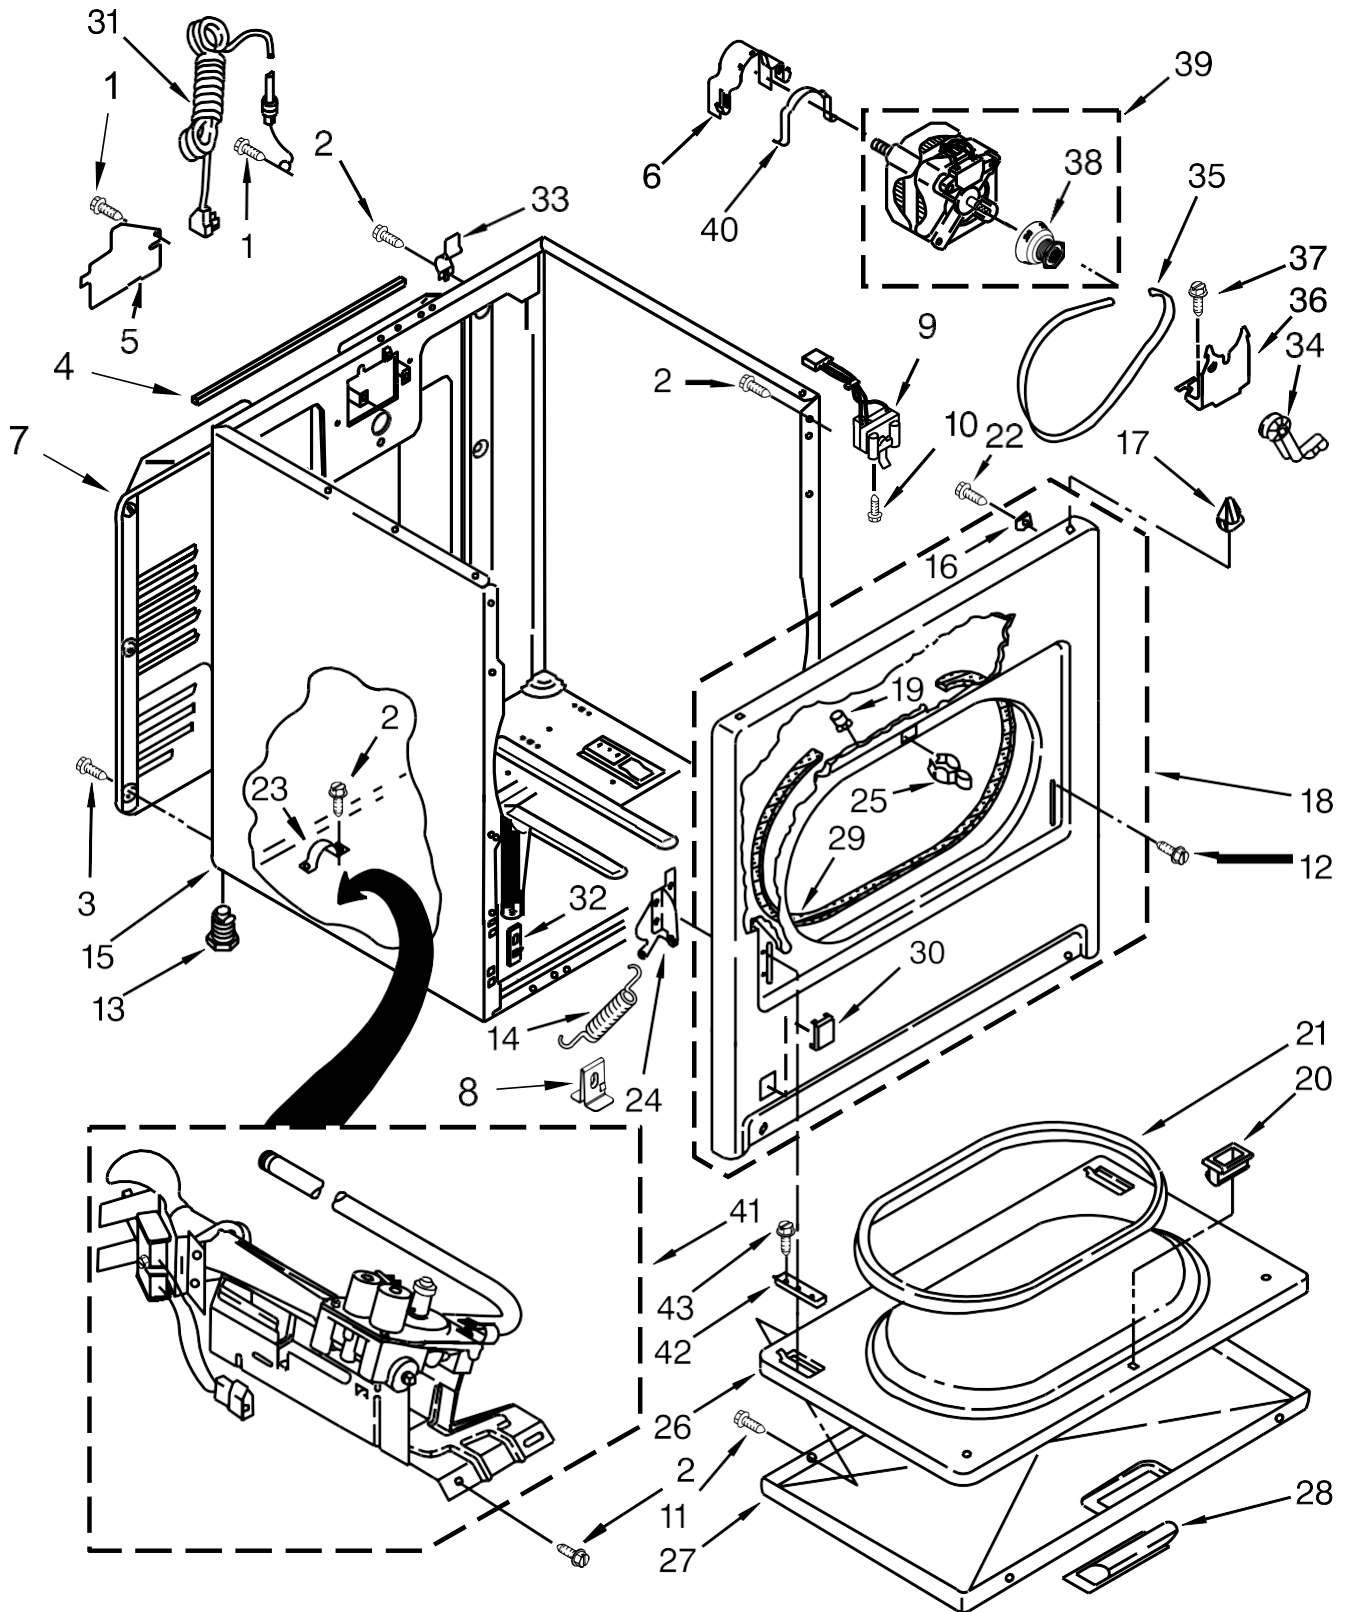




Secadora Whirlpool 7MWGD1930DM2

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	8533974	Screw
2	3390631	Screw
3	693995	Screw
4	W10841728	Seal, Spill Guard
5	3396795	Cover, Terminal Block
6	3404162	Clamp, Motor (With Shield)
7	W10571724	Panel, Rear
8	W10575896	Clip, Spring
9	W10569603	Switch, Door
10	697773	Screw
11	342055	Screw
12	342043	Screw
13	W10561321	Foot, Dryer
14	W10041960	Spring, Door
15		Cabinet
	8530603	White
16	98234	Clip, Ground
17	8066092	Lock, Front Top

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
18		Panel, Front
	W10664692	White
19	685203	Clip, Felt Pad
20	3389441	Assembly, Door Catch
	W10823580	Seal, Door
22	343641	Screw
23	341029	Clamp, Pipe
24	8066056	Hinge, Door (Right)
	8066057	Hinge, Door (Left)
25	696144	Strike, Door
26	695737	Door, Rear
27		Door, Outer
	W10714515	White
28		Handle, Door
	W10714516	White
29	W10803476	Assembly, Seal and Bearing
30		Plug, Hinge Hole
	8564457	White

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
31	344020	Cord, Power
32	W10775448	Clip, Front Panel
33	8066217	Hinge, Top
34	691366	Idler Assembly
35	W10131364	Belt, Drive
36	348780	Base, Motor
37	3400500	Bolt
38	8066184	Pulley, Motor
39	W10396029	Assembly, Motor
40	W10121316	Clamp, Motor Mount
41	W10336852	Burner Assembly (60 Hz) (Type 1 and 2)
42	337189	Clip, Hinge
43	3357011	Screw

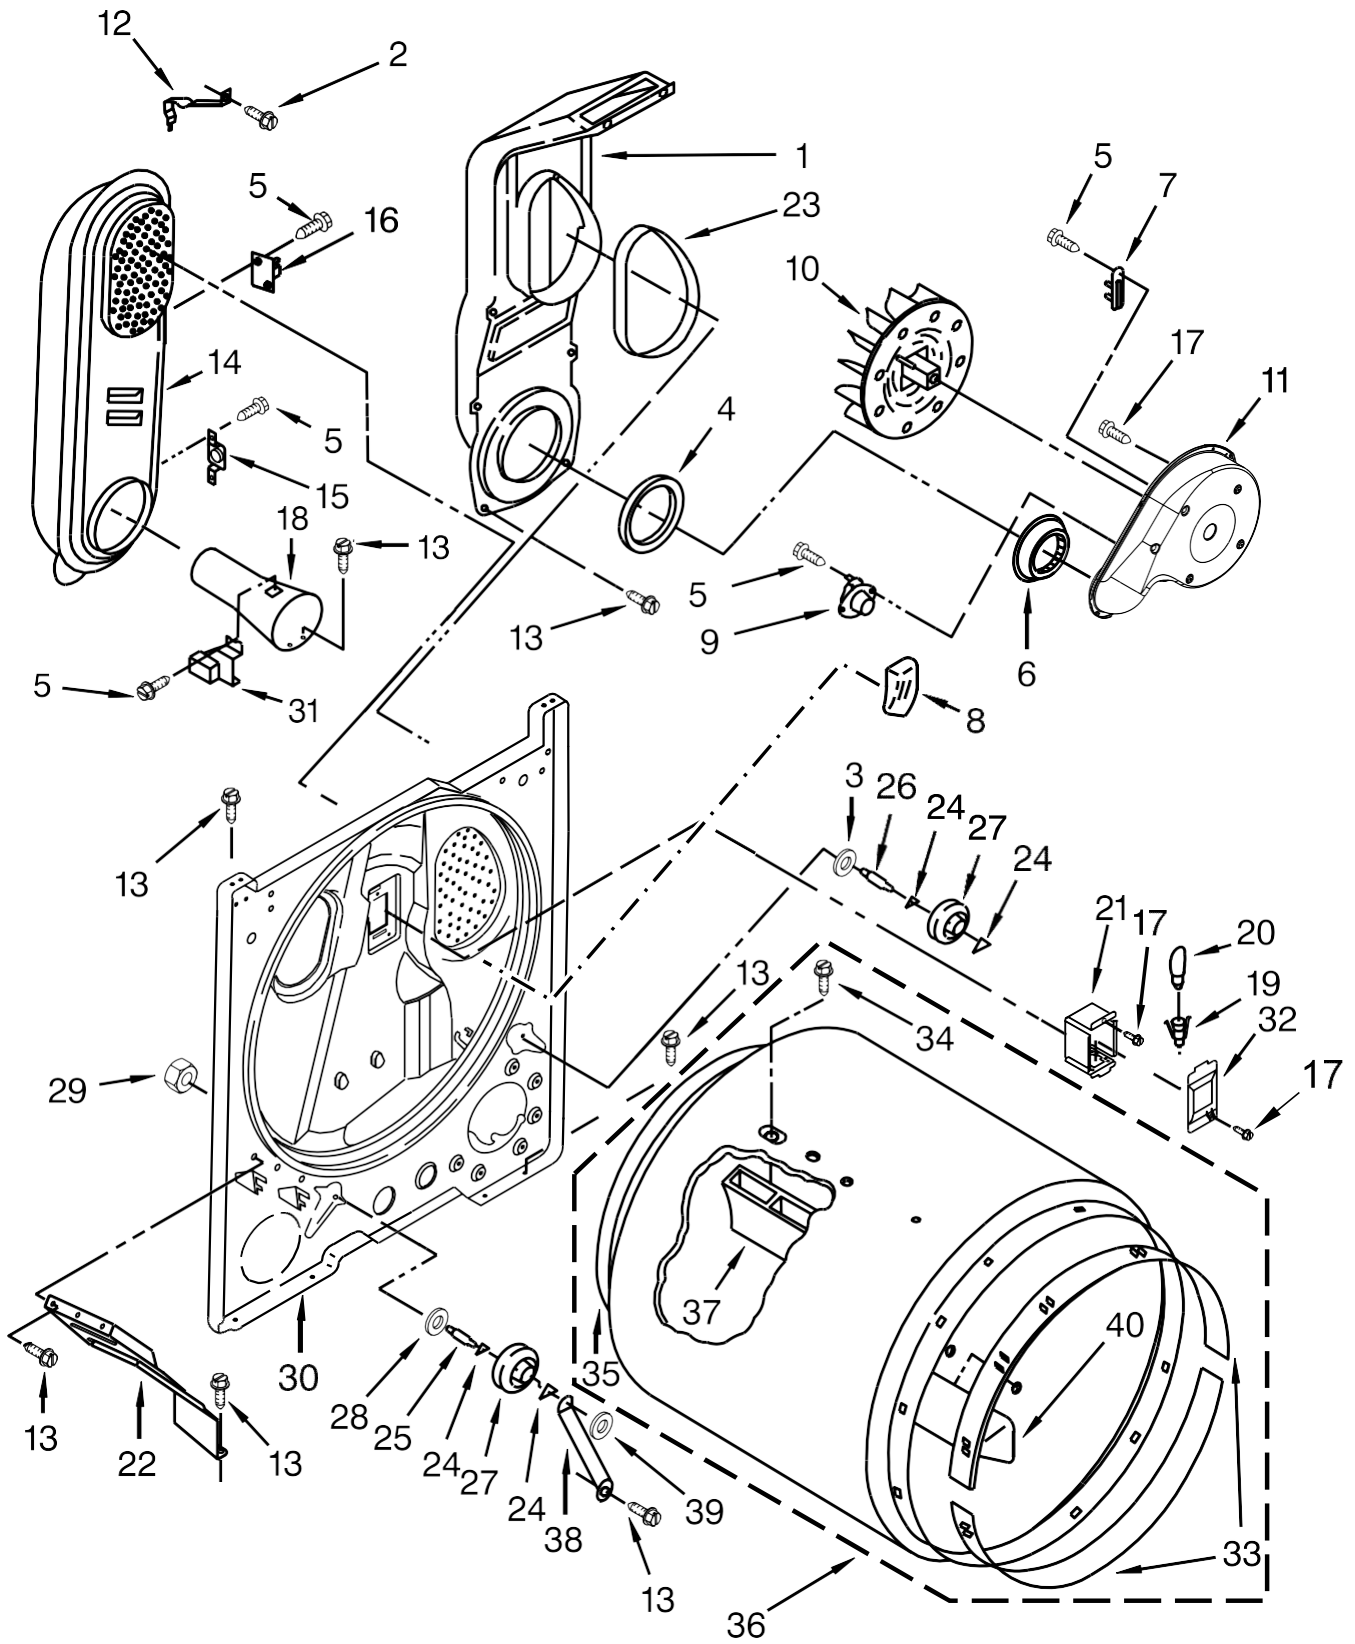




Secadora Whirlpool 7MWGD1930DM2

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	348368	Assembly, Lint Chute
2	489463	Screw
3	3388703	Washer
4	347139	Seal, Lint Chute
5	90767	Screw
6	W10389567	Shield, Exhaust
7	3392519	Fuse, Thermal (91C)
8	W10681051	Pad, Sensor
9	8318268	Thermostat
10	694089	Wheel, Blower
11	8577230	Housing, Blower
12	3398161	Clip, Heater Box
13	3390631	Screw
14	8530285	Box, Heater (96C)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
15	W10423382	Thermostat, High Limit SPST (180F)
16	W10480709	Kit, Thermal Cut-Off (Includes Thermostat)
17	3390647	Screw
18	8066049	Funnel, Burner Light
19	W10214261	Socket, Light
20	3406124	Bulb, Light
21	8578825	Bracket, Drum Light
22	3406022	Bracket, Bulkhead Chute
23	339956	Seal
24	W10512946	Washer, Tri Ring
25	W10359270	Shaft, Drum Roller - Left Hand Thread
26	W10359269	Shaft, Drum Roller - Right Hand Thread

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
27	3397590	Roller, Support
28	348197	Washer
29	W10298789	Nut, Hex
30	3403414	Bulkhead
31	338906	Sensor, Radiant
32	3402841	Lens, Drum Light
33	692526	Bearing, Ring
34	W10219342	Screw
35	W10725245	Seal, Rear Drum
36	W10757750	Assembly, Drum (Complete)
37	692490	Baffle, Drum (Long)
38	3976434	Bracket, Support
39	90296	Nut, Push On
40	3403636	Baffle, Drum (Short)

USE WIT- TYPE 1 - NATURAL, TYPE 2 - MIXED,
 AND TYPE 4 - LIQUEFIED PROPANE AND BUTANE GASES

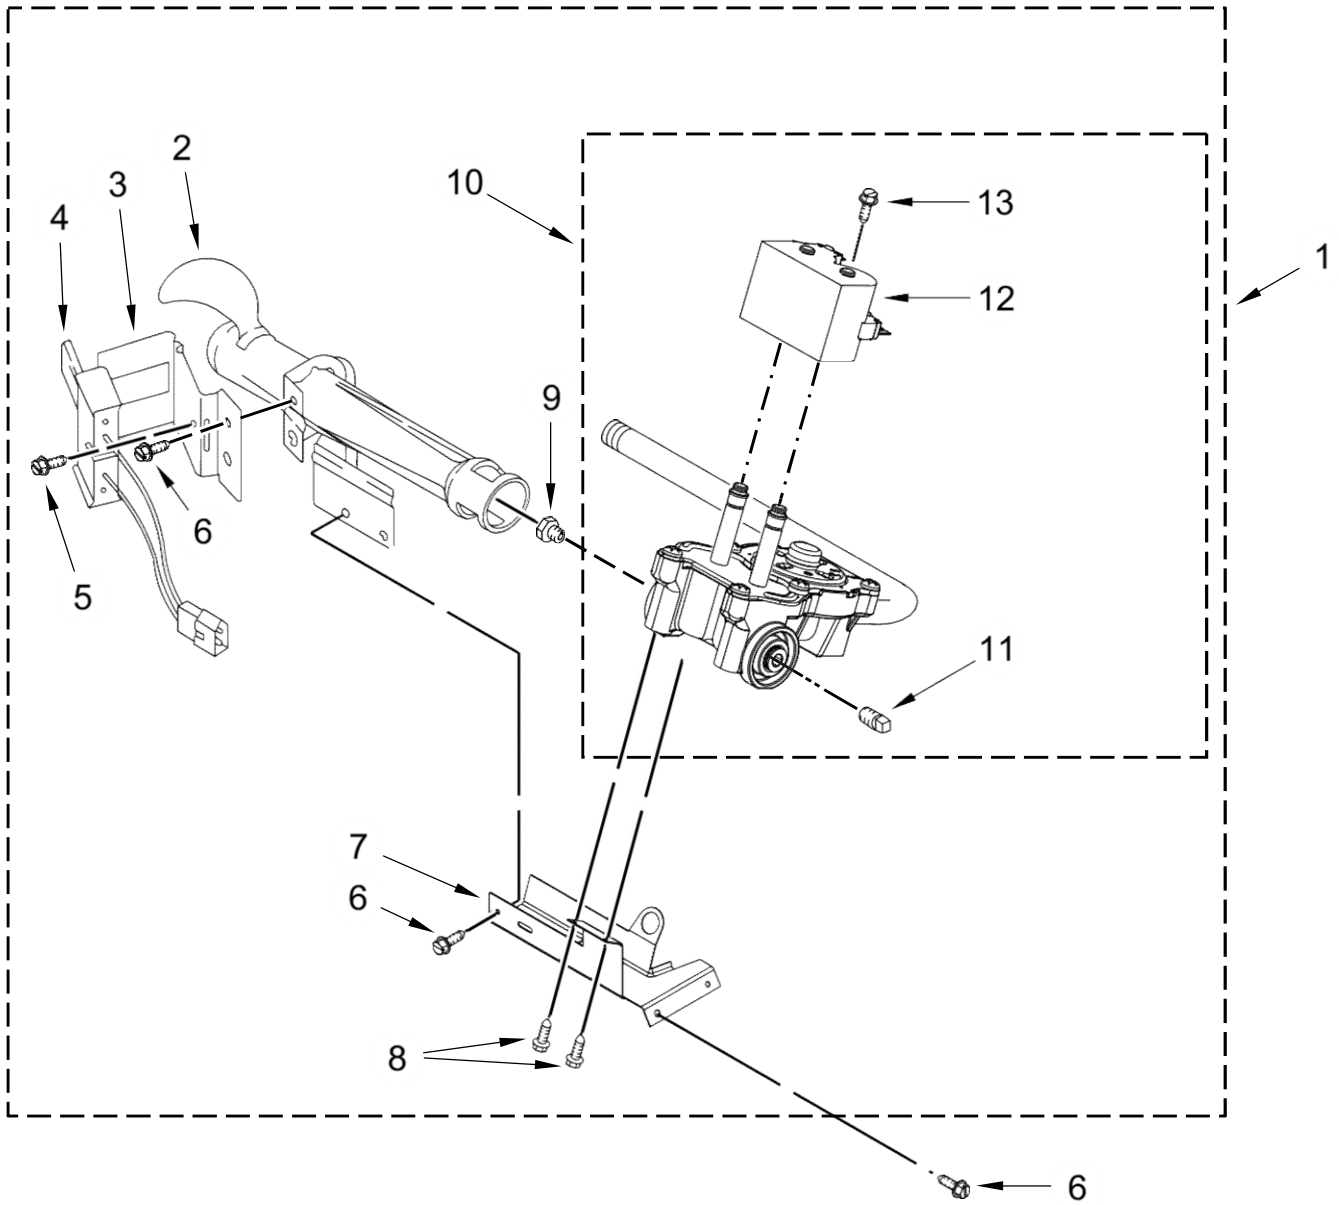



Secadora Whirlpool 7MWGD1930DM2

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10336852	Burner Assembly (60 Hz) (Type 1 and 2)
2	688617	Tube, Burner
3	694298	Bracket, Ignitor
4	686590	Ignitor
5	W10366705	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
6	343641	Screw
7	693986	Base, Burner
8	3387057	Screw
9		Orifice, Burner
	234826	Type 1 (Natural)
10	W10622159	Valve, Gas

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
11	W10295523	Pipe Plug
12	W10328463	Coil (60 Hz)
13	326049536	Screw
		Following Parts Not Illustrated
	49572A	Conversion Kit (Type 1 and 2) to Type (4) L.P.G.



Secadora Whirlpool 7MWGD1930DM2

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u> <u>Description</u>
	279948 Kit, Dryer Repair
	346764 Kit, Hold Down
	8522199 Kit, Dryer Vent Testing
	W10322470A Dry Rack
	W10676169 BAG ASSEMBLY, INCLUDES THE FOLLOWING:
	W10439655 Hose, Inlet (2')
	3976300 Washer, Inlet Hose
	W10336486 Connector, Hose -"Y"
	W10242307 Washer, Hose

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u> <u>Description</u>
	72017 White

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u> <u>Description</u>
	799344 White (Uncut)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u> <u>Description</u>
	350930 White
	350938 Gray Primer