

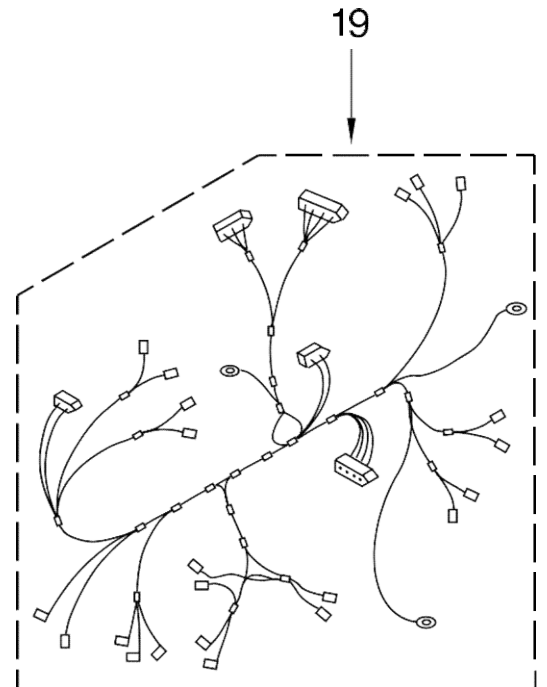
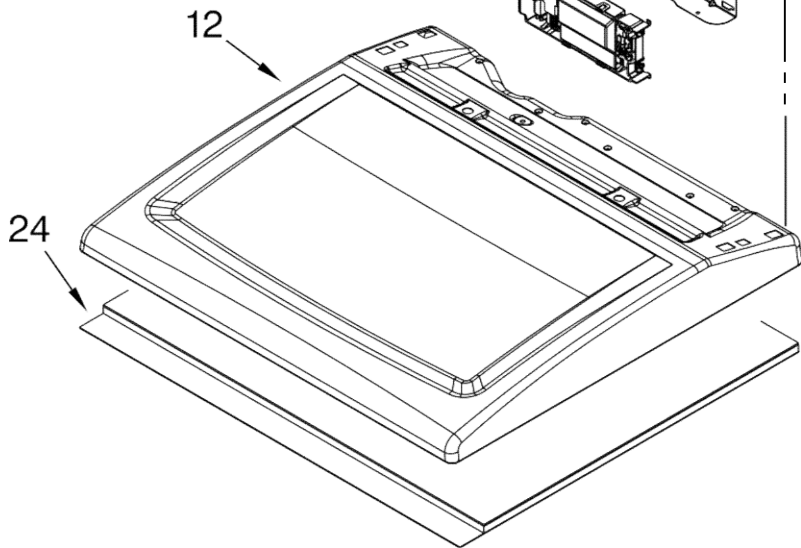
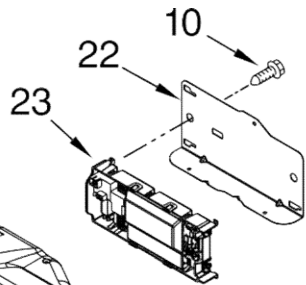


Secadora Whirlpool 7MWGD5550XW1

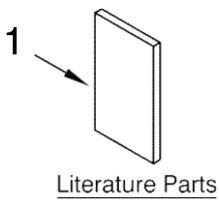


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

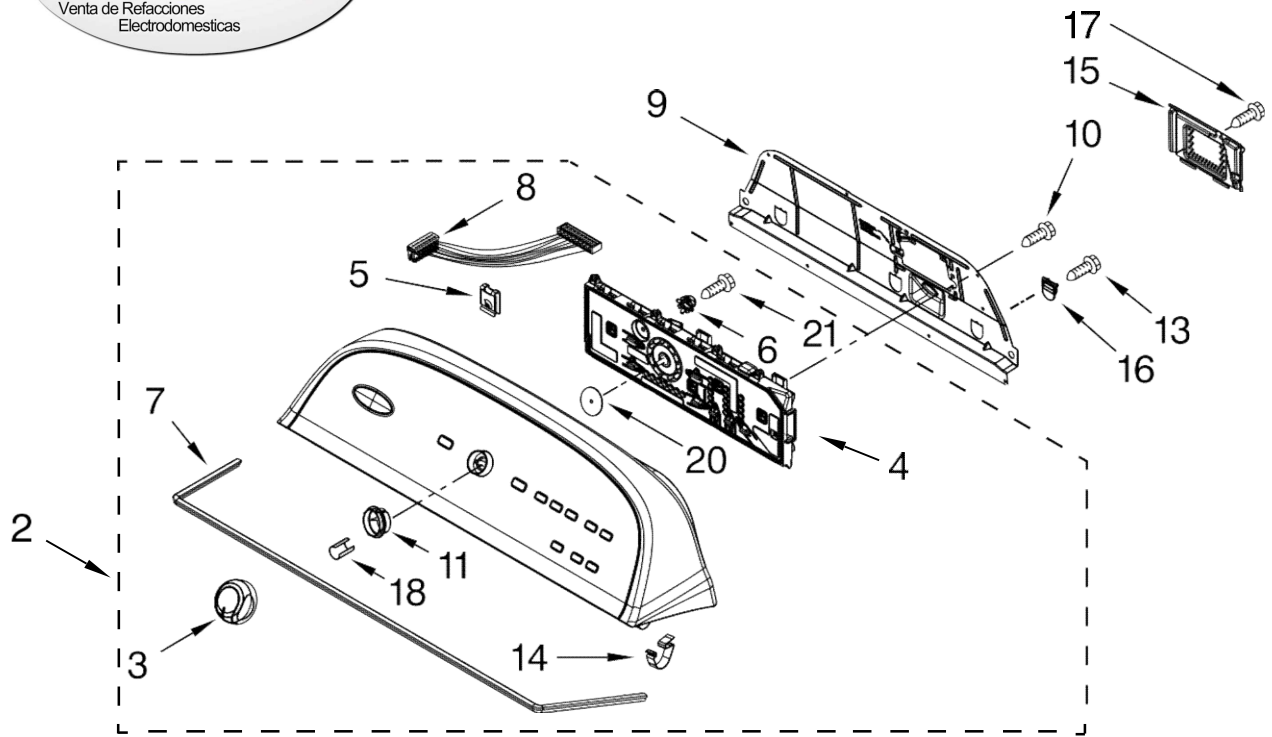

Secadora Whirlpool 7MWGD5550XW1

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	W10329763	Installation Instructions
	W10329761	Guide, Use & Care
	W10097033	Tech Sheet
2	W10329788	Panel, Console
3	W10251392	Knob Assembly
4	W10269624	User Interface
5	W10298336	Nut, 8-18 U-Type
6	W10274524	Tensioner
7	W10280079	Seal, Console
8	W10285495	Cable, User Interface
9	W10096969	Panel, Rear Console
10	8533971	Screw, 8-16 x 5/16
11	W10325119	Spacer, Knob
12	W10260246	Top
13	3390647	Screw, 8-18 x 1/2
14	8312709	Clip, Console
15	W10338363	Cover, Terminal Block
16	W10279552	Plug, Upper Rear Panel
17	3390814	Screw, 8-18 x 1/2
18	8536939	Clip, Spring
19	W10253982	Harness, Wiring
20	W10323092	Seal, UI
21	W10219342	Screw, 8-16 x 1/2
22	W10271580	Bracket, Motor
23	W10317636	Control, Electronic
24	W10123956	Panel, Dampening

Secadora Whirlpool 7MWGD5550XW1

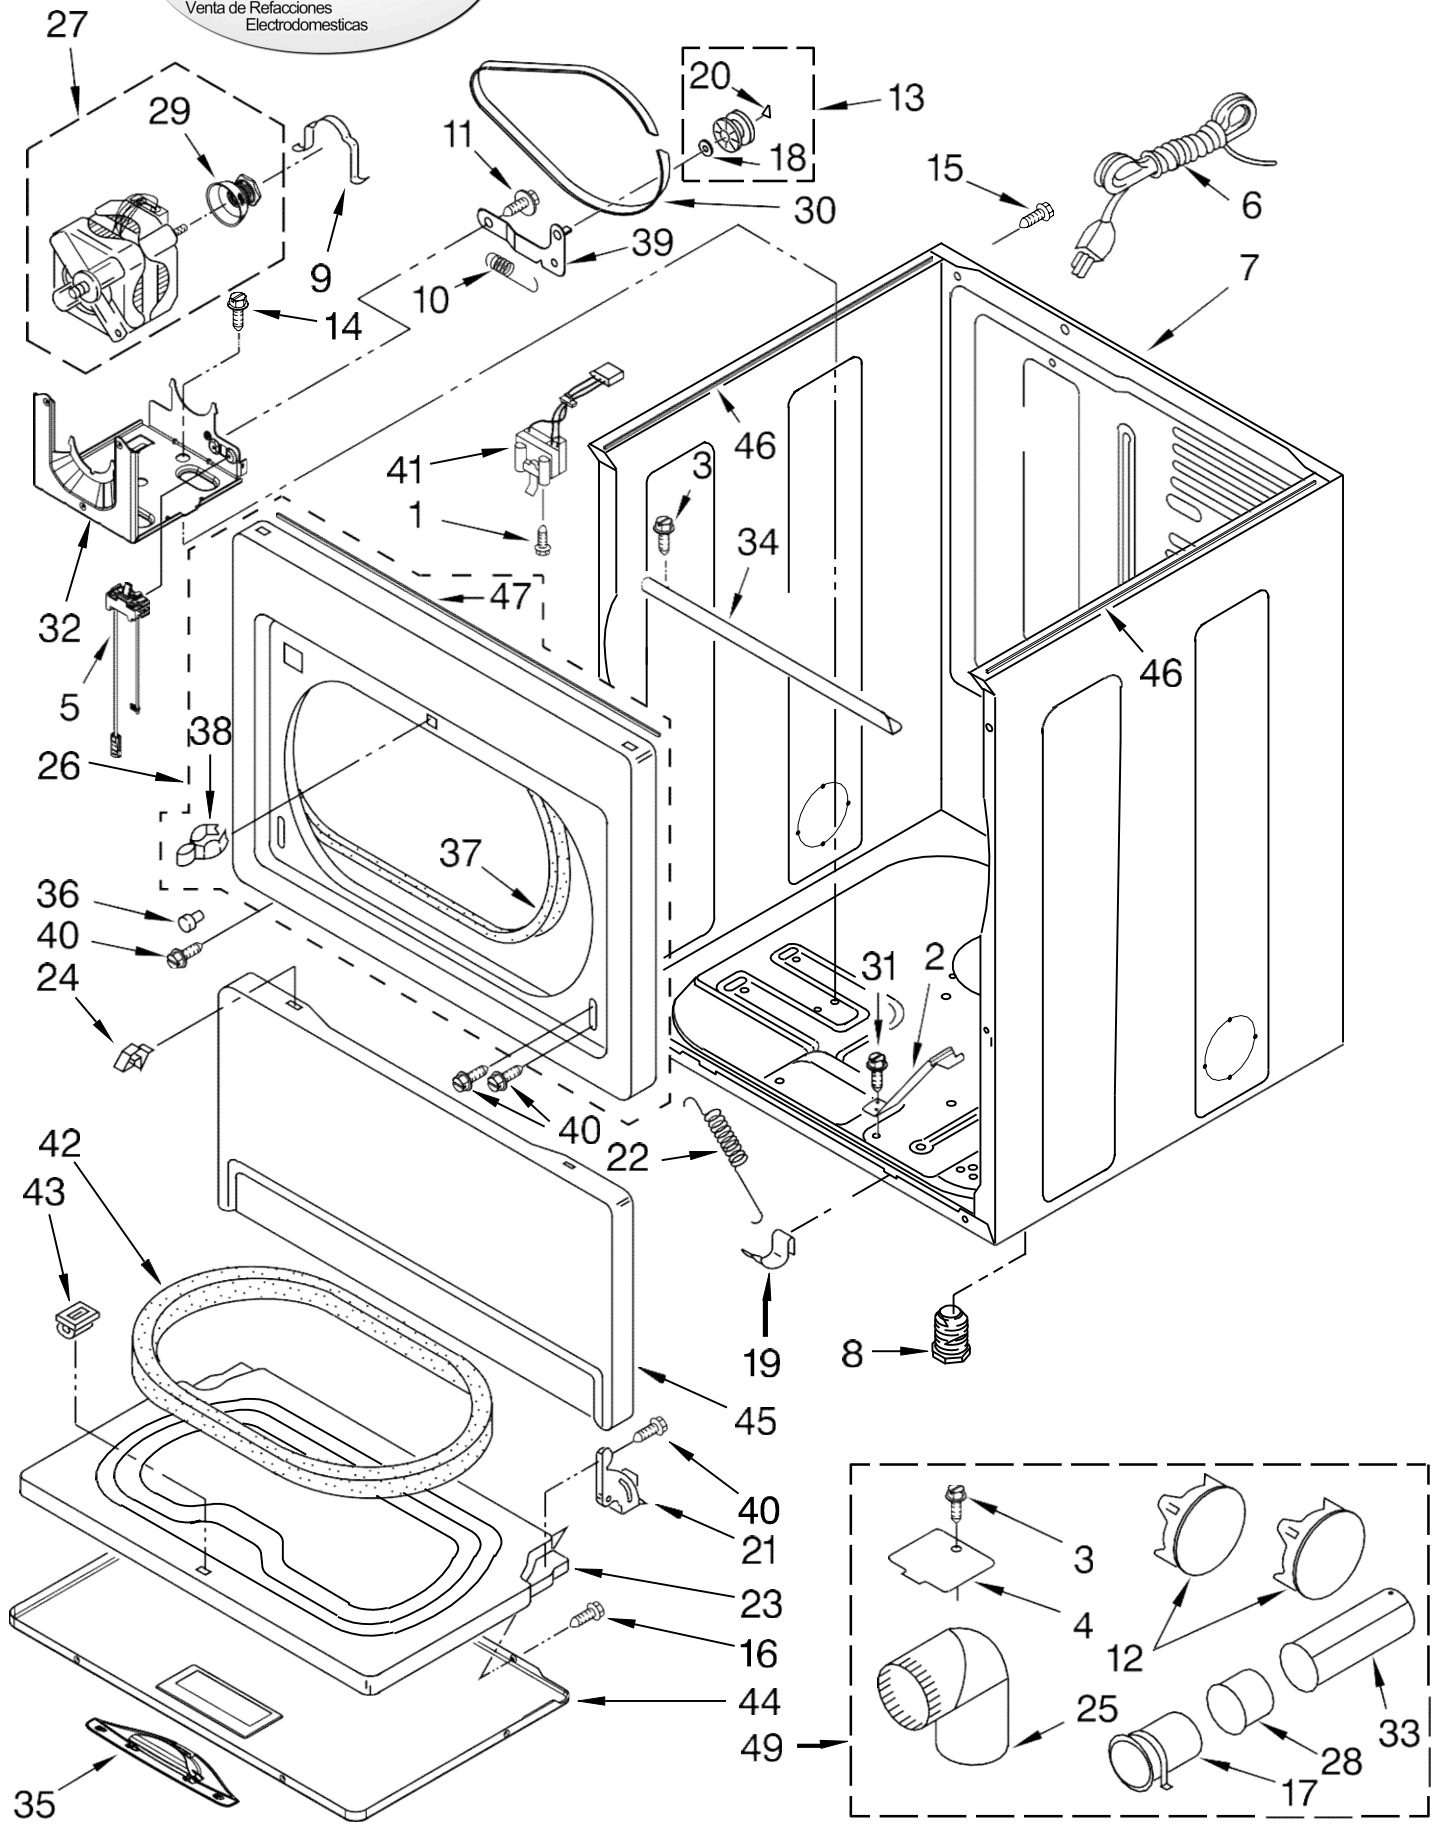


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST



Secadora Whirlpool 7MWGD5550XW1

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	697773	Screw, 6-20 x 7/8	18	W10121334	Washer, Thrust	37	3387242	Seal, Front Panel
2	8529757	Bracket, Burner	19	W10291934	Clip (2)	38	696144	Strike, Door
3	3390647	Screw, 8-18 x 1/2	20	690997	Tri-Ring	39	3388674	Idler Bracket
4	3394331	Plate, Cover	21	3387560	Hinge, Door (R.H.)	40	3357011	Screw, 10-16 x 1/2
5	W10246525	Switch, Broken Belt		3387559	Hinge, Door (L.H.)	41	3406107	Door Switch Assembly
6	344020	Cord, Power	22	3387565	Spring, Door (2)	42	W10325058	Door Seal
7	8310656	Cabinet	23	8066045	Door, Rear	43	690081	Catch, Door Assembly
8	3392100	Foot, Dryer	24	3388229	Retainer	44	W10279553	Door, Front
	279810	Foot - Optional (Extended Length Package Of 2) (Not Included)	25	49026	4" - 90°Elbow	45	697215	Toe Panel (Includes. Illus. 36)
9	660658	Clamp, Motor (2)	26	697227	Upper Front Panel	46	W10336128	Foam, Cabinet
10	3387374	Spring, Idler	27	8538263	Motor, Assembly 60 HZ.	47	W10312811	Foam Seal
11	3389420	Retainer, Idler	28	8563750	Exhaust Pipe (Short)	Optional Parts Not Included		
12	49252	Plug, Multivent	29	8578220	Pulley, Motor	Dryer Exhaust Kit (For Side & Bottom Venting)		
13	3388672	Pulley Assembly	30	3387610	Belt, Drive			
14	343641	Screw, 10-16 x 1/2	31	693995	Screw, 8-18 x 3/8			
15	8533971	Screw, Ground	32	W10242878	Bracket, Motor			
16	342055	Screw, 8-18 x 3/8	33	8563749	Exhaust Pipe (Long)			
17	8563747	Exhaust Pipe & Bracket	34	W10236068	Bracket, Cabinet			
			35	W10284093	Handle, Door			
			36	693152	Bumper			
						49 W10331132 Midnight Grey		

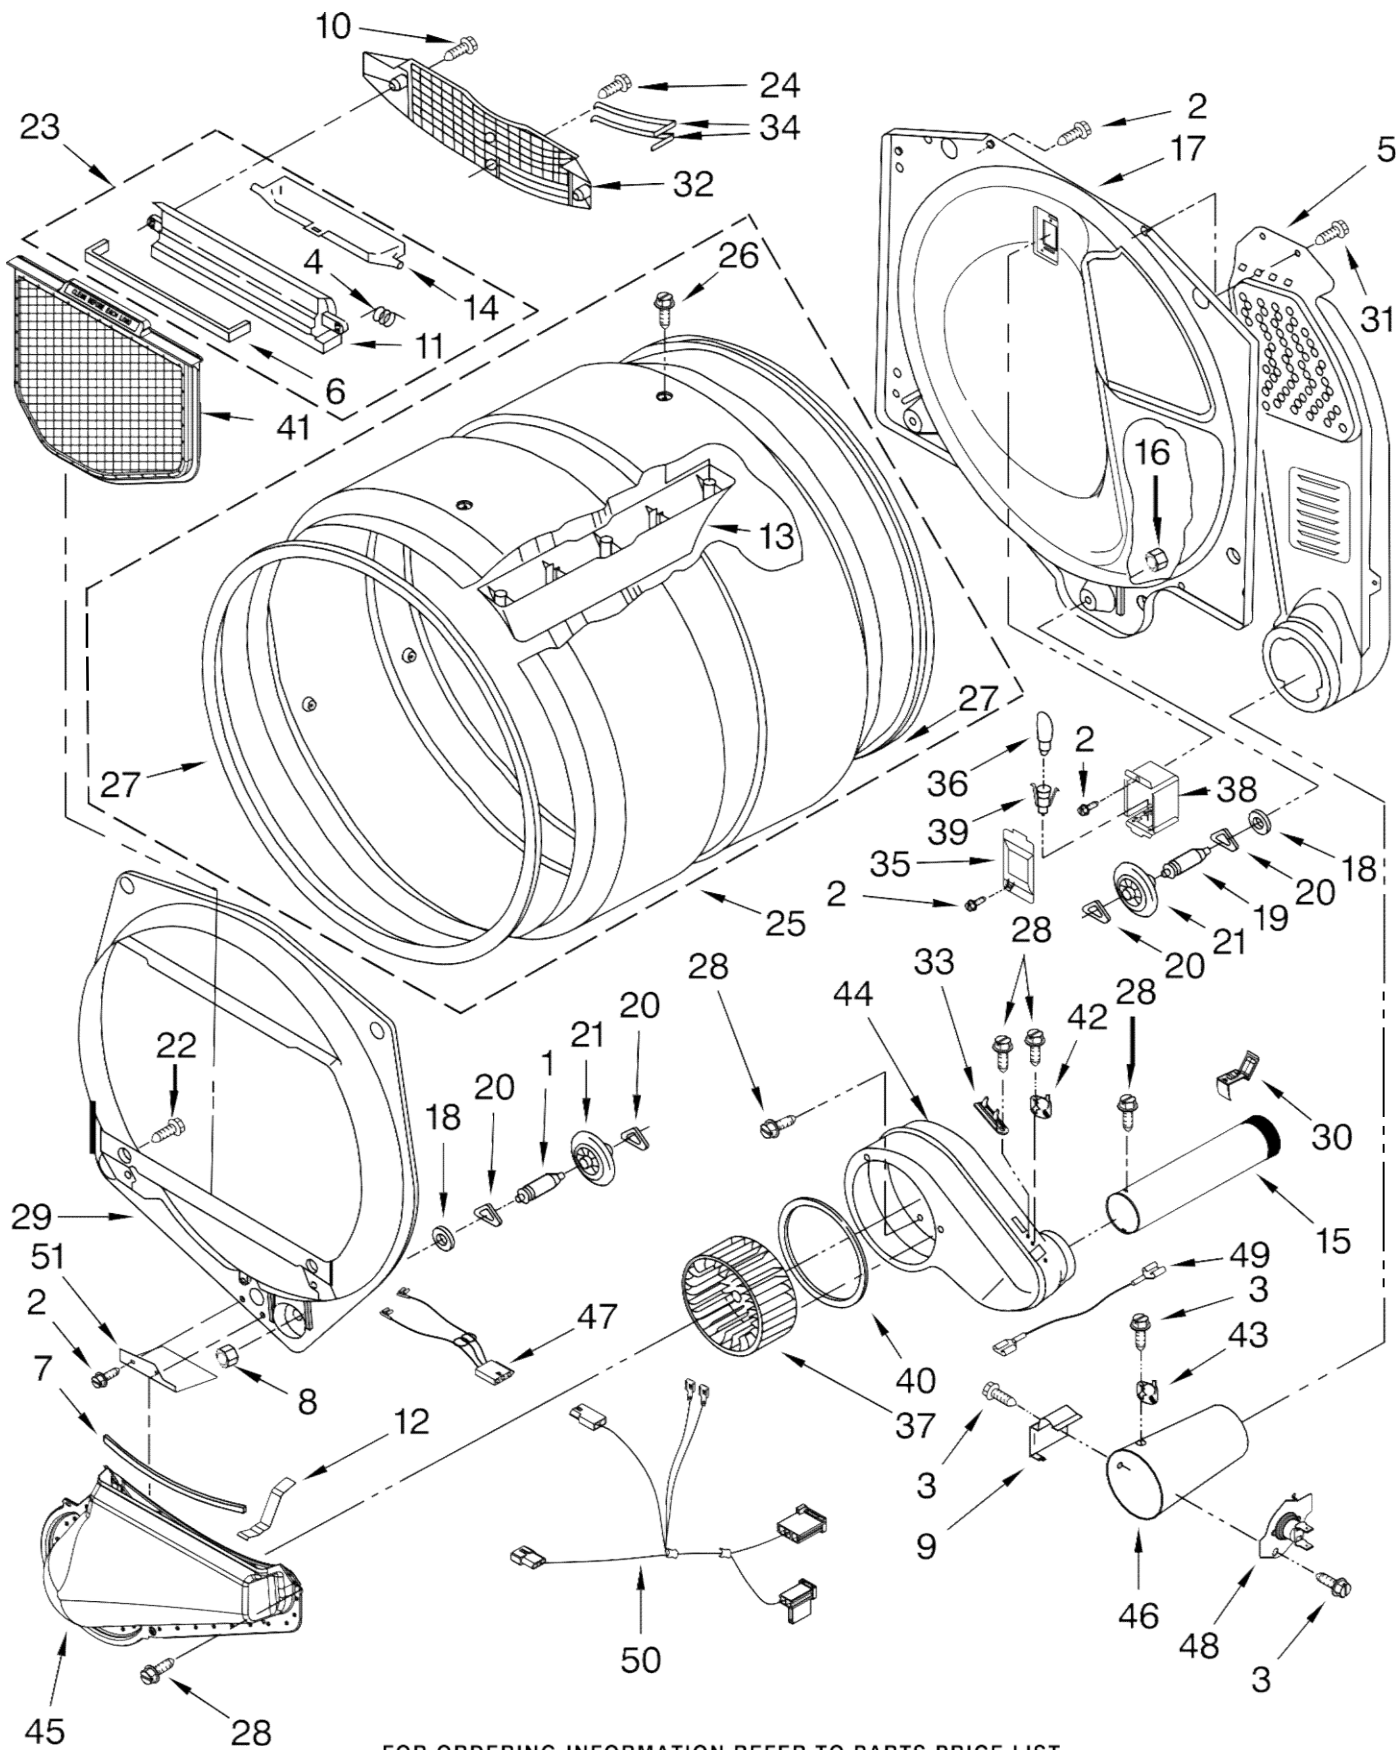


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST



Secadora Whirlpool 7MWGD5550XW1

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	W10359271	Shaft, Drum Roller (R.H.) Threads	17	8520836	Bulkhead, Rear	35	3402841	Lens, Drum Light
2	3390647	Screw, 8-18 x 1/2	18	3387459	Washer, Support	36	3406124	Bulb, Light
3	90767	Screw, 8-18 x 3/8	19	W10359272	Shaft, Roller Drum (L.H.) Threads	37	697772	Wheel, Blower
4	3394986	Spring, Lint Screen Door	20	690997	Ring, Tri	38	8578825	Bracket, Light
5	W10293765	Air Duct Assembly	21	W10314171	Roller, Support	39	W10214261	Socket, Assembly
6	697813	Seal, Outlet Housing	22	695240	Screw, 8-18 x 1/2	40	697770	Seal, Cover Plate
7	697814	Seal, Drum Front	23	W10153423	Outlet Housing Assembly	41	W10049370	Lint Screen
8	3934666	Nut, 3/8 x 16(R.H.)	24	359625	Screw, 8-18 x 1/2	42	8577274	Thermostat, Internal Bias
9	338906	Sensor, Radiant	25	8318215	Complete Drum Assembly	43	3391912	Thermostat, High-Limit (255)
10	3387230	Screw, 10-16 x 3/16	26	W10219342	Screw, 8-16 x 3/4	44	8544362	Housing, Blower
11	W10153414	Housing, Outlet	27	W10166807	Seal, Drum	45	8066168	Lint Duct Assembly
12	W10345456	Clip, Spring	28	8533971	Screw	46	8573824	Funnel, Burner
13	697693	Baffle, Drum	29	697557	Bulkhead, Front	47	W10298258	Harness, Sensor
14	W10153413	Door, Lint Screen	30	8572105	Clip, Exhaust	48	8573713	Thermal, Cutoff
15	8066224	Exhaust Pipe	31	489463	Screw	49	3401707	Jumper, TCO-High Limit
16	W10001120	Nut, 3/8-16 (L.H.)	32	W10153412	Grille, Outlet	50	W10305870	Harness, Gas
			33	3392519	Thermal Fuse	51	W10128629	Shield, Blower Housing
			34	3387223	Electrode, Sensor			

USE WITH TYPE 1 – NATURAL, TYPE 2 – MIXED,
 AND TYPE 4 – LIQUEFIED PROPANE AND BUTANE GASES

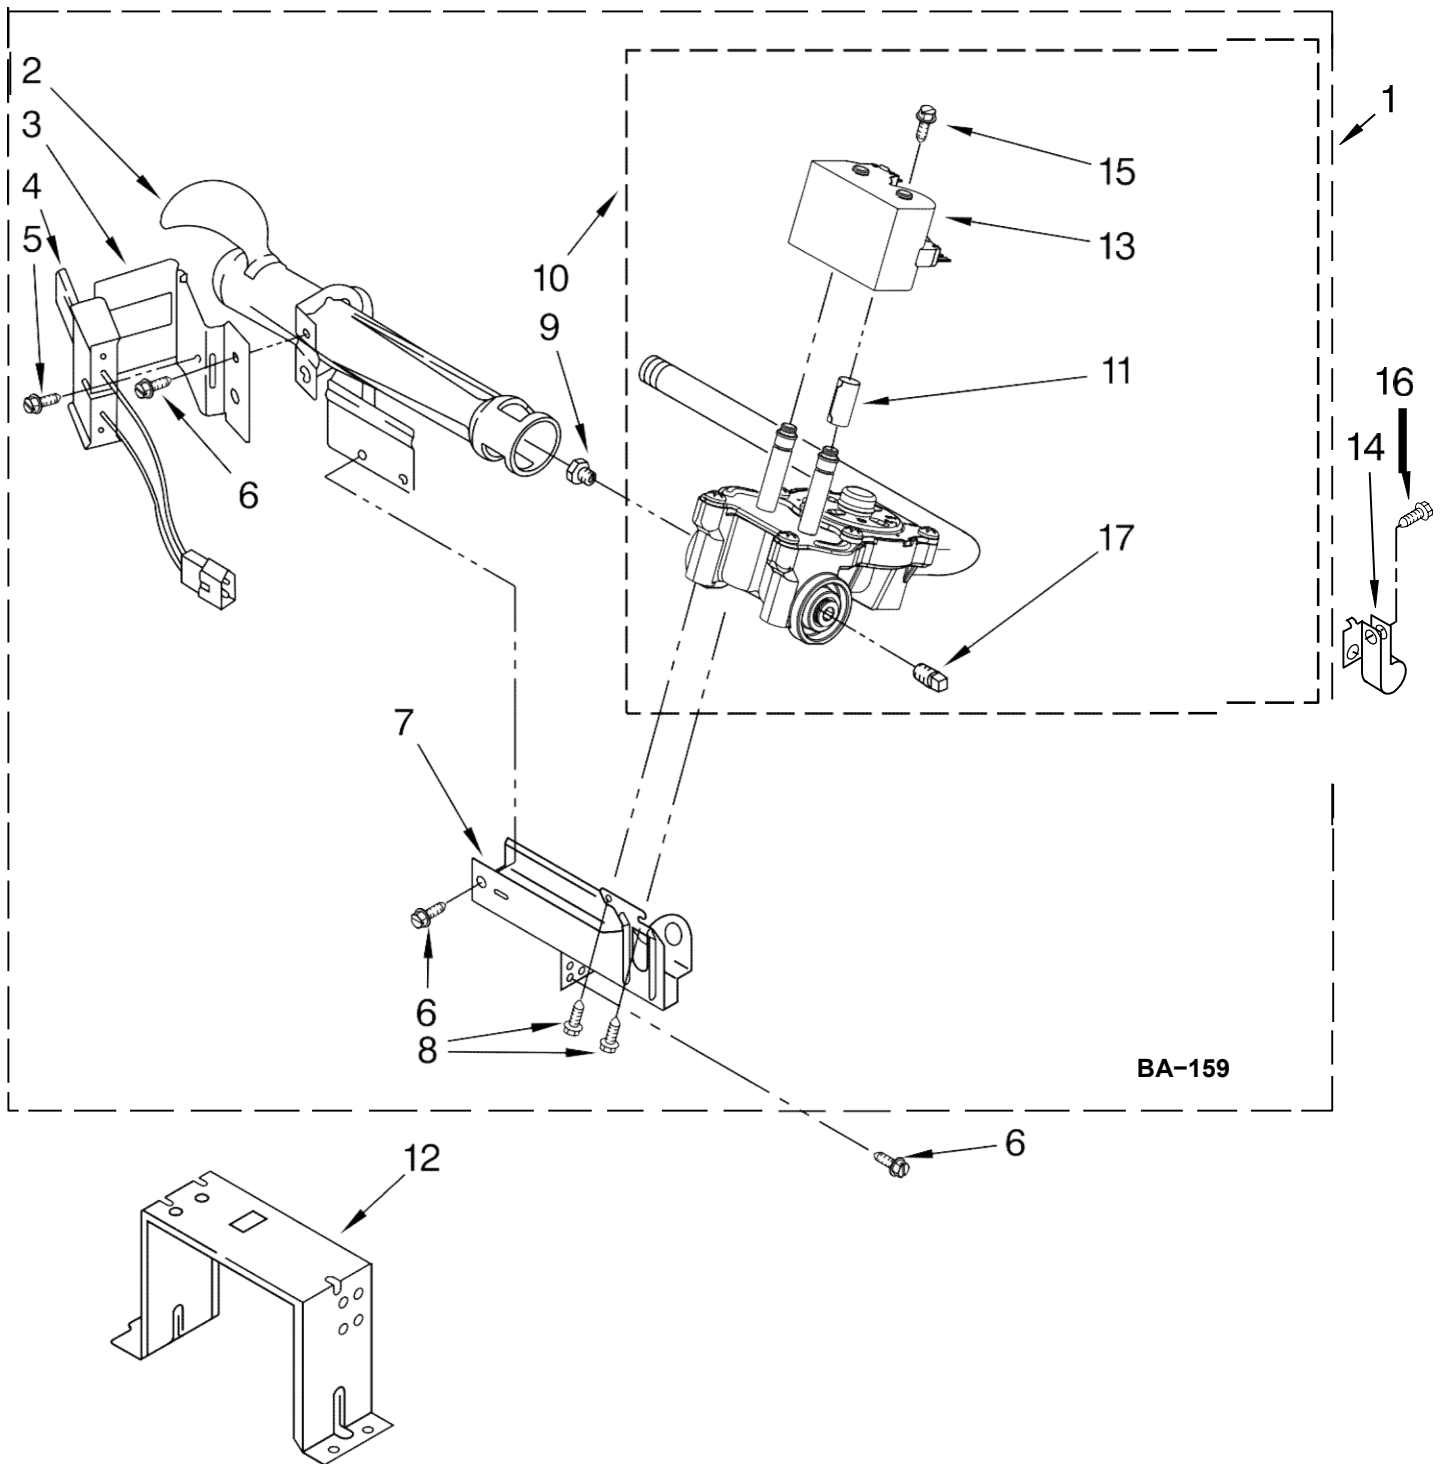

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST



Secadora Whirlpool 7MWGD5550XW1

USE WITH TYPE 1 – NATURAL, TYPE 2 – MIXED,
AND TYPE 4 – LIQUEFIED PROPANE AND BUTANE GASES

Illus. Part	
<u>No.</u>	<u>No. DESCRIPTION</u>
1	W10293911 Burner Assembly 60 Hz. (Type 1 & 2)
2	688617 Tube, Burner
3	694298 Bracket, Ignitor
4	686590 Ignitor
5	3393909 Screw & Washer (8-32 x 5/8)
6	343641 Screw, 10-16 x 1/2
7	3389871 Base, Burner
8	3387057 Screw, 8-18 x 3/8 (3)
9	15418 Orifice, Burner Type 1
10	W10175144 Valve, Gas 60 Hz. (Complete) (Includes Pipe & Illus. No. 7)
11	W10295524 Sleeve-Magnetic
12	3389889 Bracket, Support
13	W10273784 Coil, 60 Hz.
14	3978776 Clamp, Pipe
15	326049536 Screw, Coil
16	3390647 Screw, 8-18 x 1/2
17	W10295523 Plug, Pipe

Following Parts Not Illustrated

W10293913 Conversion Kit
(Type 1 and 2)
to Type (4) L.P.G.

BA-159

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST



Secadora Whirlpool 7MWGD5550XW1

Illus.	Part	
No.	No.	DESCRIPTION

ACCESSORY PARTS

	80047	Kit, Dryer Repair
	8522199	Kit, Dryer Vent Testing
	346764	Kit, Hold-Down (Gas Dryer Mobile Home Installation)
	W10186596	Kit, 4 Way Vent
	8212450A	Dry Rack

PAINT, TOUCH-UP (1/2oz.)

	72017	White
--	-------	-------

PAINT, PRESSURIZED SPRAY (12 oz.)

	350930	White
	350938	Primer, Gray

PAINT, BULK (1 qt.)

	799344	White (Uncut)
--	--------	---------------