


Secadora Whirlpool 7MWGD9015YW0

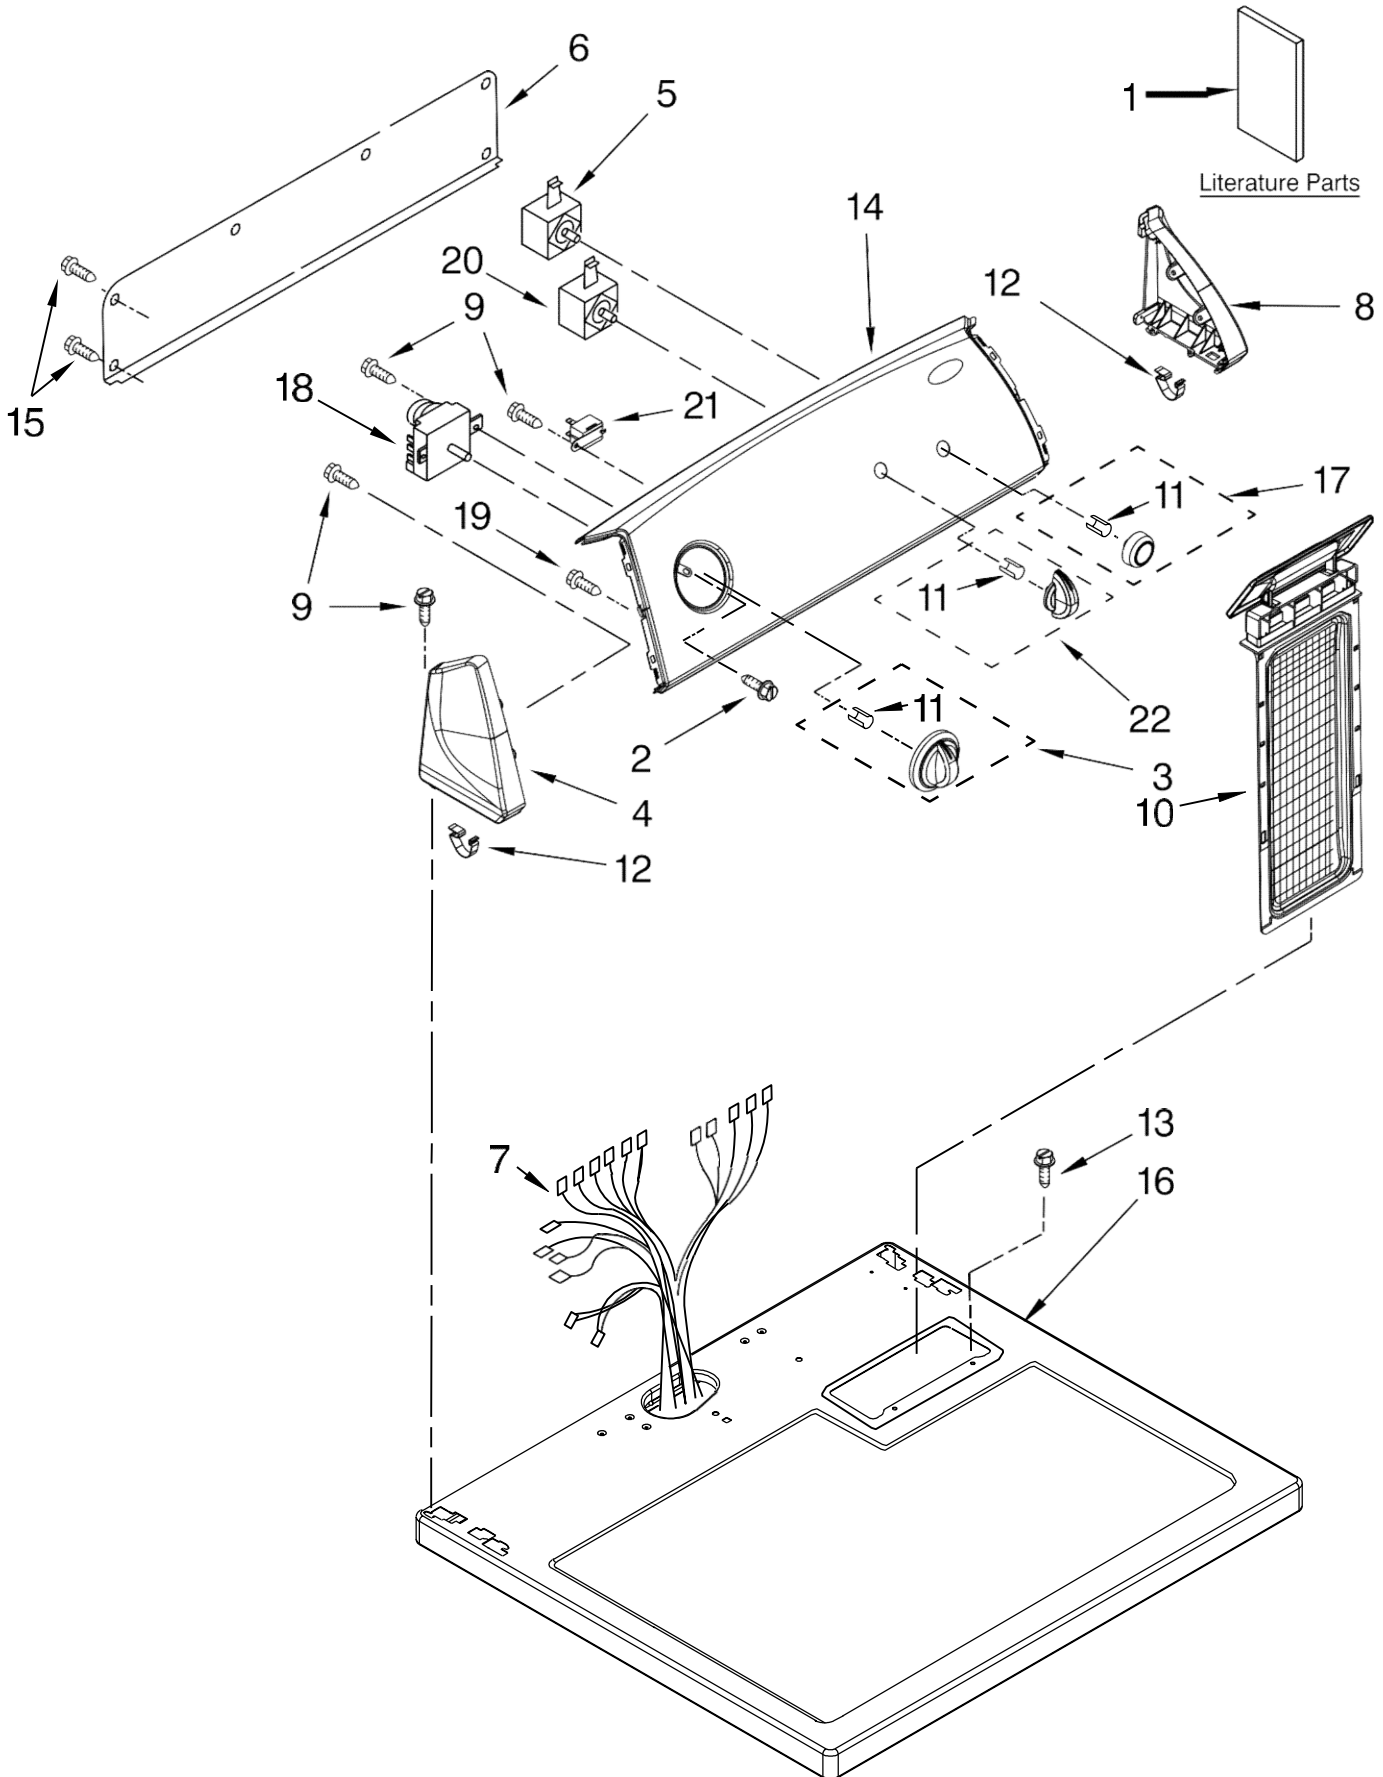


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST



Secadora Whirlpool 7MWGD9015YW0

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	8564241	Installation Instructions
	W10383508	Sheet, Cycle Feature
	8565897	Use & Care Guide
	W10185985	Wiring Diagram
2	3390631	Screw, Grounding
3	8566061	Knob, Timer Assembly
4	8566035	Cap, End (L.H.)
5	3398095	Switch, Push-To-Start
6	W10103406	Panel, Rear Console
7	W10186122	Harness, Wiring
8	8566032	Cap, End (R.H.)
9	3348629	Screw, 8-18 x .375
10	8557857	Lint Screen
11	8536939	Clip, Spring
12	8312709	Clip-Console
13	688983	Screw, 8-18 x 5/8
14	W10370400	Control Panel & Bracket Assembly
15	693995	Screw, Hex Head
16	8559800	Top
17	8566073	Knob, Push-To-Start
18	W10185981	Timer Assembly 60 Hz.
19	3400808	Screw, 8-18 x .313
20	3399639	Switch, Rotary
21	694419	Mini Buzzer
22	8565944	Control Knob

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

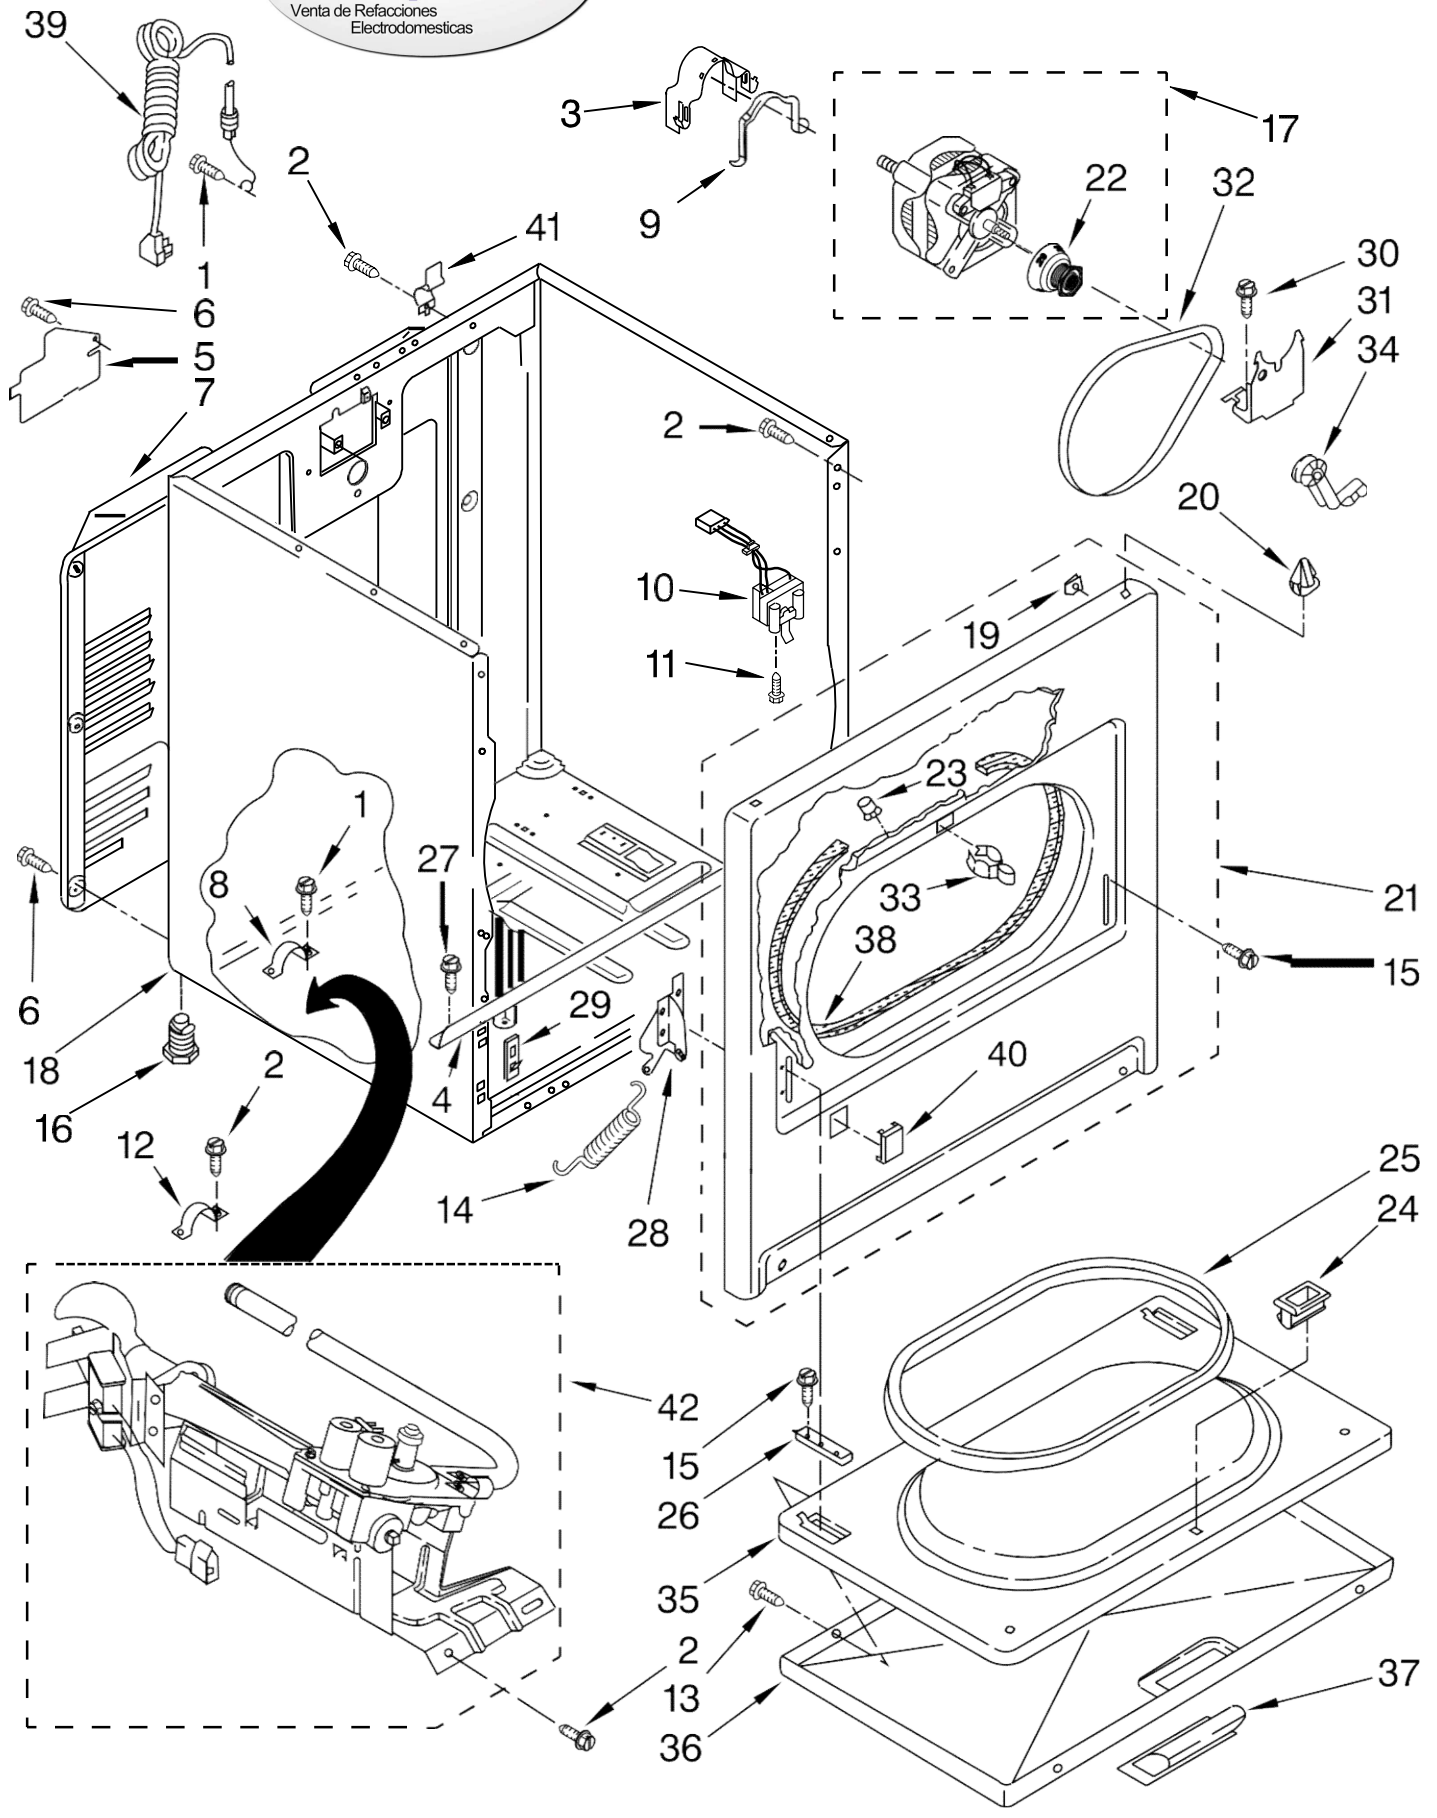

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST




Secadora Whirlpool 7MWGD9015YW0

Illus. No.	Part No.	DESCRIPTION
1	3390631	Screw, 10-16 x 3/8 (External Ground)
2	343641	Screw, 10-16 x 1/2
3	3404162	Clamp, Motor (W/Shield)
4	W10236073	Bracket, Cabinet
5	3396795	Cover, Block
6	693995	Screw, Hex Washer Head
7	3396805	Panel, Rear
8	341029	Clamp, Pipe
9	W10121316	Clamp, Motor
10	3406107	Door Switch Assembly
11	697773	Screw, 6-20 x 7/8
12	3980175	Clamp-Elbow
13	342055	Screw, 8-18 x 3/8
14	W10041960	Spring, Door (2)
15	3357011	Screw, 10-16 x 1/2

Illus. No.	Part No.	DESCRIPTION
16	3392100	Foot, Dryer
	279810	Foot - Optional (Extended Length Package Of 2 (Not Included))
17	8066206	Motor Assembly 60 Hz.
18	8530603	Cabinet (Includes Illus. 4)
19	98234	Clip, Ground (2)
20	690363	Lock, Front Top (2)
21	3395197	Panel Front
22	8066184	Pulley, 60 Hz.
23	685203	Clip, Felt Pad (2)
24	3389441	Catch, Door Assembly
25	3390731	Seal, Door
26	337189	Clip, Hinge (2)
27	3390647	Screw, 8-18 x 1/2
28	8066056	Hinge, R.H.
	8066057	Hinge, L.H.

Illus. No.	Part No.	DESCRIPTION
29	3394083	Clip, Front Panel
30	3400500	Bolt, 5/16-18 x 3/4
31	348780	Base, Motor
32	W10131364	Belt Drive
33	696144	Strike, Panel
34	691366	Idler & Pulley Assembly
35	695737	Door, Rear
36	3393549	Door, Front
37	W10095180	Handle, Door
38	3406129	Seal & Bearing Assembly
39	344020	Cord, Power
40	8564457	Plug, Front Panel
41	8066217	Hinge, Top (2)
42	8318272	Burner Assembly 60 Hz. (See Pages 7 & 8 For Further Burner Breakdown)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

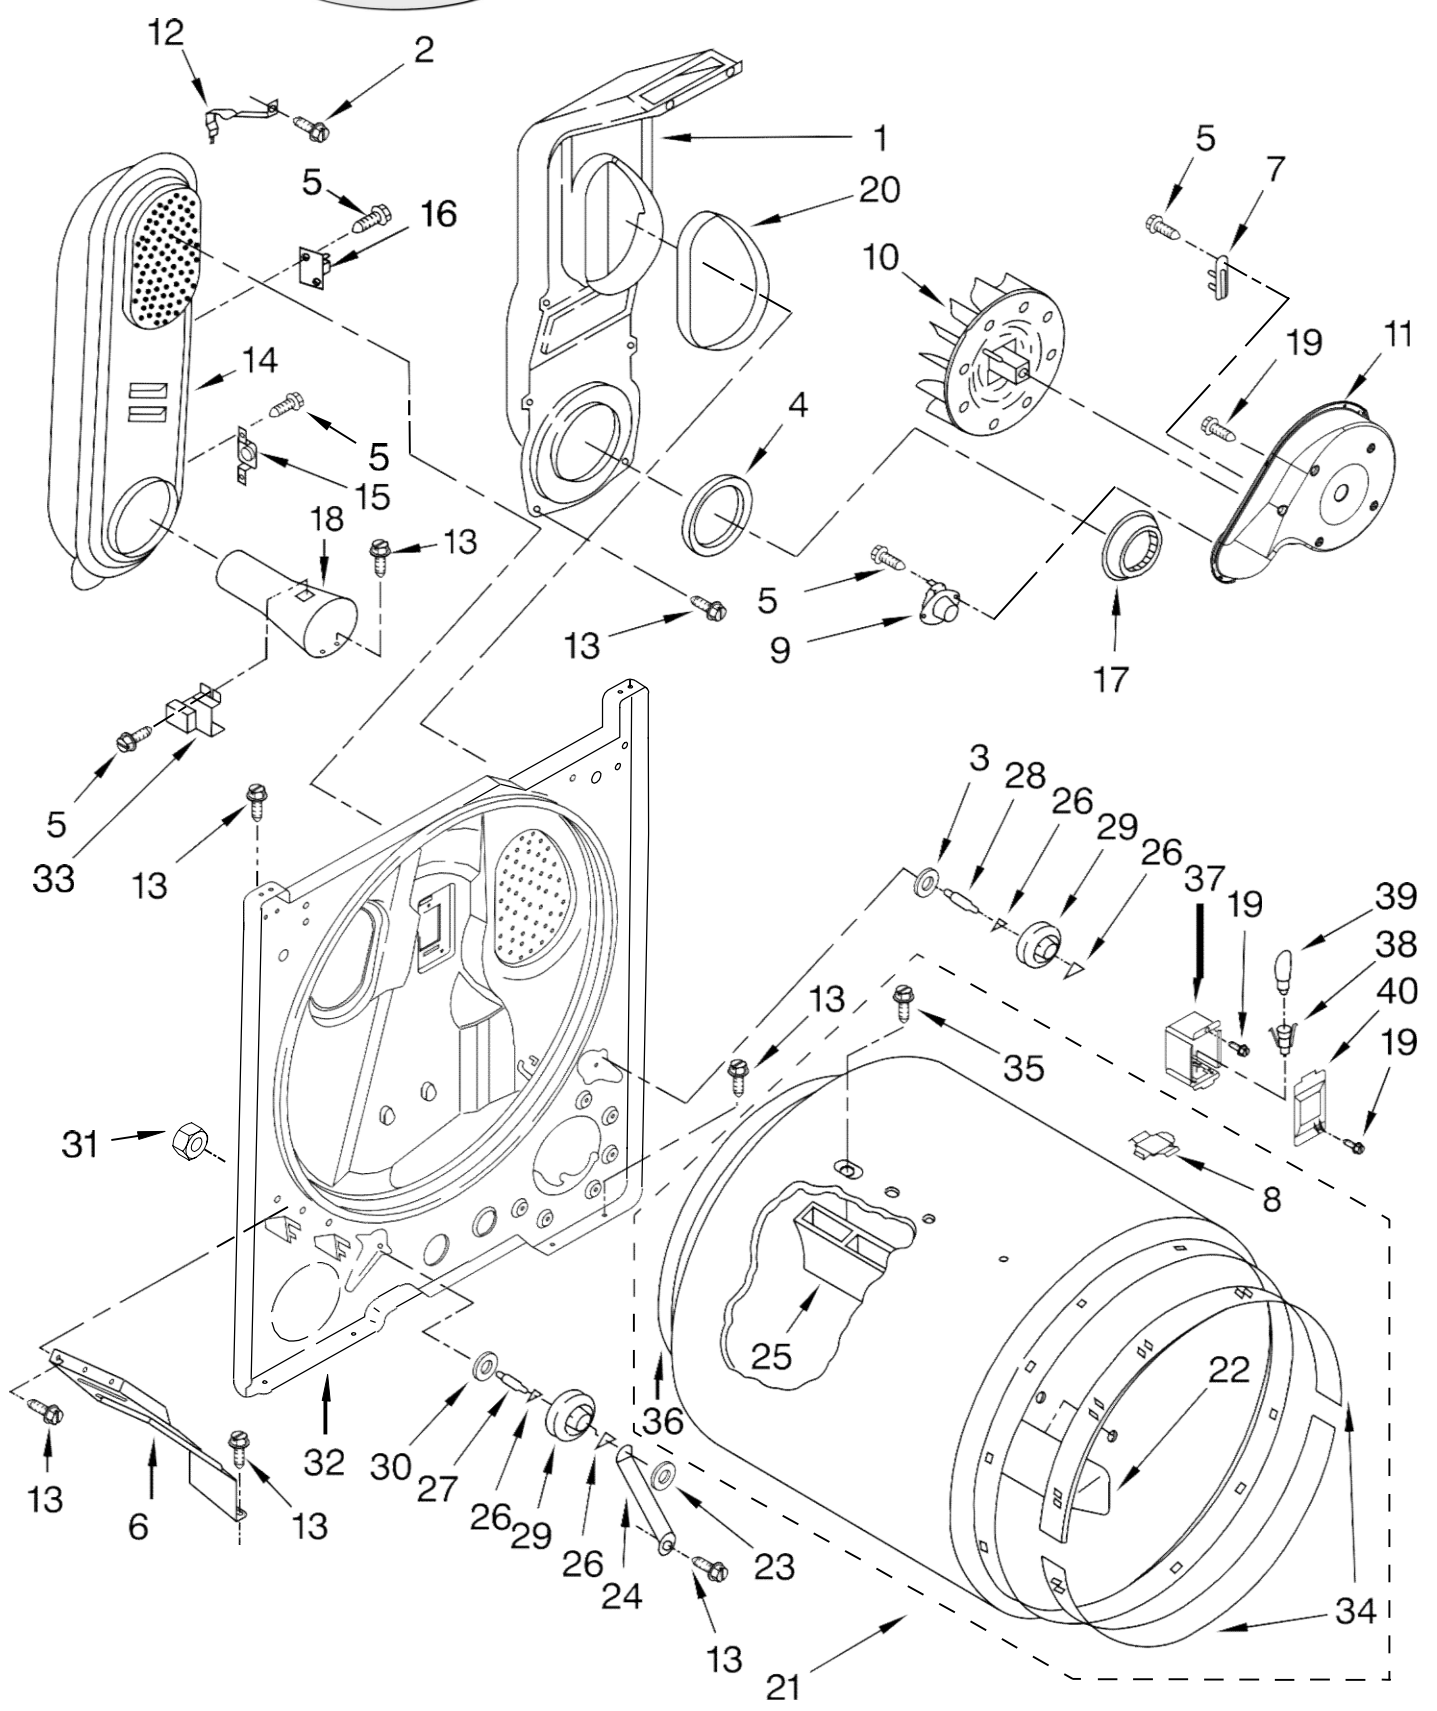

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST




Secadora Whirlpool 7MWGD9015YW0

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	348368	Lint Chute Assembly	13	343641	Screw, 10-16 x 1/2	26	690997	Ring, Tri
2	489463	Screw, 8-18 x 5/8	14	8530285	Box, Heater	27	W10359270	Shaft, Drum Roller (L.H.) Threads
3	3388703	Washer-Support	15	3403140	Thermostat, 205°F (96°C)	28	W10359269	Shaft, Drum Roller (R.H.) Threads
4	347139	Seal, Lint Chute	16	3977394	Kit, Thermal Cut-Off (Includes Illus. 15)	29	3397590	Roller, Support
5	90767	Screw, 8-18 x 3/8	17	696302	Shield, Exhaust	30	348197	Washer, Support
6	3406022	Bracket, Bulkhead	18	8066049	Funnel, Burner	31	W10298789	Nut, 3/8-16
7	3392519	Fuse, Thermal	19	3390647	Screw, 8-18 x 1/2	32	3403493	Bulkhead
8	8066086	Drum Hole Plug	20	339956	Seal	33	338906	Sensor, Radiant
9	3387134	Thermostat, Internal-Bias	21	695587	Drum Assembly	34	692526	Ring, Bearing
10	694089	Wheel, Blower (Includes Illus. 21)	22	3403636	Baffle, Drum (1)	35	W10219342	Screw, 8-16 x 1/2
11	8577230	Housing, Blower	23	90296	Clip	36	W10352407	Seal, Rear Drum
12	8066155	Clip	24	3976434	Bracket, Support	37	3977373	Bracket, Light
			25	692490	Baffle, Drum (2)	38	W10136369	Socket Assembly Light
						39	3406124	Bulb, Light
						40	3402841	Lens, Drum Light

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

USE WITH TYPE 1 - NATURAL
 AND TYPE 4 LIQUEFIED PROPANE AND BUTANE GASES

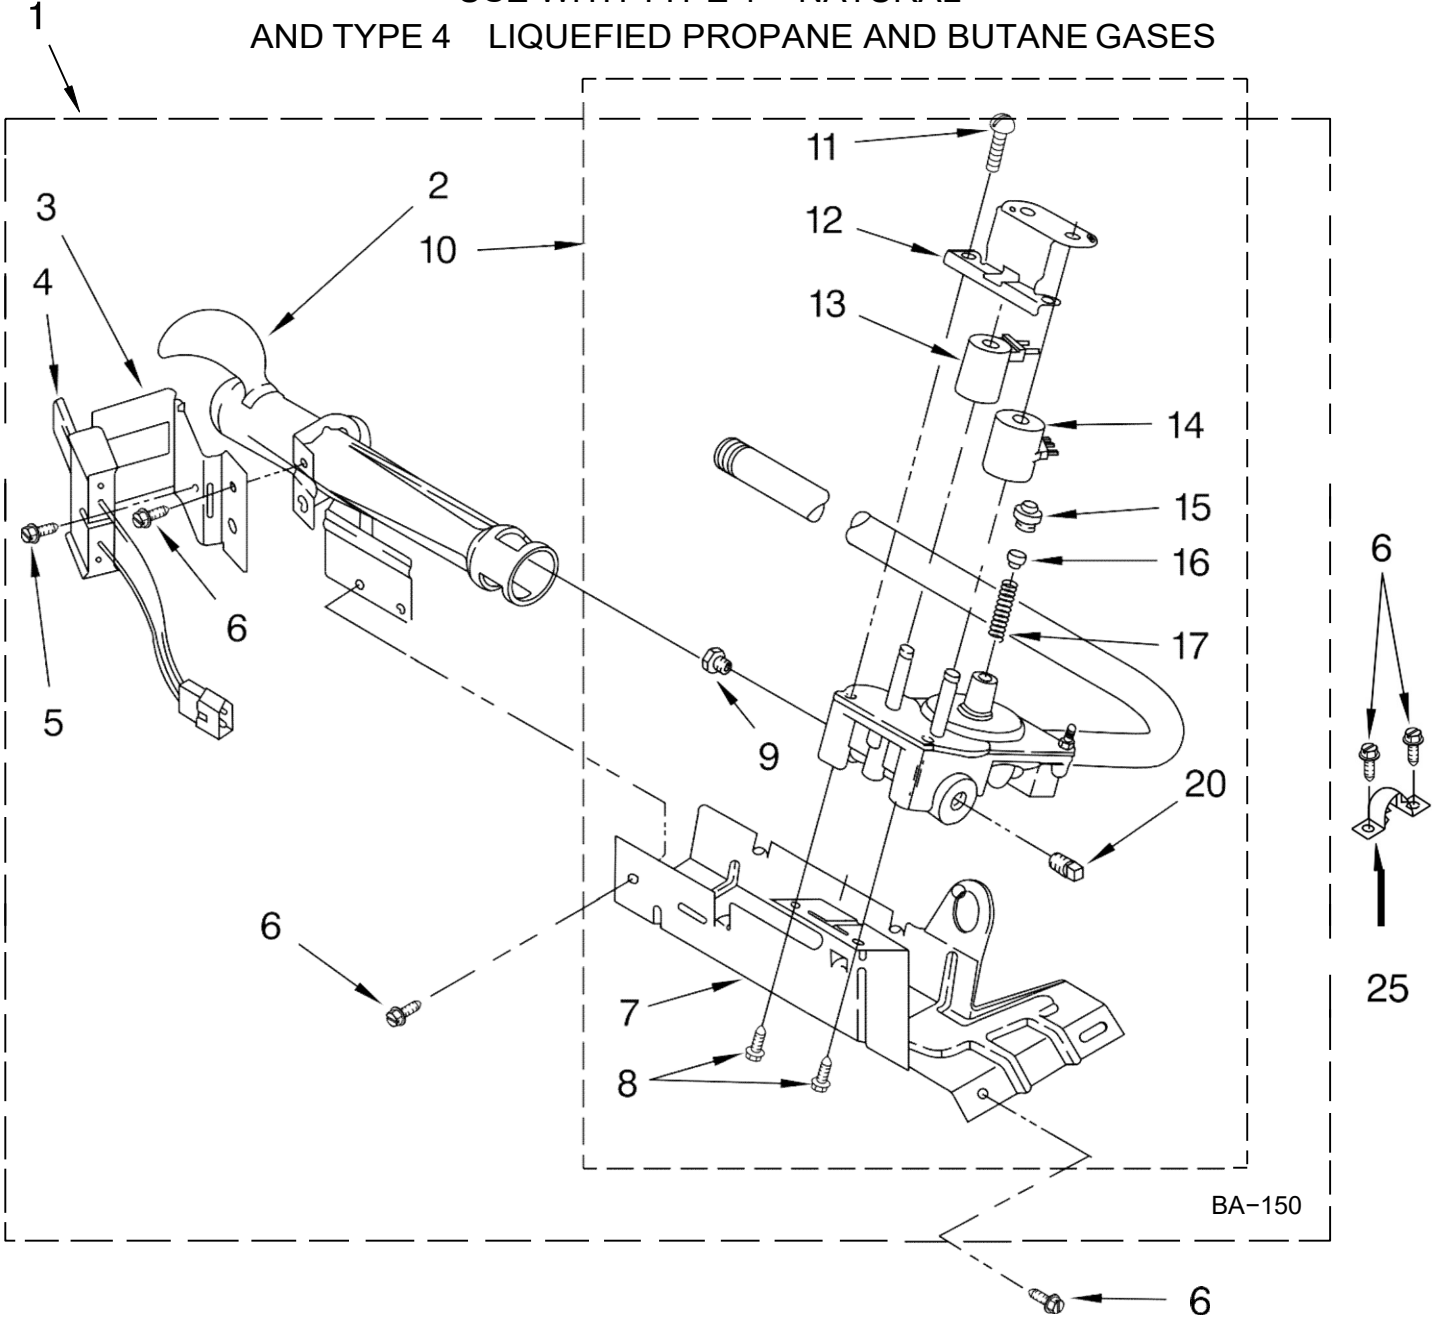

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

USE WITH TYPE 1 – NATURAL
 AND TYPE 4 LIQUEFIED PROPANE AND BUTANE GASES

Illus. No.	Part No.	DESCRIPTION
1	8318272	Burner Assembly 60 Hz. (Type 1) (White Rodgers)
2	688617	Tube, Burner
3	694298	Bracket, Ignitor
4	686590	Ignitor
5	3393909	Screw & Washer (8-32 x 5/8)
6	343641	Screw, 10-16 x 1/2
7	693986	Base, Burner
8	3387057	Screw, 8-18 x 3/8
9		Orifice, Burner
	234826	Type 1
	229742	Type 4 (Butane)
	234868	Type 4 (Propane)
10	8318277	Valve, 60 Hz. (Includes Pipe & Illus. #7)
11	694421	Screw, 8-32 x 1/2 (2)
12	694538	Bracket, Coil
13	694540	Coil, 60 Hz. (2 Terminal) (Main)
14	694539	Coil, 60 Hz. (Split) (3 Terminal) (Pilot Position)
15	694424	Leak Limiter
16	694423	Screw, Regulator Adjustment
17	694422	Spring, Regulator
20	239822	Plug, Pipe
25	341029	Clamp, Pipe

Following Parts Not Illustrated

694572 Conversion Kit
 (Type 1)
 to Type (4) L.P.G.



Secadora Whirlpool 7MWGD9015YW0

Illus.	Part	
No.	No.	DESCRIPTION

ACCESSORY PARTS

- 279948 Kit,
Dryer Repair
- 8522199 Kit, Dryer
Vent Testing
- 346764 Kit, Hold-Down
(Gas Dryer Mobile
Home Installation)
- W10071550A Dry Rack

PAINT, TOUCH-UP (1/2oz.)

- 72017 White

**PAINT, PRESSURIZED SPRAY
(12 oz.)**

- 350930 White
- 350938 Primer, Gray

PAINT, BULK (1 qt.)

- 799344 White (Uncut)