

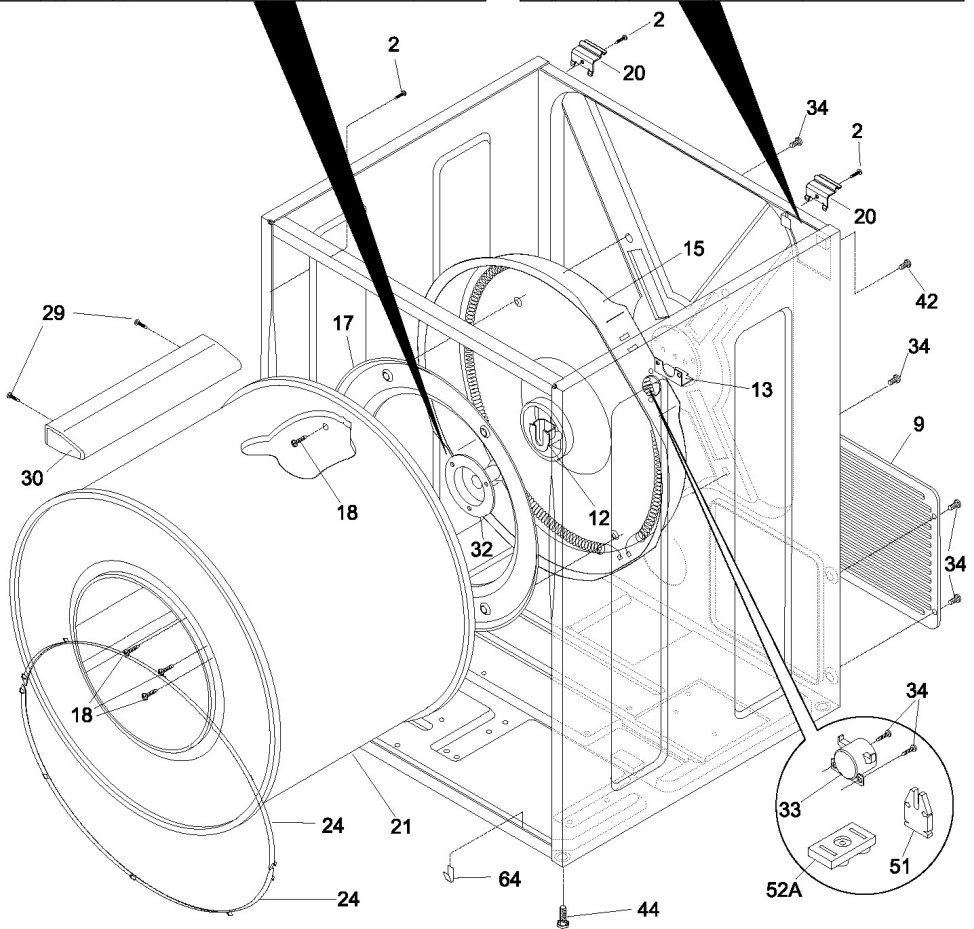


Secadora W.W. CER3600AS1

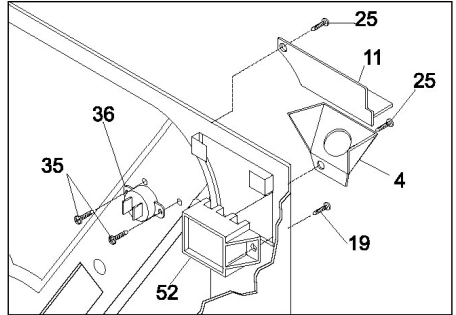

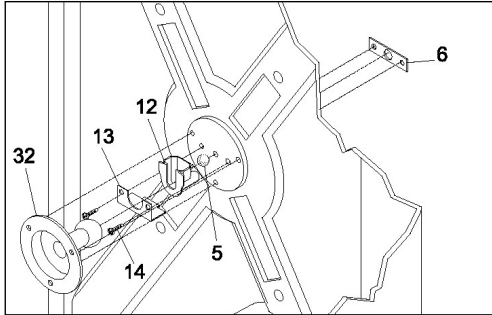

## Secadora W.W. CER3600AS1


Guía	N.P.	Descripción
2	131168200	Laundry appliance screw, #8-18 x 31/100-in
4	131785200	Dryer power cord access bracket
5	530281019	Dryer grounding ball
6	5303281020	Dryer rear bearing clip
9	131793201	Toe grille
11	5303211428	Dryer terminal block cover
12	131825900	Dryer drum bearing
13	131724300	Dryer drum bearing bracket
14	131205400	Washer screw
15	131553900	Dryer heating element assembly
17	3204254	Dryer heater baffle
18	131168200	Laundry appliance screw, #8-18 x 31/100-in
19	131205300	Washer screw
20	131469100	Dryer top panel hinge bracket
21	134122532	Dryer drum
24	131963900	Dryer drum front glide
25	5303015671	Screw
29	131382300	Dryer drum baffle screw
30	5303201200	Dryer drum baffle
32	131777700	Dryer shaft assembly
33	3204267	Dryer high-limit thermostat
34	131243700	Refrigeration appliance screw
35	131892100	Dryer screw, #6-20 x 0.23-in
36	134120900	Dryer screw, #6-20 x 0.23-in
42	131209600	Laundry appliance screw, #8-18 x 11/25-in
44	134158000	Freezer leveling leg
51	131472100	Dryer heating coil insulator



## Secadora W.W. CER3600AS1

Guía	N.P.	Descripción
52	134101400	Dryer terminal block
52A	3202786	Dryer heating element terminal block
64	131704600	Dryer toe panel clip
NI	5303281153	Dryer drum bearing kit
NI	5303307893	Dryer high-temperature lubricant

Secadora W.W. CER3600AS1

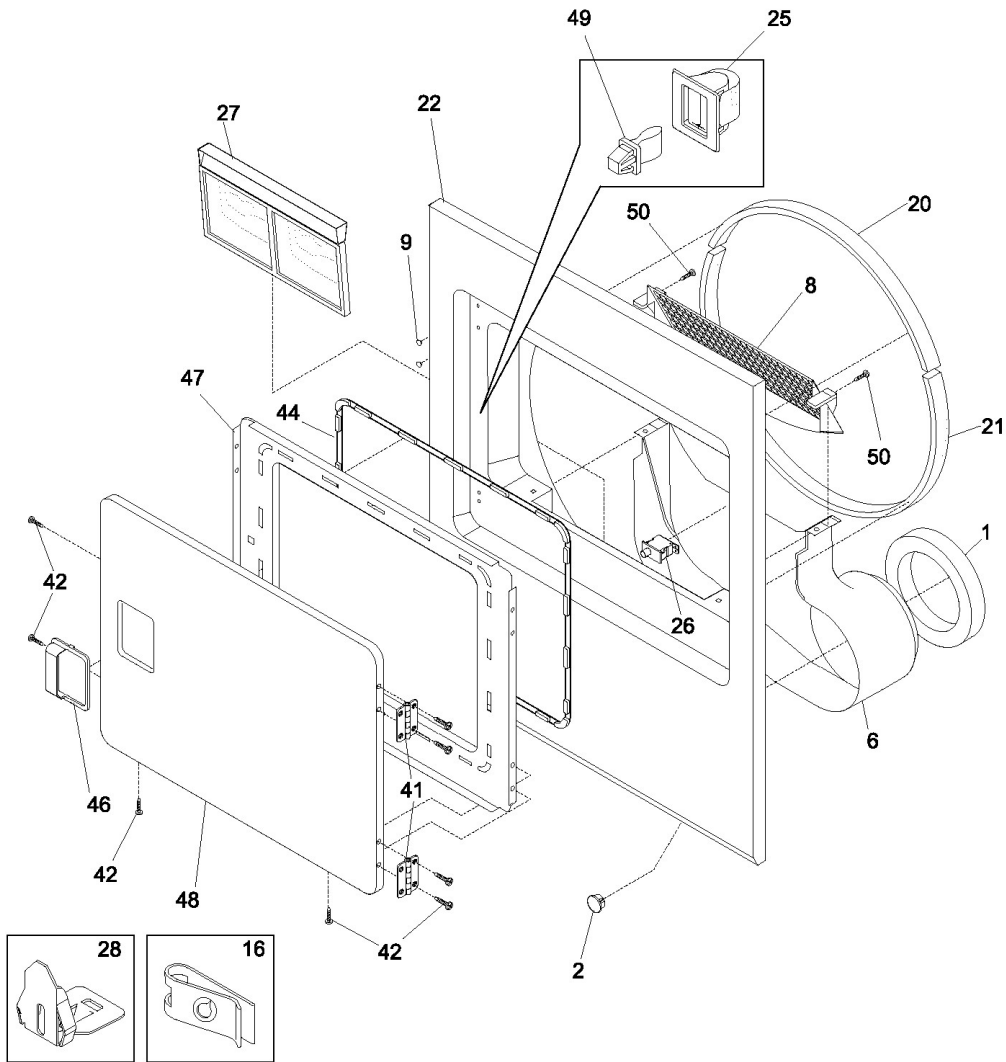




## Secadora W.W. CER3600AS1

Guía	N.P.	Descripción
1	134063300	Dryer air duct seal
2	131397000	Dryer cabinet hole plug (white)
6	131621900	Dryer lint chute assembly
8	131622202	Dryer lint screen cover
9	131633200	Dryer cabinet hole plug (white)
16	131063700	Dryer clip
20	134036400	Dryer drum felt seal, upper
21	134134700	Dryer drum felt seal, lower
22	131845912	Panel
25	131658800	Dryer door catch
26	131843100	Dryer door switch
27	131450300	Dryer lint screen
28	5303281074	Dryer cabinet clip
41	131627500	Dryer door hinge
42	131209600	Laundry appliance screw, #8-18 x 11/25-in
44	131129900	Dryer door seal
46	131644700	Dryer door handle (white)
47	131844104	Wh in dr pnl
48	131789303	Dryer door outer panel
49	5303211430	Washer door strike
50	131303300	Washer baffle screw

Secadora W.W. CER3600AS1

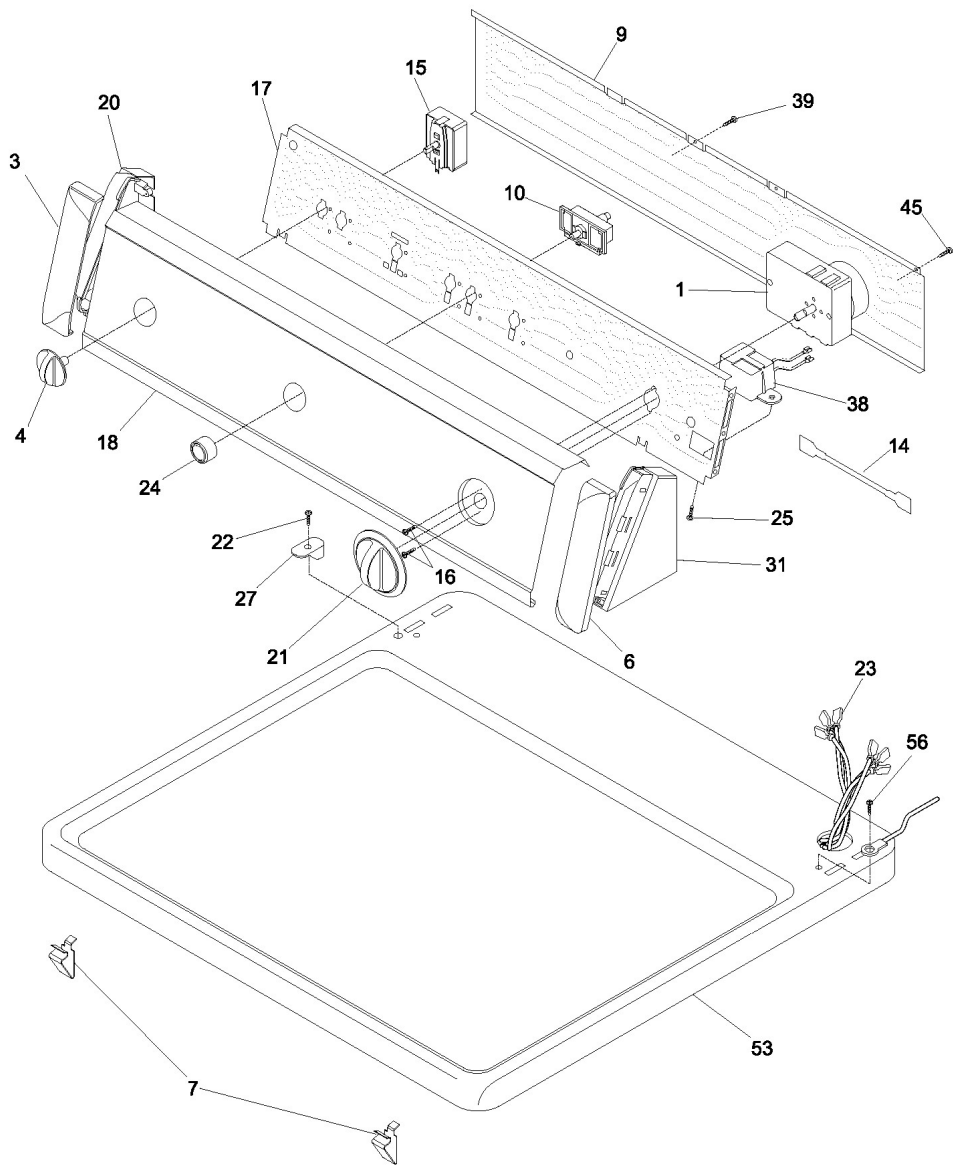




## Secadora W.W. CER3600AS1

Guía	N.P.	Descripción
1	5303297177	Dryer timer
3	131122611	Cover-white
4	131141105	Laundry center control knob
6	131122601	Cover-white-f
7	3205821	Dryer top panel clip
9	134088700	Backpanel,co
10	131469000	Dryer push-to-start switch
14	3205243	Resistor
15	134904500	Laundry appliance cycle selector switch
16	5303283289	Screw
17	131728900	Control bracket
18	134155300	Trim plate
20	131122711	Dryer control panel end cap, left
21	134011703	Dryer control knob
23	134109500	Dryer wire harness
24	131111501	Laundry appliance start button (white)
25	5303015671	Screw
27	131197000	Laundry appliance clip
31	131122701	End cap, right
38	5303210285	Buzzer
39	131243700	Refrigeration appli
45	131205100	Washer screw
53	134086802	Dryer panel
56	131243800	Laundry appliance screw, #8-32 x 3/8-in

Secadora W.W. CER3600AS1

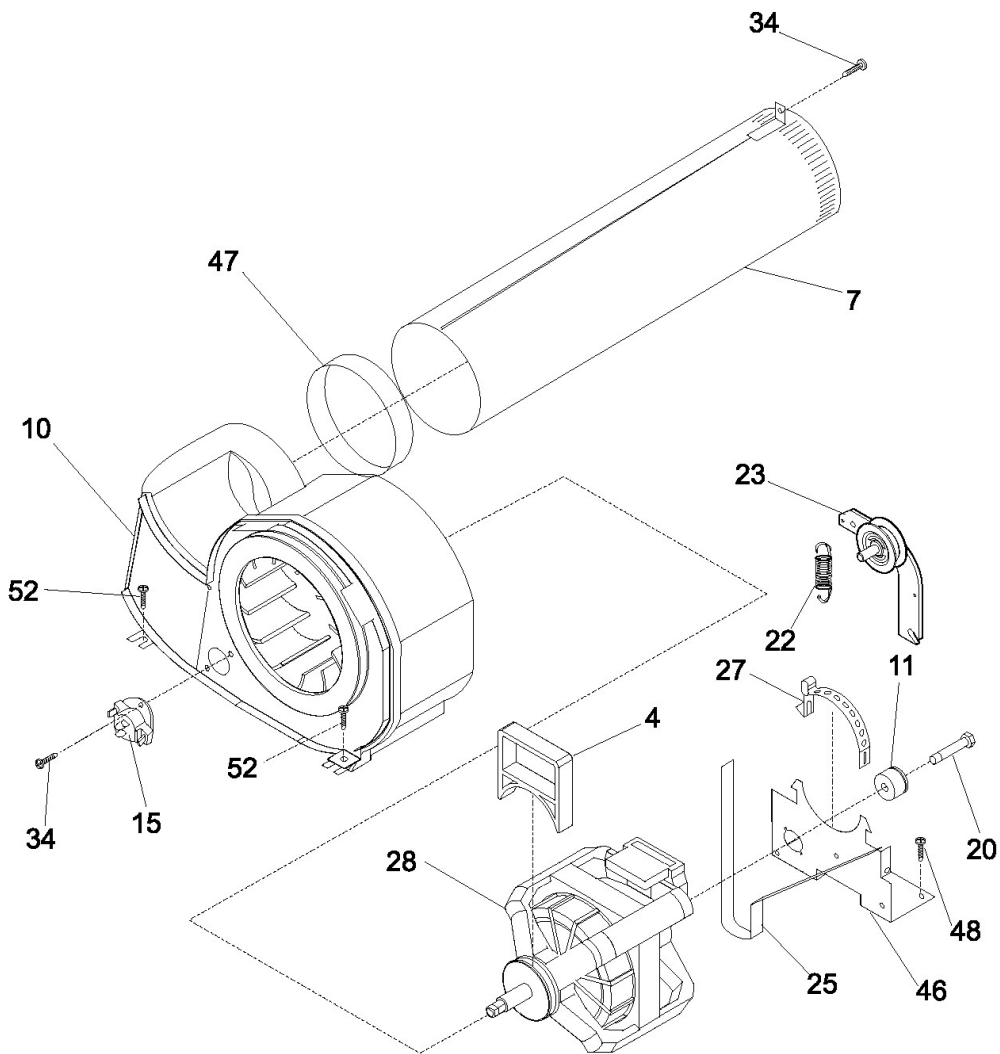





Secadora W.W. CER3600AS1

Guía	N.P.	Descripción
4	131435200	Dryer motor clamp
7	131451600	Dryer exhaust duct
10	131775600	Dryer blower wheel and housing assembly
11	131749800	Dryer idler arm spacer
15	131298300	Dryer operating thermostat
20	131017900	Screw
22	131601000	Dryer idler spring
23	131863000	Dryer idler assembly
25	134163400	Dryer drum belt
27	131419800	Dryer motor clamp
28	131560100	Dryer drive motor
34	131243700	Refrigeration appliance screw
46	131601100	Motor bracket
47	131633300	Dryer exhaust duct seal
48	131168200	Laundry appliance screw, #8-18 x 31/100-in
52	131303100	Laundry appliance screw, #10-16 x 5/8-in