 


Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones  
Electrodomesticas


# Maytag secadora DG210

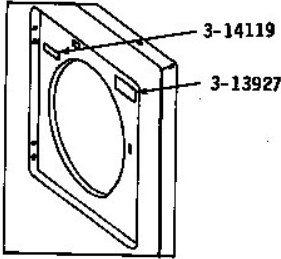

 3-13927

THIS APPLIANCE IS EQUIPPED WITH AN  
INTERMITTENT TYPE FUSECTION DEVICE.

3-14119

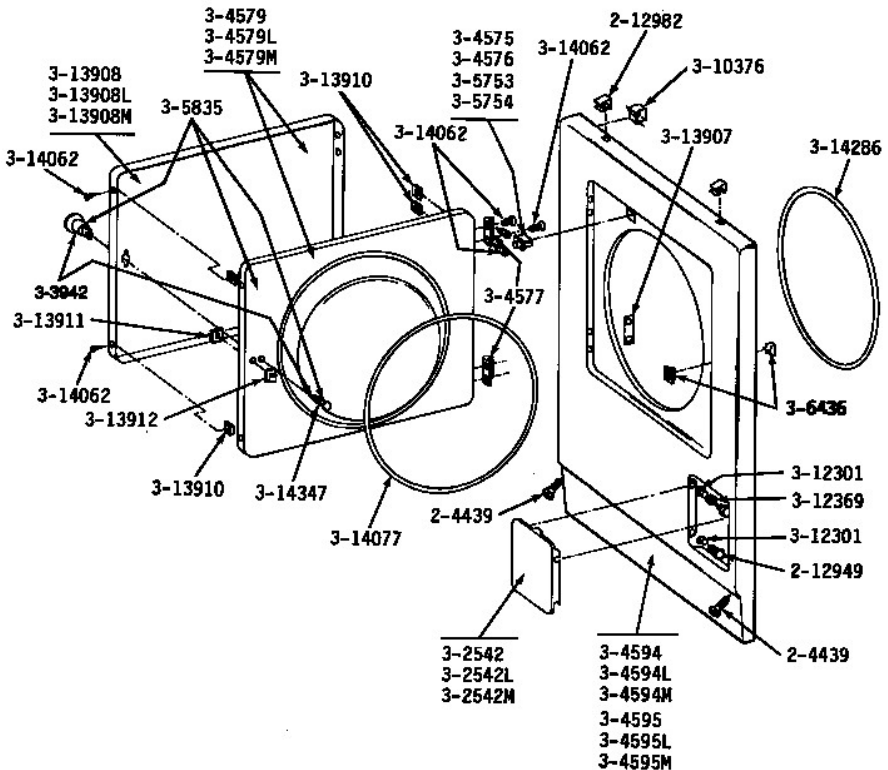



## Maytag secadora DG210

Guía	N.P.	Descripción
1	204439	Washer screw and fastener, 2-pack
3	22001650	Dryer top panel clip
4	302542	Access door
5	302542L	Access door
6	302542M	Access door
7	W10169313	Dryer door switch
8	W10169313	Dryer door switch
9	304577	Door hinge
10	306436	Dryer door latch kit
14	304594	Panel
15	304594L	Panel
16	W11169039	Dishwasher dishrack, upper
20	W10169313	Dryer door switch
21	W10169313	Dryer door switch
23	303942	Dryer knob and screw
24	310376	Clip, wire h
25	312301	Bushing for
26	312369	Access sleeve
27	313907	Twin fastener
28	313908	Door panel-w
29	313908L	Door panel-a
30	313908M	Door panel-h
31	313910	Clip, door l
32	313911	Door strike
33	306436	Dryer door latch kit
35	314062	Screw
36	314077	Door seal
38	314286	Dryer front panel air seal





## Maytag secadora DG210

Guía	N.P.	Descripción
1	055978	Adhesive
2	210720	Dryer rivet
3	211294	Washer screw
4	251119	Range screw
5	300909	Dryer burner
6	300910	Receptacle
7	12001541	Dryer drum support roller
8	303711	Sensor groun
9	303815	Front tumbler
10	33001003	Laundry center dryer lint screen
11	304648	Tumbler
12	304676	Front tumbler
13	304997	Dryer moisture sensor
14	305146	Front tumbler
15	305187	Tumbler with
16	310207	Screw, #6 x
17	310376	Clip, wire h
18	310557	Washer
19	310632	Room air conditioner screw
20	310759	Dryer screw
21	312535	Dryer drum support roller shaft washer
22	33001443	Dryer nut
23	312658	Receptacle
24	312892	Dryer drum light lens
26	306508	Dryer drum bearing kit
27	312941	Dryer drum bearing kit
28	312948	Dryer drum support roller shaft
29	312959	Dryer drum belt



## Maytag secadora DG210

Guía	N.P.	Descripción
30	312961	Dryer screw
31	312964	Outlet duct
32	313347	Dryer drum support roller shaft washer
33	313541	Dryer drum felt seal
34	313561	Screw
36	313794	Outlet grid
37	313795	Guide for li
38	313796	Lint seal
40	33002917	Washer screw
42	314154	Tumbler baffle
43	33001004	Dryer drum large baffle
44	314158	Washer
45	9703438	Dryer drum support roller retainer
46	901220	Ground wire

Distribuidor Autorizado

 
SurteRápido.com

Venta de Refacciones Electrodomesticas

Maytag secadora DG210

**MODELS DG110-210-410-510-610-710-810**

**INLET DUCT, GAS VALVE, COMBUSTION CONE & EXTENSION**

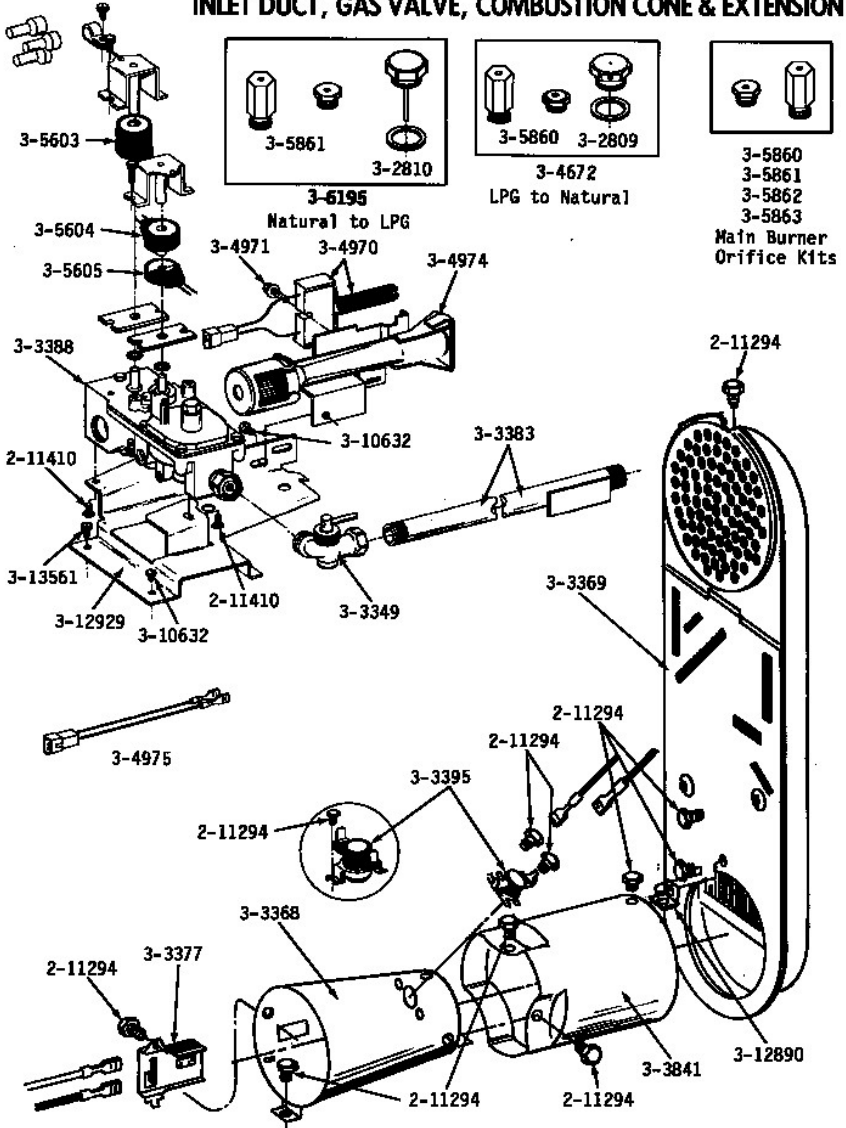

Guía	N.P.	Descripción
1	90767	Washer screw
2	211410	Screw, hex h
3	302809	Screw
5	303349	Shut-off, ga
6	303368	Cone combustion
7	303369	Inlet duct a
8	338906	Dryer radiant sensor
9	303383	Pipe bracket
10	W10116794	Dryer gas valve assembly
11	303395	Dryer high-limit thermostat
12	MAL9000AXX	Dryer lp conversion kit
13	303841	Extension cone
14	304672	Conversion kit
15	4391996	Dryer burner igniter
16	304971	Screw
17	33002793	Dryer burner
18	304975	Gas valve ha
19	305603	Secondary co
20	305604	Dryer valve holding coil
21	305605	Coil
22	305860	Main burner
23	305861	Main burner
25	305863	Main burner
26	1163839	Room air conditioner screw
27	312890	Retainer, he
28	312929	Gas valve br
29	313561	Screw

Distribuidor Autorizado

 
SurteRápido.com

Venta de Refacciones Electrodomesticas


Maytag secadora DG210

MODELS DE-DG110-210-410-510-610-710-810


MOTOR, BLOWER, BASE FRAME & THERMOSTATS

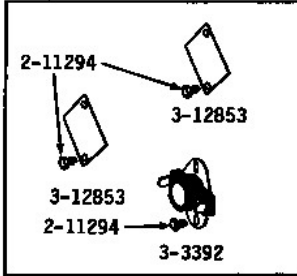

MODEL DE-DG110  
THERMOSTAT

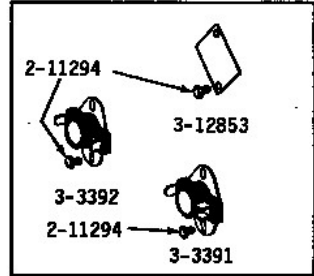 

MODEL DE-DG210  
THERMOSTATS

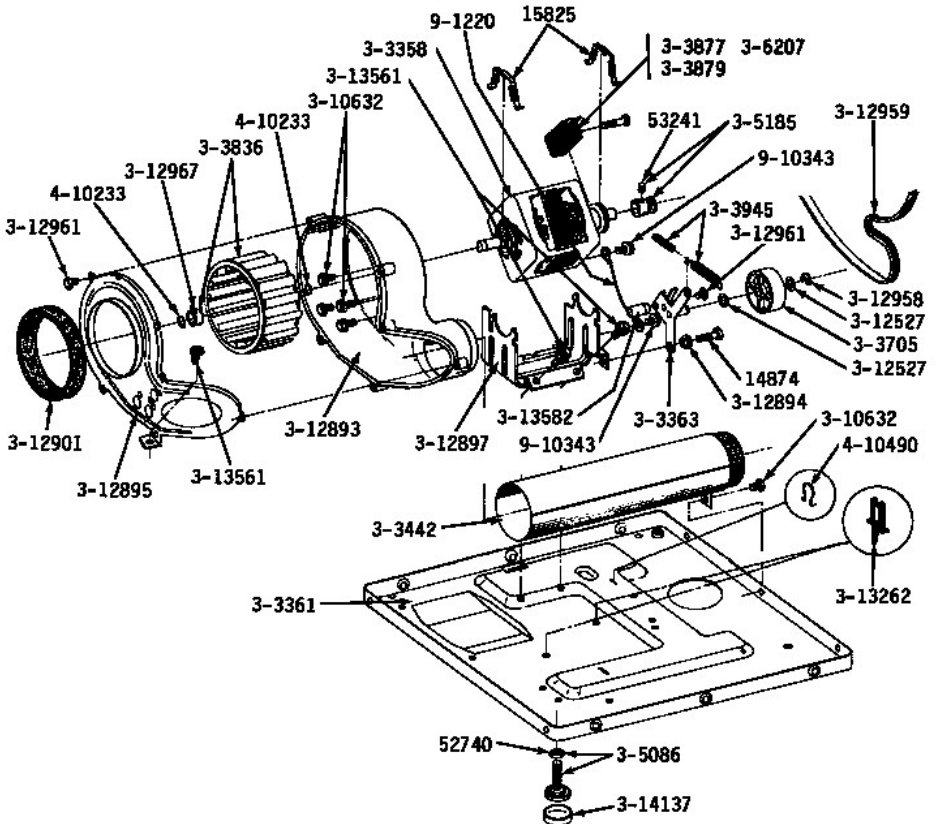 





## Maytag secadora DG210

Guía	N.P.	Descripción
1	WPY014874	Washer screw
2	WPY015825	Dryer motor clamp
3	WPY052740	Nut
4	053241	Set screw
5	WP90767	Washer screw
6	W10410999	Dryer drive motor
7	303361	Base assembly
8	303363	Dryer idler pulley arm
9	33303391	Dryer operating thermostat
10	694674	Dryer operating thermostat
11	303394	Cool down thermostat
12	303442	Exhaust duct
13	303705	Dryer idler pulley
14	303836	Dryer blower wheel
15	303877	Switch motor
16	303879	Switch motor
17	303945	Idler spring
18	304474	Dryer operating thermostat
19	304475	Dryer operating thermostat
20	305086	Dryer leveling leg
21	305185	Dryer motor pulley
22	1163839	Room air conditioner screw
23	306207	Motor switch
24	312527	Laundry appliance washer
25	312853	Cover for th
26	312893	Housing
27	315772	Dryer idler arm sleeve
28	312895	Cover for bl

 
 


## Maytag secadora DG210

Guía	N.P.	Descripción
30	312901	Dryer blower housing seal
31	312958	Dryer idler pulley retainer clip
32	312959	Dryer drum belt
33	312961	Dryer screw
34	312967	Dryer blower wheel clamp
36	313561	Screw
37	313582	Dryer idler arm spacer Dryer idler arm
38	314137	Dryer leveling leg rubber pad
39	9703438	Dryer drum support roller retainer
40	410490	Wire spring
41	901220	Ground wire
42	910343	Ground wire screw

Maytag secadora DG210

**MODEL DE-DG210** **CONTROL PANEL**

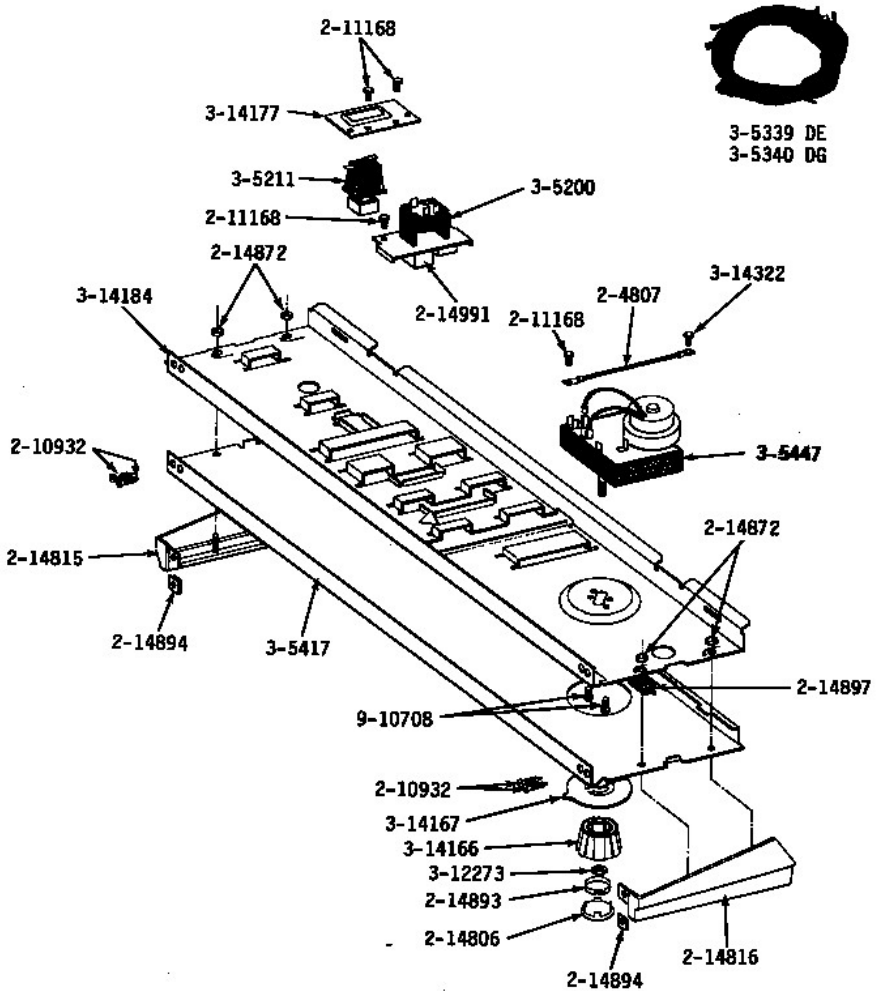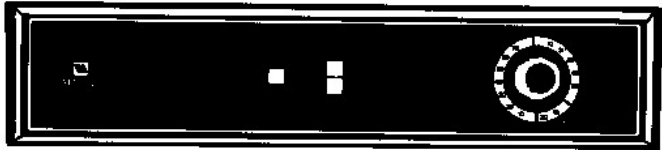



## Maytag secadora DG210

Guía	N.P.	Descripción
1	204807	Grnd.wire,su
2	210932	Screw,ctrl.p
3	211168	Commercial laundry appliance screw
4	214806	Cap for time
5	214815	End cap f/co
6	214816	End cap f/co
7	214872	End palnut
9	214894	Fastener, en
10	214897	Control pad
11	214991	Button for s
12	305200	Temperature
13	305211	Push to star
14	305447	Timer
15	305339	Main wire ha
17	305417	Control panel
18	W10155650	Nut
19	314166	Knob for tim
20	314167	Indicator timer dial
21	314177	Bracket for
22	314184	Plate
23	314322	Screw, #8-32

Distribuidor Autorizado

 
SurteRápido.com

Venta de Refacciones  
Electrodomesticas

Maytag secadora DG210

MODELS DE-DG110-210-410-510-610-710-810

FRONT VIEW

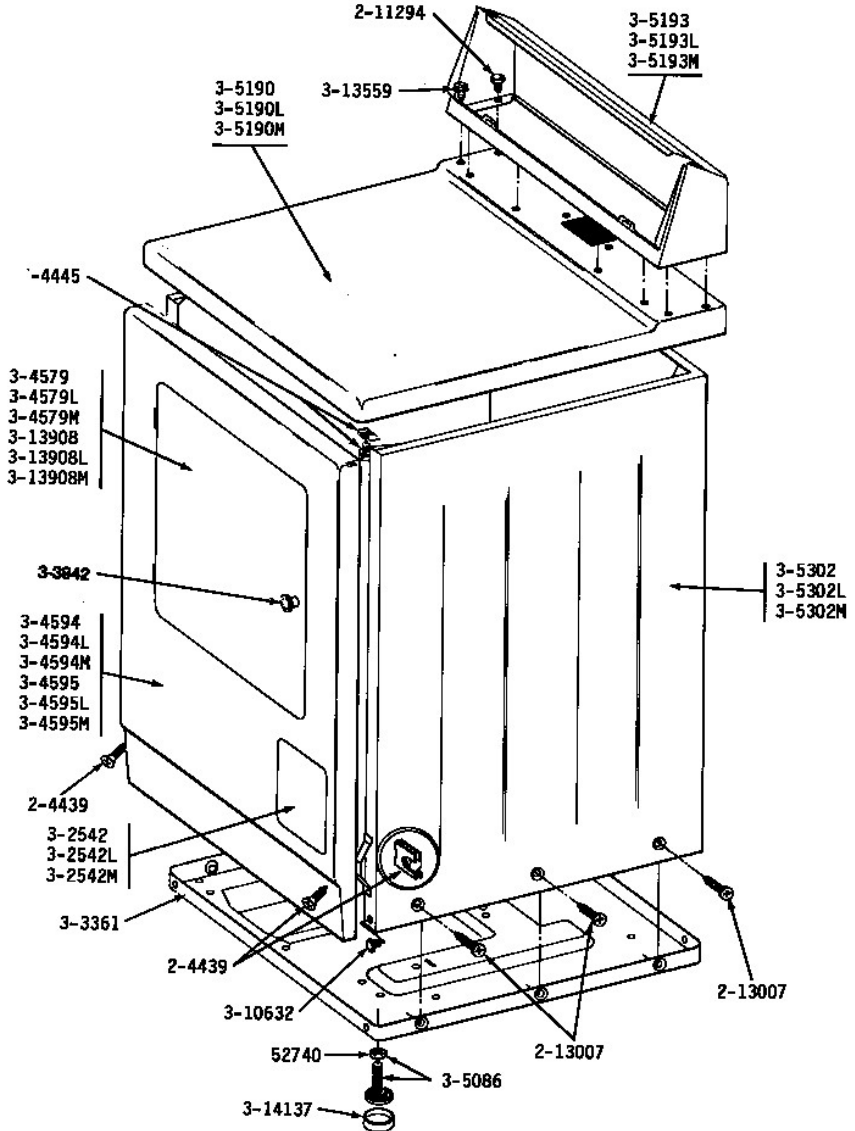



## Maytag secadora DG210

Guía	N.P.	Descripción
1	052740	Nut
2	204439	Washer screw and fastener
3	204445	Fastener screw
4	211294	Washer screw
5	213007	Cabinet screw
6	302542	Access door
7	302542L	Access door
8	302542M	Access door
9	303361	Base assembly
13	304594	Panel
14	304594L	Panel
15	W11169039	Dishwasher dishrack, upper
16	W11169039	Dishwasher dishrack, upper
17	304595L	Panel
19	305086	Dryer leveling leg
23	305193	Console (wht
24	305193L	Console (alm
26	305302	Cabinet-whit
27	305302L	Cabinet-whit
29	303942	Dryer knob and screw
30	1163839	Room air conditioner screw
31	313559	Screw
32	313908	Door panel-w
33	313908L	Door panel-a
34	313908M	Door panel-h
35	314137	Dryer leveling leg rubber pad

Distribuidor Autorizado

 
SurteRápido.com

Venta de Refacciones  
Electrodomesticas

# Maytag secadora DG210

MODELS DE-DG110-210-410-510-610-710-810

REAR VIEW

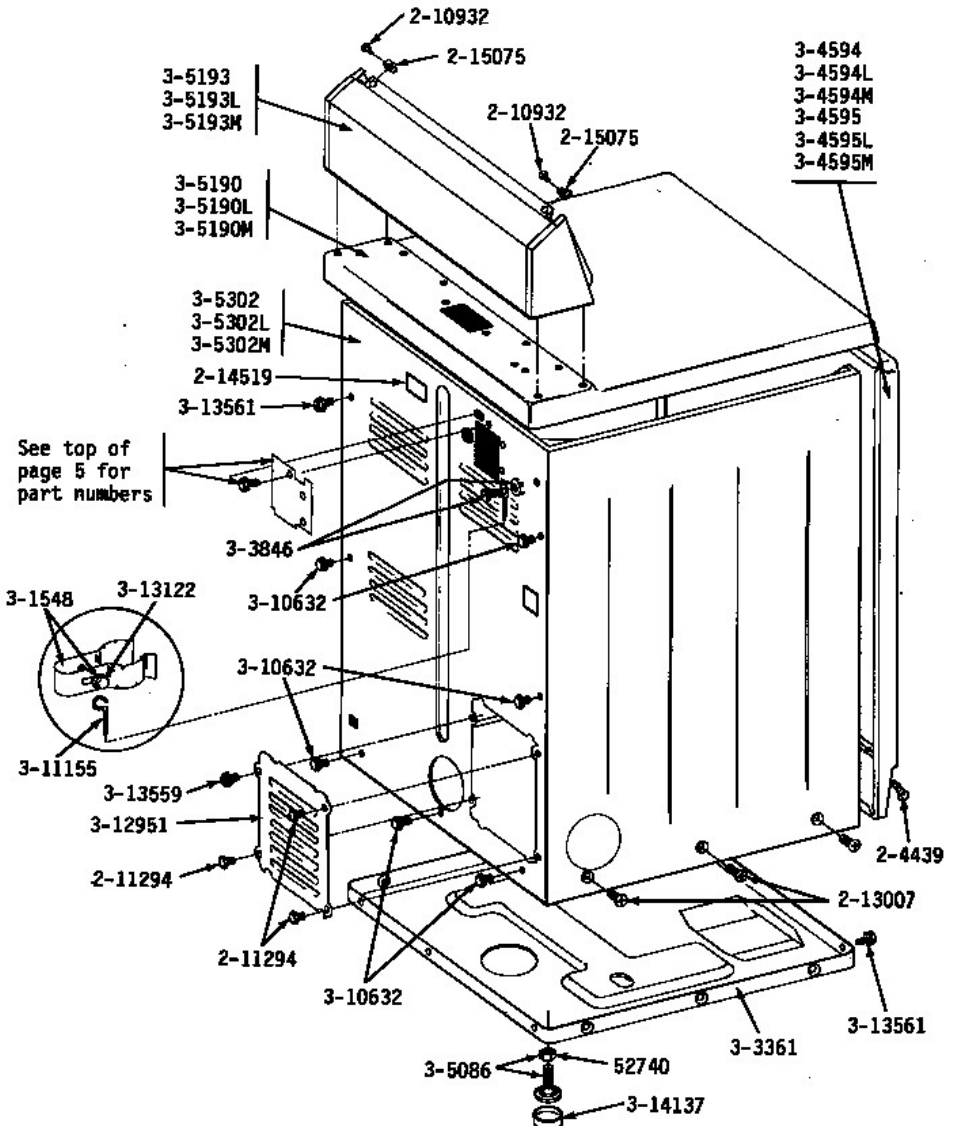



## Maytag secadora DG210

Guía	N.P.	Descripción
1	052740	Nut
2	201808	Converter
3	204439	Washer screw and fastener, 2-pack
4	210932	Screw,ctrl.p
5	211294	Washer screw
6	211881	Grommet, cor
7	213007	Cabinet screw
8	214519	Electronic label
9	215075	Fastener control
10	301548	Clamp, groun
11	302521	Power cord
12	303361	Base assembly
13	303846	Range screw
14	304594	Panel
15	304594L	Panel
16	304594M	Dishwasher dishrack, upper
20	305086	Dryer leveling leg
24	305193	Console (wht
25	305193L	Console (alm
27	305302	Cabinet-whit
28	305302L	Cabinet-almo
30	1163839	Room air conditioner screw
31	311155	Wire
32	312905	Terminal cover
33	312951	Access cover
34	313122	Baffle screw
35	313559	Screw
37	314137	Dryer leveling leg rubber pad



Distribuidor Autorizado

 
SurteRápido.com

Venta de Refacciones  
Electrodomesticas

Maytag secadora DG210

ALL MODELS


INSTALLATION ACCESSORIES

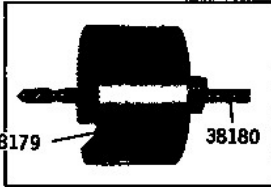


38766



 38767

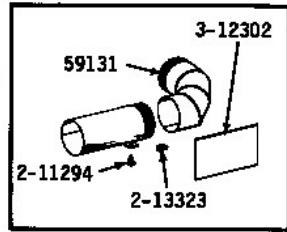

3-4652

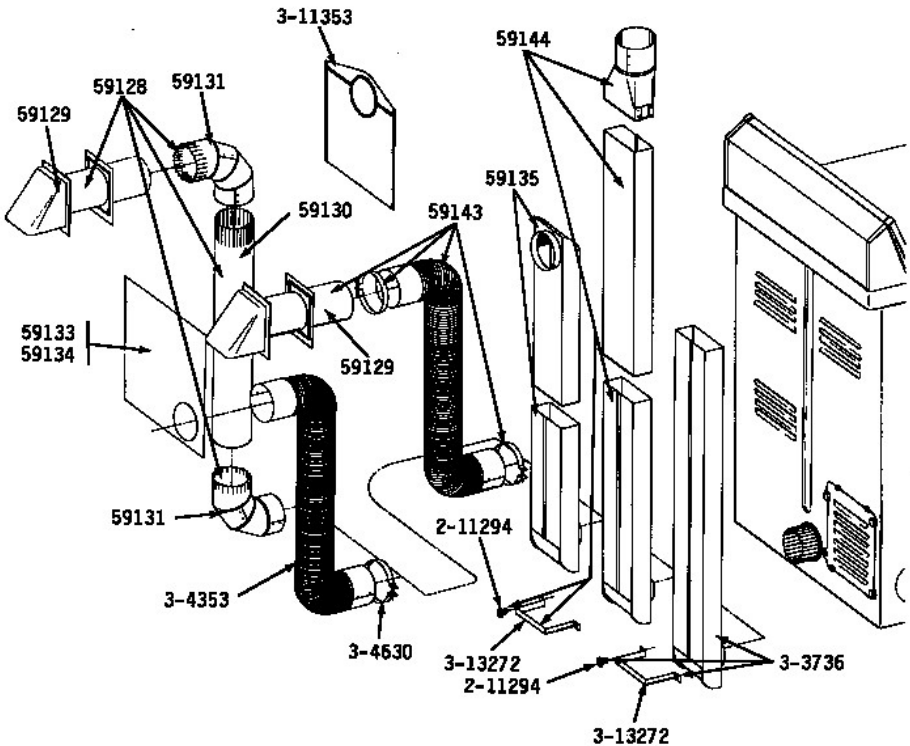 



Maytag secadora DG210

Guía	N.P.	Descripción
1	059129	Vent hood
7	059130	Aluminum pipe
8	059131	Aluminum elbow
10	059134	Aluminum plate
11	059135	Vent duct as
12	059143	Flexible ven
13	059144	Rectangular
14	90767	Washer screw
15	213323	Fastener, ex
16	303736	Exhaust defl
17	304353	Dryer flexible vent hose
18	304630	Flexible clamp
19	304652	Exhaust duct
20	311353	Lint bag
21	312302	Insulation
22	313272	Exhaust bracket