

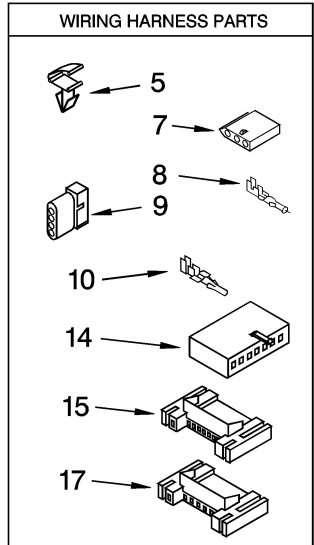


Secadora Whirlpool GW9250PW1

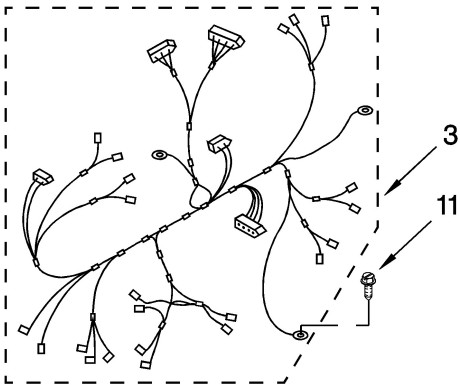

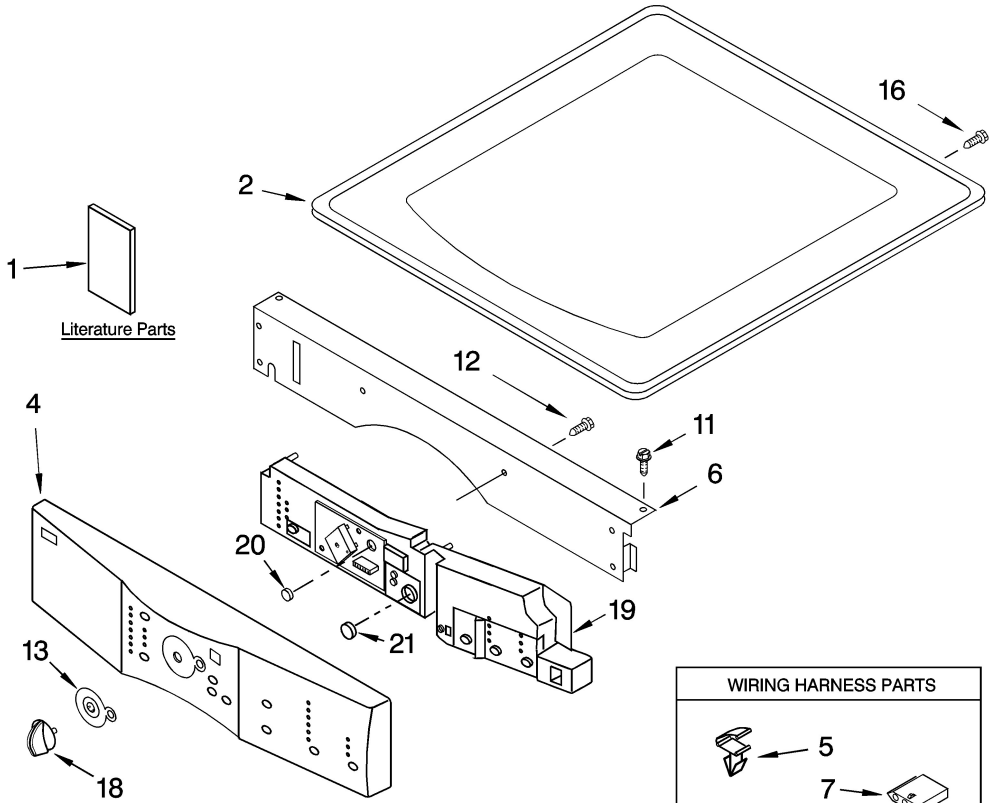

Secadora Whirlpool GW9250PW1


Guía	N.P.	Descripción
1	8530052	Owner's manual
1A	8558723	Technical sheet
1B	8563723	Dryer guide
2	8519251	Top
2	3980096	Top
2B	8519252	Top
3	8299950	Dryer wire harness
4	8558748	Dryer control panel (platinum)
4A	8558751	Control panel (silver)
4B	8558750	Dryer control panel
5	3394427	Dryer wire harness retaine
6	8519271	Bracket
7	353424	Washer terminal connector
9	3936144	Dryer terminal connector
10	94613	Dryer terminal connector
11	3390647	Appliance screw
13	8519406	Bezel
14	3936150	Dryer 7-circuit wire harne
15	3395683	Dryer motor wire harness connector
17	2203186	Connector
18	8181859	Laundry appliance control knob
18A	8182050	Dryer control knob (pewter)
18B	8182049	Washer control knob (bisque)
19	8558753	Washer user interface
19A	8558756	Dryer user interface
19B	8558755	Washer user interface
20	8561811	Button
21	8561812	Button

Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas

Secadora Whirlpool GW9250PW1

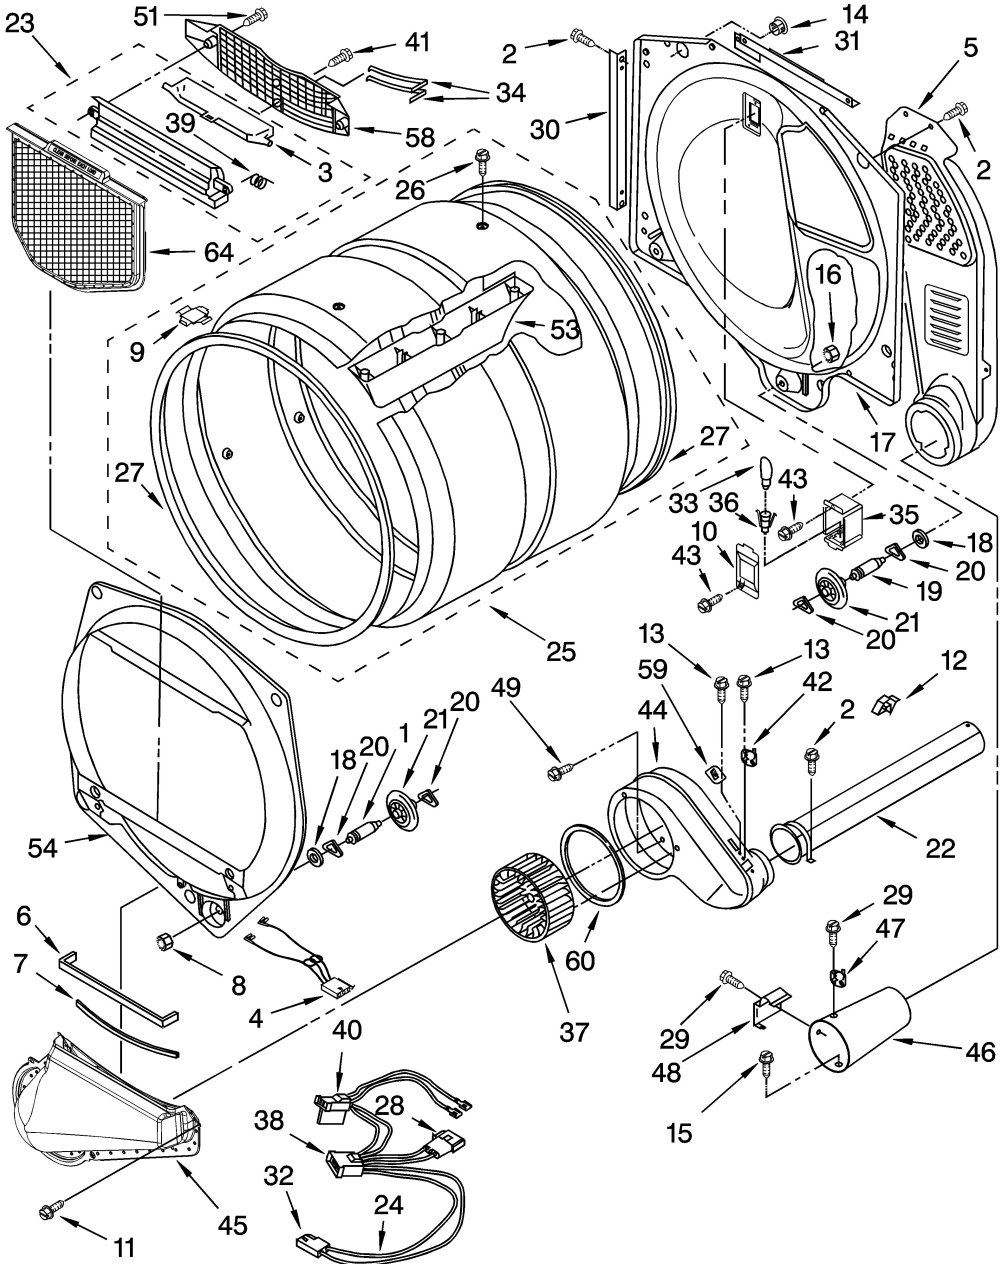



Secadora Whirlpool GW9250PW1

Guía	N.P.	Descripción
1	3399508	Dryer drum support roller shaft
2	3390647	Appliance screw
3	3394984	Dryer lint screen cover
4	3406653	Dryer moisture sensor wire harness
5	W11168650	Dryer heat duct
6	697813	Dryer lint chute seal
7	697814	Dryer lint chute seal
8	3359452	Washer leveling leg lock nut
9	8066086	Plug
10	8532165	Dryer drum light lens
11	487240	Refrigerator capacitor screw
12	3388229	Dryer toe panel clip
13	W10139210	Commercial laundry appliance screw
14	8529007	Plug
15	693995	Washer screw
16	3387709	Dryer nut
17	W11299301	Dryer bulkhead
18	W11236646	Dryer washer
19	W10359272	Dryer drum support roller shaft
20	W10512946	Dryer tri-ring retainer
21	W10314173	Dryer drum support roller
22	279936	Dryer exhaust duct
23	W11129408	Dryer lint screen housing
24	3401850	Dryer wire harness
25	W10545924	Dryer drum
26	W10109200	Dryer screw
27	280114	Dryer drum seal kit
28	353424	Washer terminal connector



Secadora Whirlpool GW9250PW1


Guía	N.P.	Descripción
29	90767	Washer screw
30	W10118335	Bracket
31	W10118337	Bracket
32	717252	Receptacle
33	22002263	Dryer drum light bulb
34	3387223	Dryer moisture sensor
35	3977373	Dryer drum light support bracket
36	3403634	Dryer drum light socket
37	697772	Dryer blower wheel
38	3403498	Dryer 3-wire terminal connector
39	3394986	Dryer lint screen door spring
40	3403499	Dryer 24-wire terminal connector
41	695240	Appliance screw
42	8577274	Dryer thermistor
43	487909	Appliance screw
44	W10888146	Dryer blower housing
45	W10128606	Dryer lint chute assembly
46	8066047	Dryer burner duct
47	3403140	Dryer high-limit thermostat
48	338906	Dryer radiant sensor
49	489463	Refrigerator screw
51	3387230	Dryer screw
53	W10113136	Dryer drum baffle
54	W10250634	Dryer bulkhead
58	W11086603	Dryer lint screen grille
59	3392519	Dryer thermal fuse
60	697770	Dryer blower housing seal
64	W10120998	Dryer lint screen

Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas

Secadora Whirlpool GW9250PW1

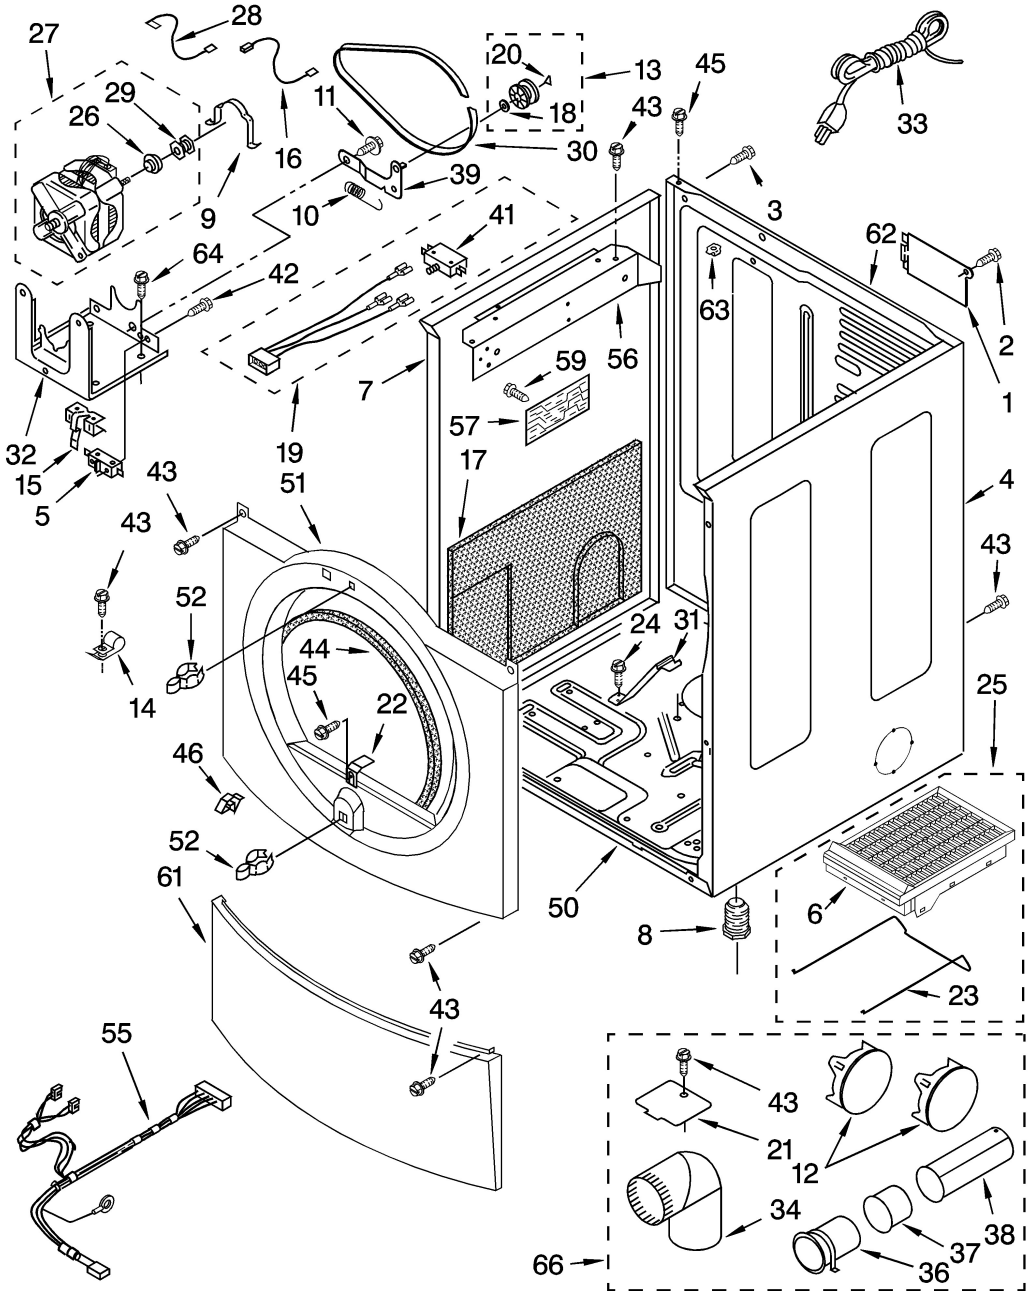



Secadora Whirlpool GW9250PW1

Guía	N.P.	Descripción
1	8317340	Cover
2	3390814	Refrigerator ice maker inl
3	W10850756	Range screw
4	8519213	Panel
4A	8519217	Panel
4B	8519214	Panel
5	279782	Dryer door switch
6	8521959	Dryer rack
7	8519209	Panel
7A	8519216	Panel
7B	8519210	Panel
8	49621	Dryer leveling leg
8A	49621	Dryer leveling leg
9	660658	Dryer motor clamp
10	W10446781	Dryer idler spring
11	3389420	Washer screw
12	W10470674	Dryer 4-way side vent kit
12A	W10404617	Dryer side vent hole cover
12B	W10404617	Dryer side vent hole cover (midnight gray)
13	3388672	Dryer idler pulley
14	3978776	Dryer gas supply pipe bracket
15	8066120	Dryer belt switch lever
16	3394081	Dryer belt switch jumper wire
17	8564132	Sound panel
18	233520	Laundry appliance washer
19	8283288	Appliance door switch
20	W10512946	Dryer tri-ring retainer
21	W10354249	Dryer exhaust cover plate



Secadora Whirlpool GW9250PW1

Guía	N.P.	Descripción
22	8529053	Ramp
23	8521961	Support
24	693995	Washer screw
25	8521957	Dryer rack
26	3393657	Dryer belt restrainer
27	279787	Dryer drive motor and pulley
28	3398948	Dryer belt switch jumper wire
29	W10837625	Dryer motor pulley
30	3387610	Dryer drive belt
31	8529757	Bracket
32	3387118	Base
33	W11308561	Cord-power
34	W10416072	Elbow
36	8563747	Dryer exhaust duct
37	W10331278	Pipe
38	3395535	Dryer exhaust duct
39	3388674	Dryer idler pulley
41	8519323	Appliance door switch
42	98129	Dryer screw, #6-20 x 1.25
43	3390647	Appliance screw
44	3387242	Dryer drum felt seal
45	308685	Range screw
46	8519459	Dryer toe panel clip
50	8519207	Base
51	8562167	Panel
51A	8562169	Panel
51B	8562168	Panel
52	279570	Dryer door latch kit




Secadora Whirlpool GW9250PW1

Guía	N.P.	Descripción
55	8299929	Dryer wire harness
56	8519273	Bracket
57	8546219	Dryer electronic control board
59	3400826	Screw
61	8519233	Dryer toe panel
61A	3980095	Toe panel
61B	8519234	Toe panel
62	8519219	Rear panel
63	692400	Washer push nut
64	343641	Dishwasher screw
66	279818	Dryer 4-way side vent kit
66A	279969	Dryer 4-way side vent kit
66B	279925	Dryer 4-way side vent kit

Secadora Whirlpool GW9250PW1

USE WITH TYPE 1 - NATURAL
 AND TYPE 4 LIQUEFIED PROPANE AND BUTANE GASES

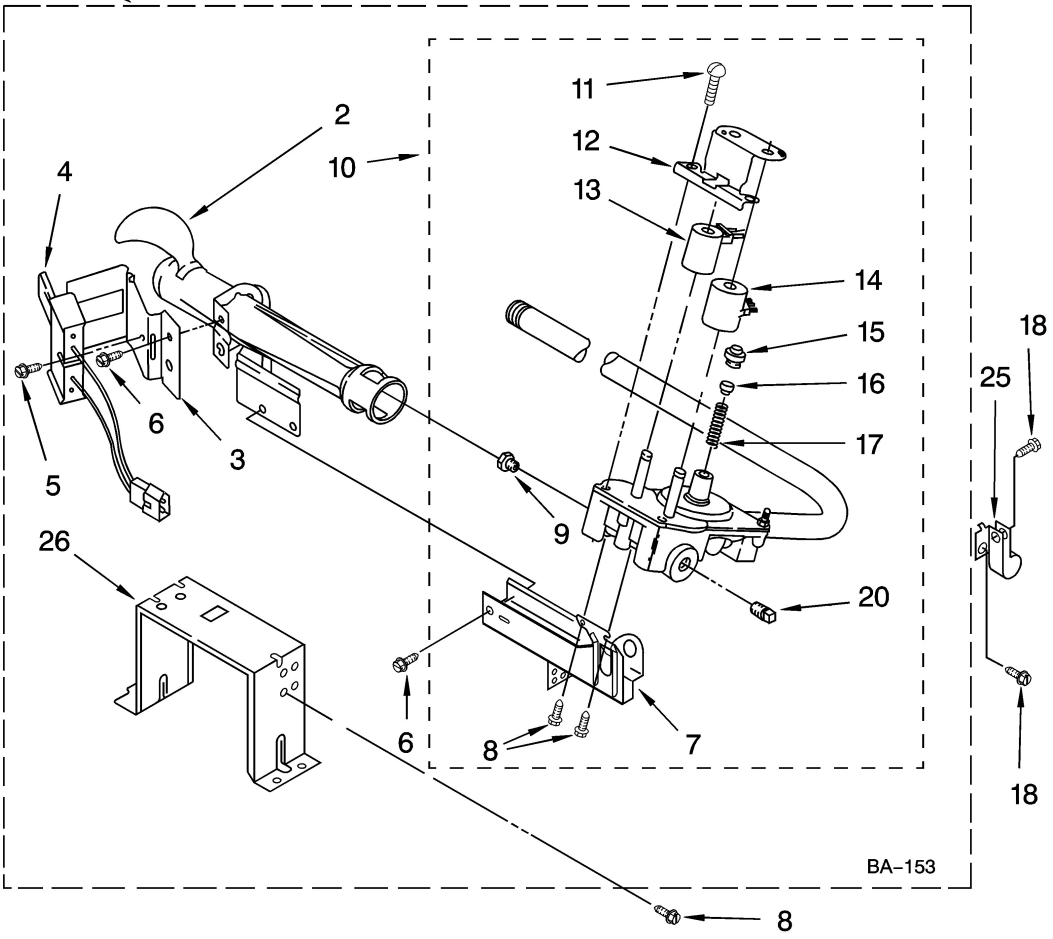


BA-153



Secadora Whirlpool GW9250PW1

Guía	N.P.	Descripción
1	8576353	Dryer burner and gas valve assembly
2	693140	Dryer burner
3	694298	Dryer burner igniter bracket
4	279311	Dryer burner igniter kit
5	W10366705	Dryer screw
6	343641	Dishwasher screw
7	3389871	Bracket
8	3387057	Washer screw
9	15418	Dryer burner orifice
9A	3392235A	Dryer lp conversion kit
9B	229742	Dryer butane burner orifice
10	8281914	Dryer gas valve
11	694421	Screw, 8-32 x 1
12	694538	Dryer valve coil bracket
13	279834	Dryer valve coil kit
14	279834	Dryer valve coil kit
15	694424	Dryer leak limiter
16	694423	Dryer gas pressure regulator
17	694422	Dryer gas pressure regulator spring
18	3390647	Appliance screw
20	239822	Pipe plug
25	3387561	Clamp
26	3389889	Bracket support
NI	8576846	Dryer lp conversion kit

Secadora Whirlpool GW9250PW1

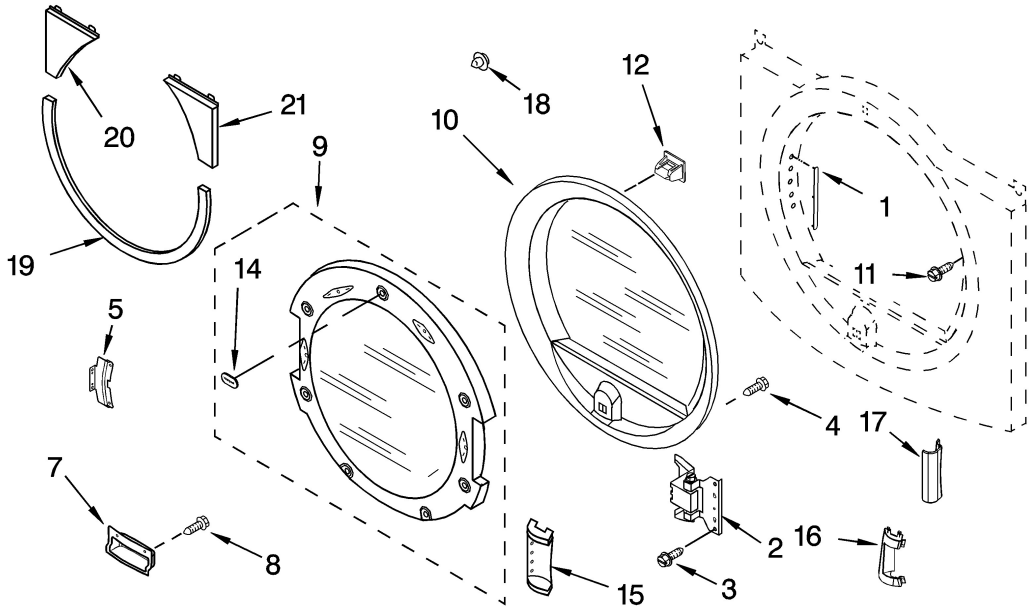

Guía	N.P.	Descripción
1	8563855	Dryer cabinet hole plug
2	8559709	Dryer hinge
3	342043	Screw
4	W10850046	Dryer Screw
5	8529539	Bracket
7	8559739	Handle (silver)
7A	8559743	Handle (silver)
7B	8559741	Handle
7C	8559738	Handle
7D	8559742	Handle (silver)
7E	8559740	Handle (off-white)
8	3357011	Range screw
9	8541574	Dryer door assembly
9A	8572962	Washer door outer frame
9B	3977873	Door
10	8557501	Dryer door assembly
11	355515	Washer screw
12	3389441	Dryer door catch
14	8529540	Medallion
15	8528289	Dryer door handle filler, left (platinum)
15A	3980082	Dryer door left handle filler (pewter)
15B	3979771	Dryer door handle filler (biscuit)
15C	8528287	Dryer door handle filler, right
15D	3980101	Handle (silver)
15E	3979772	Handle (off-white)
16	8559713	Dryer cover
16A	8559719	Dryer cover
16B	8559717	Dryer cover



Secadora Whirlpool GW9250PW1

Guía	N.P.	Descripción
16C	8559712	Dryer Cover
16D	8559718	Cover
16E	8559716	Dryer cover
17	8559722	Cover
17A	8559724	Cover
17B	8559723	Cover
18	8547091	Clip
19	8558683	Trim
19A	8558685	Trim
19B	8558684	Trim
20	8558687	Trim
20A	8558692	Trim
21	8558689	Trim
21B	8558691	Trim
NI	4392067	Dryer repair kit