



Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	8286066	Installation Instructions
	3192609	Wiring Diagram
	W10162162	Use & Care Guide
		Safer Cooking Tips
	9762761	English
	W10065852	French
2	W10487934	Cooktop, Glass
3	246119	Screw
4	W10414006	Bracket, Switch Mounting
5	3183956	Seal, Switch Cover
6	9759094	Spring Locator
7		Switch, Infinite
	3191049	1200w/Front Burner
	3191050	1800w/Rear Burner
8	3192439	Seal, Limiter
9	3193012	Light, Indicator
10		Knob, Control
	9750372FF	Black
	9750372FW	White
	9750372FC	Biscuit
11	8286988	Box, Burner
12	4455917	Bracket, Mounting
13	3400093	Screw
14	3196537	Screw
15	8285469	Seal, Infinite
16	7101P309-60	Screw
17	3192721	Rail, Element
18	3192612	Lamp, Hot Surface Indicator Element, Surface
19		
	8523698	1200W/Front Burner
	8523696	1800W/Rear Burner

**FOLLOWING PARTS
NOT ILLUSTRATED**

Miscellaneous

4455364 Bracket, Support



PARRILLA KECC056RBL04

Illus.	Part	
No.	No.	DESCRIPTION

**FOLLOWING PARTS
NOT ILLUSTRATED**

WIRING HARNESS PARTS

4457254	Harness, Main
98997	Clip, Harness
3400015	Screw, Ground
4456511	Conduit
3196160	Screw