


KitchenAid®

ENCLOSURE COMMERCIAL BLENDER

MODELS:

KSBC1B2BM0 (Black Matte)
KSBC1B2CU0 (Contour Silver)

LICUADORA KSBC1B2CU0

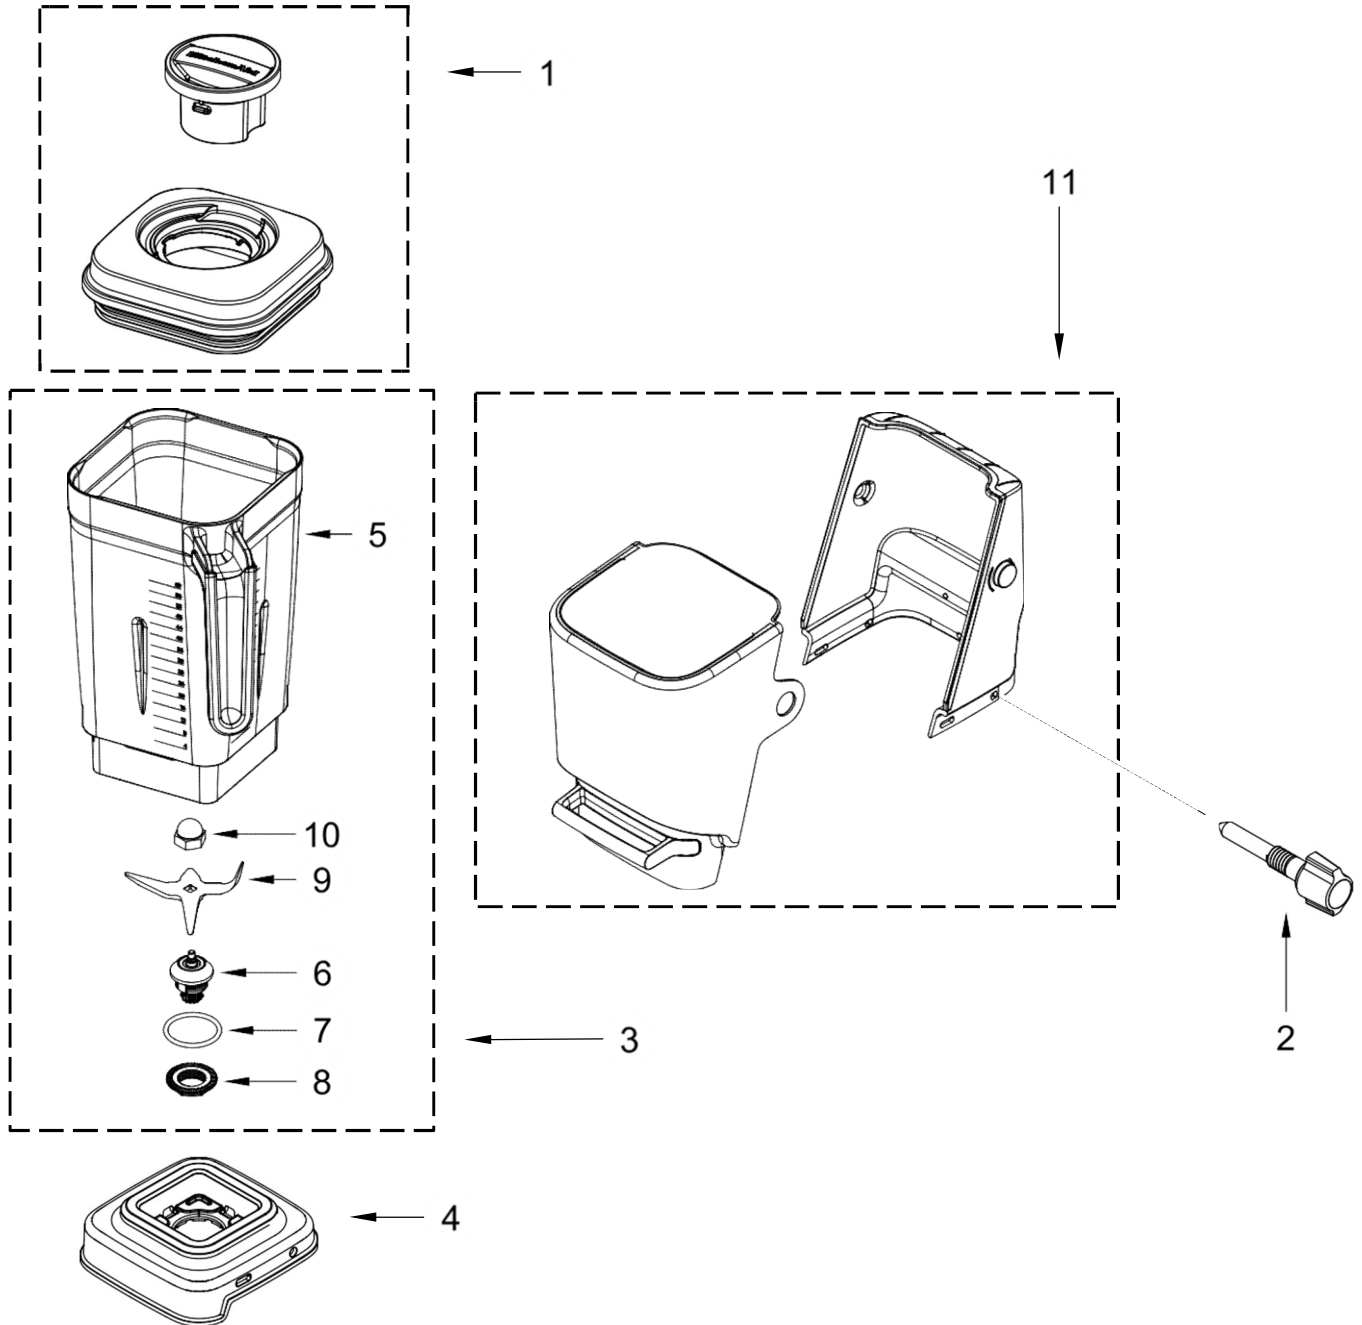


LICUADORA KSBC1B2CU0

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11300278	Lid Assembly
2	W11316283	Thumb Screws, Enclosure (Qty 2)
3	W11032137	Jar Assembly

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
4	W11221703	Pad, Jar
5	W10732363	Jar
6	W10895866	Bearing
7	W10732358	O-Ring

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
8	W11095368	Nut, Jar
9	W10916619	Blade
10	W10917348	Acorn Nut
11	W11294487	Enclosure

LICUADORA KSBC1B2CU0

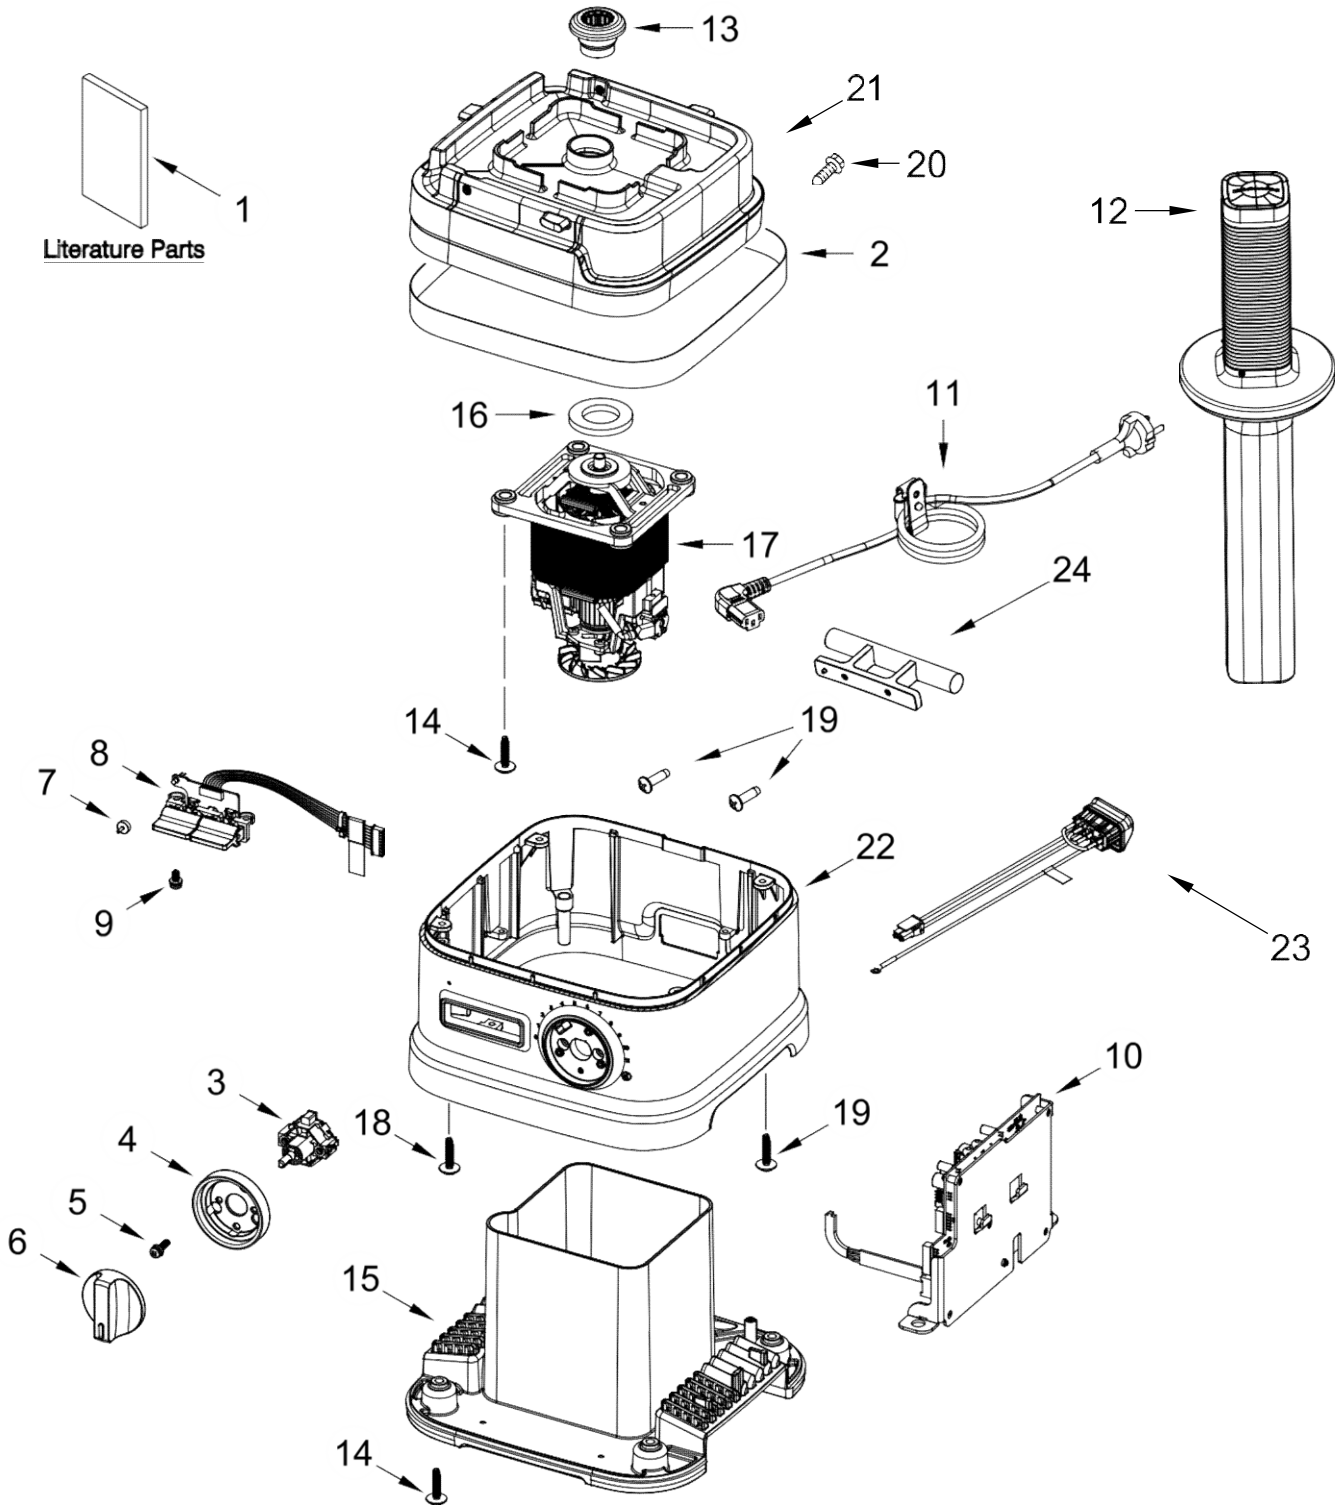

LICUADORA KSBC1B2CU0

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts
	W11341965	Use & Care Guide
2	W10762747	Trimband
3	W10884366	Rotary Switch
4	W11358122	Bezel, Rotary Switch
5	W10790752	Screw
6	W11357978	Knob, Rotary Switch
7	W10732369	Toggle LED Lens
8	W10703983	Toggle Switch Assembly

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
9	W10790765	Screw
10	W11316350	Electronic Control
11	W10827118	Power Cord
12	W11051447	Tamper
13	W10895290	Coupler
14	W10908337	Screw
15	W10811507	Base
16	W10802704	Seal, Motor
17	W10703933	Motor
18	W10584177	Screw

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
19	3400814	Screw
20	3400617	Screw
21		Upper Base
	W11221696	Black Matte
	W11231205	Contour Silver
22		Lower Base
	W10878487	Black Matte
	W10854257	Contour Sliver
23	W10823165	Entry Module, Power Cord
24	W10703945	Cord Cleat