



Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	4344903	Energy Guide
	2300274	Use & Care Guide
	4344902	Wiring Diagram
2		Cabinet (Not A Service Part)
3	4344739	Lens, Light
4	4344740	Bulb, Light
5	4344746	Heater, Defrost
6	4344747	Heat Shield
7	4344819	Grille
8	4344762	Plate, Bottom
9	4344763	Foot, Leveling
10	W10204638	Brace, Support
11	4344765	Control Box
12		Frame, Side
	4344769	Left Side
	4344770	Right Side
13	W10239388	Bracket, Grille
14	4344876	Evaporator Fan Assembly
15	4344766	Thermostat
16	4344768	Knob, Thermostat
17	4344767	Switch, Plunger
18	4344826	Screw
19	4344797	Screw
20	4344819	Clip, Grille
21	4344825	Screw
22	4344823	Seal
23		Frame, Support
	4344821	Right
	4344820	Left
24	4344824	Clip, Harness
25	4344822	Harness, Wire
26	4344826	Screw
27	W10299078	Thermal Fuse
28	4344793	Screw
29	4344791	Screw
30	W10299081	Fan Blade
31	4344878	Screw
32	W10299082	Evaporator Fan Motor
33	4344877	Harness, Wire
34	4344832	Screw, Ground
35	4344778	Grommet, Fan Motor
36	4344899	Bracket, Motor
37		Evaporator (Not Serviced)

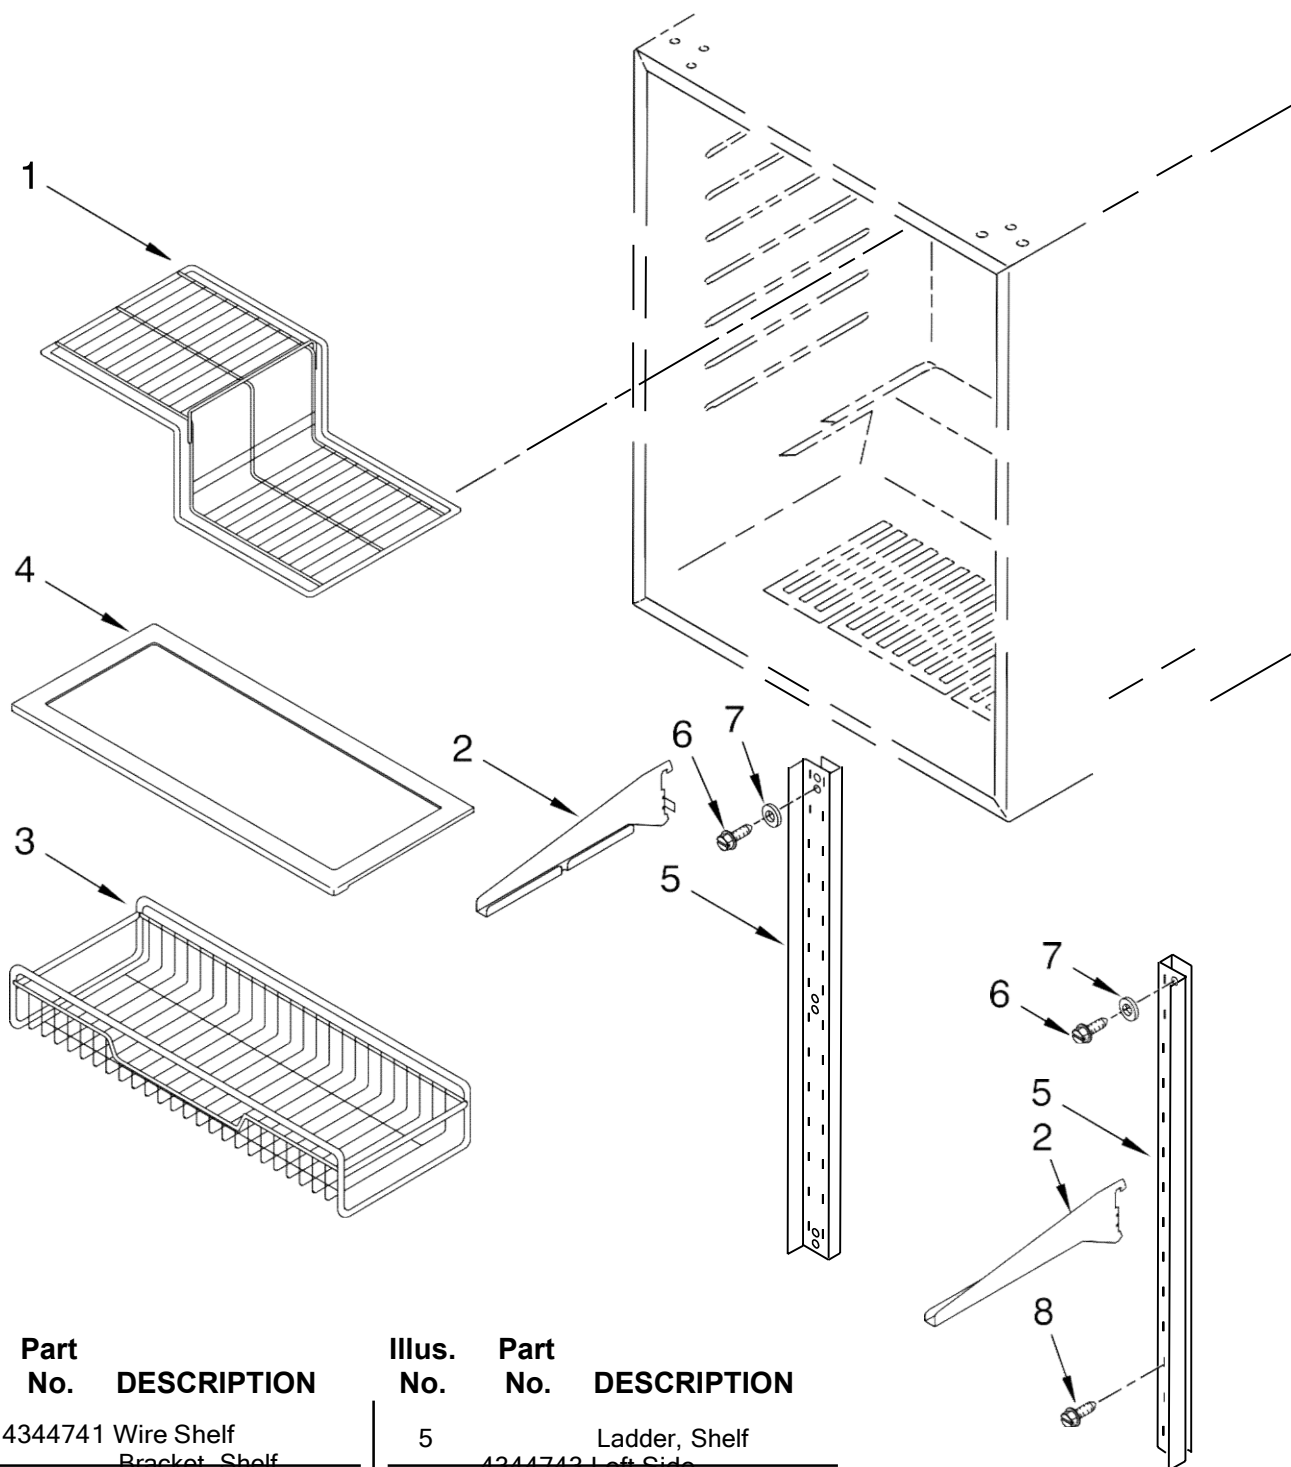

Illus. No.	Part No.	DESCRIPTION
1	4344741	Wire Shelf
<del>2</del>	<del>4344742</del>	<del>Bracket, Shelf</del>
	4344742	Right Side
	4344743	Left Side
3	4344744	Basket, Crisper
4	4344745	Shelf, Crisper

Illus. No.	Part No.	DESCRIPTION
5		Ladder, Shelf
<del>4344743</del>	<del>4344743</del>	<del>Left Side</del>
	4344742	Right Side
6	4344794	Screw
7	4344795	Washer
8	W10162986	Screw-W/Washer

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

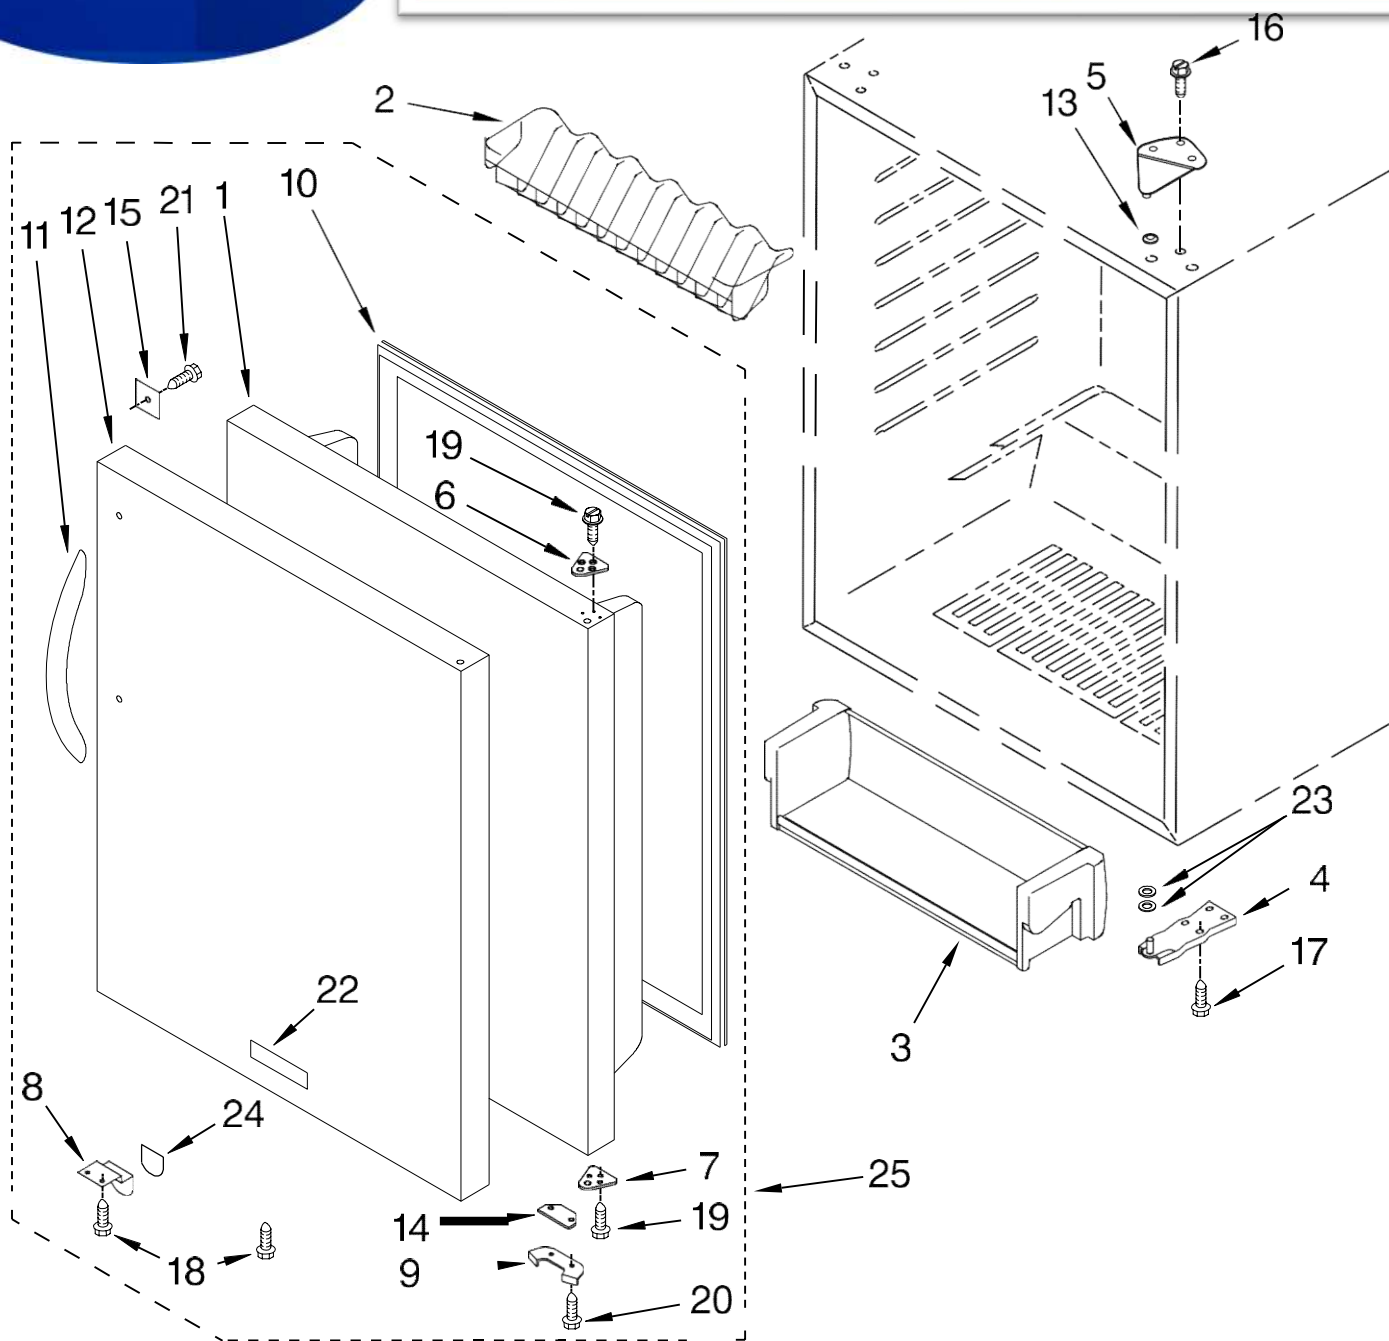


Illus. No.	Part No.	DESCRIPTION
1	W10460874	Door Assembly
2	4344751	Beverage Holder
3	4344752	Door Bin
4	W10239363	Hinge, Bottom
5	4344754	Hinge, Top
6	4344755	Spacer, Top Hinge
7	4344756	Spacer, Bottom Hinge
8	4344757	Actuator, Switch
9	W10238067	Door Stop
10	4344759	Door Gasket
11	4344810	Handle, Door

Illus. No.	Part No.	DESCRIPTION
12	4344811	Door Skin, Stainless Steel
13	4344760	Washer
14	4344788	Spacer, Door
15	4344809	Plate
16	4344796	Screw
17		Screw, Lower Hinge
	W10243104	Quantity 1
	4344797	Quantity 3
18	W10204865	Screw
19	W10243123	Screw
20	4344801	Screw
21	4344808	Screw

Illus. No.	Part No.	DESCRIPTION
22	W10239386	Nameplate
23	W10162992	Washer/Bottom
24	W10163191	Gasket-Push Plate
25	W10460826	Door Assembly (Includes Gasket)

**OPTIONAL PARTS NOT ILLUSTRATED**

8171420 Cleaner, Stainless Steel (12 oz)

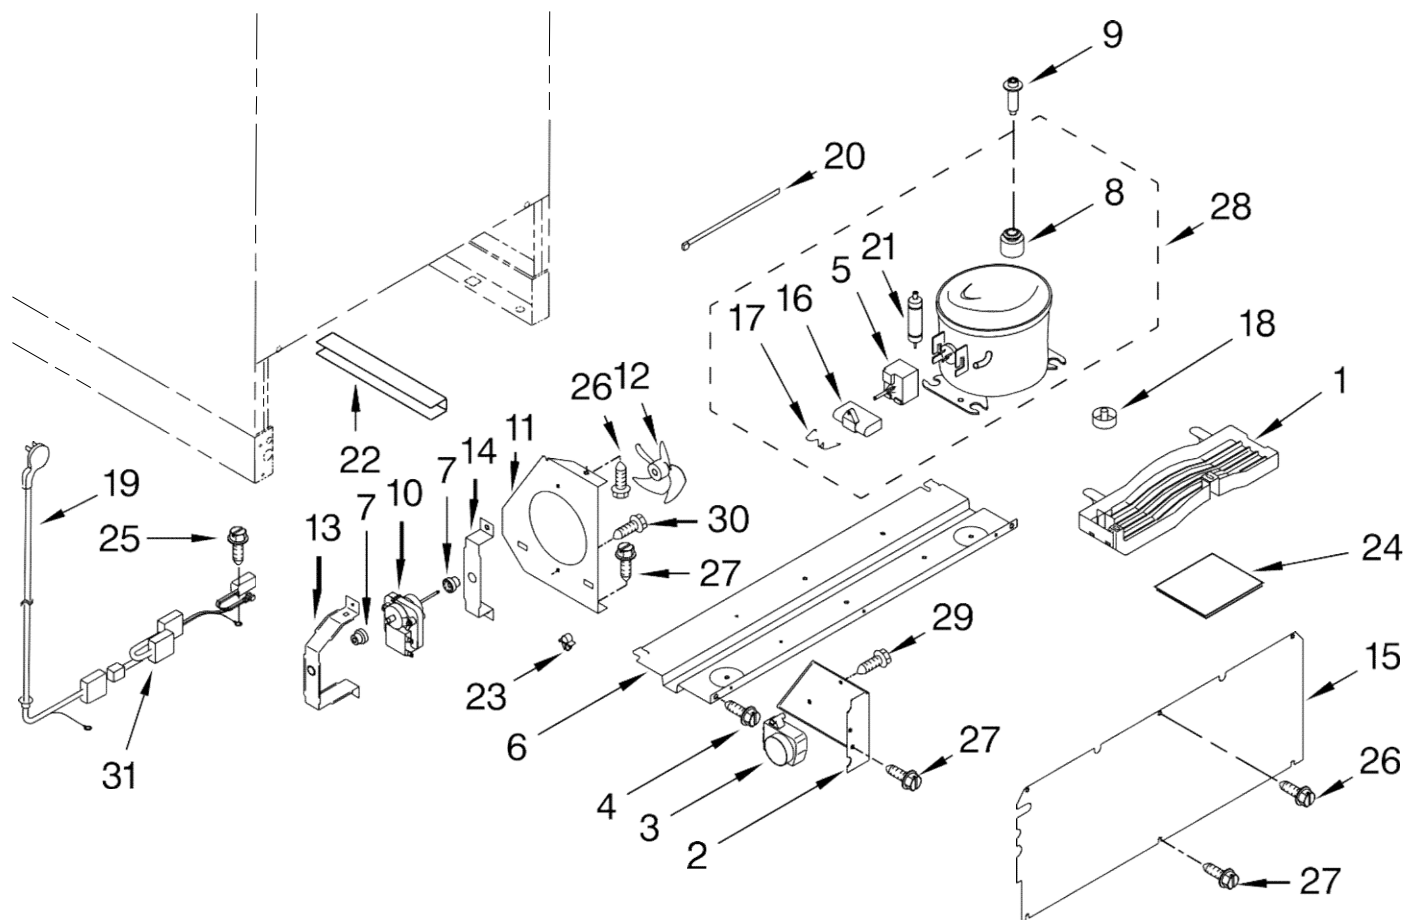

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	W10316689	Drain Pan	11	4344782	Baffle, Air	25	4344826	Screw
2	W10239387	Bracket, Defrost Timer	12	W10299081	Fan Blade	26	4344825	Screw
3	W10239390	Defrost Timer	13	4344784	Bracket, Motor	27	4344832	Screw
4	4344797	Screw	14	4344785	Bracket, Motor	28	4344775	Compressor (Includes Items 5, 8, 16, 17 & 21)
5	4344776	Start Device	15	4344786	Cover, Rear	29	4344834	Screw
6	W10238066	Mounting Plate, Compressor	16	4344837	Capacitor	30	4344833	Screw
7	4344778	Grommet, Fan Motor	17	4344836	Clip	31	W10358623	Harness, Wire
8	4344779	Grommet, Compressor	18	W10163276	Trap, Drain	<b>REFRIGERANT CHARGE</b>		
9	4344780	Bolt, Compressor	19	W10204676	Power Cord			
10	W10299090	Fan Motor, Condenser	20	4344829	Cable Tie	3.5 Ounces (R-134A)		
			21	W10163273	Drier			
			22	4344907	Trim, Edge			
			23	W10238022	Clip, Bushing			
			24	W10163274	Pad-Rubber			