


MAYTAG LAVADORA LW2201

FRONT PANEL. CABINET AND BASE

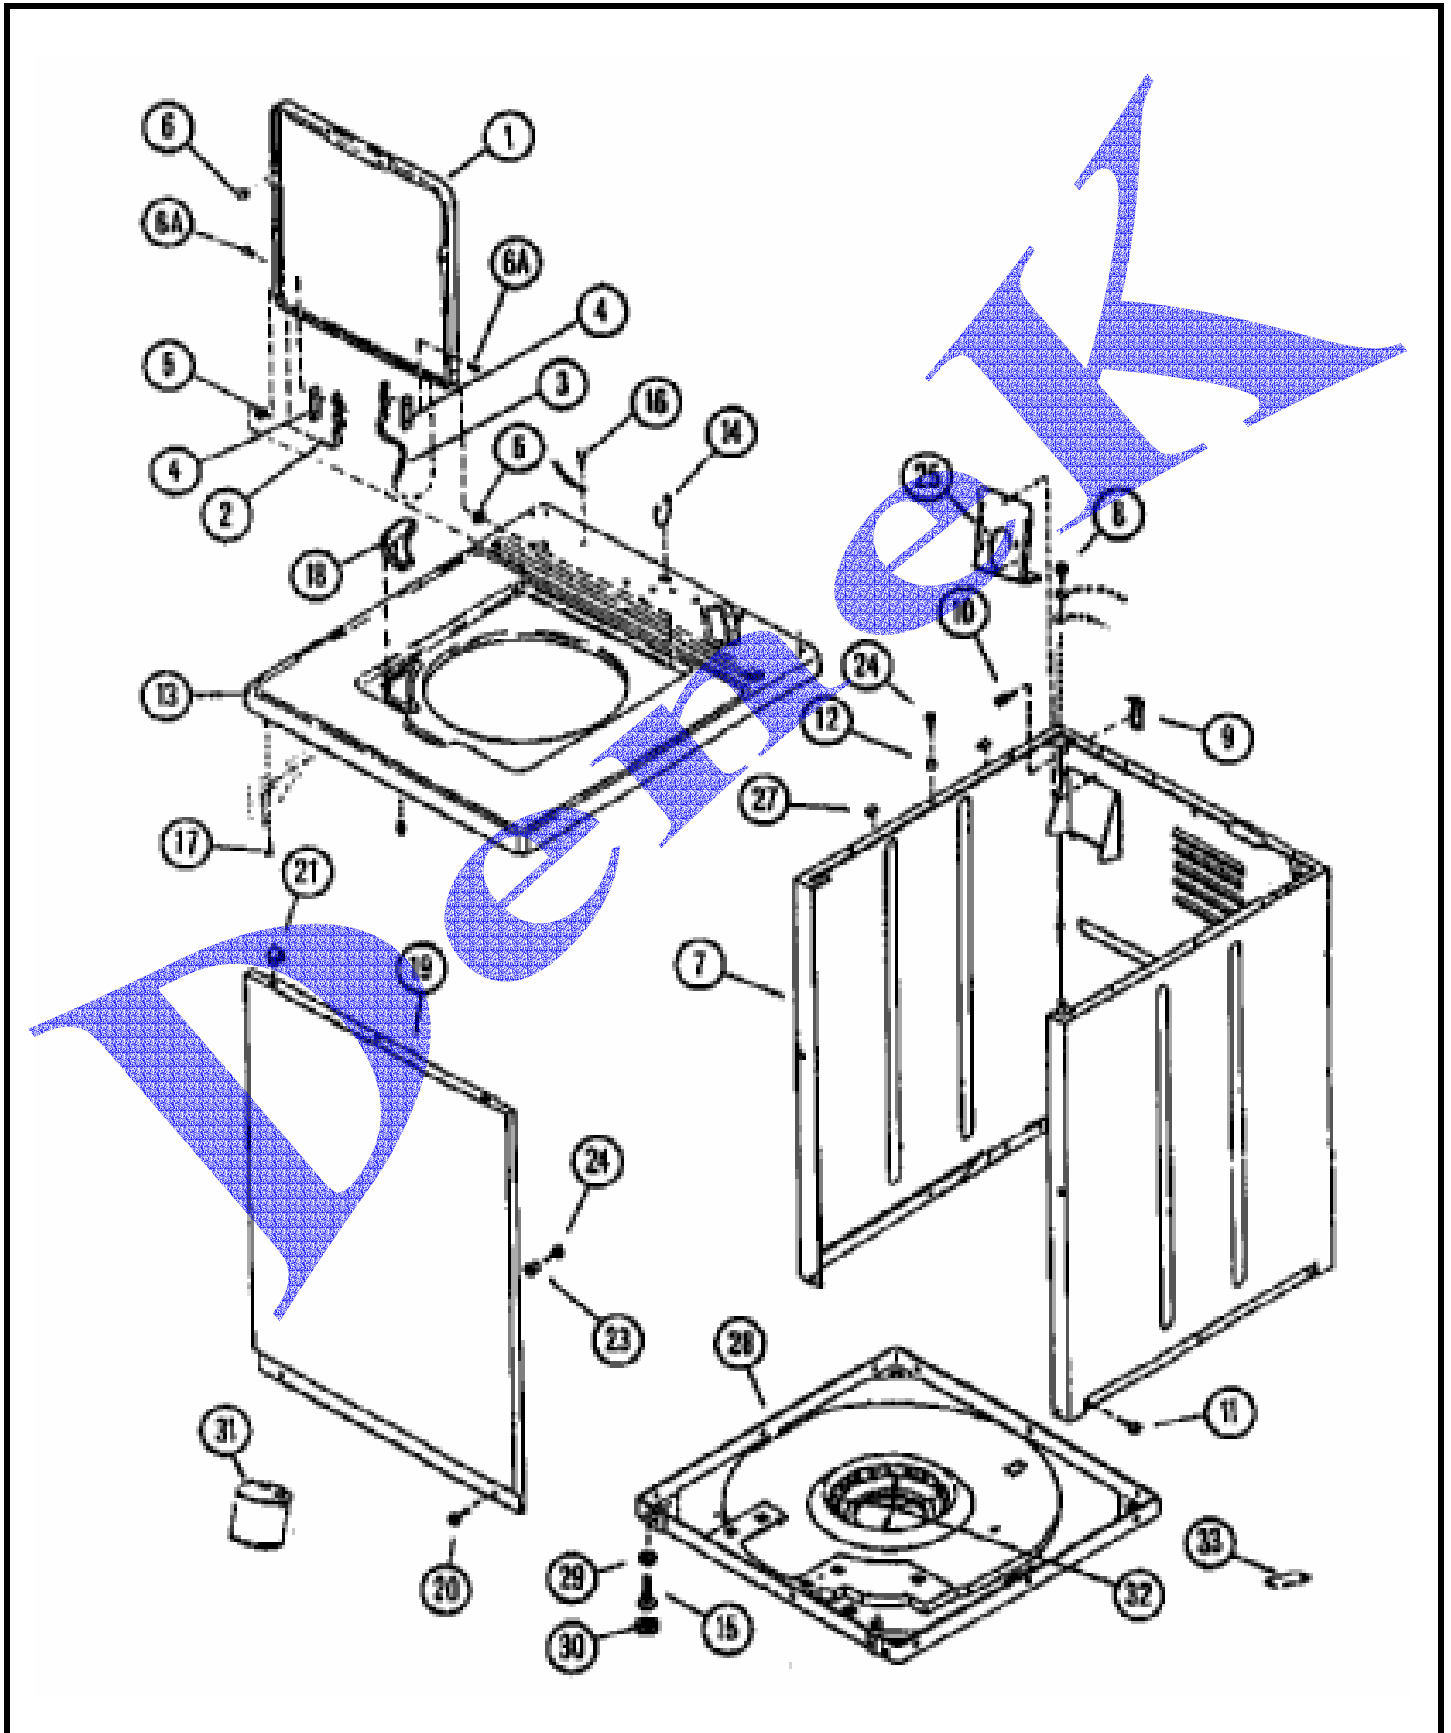


MAYTAG LAVADORA LW2201

FRONT PANEL. CABINET AND BASE

1	R0603232	DOOR, LOADING
1	R0603233	DOOR, LOADING L
1	R0603234	DOOR LOADING G
2	R0605724	HINGE, LID LEFT
3	R0605725	HINGE, RIGHT
4	R0604522	GASKET
5	R0603609	BUSHING
6	R0600107	SCREW
6	R0606555	BUMPER
7	R0603091	CABINET W
7	R0603090	KIT,SERVICE CABINET
7	R0603102	CABINET-GOLD
8	R0600009	SCREW
9	R0605528	HINGE
10	R0600032	SCREW, 10B-16X1/4
11	R0600029	SCREW
12	R0603524	GUIDE LUG
13	R0603237	TOP CABINET G
13	R0603235	TOP CABINET W
13	R0603236	TOP CABINET L
14	R0601502	STRAIN RELIEF K
15	R0600030	LEVELING LEG
16	R0600040	SCREW
17	R0600096	SCREW
18	R0603610	DISPENSER, BLEACH
19	R0603052	FRONT PANEL ALMOND
19	R0603051	FRONT PANEL H GOLD
19	R0603116	PANEL, FRONT
20	R0600029	SCREW
21	R0601520	CLIP
23	R0603525	LOCATER LUG
24	R0600102	SCREW
25	R0605726	BRACKET, MIXING VALVE
27	R0606519	PAD, BUMPER
28	R0603107	BASE ASSY
29	R0601016	NUT
30	R0606518	RUBBER PAD
31	R0608002	LUBRICANT, SILICONE
32	R0610052	SNUBBER PAD
33	R0608012	ADHESIVE

MAYTAG LAVADORA LW2201


INLET HOSE

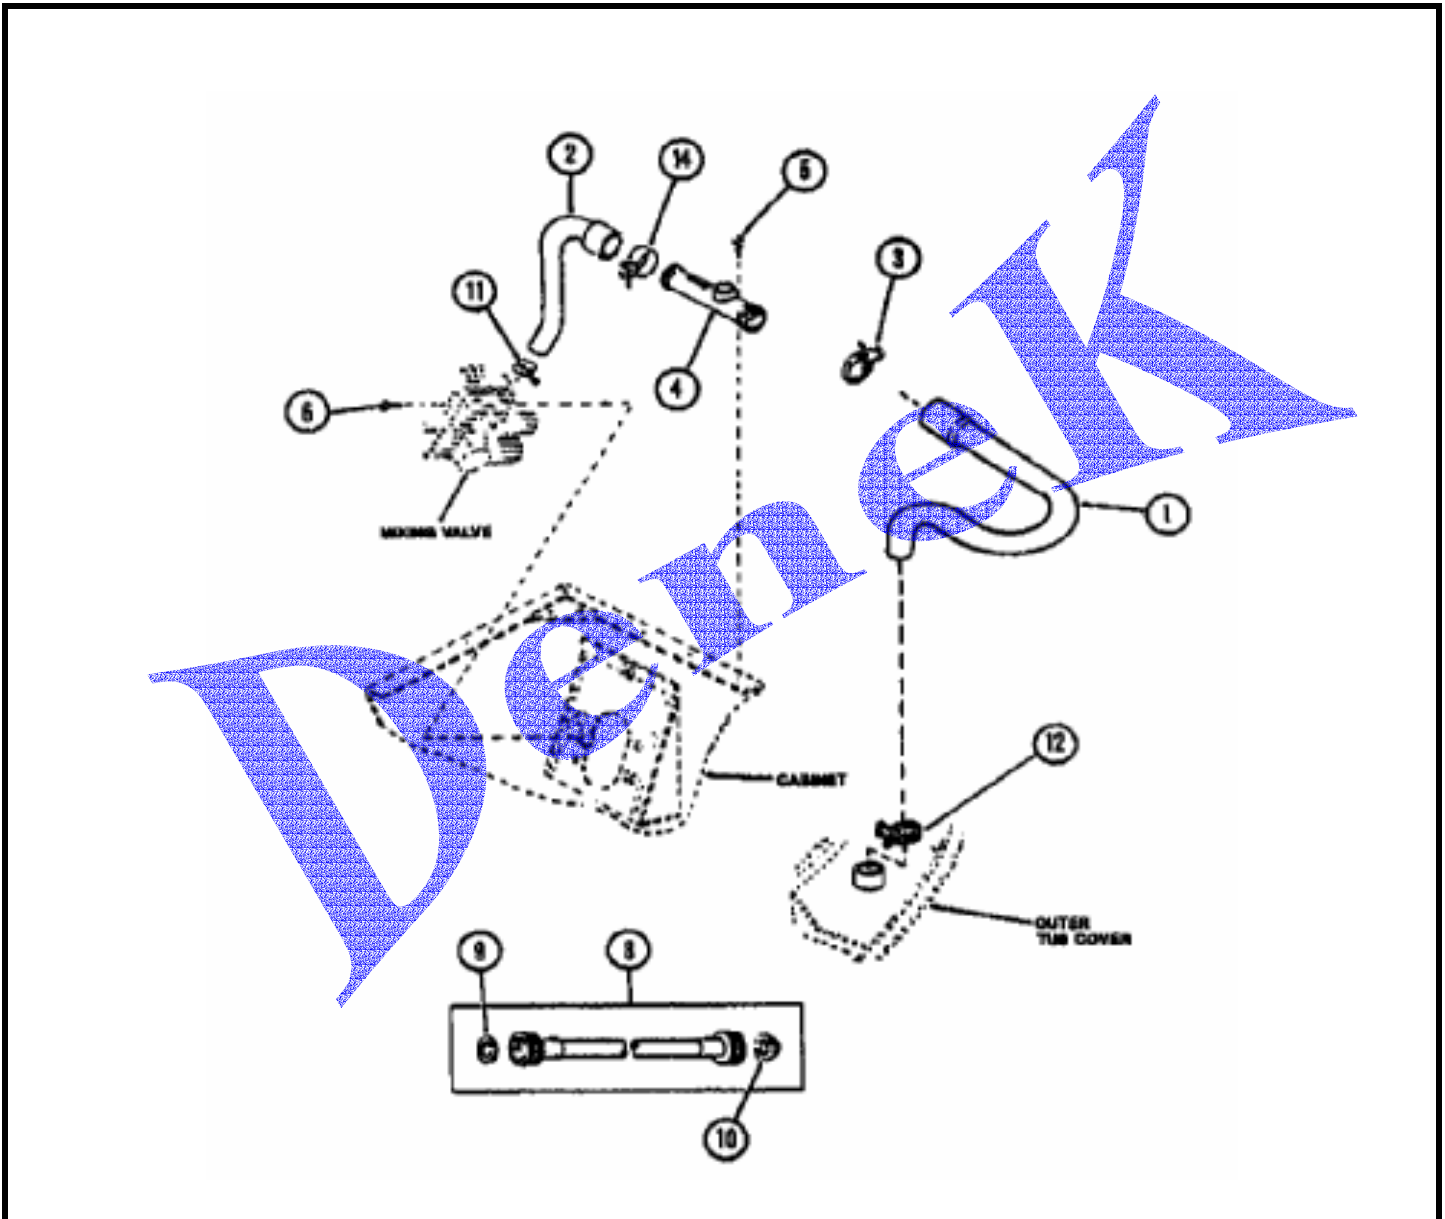

1	R0606556	HOSE
2	R0606503	HOSE
3	R0601541	CLAMP
4	R0605507	SYPHON BREAK
5	R0600004	SCREW
6	R0600009	SCREW
8	R0606504	HOSE
9	R0600505	WASHER
10	R0600504	FILTER WASHER
11	R0601505	HOSE CLAMP
12	R0601542	CLAMP
14	R0601505	HOSE CLAMP

MAYTAG LAVADORA LW2201


MIXING VALVE ASSY

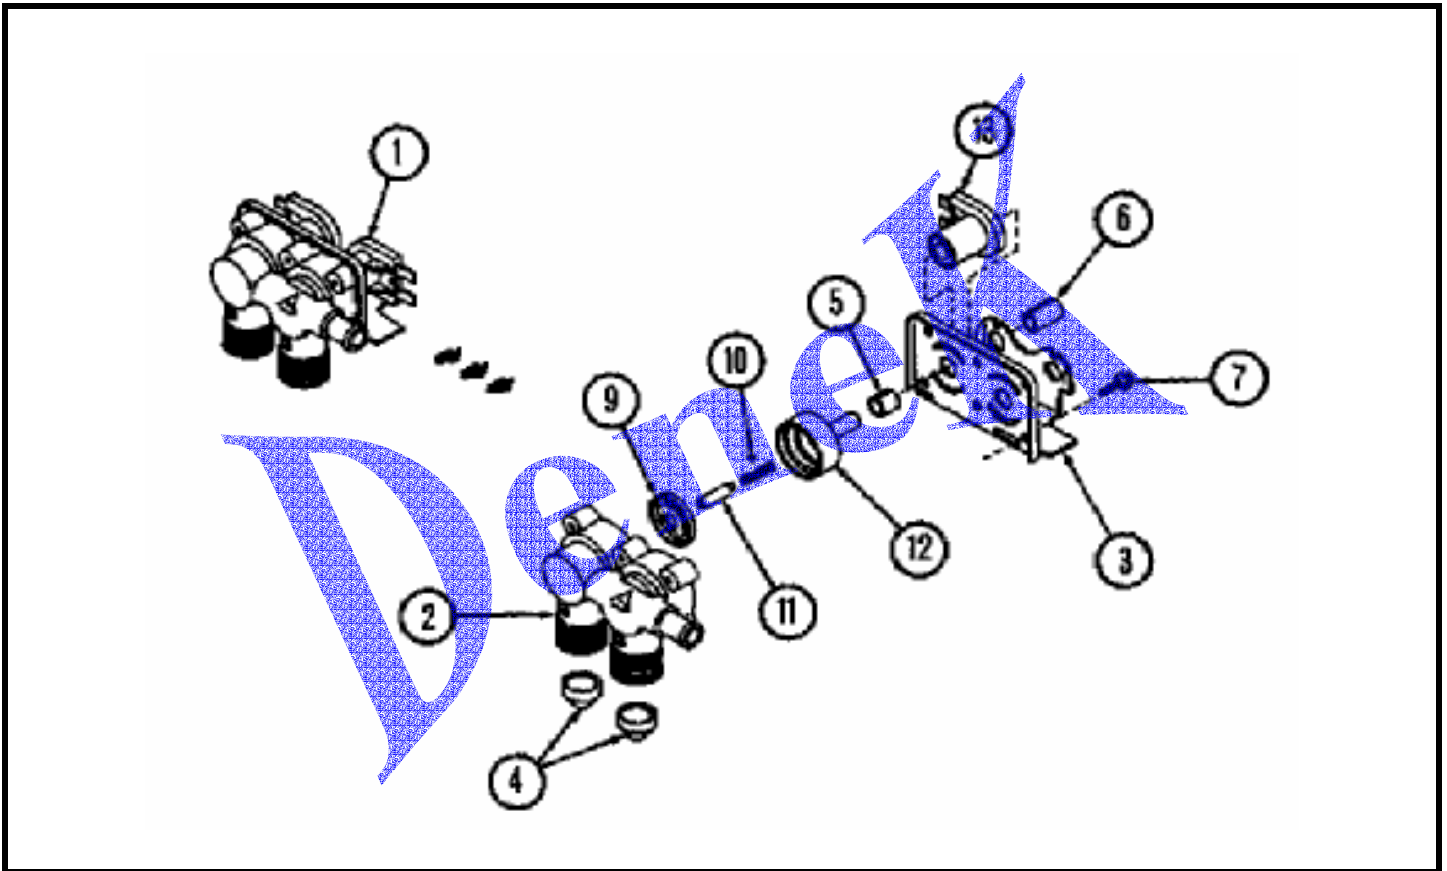

1	R0606006	MIXING VALVE ASSY
2	R0606003	VALVE BODY
3	R0605515	VALVE, MIXING
4	R0603506	INLET SCREEN
5	R0603508	SLEEVE SHORT
6	R0603510	SLEEVE LONG
7	R0600013	SCREW
9	R0606506	DIAPHRAM
10	R0605509	SPRING
11	R0605511	ARMATURE
12	R0605513	ARMATURE GUIDE
13	R0609004	SOLENOID

MAYTAG LAVADORA LW2201

MOTOR

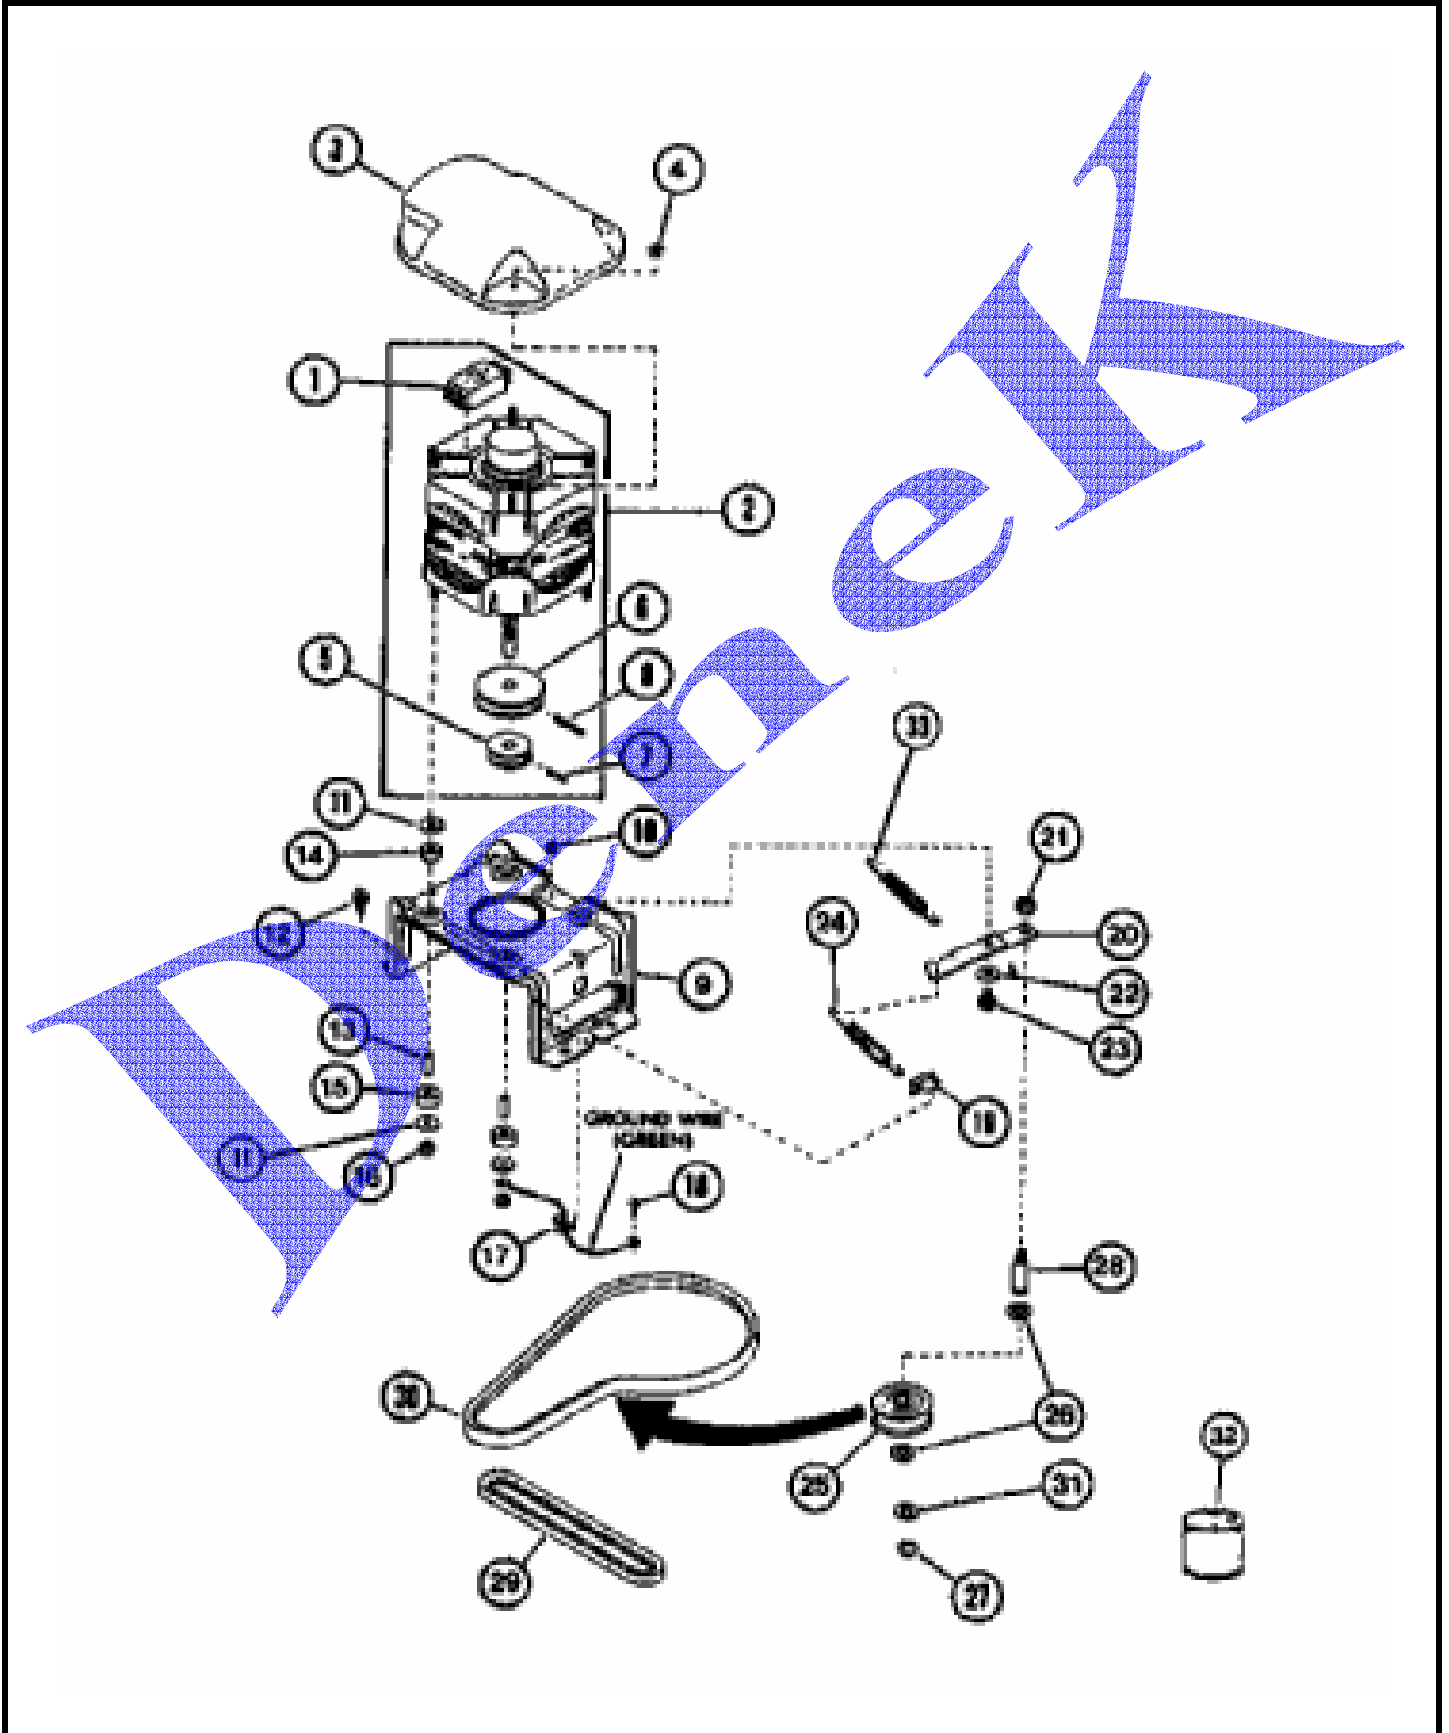


MAYTAG LAVADORA LW2201

MOTOR

1	R0602509	24140 SWITCH
1	R0602511	MOTOR SWITCH
2	R0607002	ASSEMBLY, MOTOR
3	R0603011	MOTOR SHIELD
4	R0601008	LOCKNUT
5	R0609501	PULLEY, MOTOR
6	R0609502	PULLEY, MOTOR
7	R0601508	ROLL PIN
8	R0601509	ROLL PIN
9	R0605514	MOTOR MTG BRACKET
10	R0601011	LOCKNUT
11	R0600510	WASHER
12	R0600098	SCREW
13	R0603511	SPACER
14	R0606509	RUBBER MTG
15	R0606510	RUBBER MTG
16	R0601010	LOCKNUT
17	R0601507	GROUND CLIP
18	R0600017	SCREW
19	R0601539	CLIP
20	R0605684	LEVER, IDLER
21	R0601031	LOCKNUT
22	R0600506	SPACER
23	R0600016	SCREW
24	R0605539	SPRING
25	R0609508	PULLEY, IDLER
26	R0600552	WASHER, FELT
27	R0601527	RING, RETAINING
28	R0605538	IDLER SHAFT
29	R0606507	BELT
30	R0606539	BELT
31	R0600526	WASHER
32	R0608011	HI TEMP LUBE
33	R0605683	SPRING, HELPER

MAYTAG LAVADORA LW2201


CONTROL PANEL

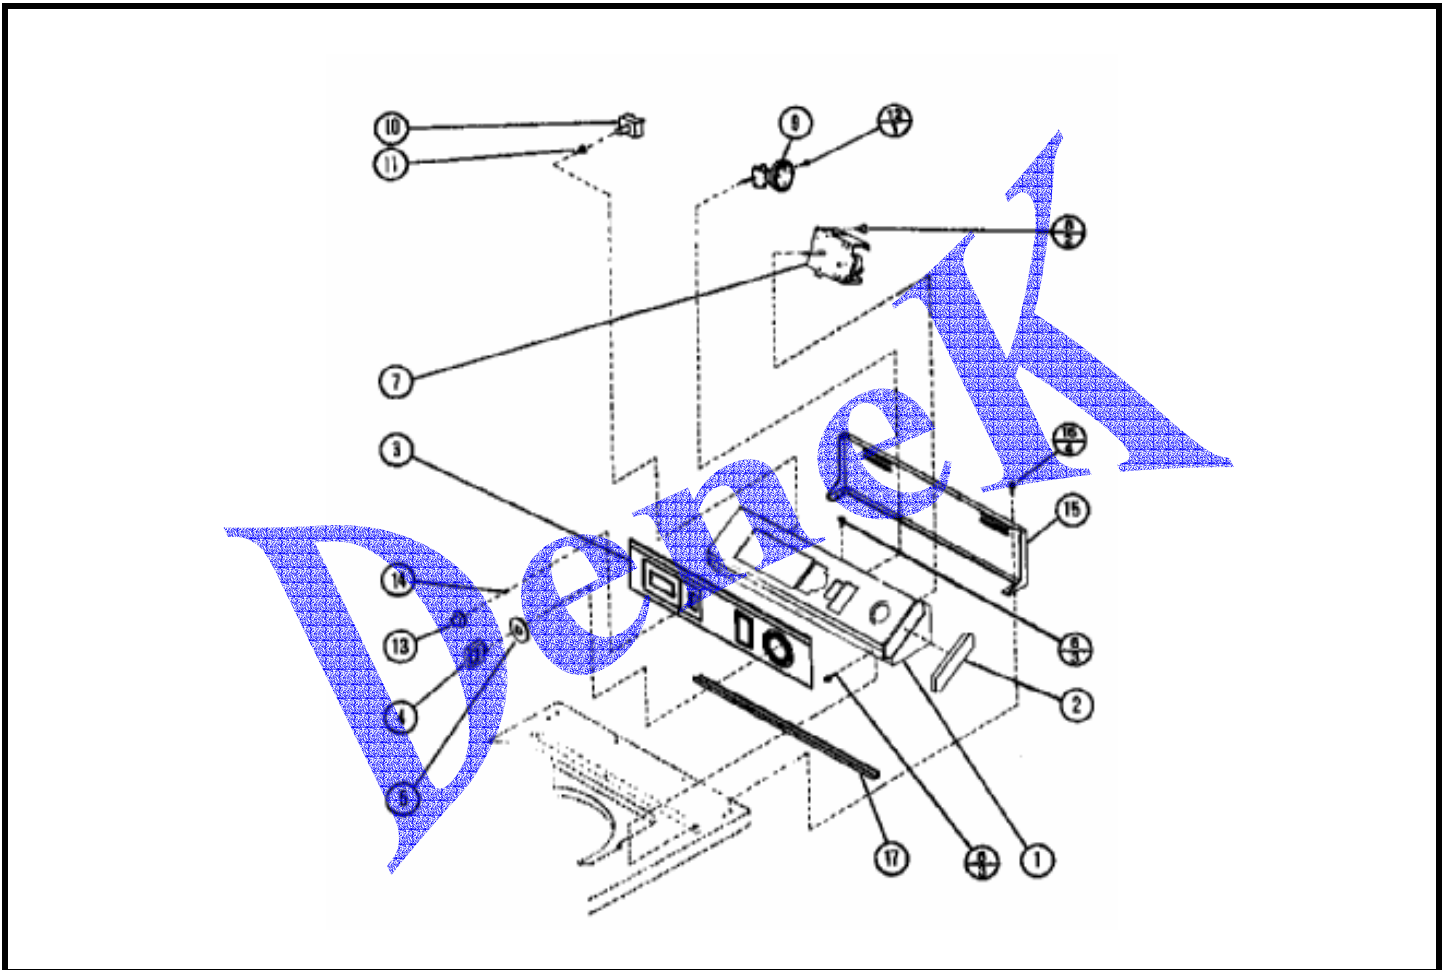

1	R0603161	HOOD AND MOUNTING PLATE
2	R0605696	END CAP, RIGHT, BLACK
2	R0605698	END CAP, LEFT, BLACK
3	R0603623	GRAPHICS PANEL
4	R0603585	KNOB, BLACK
5	R0603586	SKIRT-TIMER KNOB
6	R0600095	SCREW
7	R0604010	TIMER,2 CYCLE
8	R0600093	SCREW
9	R0602525	PRESSURE SWITCH
10	R0602522	TEMPERATURE SWITCH
11	R0601022	NUT
12	R0600004	SCREW
13	R0601546	KNOB
14	R0601501	CLIP
15	R0603231	PANE, REAR
16	R0600004	SCREW

MAYTAG LAVADORA LW2201

TRANSMISION

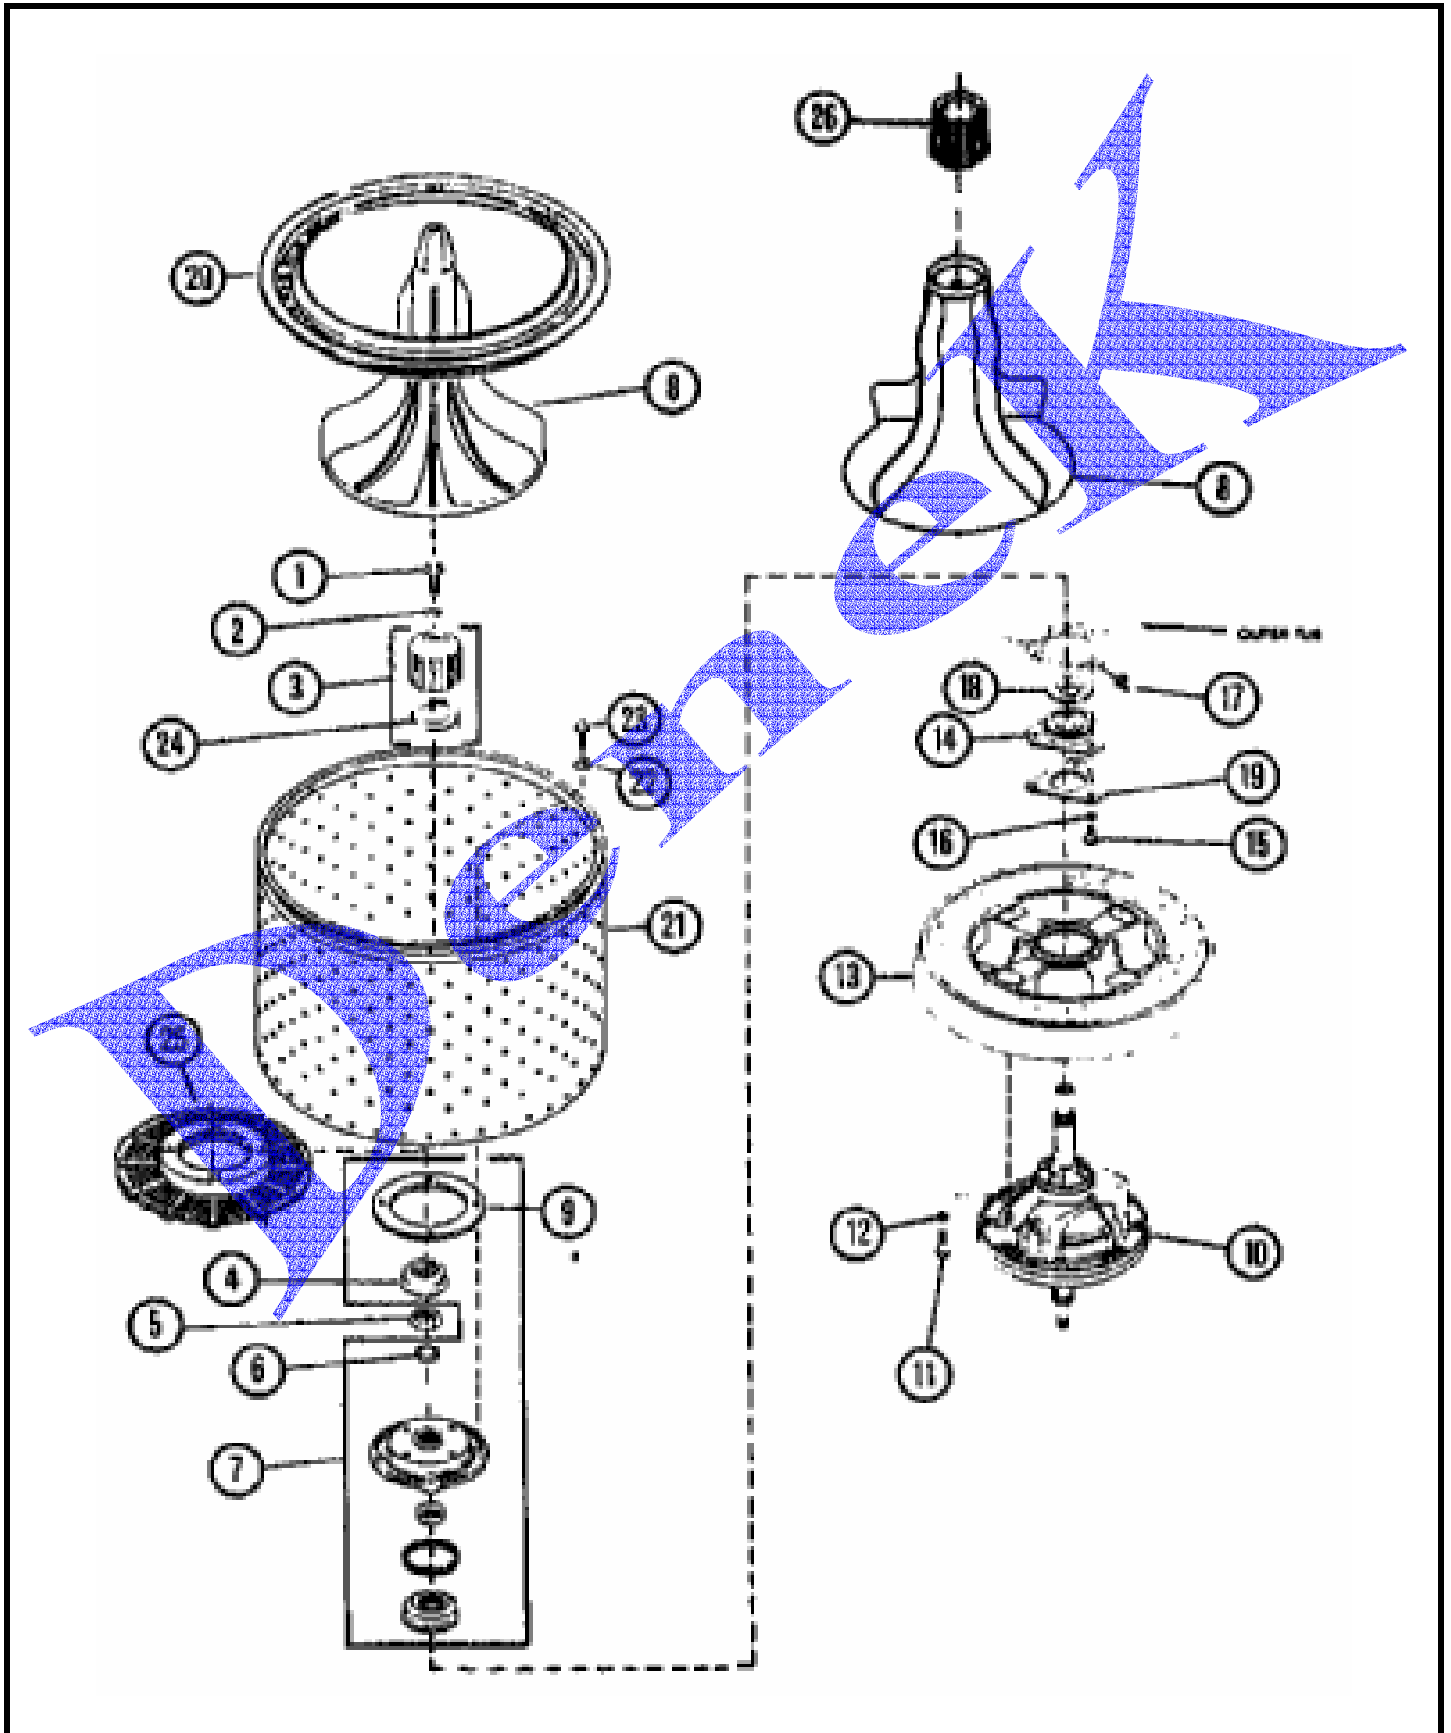


MAYTAG LAVADORA LW2201

TRANSMISION

1	R0600092	SCREW
2	R0600554	"O" RING WASHER
3	R0603552	KIT, DRIVE BELL AND SEAL
4	R0603553	LOW POST SEAL ASSY
5	R0601034	LOCKNUT
6	R0605674	SPLINE INSERT
7	R0605723	HUB & SEAL ASSY
8	R0603551	AGITATOR
9	R0604505	GASKET
10	R0607505	TRANSMISSION ASSY
11	R0600022	SCREW
12	R0600520	LOCKWASHER
13	R0610012	ASSY,BALANCE RING-COMPL
14	R0610011	MAIN BEARING ASSEMBLY
15	R0600021	SCREW
16	R0600519	LOCKWASHER
17	R0601013	NUT
18	R0605536	FLINGER
19	R0600518	WASHER
20	R0603611	GUARD, CLOTHES
21	R0603076	WASH TUB
22	R0604504	GASKET
23	R0600019	SCREW
24	R0603509	KIT, DRIVE BELL AND SEAL

MAYTAG LAVADORA LW2201

TINA

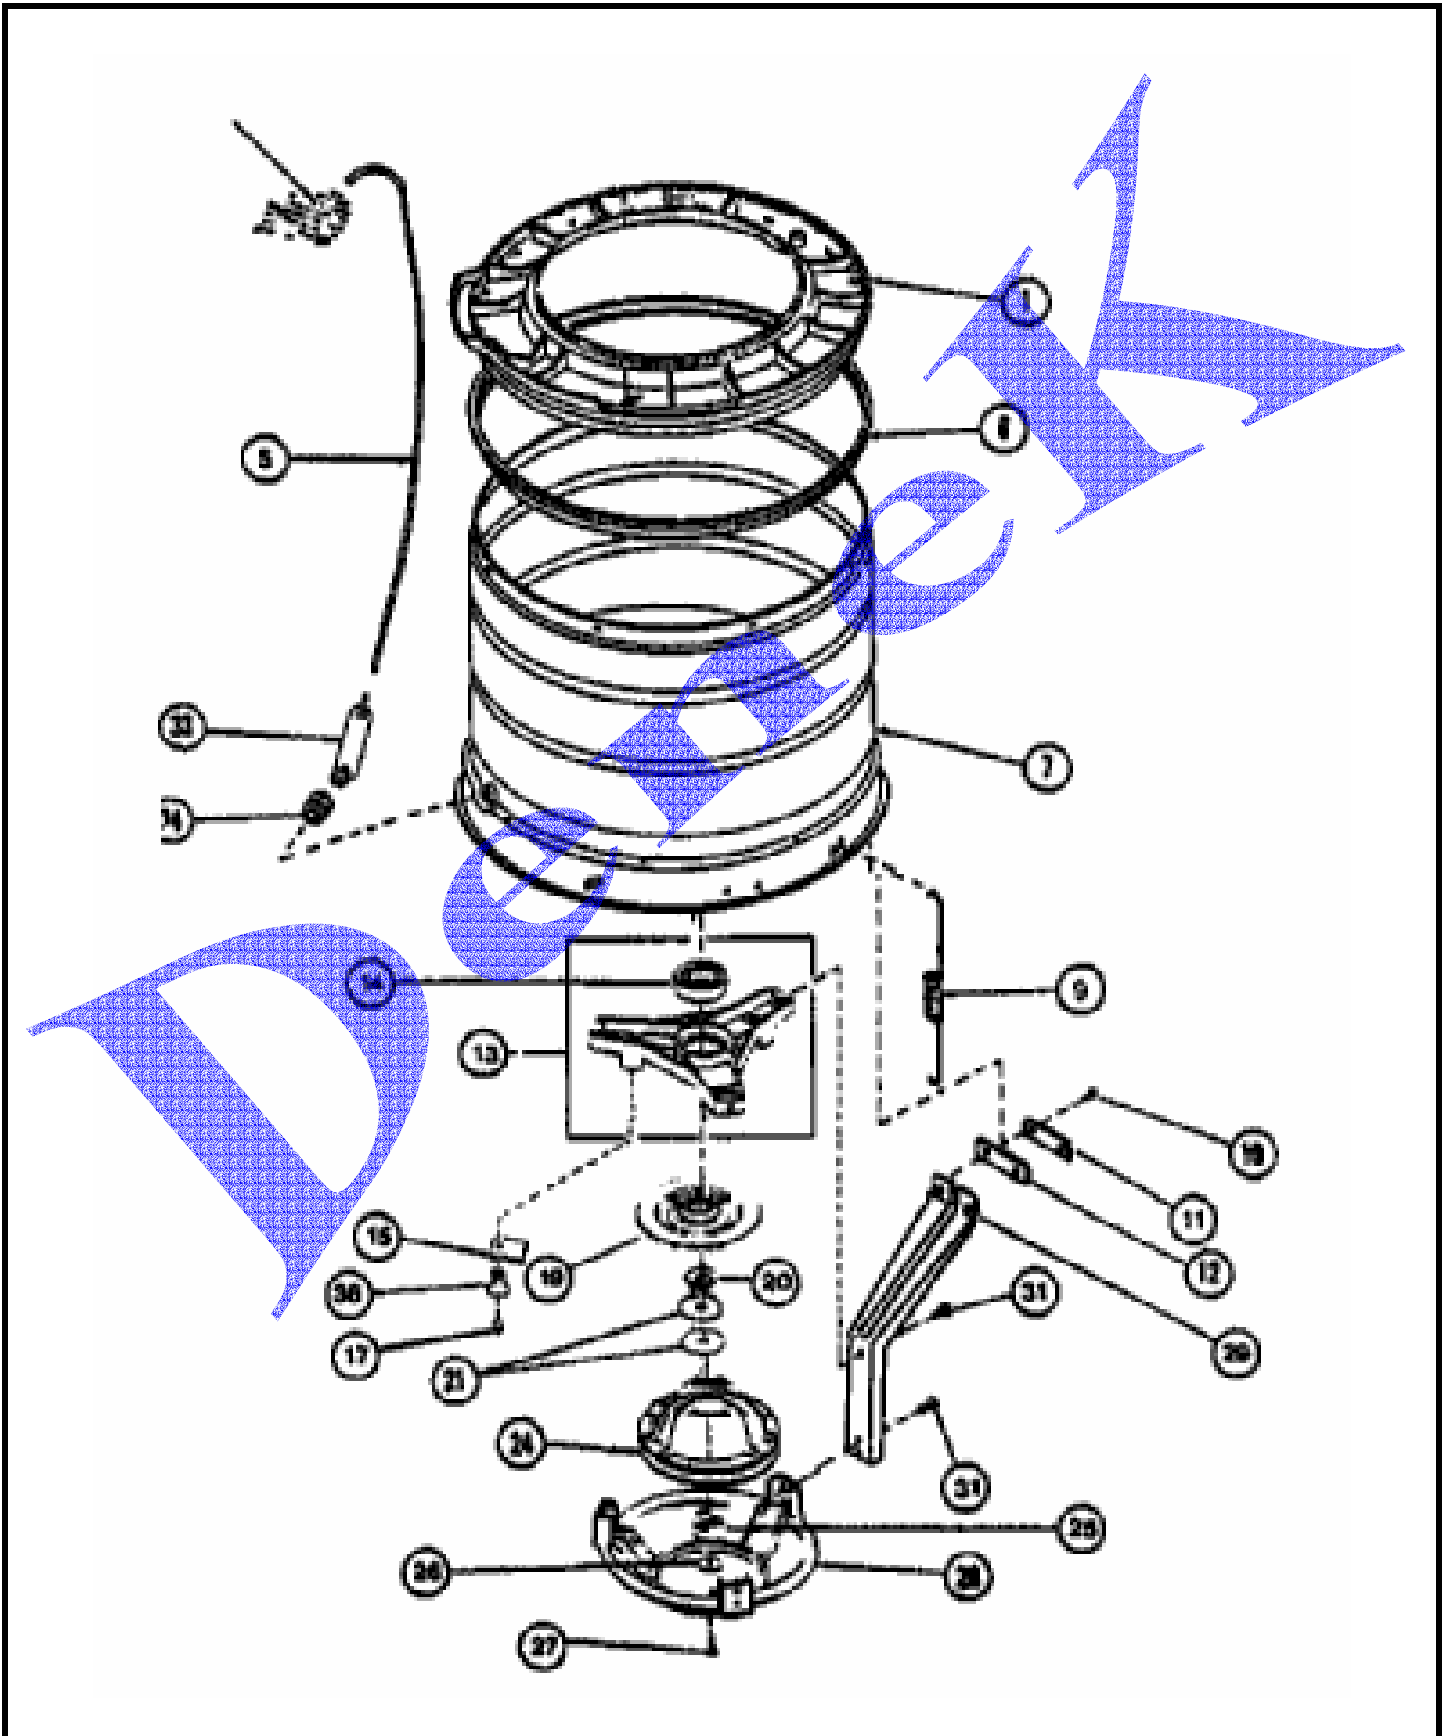


MAYTAG LAVADORA LW2201

TINA

1	R0603612	COVER, OUTER TUB
5	R0606557	TUBING
6	R0604523	GASKET, COVER
7	R0603238	TUB, OUTER
9	R0605521	CENTERING SPRING
10	R0600020	SCREW
11	R0605522	LEG PLATE
12	R0605523	LEG PLATE
13	R0610009	ASSY,BEARING HOUSING-L
14	R0605530	BEARING, UPPER/LOWER
15	R0610010	KIT, BRAKE PAD
17	R0600027	SCREW
19	R0610071	BRAKE ASSEMBLY
20	R0605722	SPRING
21	R0600523	WASHER
24	R0610058	ASSEMBLY, PULLEY
25	R0605535	HELIX
26	R0600521	WASHER
27	R0600026	SCREW
28	R0605526	PIVOT DOME
29	R0605525	SUPPORT LEG
31	R0600108	SCREW
33	R0603613	ACCUMULATOR, PRESSURE
34	R0606543	GROMMET
36	R0603614	SLEEVE
	R0608008	LUBRICANT

MAYTAG LAVADORA LW2201


SWITCH

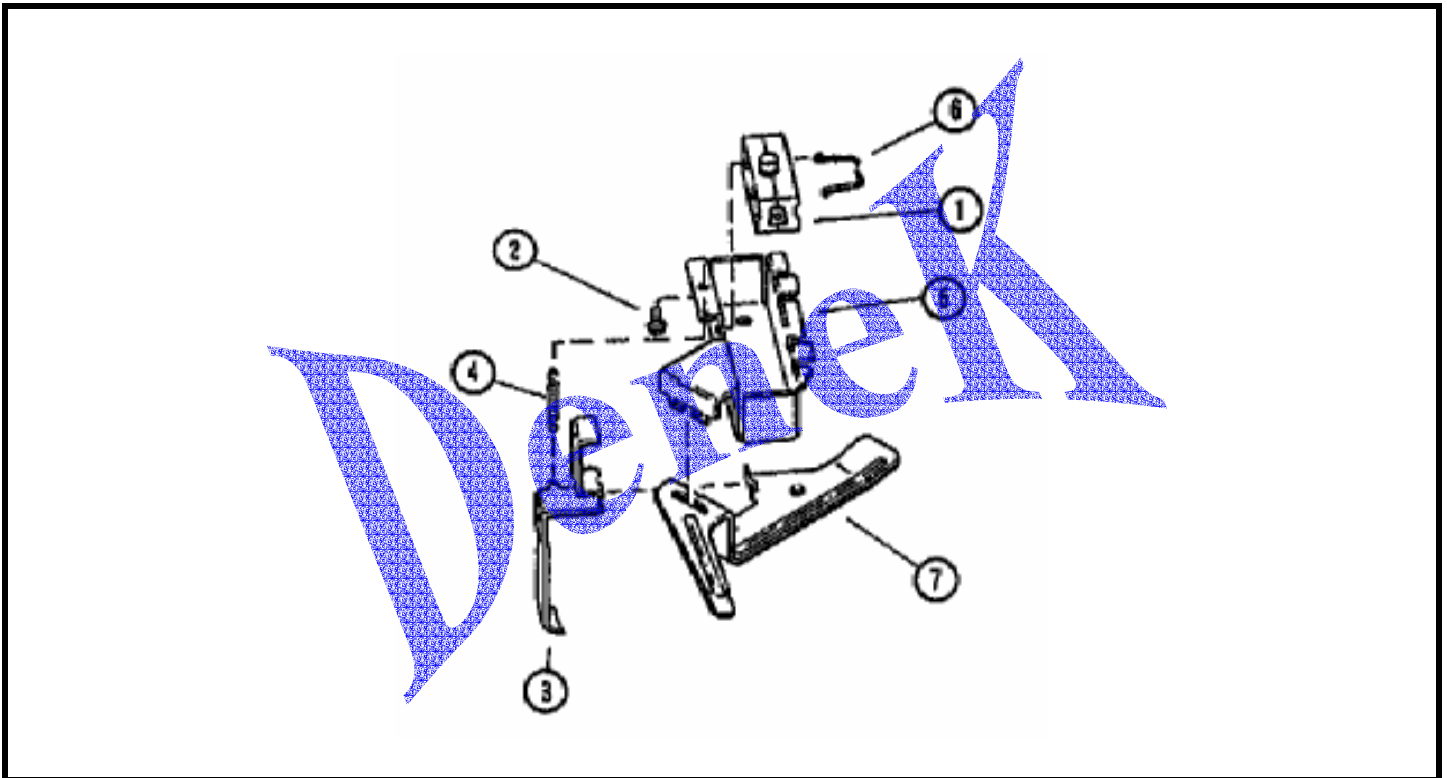

1	R0602544	SWITCH OUT OF BALANCE
2	R0600004	SCREW
3	R0605727	LEVER
4	R0605728	SPRING
5	R0605729	HOLDER, SWITCH
6	R0601548	CLIP
7	R0605730	ACTUATOR ARM

MAYTAG LAVADORA LW2201


POWER CORD

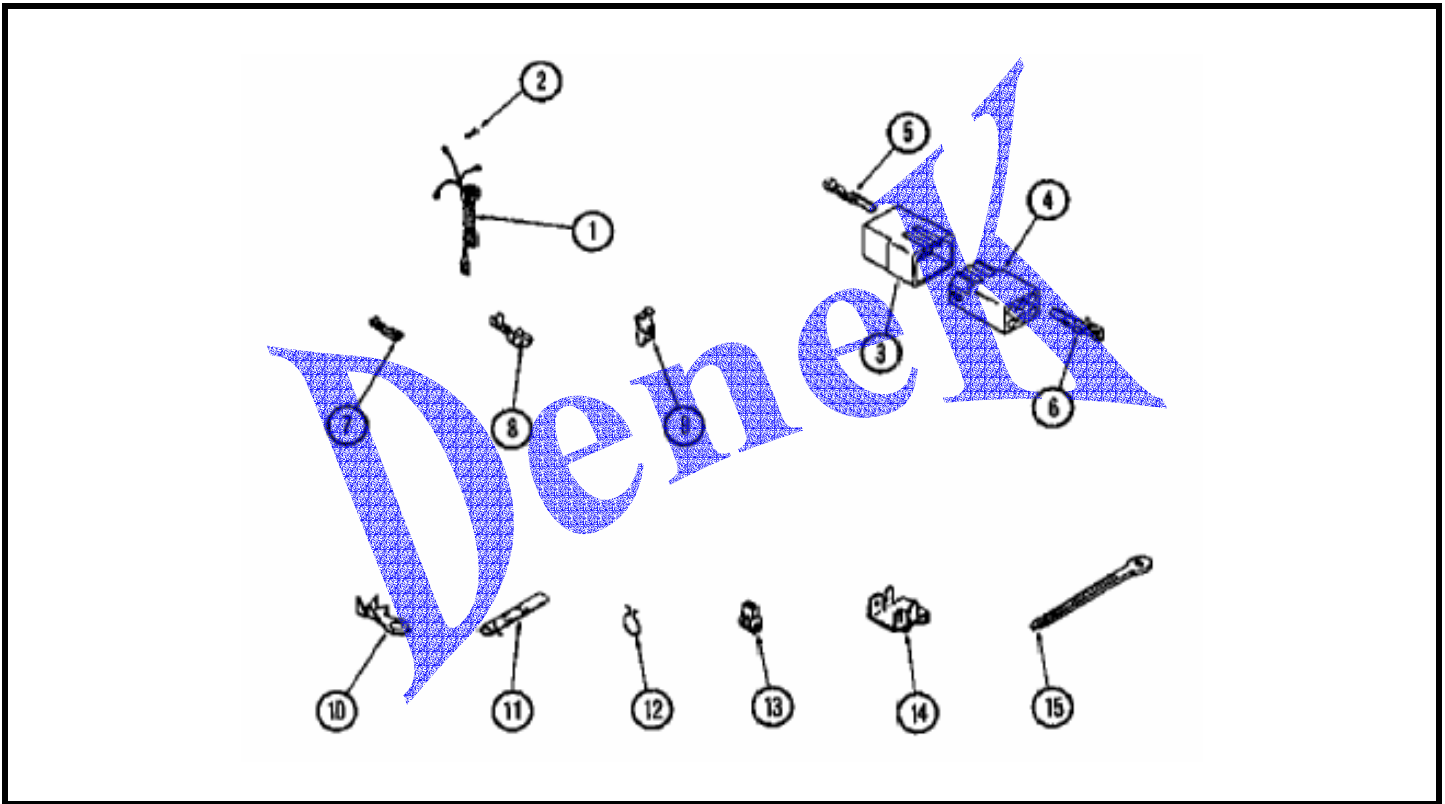

1	R0605001	CORD, LEAD-IN
2	R0600040	SCREW
3	R0605009	PLUG
4	R0605010	RECEPTACLE
5	R0605003	TERMINAL
6	R0605004	TERMINAL
7	R0605002	TERMINAL, SPADE-3/16 FE
8	R0605005	TERMINAL
9	R0605006	TERMINAL
10	R0605007	TERMINAL
11	R0605008	CONNECTOR
12	R0601522	CLIP
13	R0605011	INSULATOR
14	R0601507	GROUND CLIP
15	R0601521	WIRE TIE
	R0605015	WIRE HARNESS
	R0605112	WIRE HARNESS
	R0605114	WIRE HARNESS

MAYTAG LAVADORA LW2201

PUMP ASSY

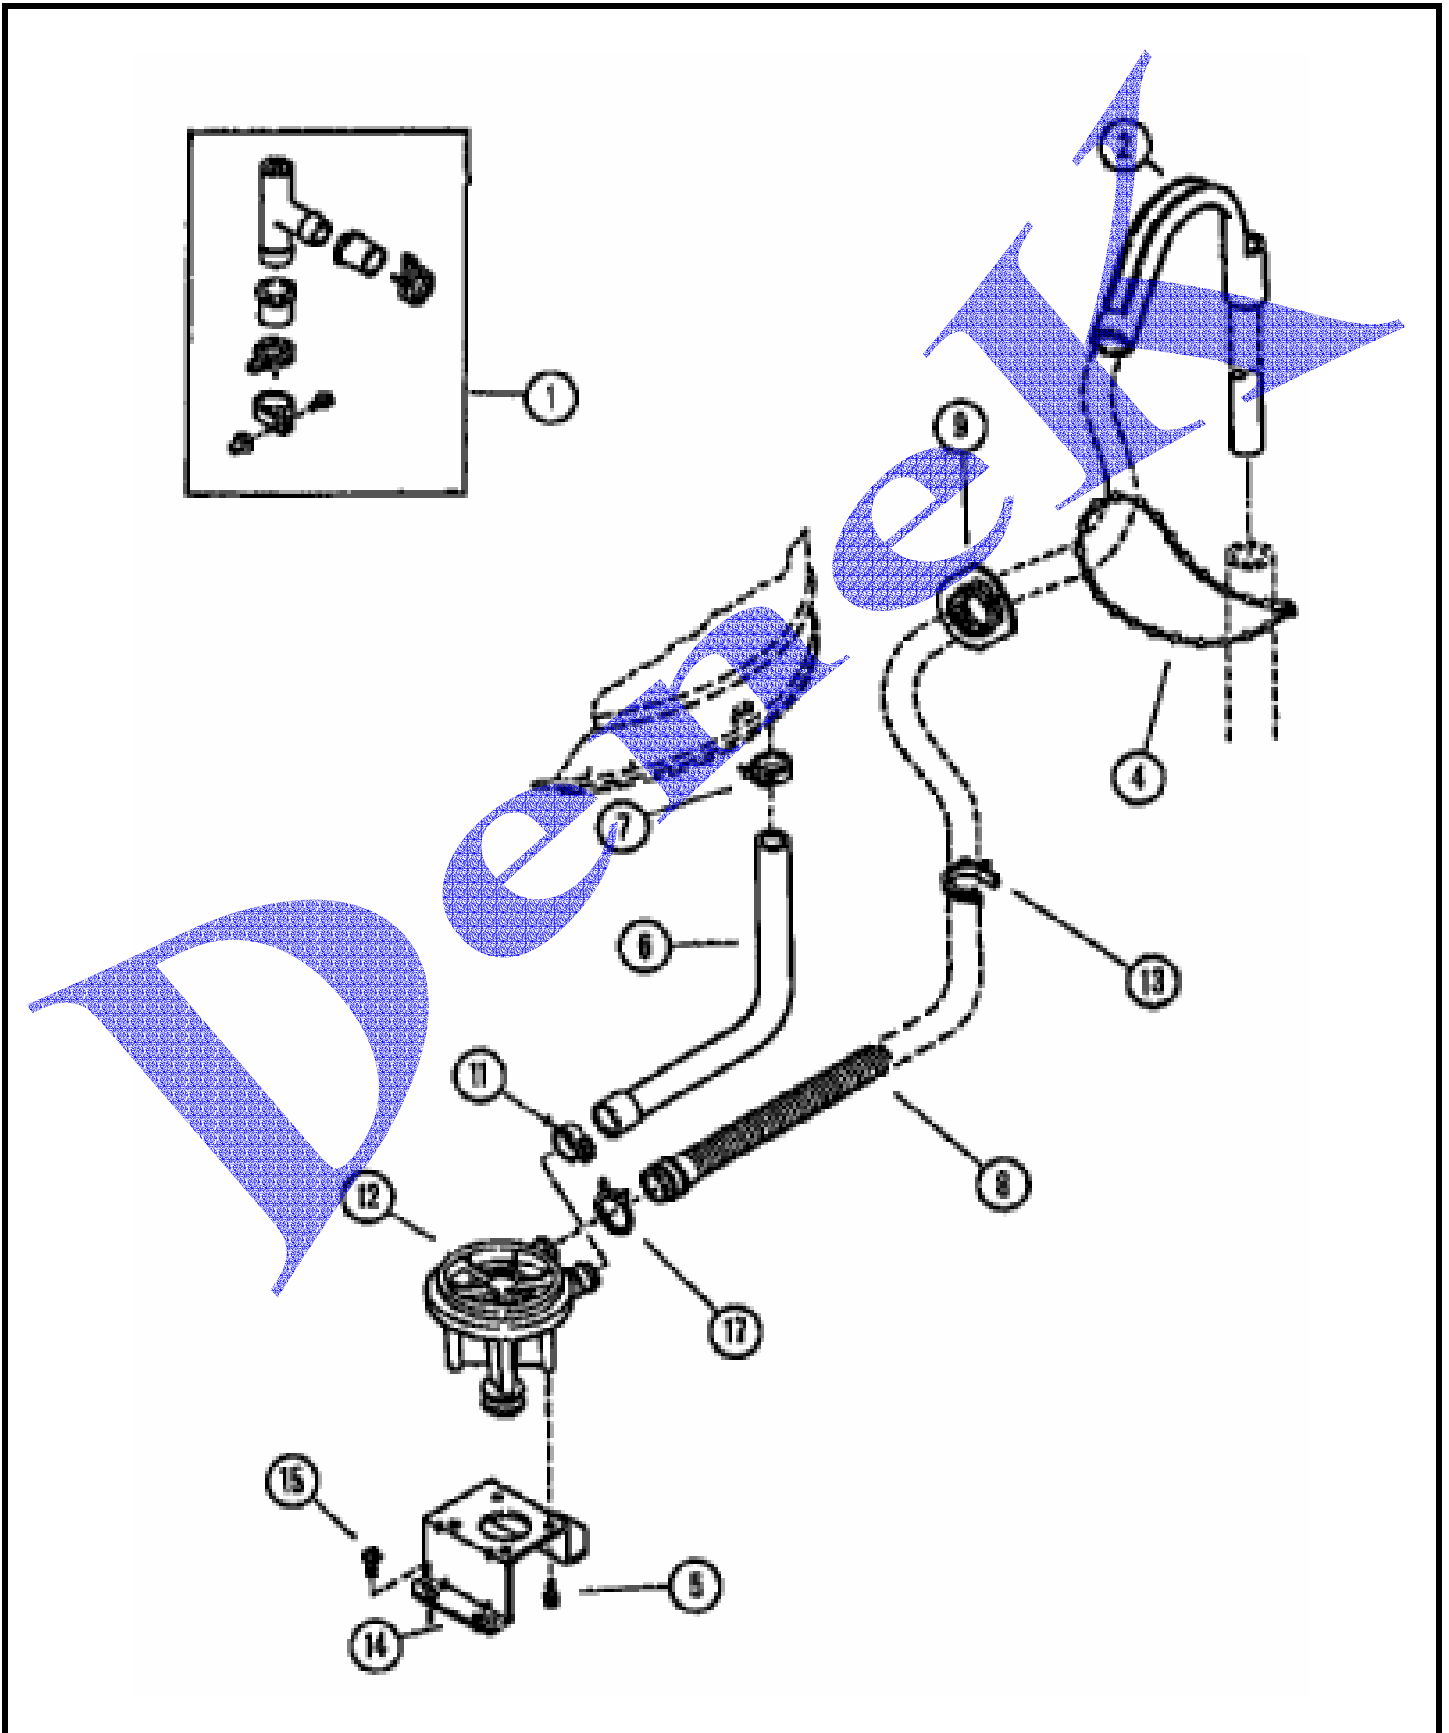

MAYTAG LAVADORA LW2201

PUMP ASSY

- | | | |
|----|----------|---------------------|
| 1 | R0610047 | SIPHON BREAK KIT |
| 2 | R0603615 | SLEEVE, DRAIN HOSE |
| 4 | R0603616 | STRAP TIE DOWN |
| 5 | R0600109 | SCREW |
| 6 | R0606514 | HOSE |
| 7 | R0601549 | CLAMP, HOSE |
| 8 | R0606558 | HOSE, DRAIN |
| 9 | R0603617 | RELIEF, STRAIN |
| 11 | R0601516 | HOSE CLAMP |
| 12 | R0610503 | ASSY, PUMP |
| 13 | R0601550 | CLAMP HOSE RETAINER |
| 14 | R0605524 | PUMP MTG BRACKET |
| 15 | R0600098 | SCREW |
| 17 | R0601551 | CLAMP HOSE |