 
 


Guía	Descripción	# de parte
1	CHUTE	W11117429
2	Electrode/Sensor	279366
3	Washer-Support	WP3388703
4	SEAL	W11415783
5	Screw, 8/18 x 3/8	WP90767
6	SHIELD	W11233063
7	Thermal Fuse Use Part	WP3392519
8	Internal-Bias Thermostat	WP8318268
9	Thermal Cut-Off Kit	279816
10	Dryer Blower wheel	WP694089
11	Housing, Blower	WP8577230
12	CLIP	279771
14	Box, Heater	WP8541818
15	Dryer High Limit Thermostat	WP3977767
16	BRACKET	3977373
17	Element, Heater	3403590
18	PAD	W11409002
19	Heating Element Connection Wire Kit	279457
20	Screw, 8-18 x 5/8	WP489463
21	SCREW	0056545*
22	Light Bulb - 10W	WP22002263
23	LENS	W11226088
24	Roller Support Tri-Ring	WPW10512946
25	Drum Roller Shaft - Left Side	WPW10359270
26	Drum Support Roller Shaft - Right Side	WPW10359269
27	Dryer Drum Support Roller	WPW10314173
28	Roller Shaft Washer	WP348197
29	NUT	W11229607
30	BULKHEAD	W10828905
31	SOCKET	W11222979
32	Two-Piece Split Ring Bearing	279441
33	SCREW	W10853898
34	Rear Drum Felt Seal	W10612022
35	DRUM	W10899578
36	Tall Drum Baffle	WP692490
37	BRACKET	W11684613
38	Support Roller Clip	WP90296
39	Drum Baffle - Short	WP3403636
40	Lint Trap Housing Seal	WP339956

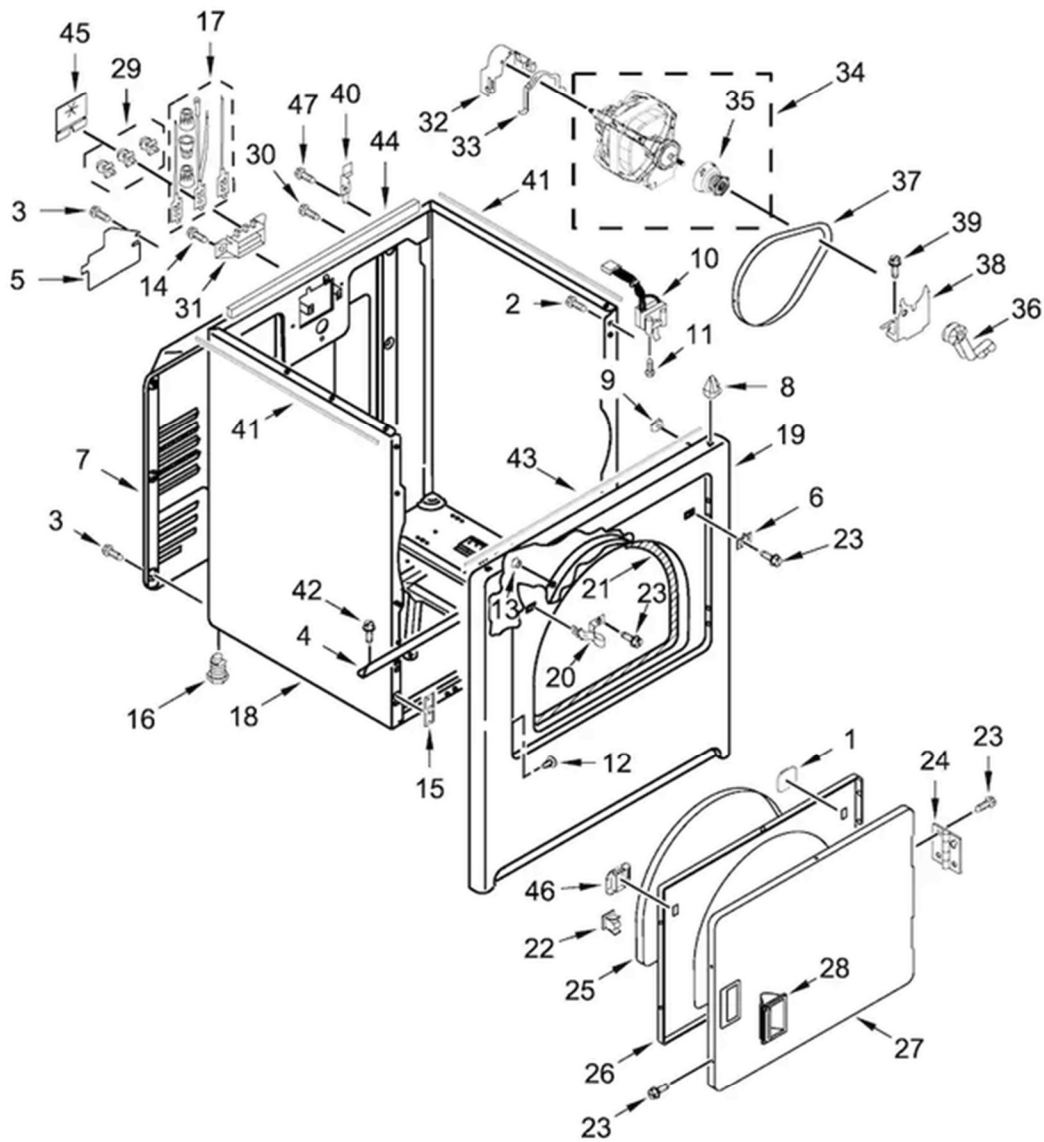

Guía	Descripción	# de parte
1	COVER	W11173656
2	Screw, 8-18 x 1/2	WP3390631
3	Single Hex Head Screw	WP489069
4	BRACKET	W10236073
5	COVER	W11298298
6	PLUG	W10567345
7	PANEL-REAR	280043
8	Lock	WP8066092
9	Clip, Ground	WP98234
10	Dryer Door Switch	WP3406107
11	Screw	WP3395530
12	Hole Plug - White	WP3404413
13	Felt Clip Kit	279220
14	Cover Screw	WP308685
15	Single Front Panel Cip	W10854425
16	Levelling Feet, Pack of 4	W11025920
17	Terminal and Wire Kit	279318
18	Cabinet - White	8533643
19	PANEL	W10806345
20	Door Strike	WP3403431
21	Seal and Bearing	W11035878
22	Door Catch	WPW10610880
23	Screw	WP488627
24	Door Hinge	WPW10362431
25	Door Gasket	W10861521
26	Door	WPW10463967
27	DOOR	W10861227
28	Door Handle - White	WPW10549553
29	Terminal Block Screw Kit	279393
30	SCREW	W10850756
31	Terminal Block - Block Only	WP3397659
32	Clamp-Motor (W/Shield)	WP3404162
33	Clamp	WPW10121316
34	Drive Motor with Pulley	279827
35	Motor Pulley - 60 Hz.	WP8066184
36	IDLER WPL	14210023
37	Belt	WPW10198086
38	Base, Motor	WP348780
39	Cap Screw	3400500

Guía	Descripción	# de parte
40	Hinge, Top (2)	WP8066217
41	Seal-Foam Cabinet	WPW10157932
42	SCREW	0056545.-
43	SEAL	W10316619
44	CABINET	W10224934
45	PAD	W11230156
46	Dryer Door Catch Bezel	WPW10529197
47	DISCONTINUED	343641

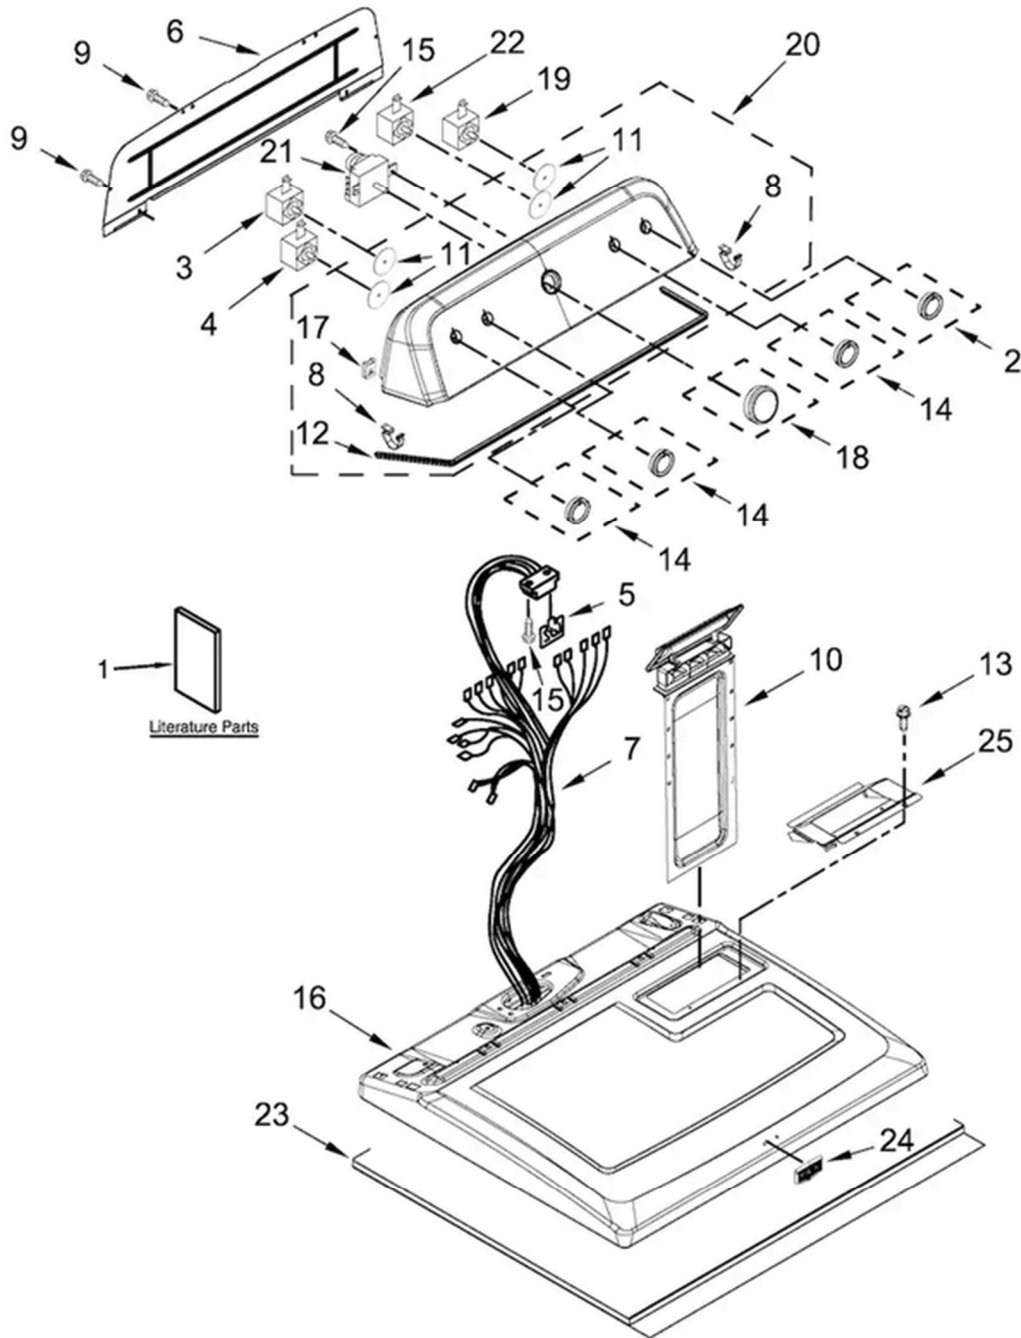



<b>Guía</b>	<b>Descripción</b>	<b># de parte</b>
2	Knob	WPW10565871
3	Push To Start Relay	WPW10627711
4	SWTCH-TEMP	W11501315
5	Dryer Moisture Sensor Control Board	WPW10476828
6	PANEL-REAR	WPW10416486
7	HARNS-WIRE	W10640711
8	Console Clip	WP8312709
9	Single Hex Head Screw	WP489069
10	SCREEN	W11603116
11	SPRING	W10645577
12	SEAL	W10588162
13	Screw and Washer	WP487240
14	Knob	WPW10562155
15	Screw, 8/18 x 3/8	WP90767
16	TOP	W11170623
17	NUT	W11213336
18	Knob	WPW10558463
19	RELAY-PTS	WPW10563095
20	Control Panel	WPW10557259
21	Timer	WPW10642928
22	SWITCH	W10563094
23	SOUND ABSR	W10123956
24	Nameplate	WPW10612925
25	COVER	W10662472