


Distribuidor Autorizado

**SurteRápido.com**

Venta de Refacciones  
Electrodomesticas

Secadora Maytag MGD7000XG0

## TOP AND CONSOLE PARTS

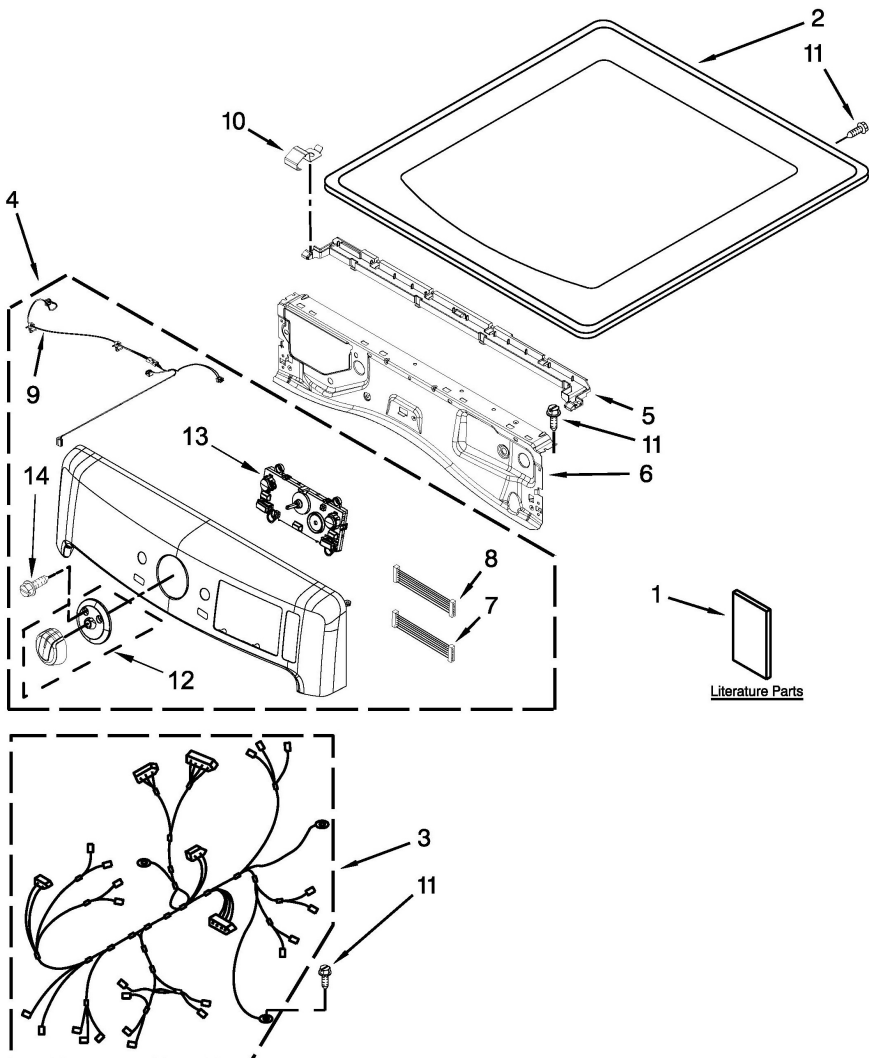

Distribuidor Autorizado

**SurteRápido.com**

Venta de Refacciones  
Electrodomesticas

## Secadora Maytag MGD7000XG0

<b>No. Ilus.</b>	<b>DESCRIPCIÓN</b>	<b>No. de Parte</b>
1	INSTALLATION INSTRUCTIONS	W10057364
1	WIRING DIAGRAM	W10297011
1	USE AND CARE GUIDE	W10312954
1	TECH SHEET	W10316958
2	TOP (WHITE)	W10208383
2	TOP (COSMETALLIC)	W10301057
2	TOP (RED)	W10337792
3	HARNESS, MAIN	W10355891
4	CONSOLE ASSEMBLY (WHITE)	W10350669
4	CONSOLE ASSEMBLY (RED)	W10350671
4	CONSOLE ASSEMBLY (COSMETALLIC)	W10350673
5	CHANNEL, WATER	W10317570
6	BRACKET, CONSOLE	W10208198
7	HARNESS, JUMPER	W10309986
8	HARNESS, JUMPER	W10309987
9	CABLE, USER INTERFACE	W10267833
10	CLIP, SPRING	W10317566
11	SCREW	3390647
12	KIT, KNOB AND INLAY	W10514146
13	UI, CENTER (INCLUD KNOB AND INLAY)	W10348583
14	SCREW	W10146359


Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones  
Electrodomesticas

# Secadora Maytag MGD7000XG0

## CABINET PARTS

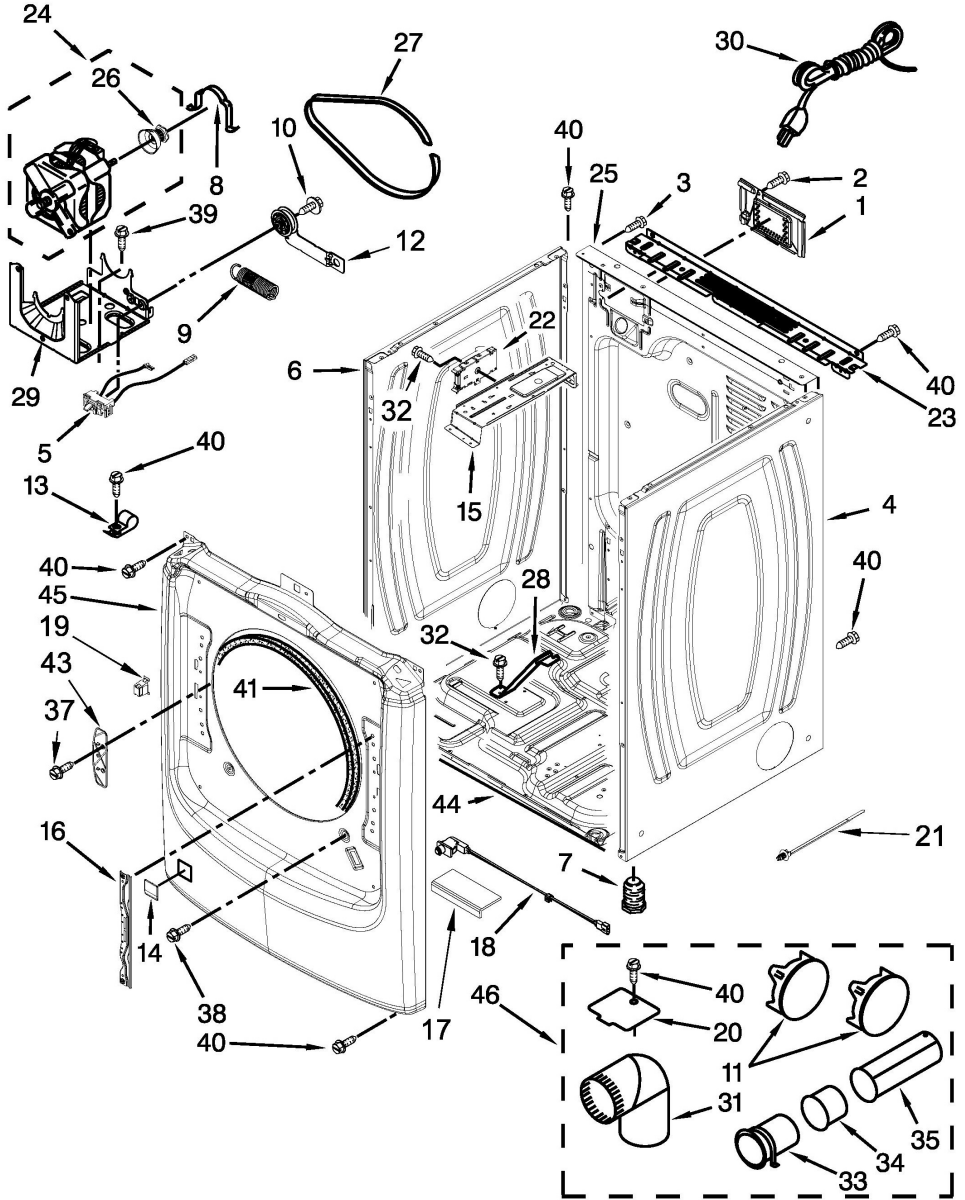

Distribuidor Autorizado

**SurteRápido.com**

Venta de Refacciones  
Electrodomesticas



## Secadora Maytag MGD7000XG0

<b>No. Ilus.</b>	<b>DESCRIPCIÓN</b>	<b>No. de Parte</b>
<b>NI</b>	FOOT, OPTIONAL EXTENDED LENGTH	279810
<b>1</b>	COVER, TERMINAL BLOCK	8317339
<b>2</b>	SCREW	3390814
<b>3</b>	SCREW	8533974
<b>4</b>	PANEL, SIDE (R.H.) (WHITE)	W10280028
<b>4</b>	PANEL, SIDE (R.H.) (COSMETALLIC)	W10301061
<b>4</b>	PANEL, SIDE (R.H.) (RED)	W10337791
<b>5</b>	SWITCH, BROKEN BELT	W10246525
<b>6</b>	Panel, Side (L.H.) (White)	W10192435
<b>6</b>	PANEL, SIDE (L.H.) (COSMETALLIC)	W10301058
<b>6</b>	PANEL, SIDE (L.H.) (RED)	W10337789
<b>7</b>	Foot, Dryer	3392100
<b>8</b>	CLAMP, MOTOR MOUNT	W10121316
<b>9</b>	SPRING, IDLER	W10446781
<b>10</b>	SCREW	3389420
<b>11</b>	PLUG, MULTIVENT (MIDNIGHT GREY)	W10404617
<b>12</b>	ASSEMBLY, IDLER	W10547287
<b>13</b>	Bracket, Gas Pipe	3978776
<b>14</b>	Plug, Front Panel (White)	8564457
<b>14</b>	PLUG, FRONT PANEL (RED)	W10256411
<b>14</b>	PLUG, FRONT PANEL (COSMETALLIC)	W10301055
<b>15</b>	BRACKET, CONTROL	W10259611
<b>16</b>	BRACKET, DOOR HINGE	W10315109
<b>17</b>	Cover, Door Switch	W10215725
<b>18</b>	ASSEMBLY, DOOR SWITCH	W10295361
<b>19</b>	ASSEMBLY, SPRING CATCH	W10208401
<b>20</b>	PLATE, COVER	W10354249

Distribuidor Autorizado

**SurteRápido.com**

Venta de Refacciones  
Electrodomesticas

## Secadora Maytag MGD7000XG0

<b>No. Ilus.</b>	<b>DESCRIPCIÓN</b>	<b>No. de Parte</b>
21	CABLE TIE	W10267532
22	CONTROL BOARD	W10352731
23	BRACKET, REAR	W10208382
	ASSEMBLY, MOTOR	W10396038
25	PANEL, REAR	W10247569
26	PULLEY, MOTOR	W10460106
27	Belt, Drive	W10112954
28	Bracket, Burner	8529757
29	BRACKET, MOTOR MOUNTING	W10242878
30	Cord, Power	3401401
31	ELBOW	W10416072
32	Screw	693995
33	PIPE, EXHAUST (MEDIUM)	8563747
34	PIPE, EXHAUST (SHORT)	W10331278
35	PIPE, EXHAUST (LONG)	8563749
37	SCREW	W10288126
38	SCREW	3357011
39	SCREW	343641
40	SCREW	3390647
41	Seal, Front Panel	3387242
43	STRIKE, DOOR	W10208250
44	Base, Cabinet	8565046
45	FRONT PANEL (WHITE)	W10294349
45	FRONT PANEL (COSMETALLIC)	W10301067
45	FRONT PANEL (RED)	W10337786
46	OPTIONAL PARTS NOT INCLUDED	W10323246


Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones  
Electrodomesticas

Secadora Maytag MGD7000XG0

## BULKHEAD PARTS

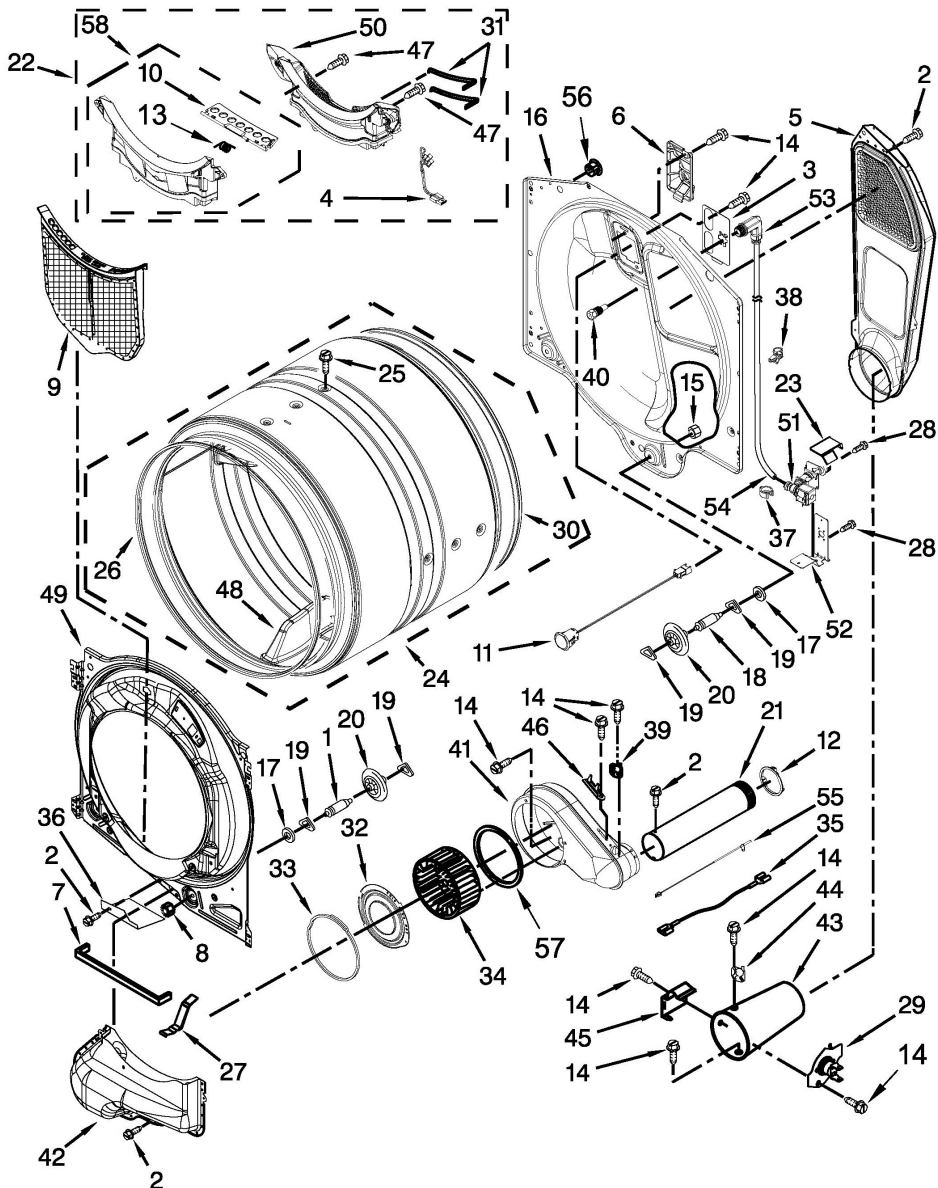

Distribuidor Autorizado

**SurteRápido.com**

Venta de Refacciones  
Electrodomesticas

## Secadora Maytag MGD7000XG0

<b>No. Ilus.</b>	<b>DESCRIPCIÓN</b>	<b>No. de Parte</b>
1	SHAFT, DRUM ROLLER RIGHT HAND T.	W10359271
2	SCREW	3390647
3	NOZZLE, BRACKET REAR	W10249422
4	HARNESS, SENSOR	W10298258
5	ASSEMBLY, AIR DUCT	W10295533
6	REAR DEFLECTOR	W10208422
7	SEAL, HOUSING OUTLET	W10211950
8	NUT, HEX	3934666
9	LINT SCREEN	W10370972
10	DOOR, LINT SCREEN	W10219016
11	DRUM LIGHT ASSEMBLY-LED	W10236079
12	COLLAR, DUCT	W10344699
13	SPRING, LINT SCREEN DOOR	W10219015
14	Screw	693995
15	NUT, HEX (LEFT HAND THREAD)	W10001120
16	BULKHEAD, REAR	W10211946
17	WASHER	3387459
18	SHAFT, DRUM ROLLER - LEFT HAND T.	W10359272
19	WASHER, TRI RING	W10512946
20	ROLLER, SUPPORT	W10314171
21	EXHAUST PIPE	W10342188
22	ASSEMBLY, OUTLET GRILL& HOUSING	W10219012
23	COVER, INLET VALVE	W10530670
24	DRUM ASSEMBLY COMPLETE	W10280782
25	SCREW	W10219342
26	SEAL, DRUM FRONT	W10273050
27	CLIP, LINT DUCT	W10306123

Distribuidor Autorizado

**SurteRápido.com**

Venta de Refacciones  
Electrodomesticas

## Secadora Maytag MGD7000XG0

<b>No. Ilus.</b>	<b>DESCRIPCIÓN</b>	<b>No. de Parte</b>
28	SCREW	90767
29	CUT-OFF, THERMAL	8573713
30	Seal, Drum	697694
31	SENSOR, ELECTRODE	3387223
32	ASSEMBLY, COLLAR	W10211901
33	SEAL, BLOWER COVER	W10211899
34	WHEEL, BLOWER	W10211915
35	JUMPER, TCO HIGH LIMIT	3401710
36	SHIELD, BLOWER	W10128629
37	CLIP, PUSH TO CONNECT	W10044599
38	Tie, Cable	3391018
39	THERMISTOR	8577274
40	ASSEMBLY, NOZZLE AND SCREEN	W10277503
41	HOUSING, BLOWER	W10211911
42	ASSEMBLY, LINT DUCT	W10211896
43	Funnel, Burner	8573824
44	THERMOSTAT, HI LIMIT	3391912
45	Sensor, Radiant	338906
46	Fuse, Thermal (91 C)	3392519
47	SCREW	3387230
48	BAFFLE, DRUM	W10280771
49	BULKHEAD, FRONT	W10211930
50	GRILL, OUTLET	W10211903
51	VALVE, WATER INLET	W10505663
52	BRACKET, VALVE	W10510098
53	ASSEMBLY, NOZZLE AND HOSE	W10347739
54	HOSE, REAR NYLON	W10348621



Distribuidor Autorizado



Venta de Refacciones  
Electrodomesticas

## Secadora Maytag MGD7000XG0

<b><u>No. Ilus.</u></b>	<b><u>DESCRIPCIÓN</u></b>	<b><u>No. de Parte</u></b>
<b>55</b>	THERMISTOR, GAS INLET	W10419068
<b>56</b>	PLUG, REAR BULKHEAD	8529007
<b>57</b>	SEAL, PLATE COVER	697770
<b>58</b>	ASSEMBLY, HOUSING AND DOOR	W10219013


Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones  
Electrodomesticas

Secadora Maytag MGD7000XG0

## DOOR PARTS

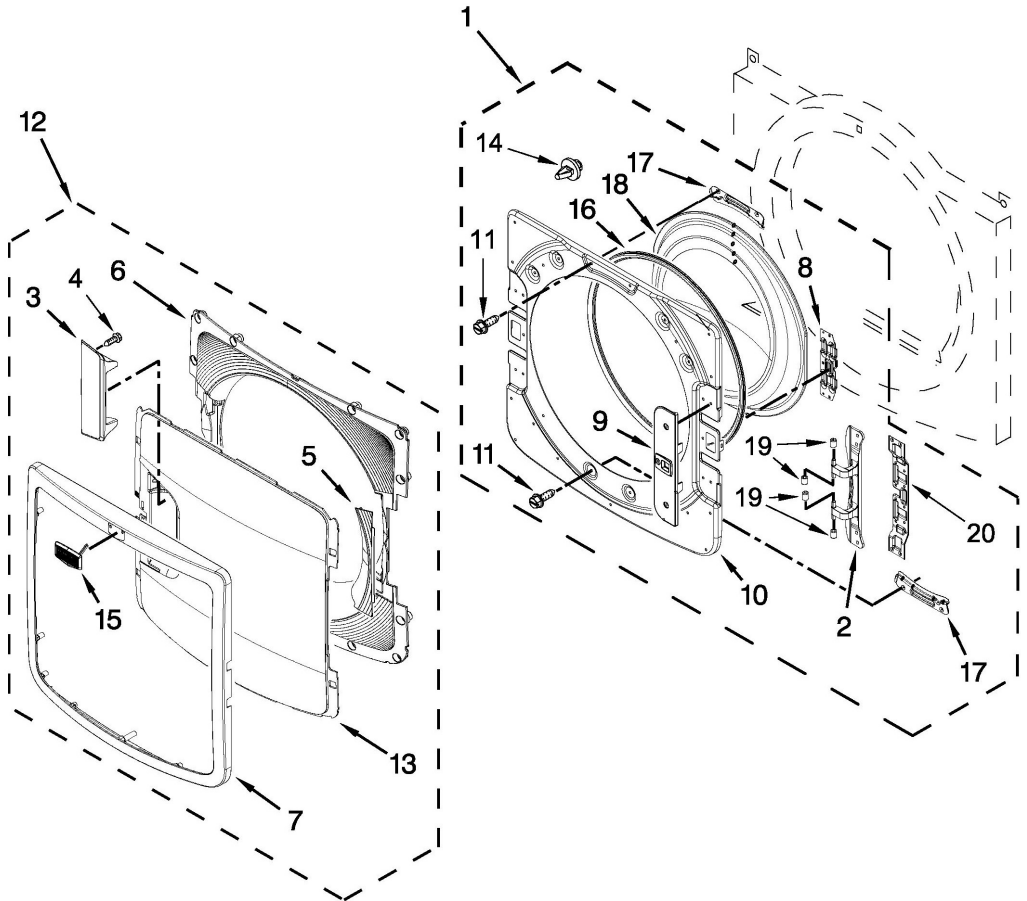

Distribuidor Autorizado

**SurteRápido.com**

Venta de Refacciones  
Electrodomesticas




## Secadora Maytag MGD7000XG0

<b>No. Ilus.</b>	<b>DESCRIPCIÓN</b>	<b>No. de Parte</b>
1	ASSEMBLY, INNER DOOR	W10272387
2	HINGE BASE	W10208415
3	HANDLE, DOOR	W10272398
4	Screw	9742177
5	PLUG, DOOR	W10272400
6	DOOR, INTERMEDIATE	W10272392
7	TRIM, DOOR	W10272390
8	ASSEMBLY, DOOR CATCH	W10208254
9	COVER, DOOR CATCH	W10272404
10	DOOR, INNER	W10285652
11	SCREW	W10288126
12	OUTER DOOR ASSEMBLY	W10272389
13	DOOR, OUTER SCREEN	W10272391
14	BUMPER, DOOR	8572266
15	BADGE (CHROME)	W10316087
16	SEAL, GLASS	W10329710
17	BRACKET, GLASS	W10208252
18	GLASS, DOOR	W10208417
19	CAP, HINGE	W10208398
20	PLATE, HINGE RETAINER	W10208419

## W10307147 BURNER ASSEMBLY PARTS

USE WITH TYPE 1 - NATURAL, TYPE 2 - MIXED,  
AND TYPE 4 - LIQUEFIED PROPANE AND BUTANE GASES

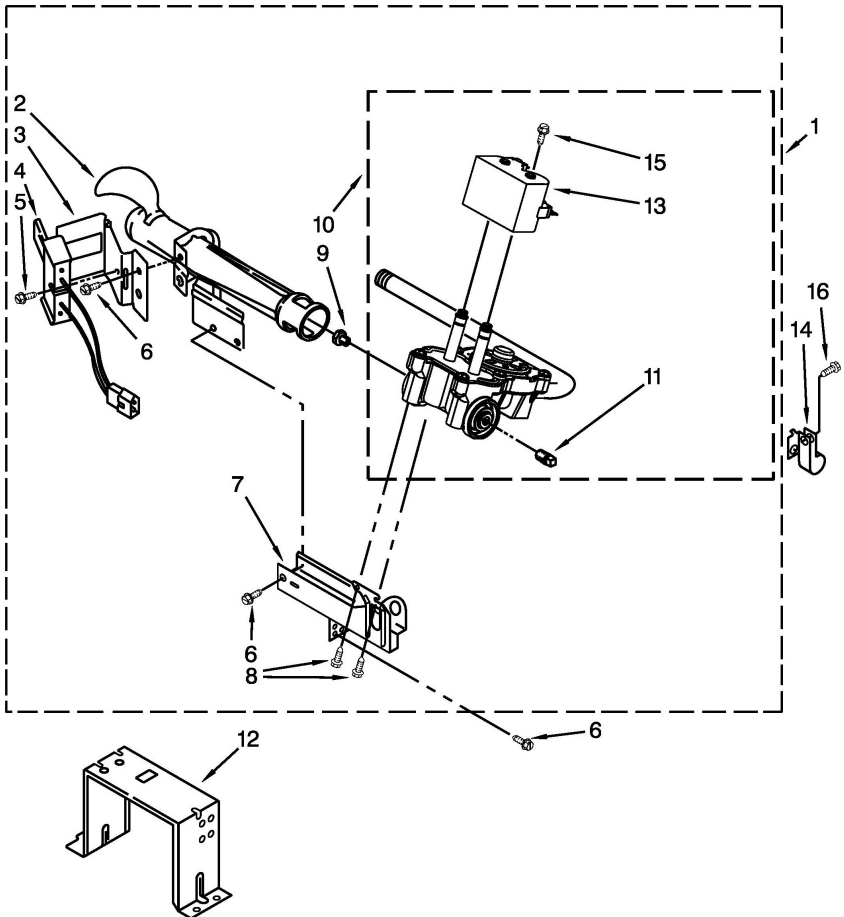

Distribuidor Autorizado

**SurteRápido.com**

Venta de Refacciones  
Electrodomesticas

## Secadora Maytag MGD7000XG0

<b>No. Ilus.</b>	<b>DESCRIPCIÓN</b>	<b>No. de Parte</b>
<b>NI</b>	FOLLOWING PARTS NOT ILLUSTRATED,	N/P
<b>NI</b>	CONVERSION KIT (TYPE 1 AND 2)	W10307153
<b>1</b>	BURNER ASSEMBLY	W10307147
<b>2</b>	Tube, Burner	688617
<b>3</b>	Bracket, Ignitor	694298
<b>4</b>	Ignitor	686590
<b>5</b>	SCREW	3393909
<b>6</b>	SCREW	343641
<b>7</b>	Base, Burner	3389871
<b>8</b>	SCREW	3387057
<b>9</b>	TYPE 1 (NATURAL)	15418
<b>10</b>	VALVE, GAS 60 HZ. (COMPLETE)	W10175144
<b>11</b>	PIPE PLUG	W10295523
<b>12</b>	Bracket, Support	3389889
<b>13</b>	COIL (60 HZ)	W10328463
<b>14</b>	Bracket, Gas Pipe	3978776
<b>15</b>	SCREW	326049536
<b>16</b>	SCREW	3390647