 
 



# SECADORA PCKS443EB1WW

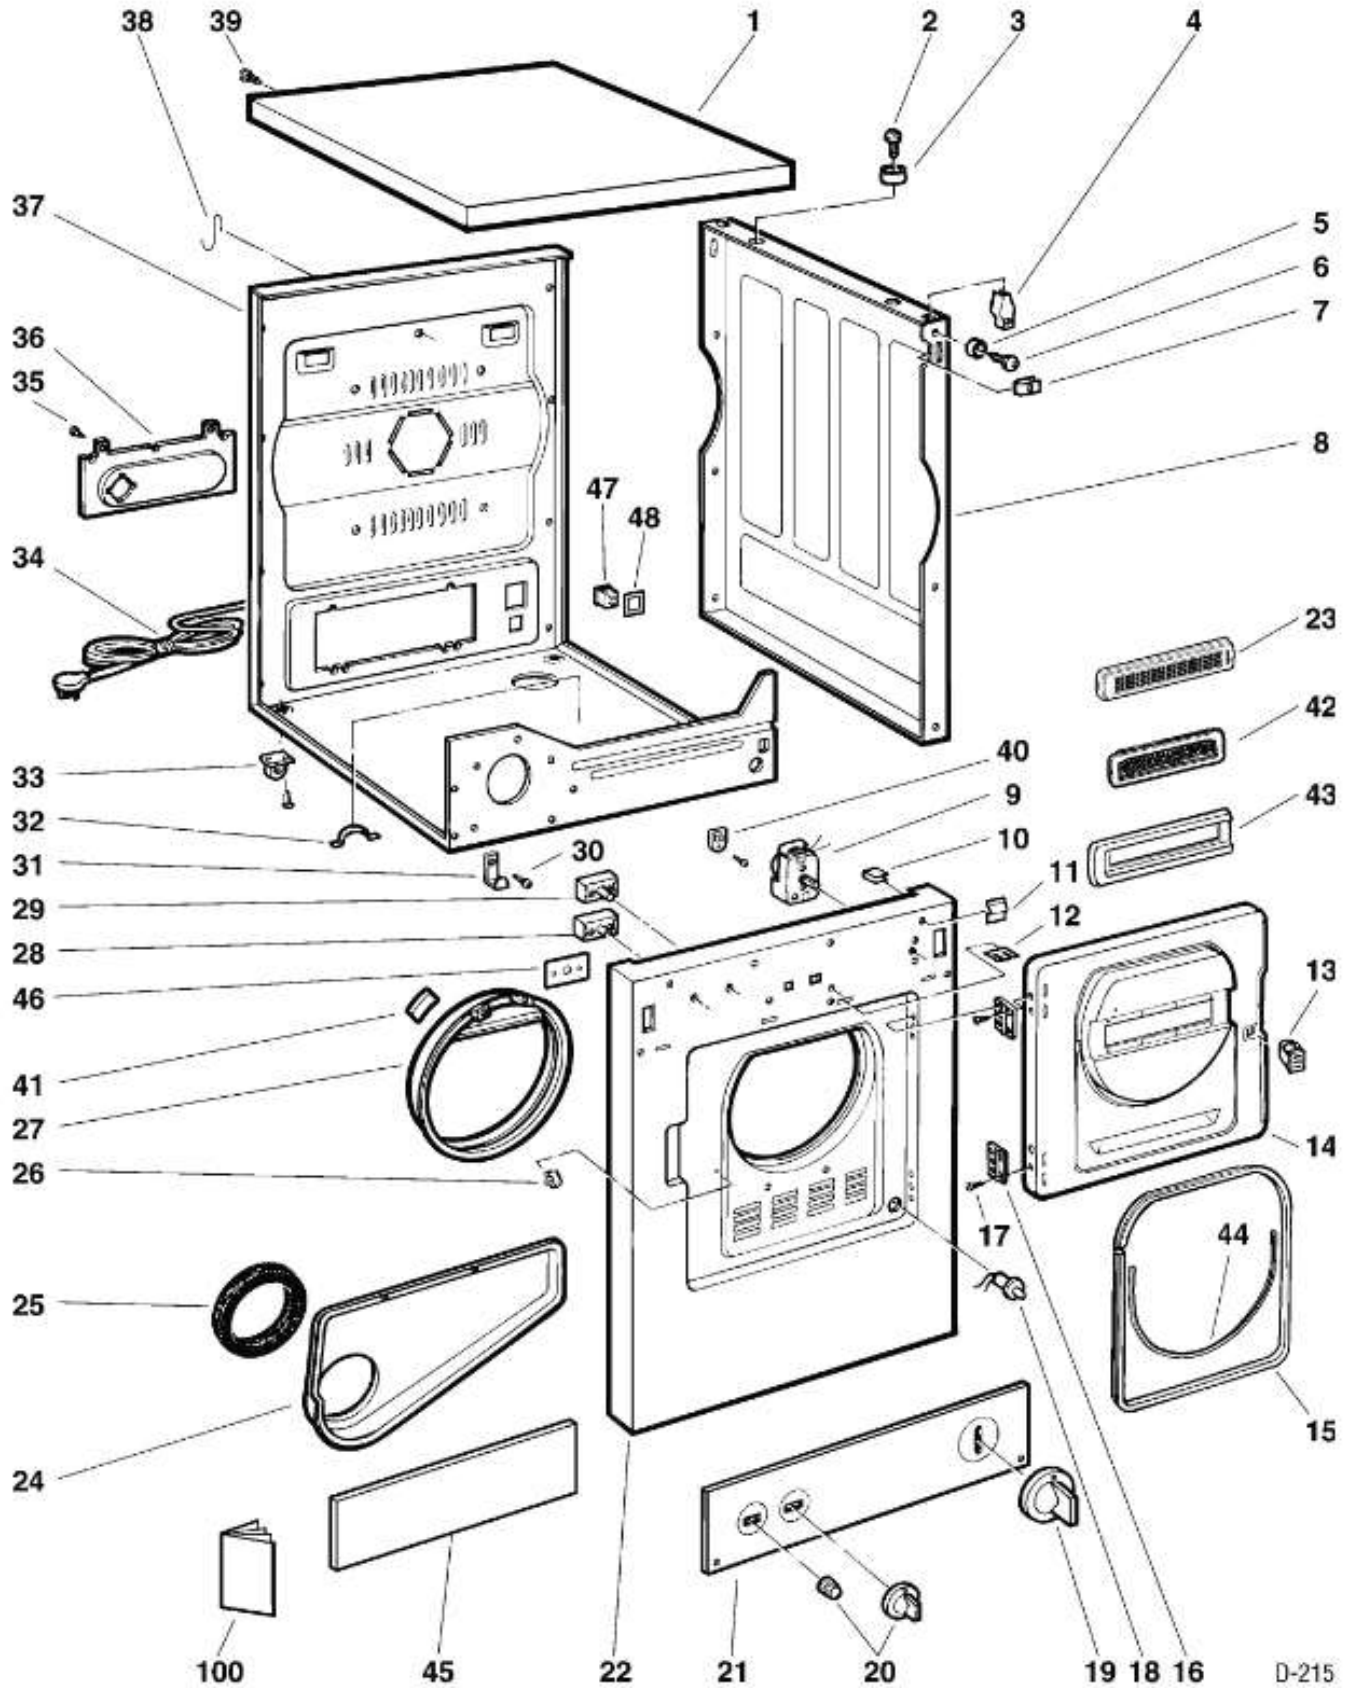

# SECADORA PCKS443EB1WW

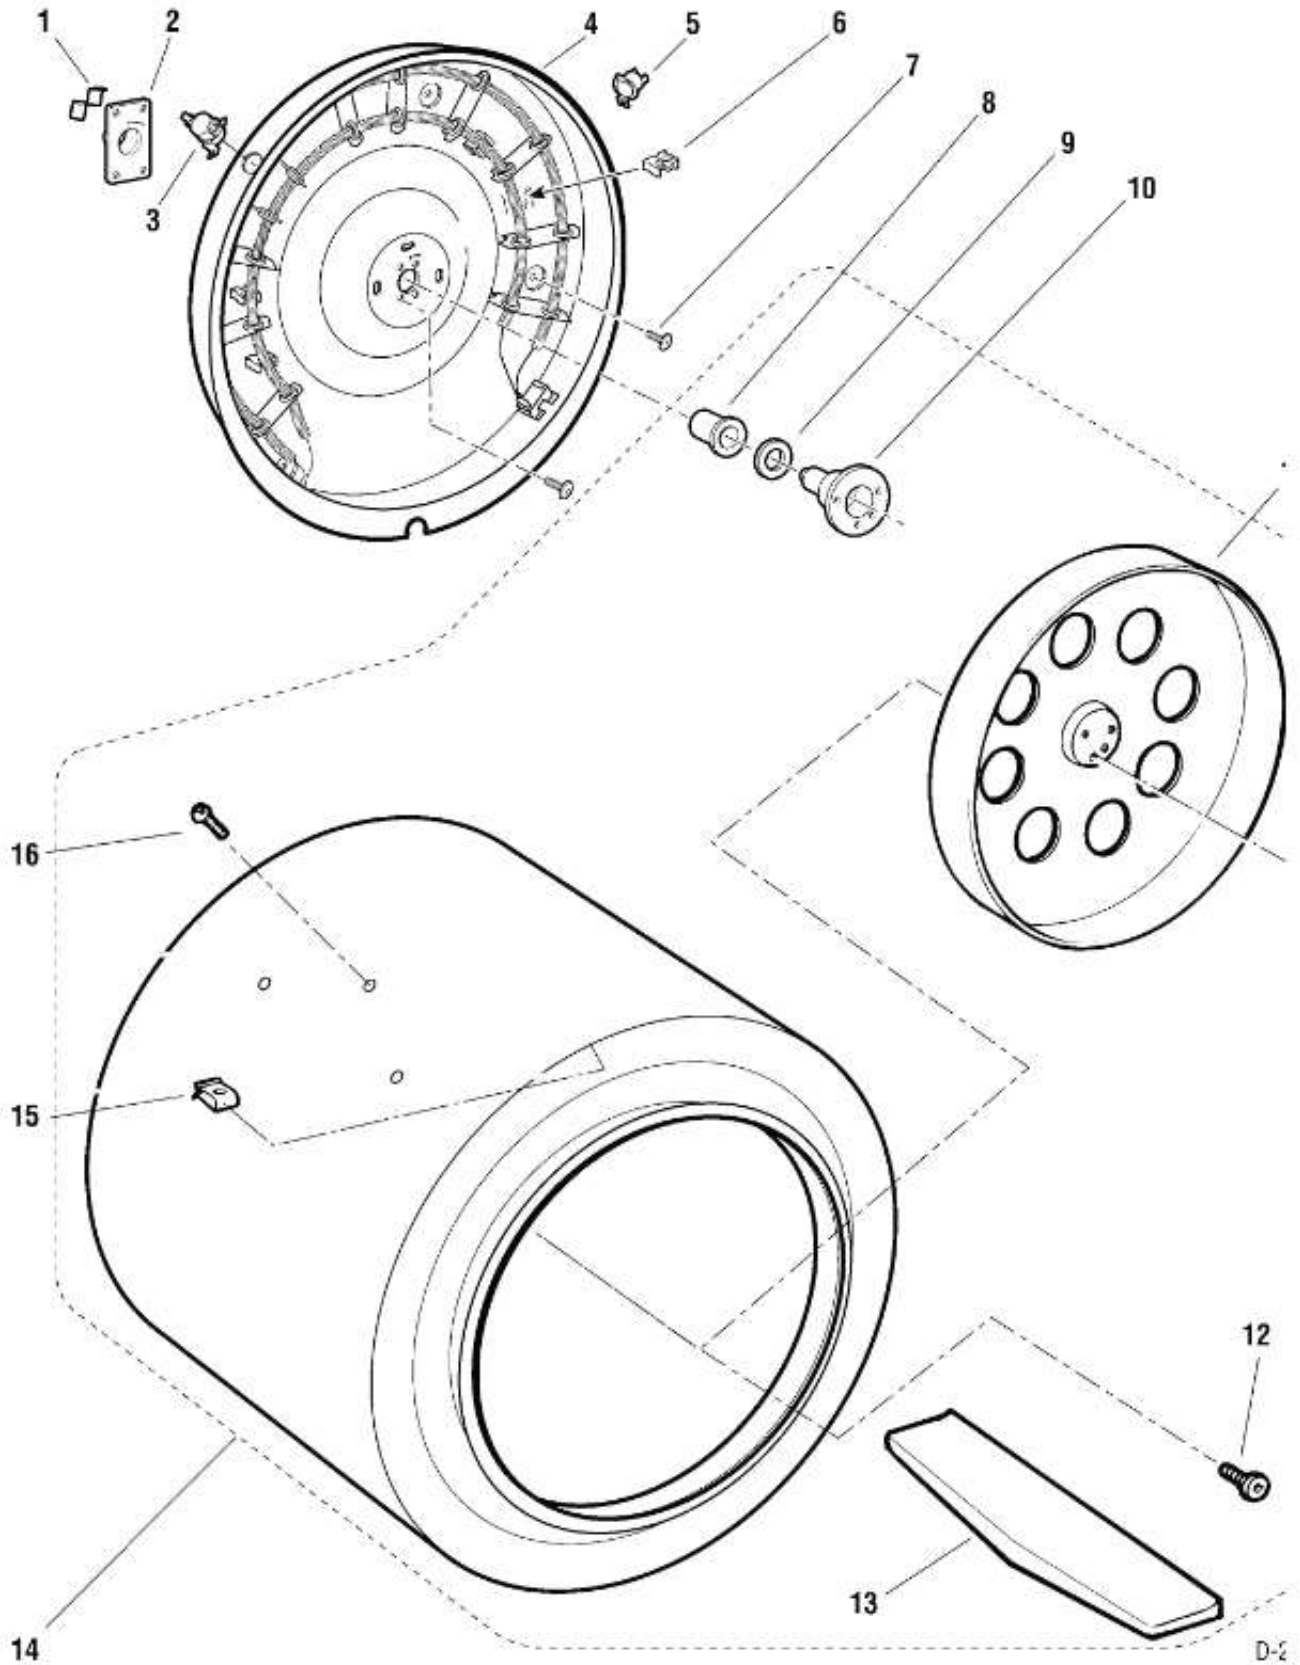
 
# SECADORA PCKS443EB1WW

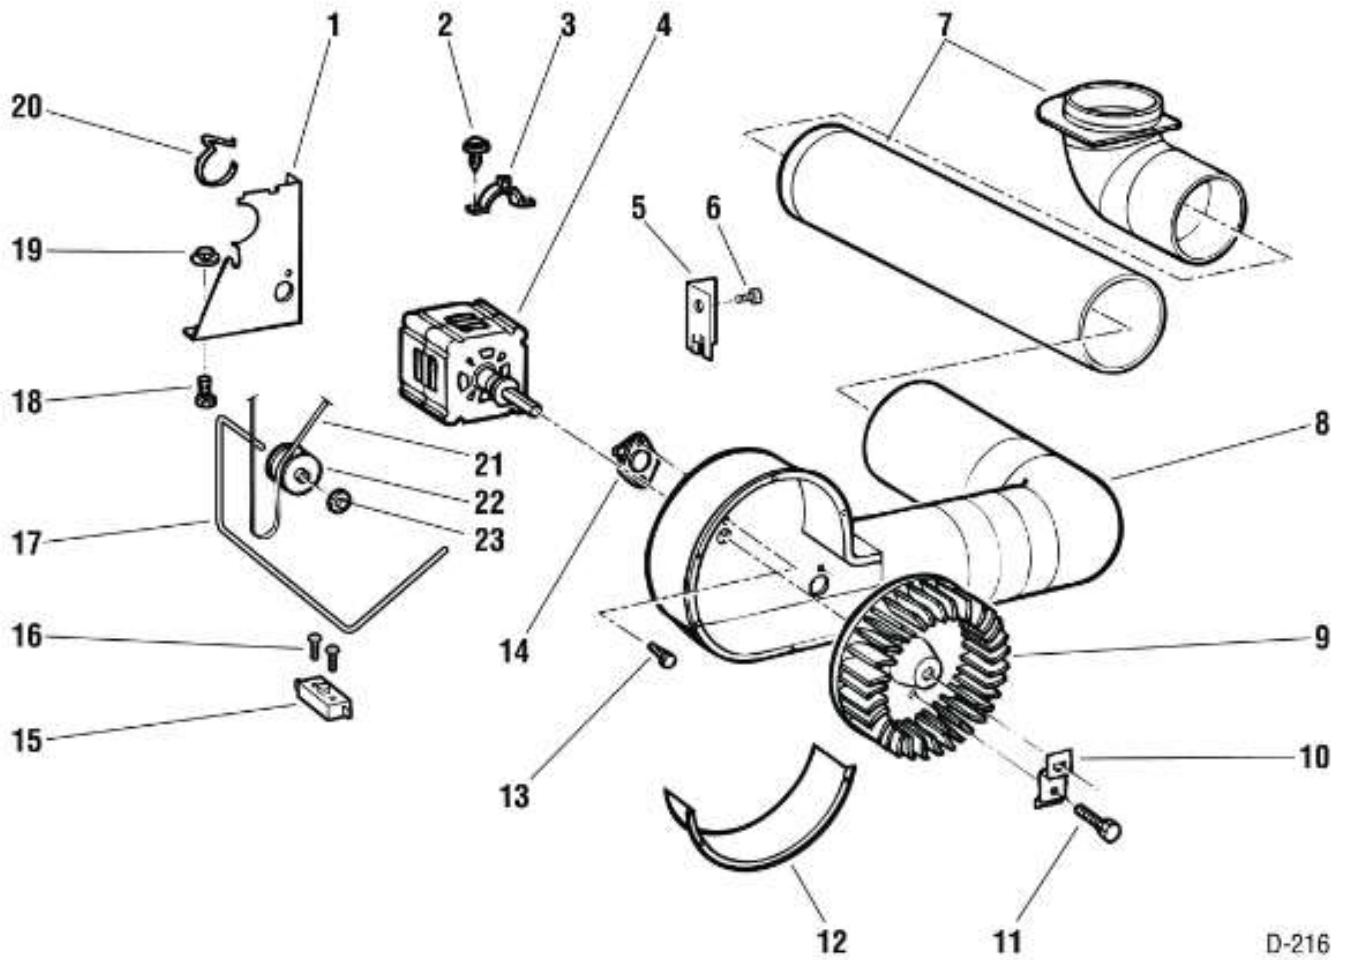

Distribuidor Autorizado

**SurteRápido.com**

Venta de Refacciones  
Electrodomesticas

## SECADORA PCKS443EB1WW

Guía	Componente	Descripción
1	WE13M36	SUPPORT MOTOR
1	WE20M208	TOP COVER W
1	WE1X627	GROUND STRAP
2	WE2M97	SCREW
2	WH2M270	SCREW
2	WE1M300	BUJE PARA SECADORA
3	WE4M136	THERMOSTAT
3	WE13X182	STRAP MOTOR
4	WE11M25	HEATER ASSY (240V MTY)
4	WE17M24	MOTOR & PULLEY
4	WE1M195	CLIP
5	WE4M137	THERMOSTATO
5	WE1M226	BUMPER
5	WE1M493	BRACKET, BELT SWITCH
6	WE2M175	SCREW T
6	WE1M452	CERAMIC INSULATOR
7	WE2X196	CLIP
7	WE1M280	SCREW
7	WE14M41	PLATE ELBOW
8	WE14M97	BLOWER HOUSING ASM.
8	WE20M202	SIDE PANEL W
8	WE1M462	SLEEVE BEARING
9	WE16X16	BLOWER WHEEL
9	WE4M285	TIMER ASM.
9	WE1M461	O RING
10	WE1X406	CLIP, CABLE
10	WE1X688	CLAMP FAN
10	WE3X39	SOPORTE
10	WE3M33	SOPORTE
10	WE3M33	SHAFT & BRACKET ASM
10	WE3M33	SHAFT & BRACKET ASM
10	WE3M33	SHAFT & BRACKET ASM
10	WE3M33	SHAFT & BRACKET ASM
10	WE3M33	SHAFT & BRACKET ASM
11	WE2M95	SPEEDCLIP



Distribuidor Autorizado

**SurteRápido.com**

Venta de Refacciones  
Electrodomesticas

## SECADORA PCKS443EB1WW

Guía	Componente	Descripción
11	WE2M142	SCREW, FAN CLAMP
11	WE14M19	HEAT DEFLECTOR
12	WE1M317	RETAINER
12	WE1X689	BAFFLE
12	WE2M163	SCREW #10
13	WE1M197	LATCH DOOR
13	WE14M32	BAFFLE DRUM
14	WE10M86	OUTER DOOR W
14	WE10M94	INNER DOOR WH
14	WE21M17	DRUM (3.5-2K1)
14	WE4M286	THERMOSTAT, BIASED
15	WE9M16	SELLO PUERTA
15	WE1X762	CLIP
15	WD21X557	SWITCH INTER.
16	WE1M394	HINGE DOOR
16	WE2M167	SCREW
16	WE2M174	SCREW #10
17	WE2M153	SCREW
17	WE3M18	SPRING
18	WE4M41	SWITCH DOOR
18	WE2X194	SCREW (12)
19	WE2X154	NUT
19	WE1M450	TIMER KNOB ASM. (WHITE)
20	WE1M451	KNOB
20	WE1M361	BUTTON SWITCH
20	WE1X921	MOTOR STRAP
20	189D1233G001	KNOB
20	143B8986G025	PERILLA ROTAT. G.E. ENS.
21	WE19M1251	TRIM, SWITCH
21	WE12M9	BELT
22	WE20M309	PANEL, FRONT (WHITE)
22	WE12M8	PULLEY IDLER
23	WE1M406	GRID
23	WE2M96	NUT CAP
23	WE2X329	NUT CAP

Distribuidor Autorizado

**SurteRápido.com**

Venta de Refacciones  
Electrodomesticas

## SECADORA PCKS443EB1WW

Guía	Componente	Descripción
24	WE14M60	TRAP DUCT
25	WE9X35	SEAL FELT
26	WE1X1192	TOPE PUERTA
27	WE3M21	SLIDE BEARING
28	WE4M145	SWITCH
29	WE4M242	SWITCH TEMP
30	WE2X263	SCREW
30	WE2X263D	SCREW
31	WE1M193	BRACKET EXPORT
34	WE26M327	CORD SET T
36	WE1M194	KNOCKOUT
36	WE1M341	PLATE, COVER
37	WE1M225	COVER KNOCKOUT
37	WE20M312	BASE, CABINET
38	WE1M155	CORD CLIP
39	WH2M388	SCREW
39	WR2X9260	SCREW
40	WE4M255	RESISTOR 45000 OHM
41	WE1M404	SLIDE
42	WE18M20	FILTER
43	WE1M407	SLIDE
44	WE9M17	GASKET
45	WE1M465	INSULATION, CABINET
46	WE1M456	SHIELD, START SWITCH
47	WE4M118	RECEPTACLE
48	WE1M455	PLATE, RECEPTACLE
100	WE6M554	GUIDE, USE & CARE
100	WE6M566	DIAGRAM, WIRING