


Motor y turbina

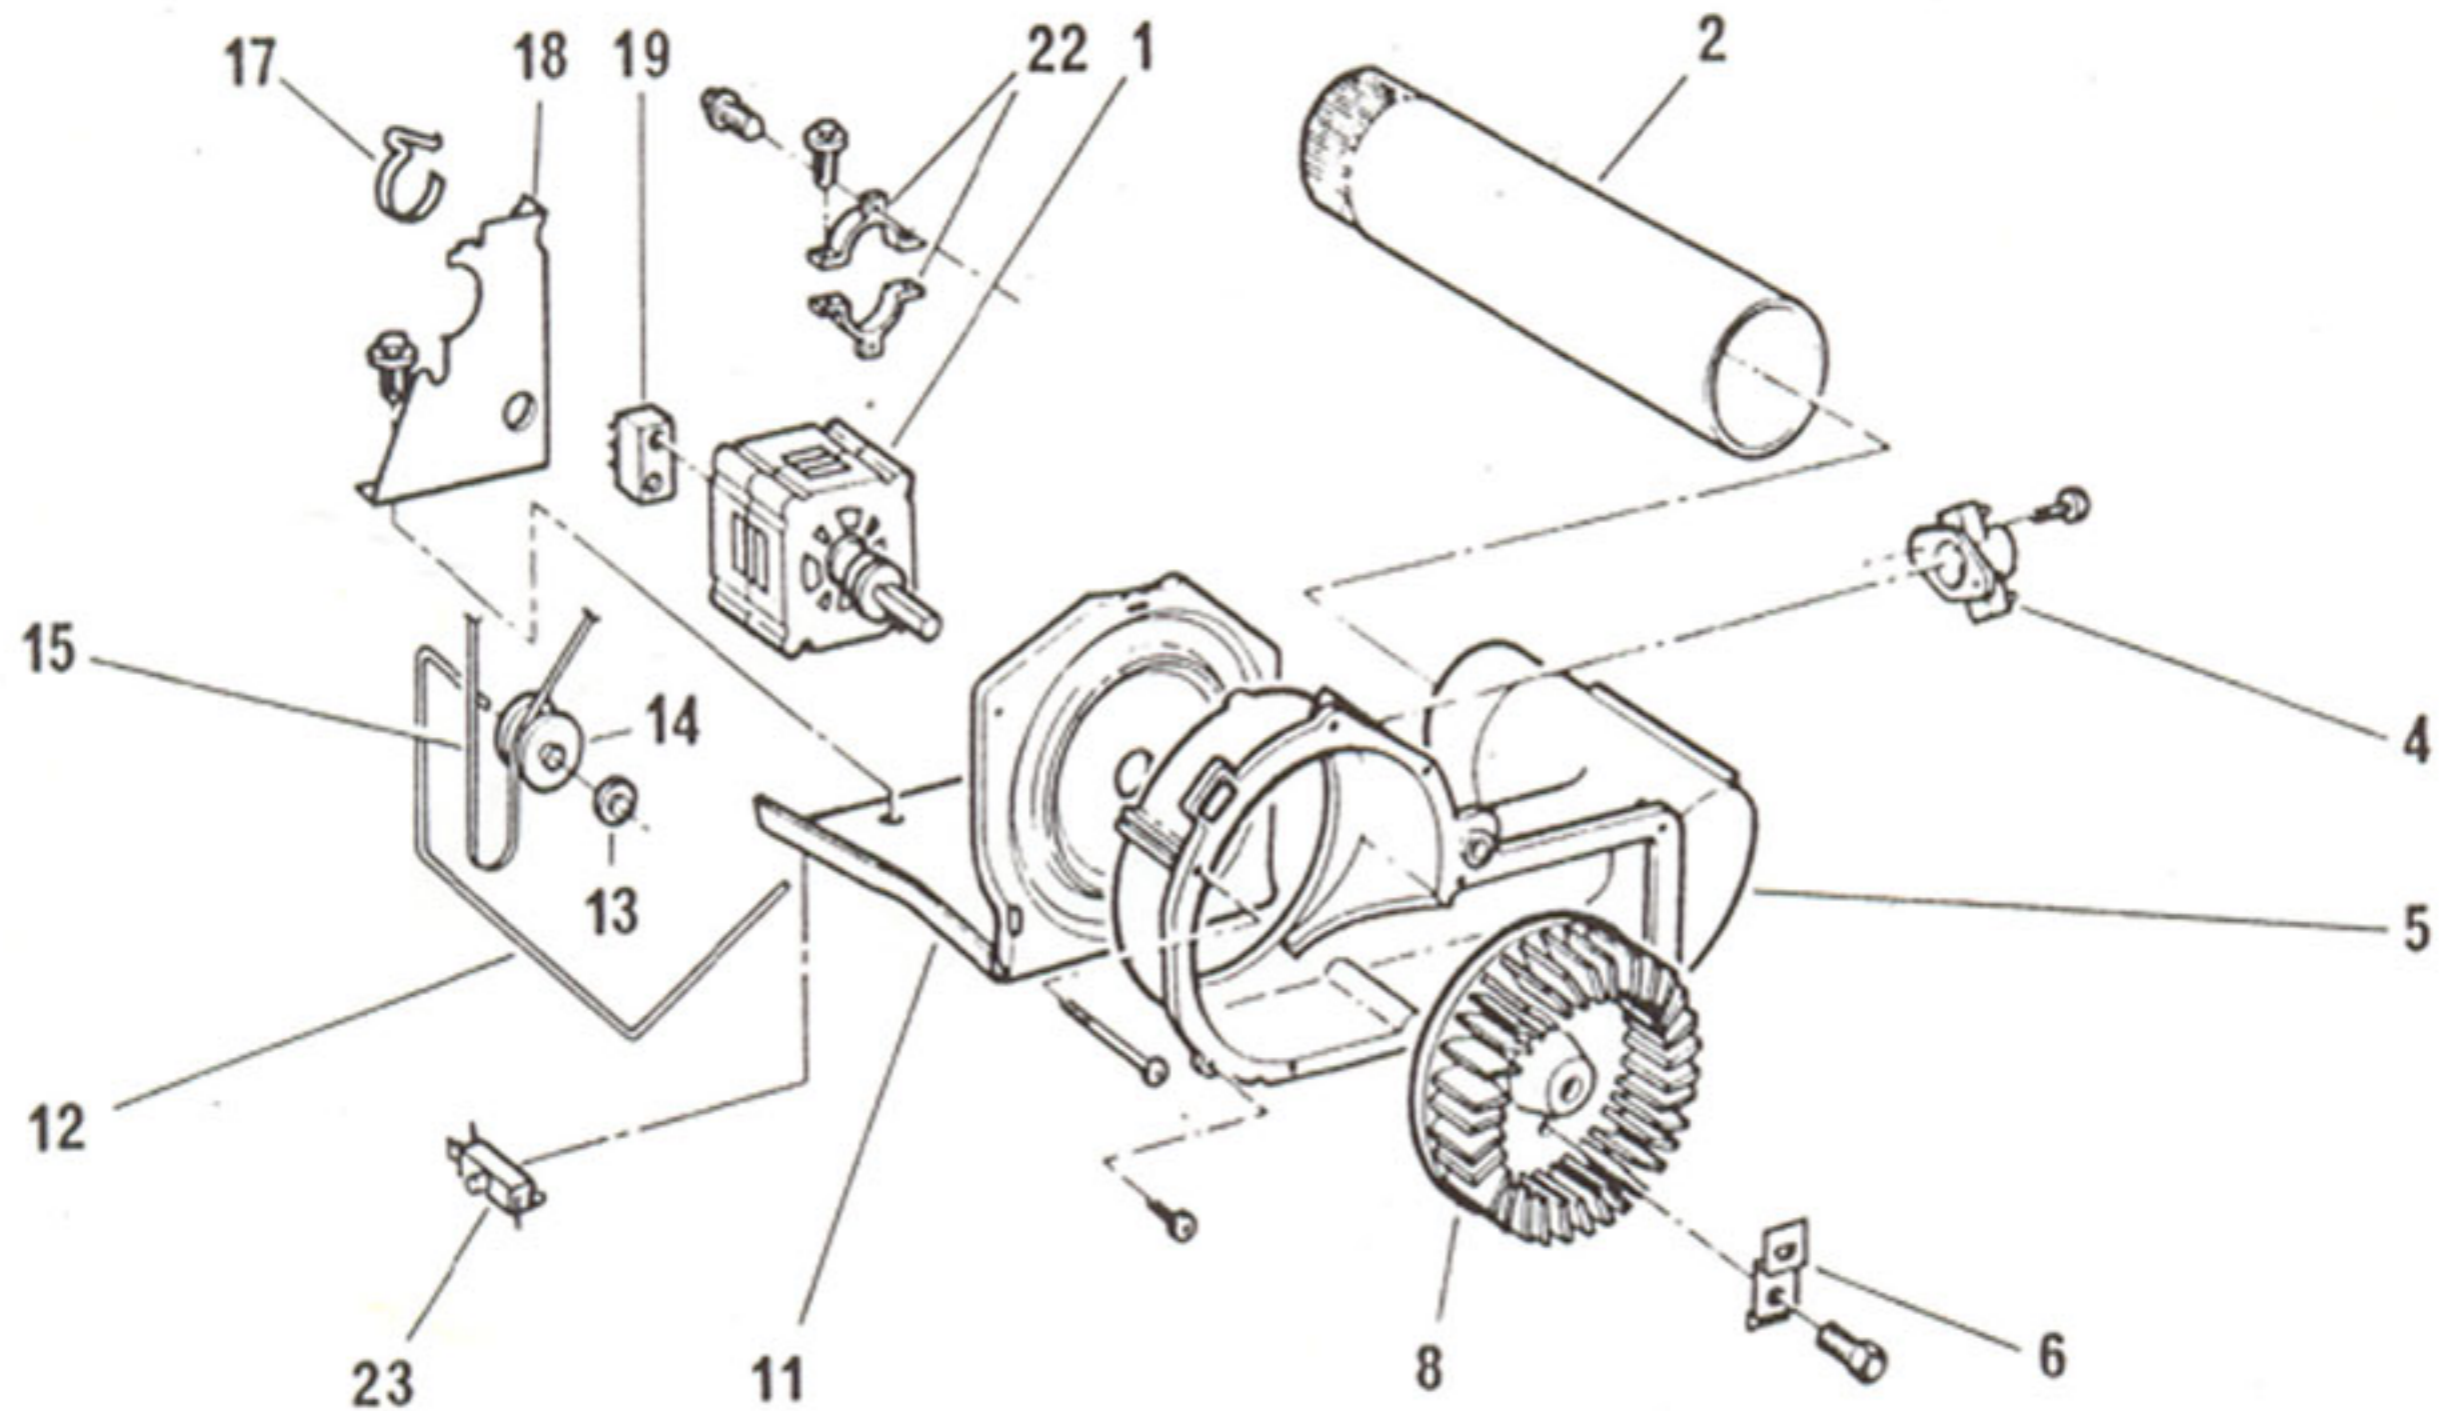


Motor y turbina

SECADORA EASY-GE
PARTES DE :
MOTOR Y TURBINA

EASY			G.E.		
S	S	S	S	S	
E	E	E	G	G	
A	A	A	E	E	
9	9	9	9	7	
5	5	7	7	9	
4	4	4	0	0	
L	L	Z	L	Z	
6	6	6	6	6	
V	V	V	V	V	
O	O	O	O	O	
A	W	W	A	W	
A	W	W	A	W	

GUIA	NUMERO	DESCRIPCION	CANTIDAD						
1	WE17M22	MOTOR Y POLEA	1	1			1	1	
1	WE17M25	MOTOR Y POLEA			1				
2	WE14M54	TUBO DE ESCAPE	1	1	1		1	1	
4	WE4M156	TERMOSTATO	1	1	1		1	1	
5	WE14M78	CAJA TURBINA	1	1	1		1	1	
6	WE1X688	ABRAZADERA Y TORNILLO	1	1	1		1	1	
8	WE16X30	TURBINA	1	1	1		1	1	
11	WE13M25	SOPORTE MOTOR	1	1	1		1	1	
12	WE3M17	RESORTE TENSOR	1	1	1		1	1	
13	WE2M961	TUERCA TAPON	1	1	1		1	1	
14	WE12M81	POLEA TENSORA	1	1	1		1	1	
15	WE12M22	BANDA	1	1	1		1	1	
17	WE1X921	ABRAZADERA MOTOR	1	1	1		1	1	
18	WE13M22	SOPORTE MOTOR	1	1	1		1	1	
22	WE13X182	ABRAZADERA MOTOR	1	1	1		1	1	
23	WD21X557	SWITCH	1	1	1		1	1	

Tablero de control

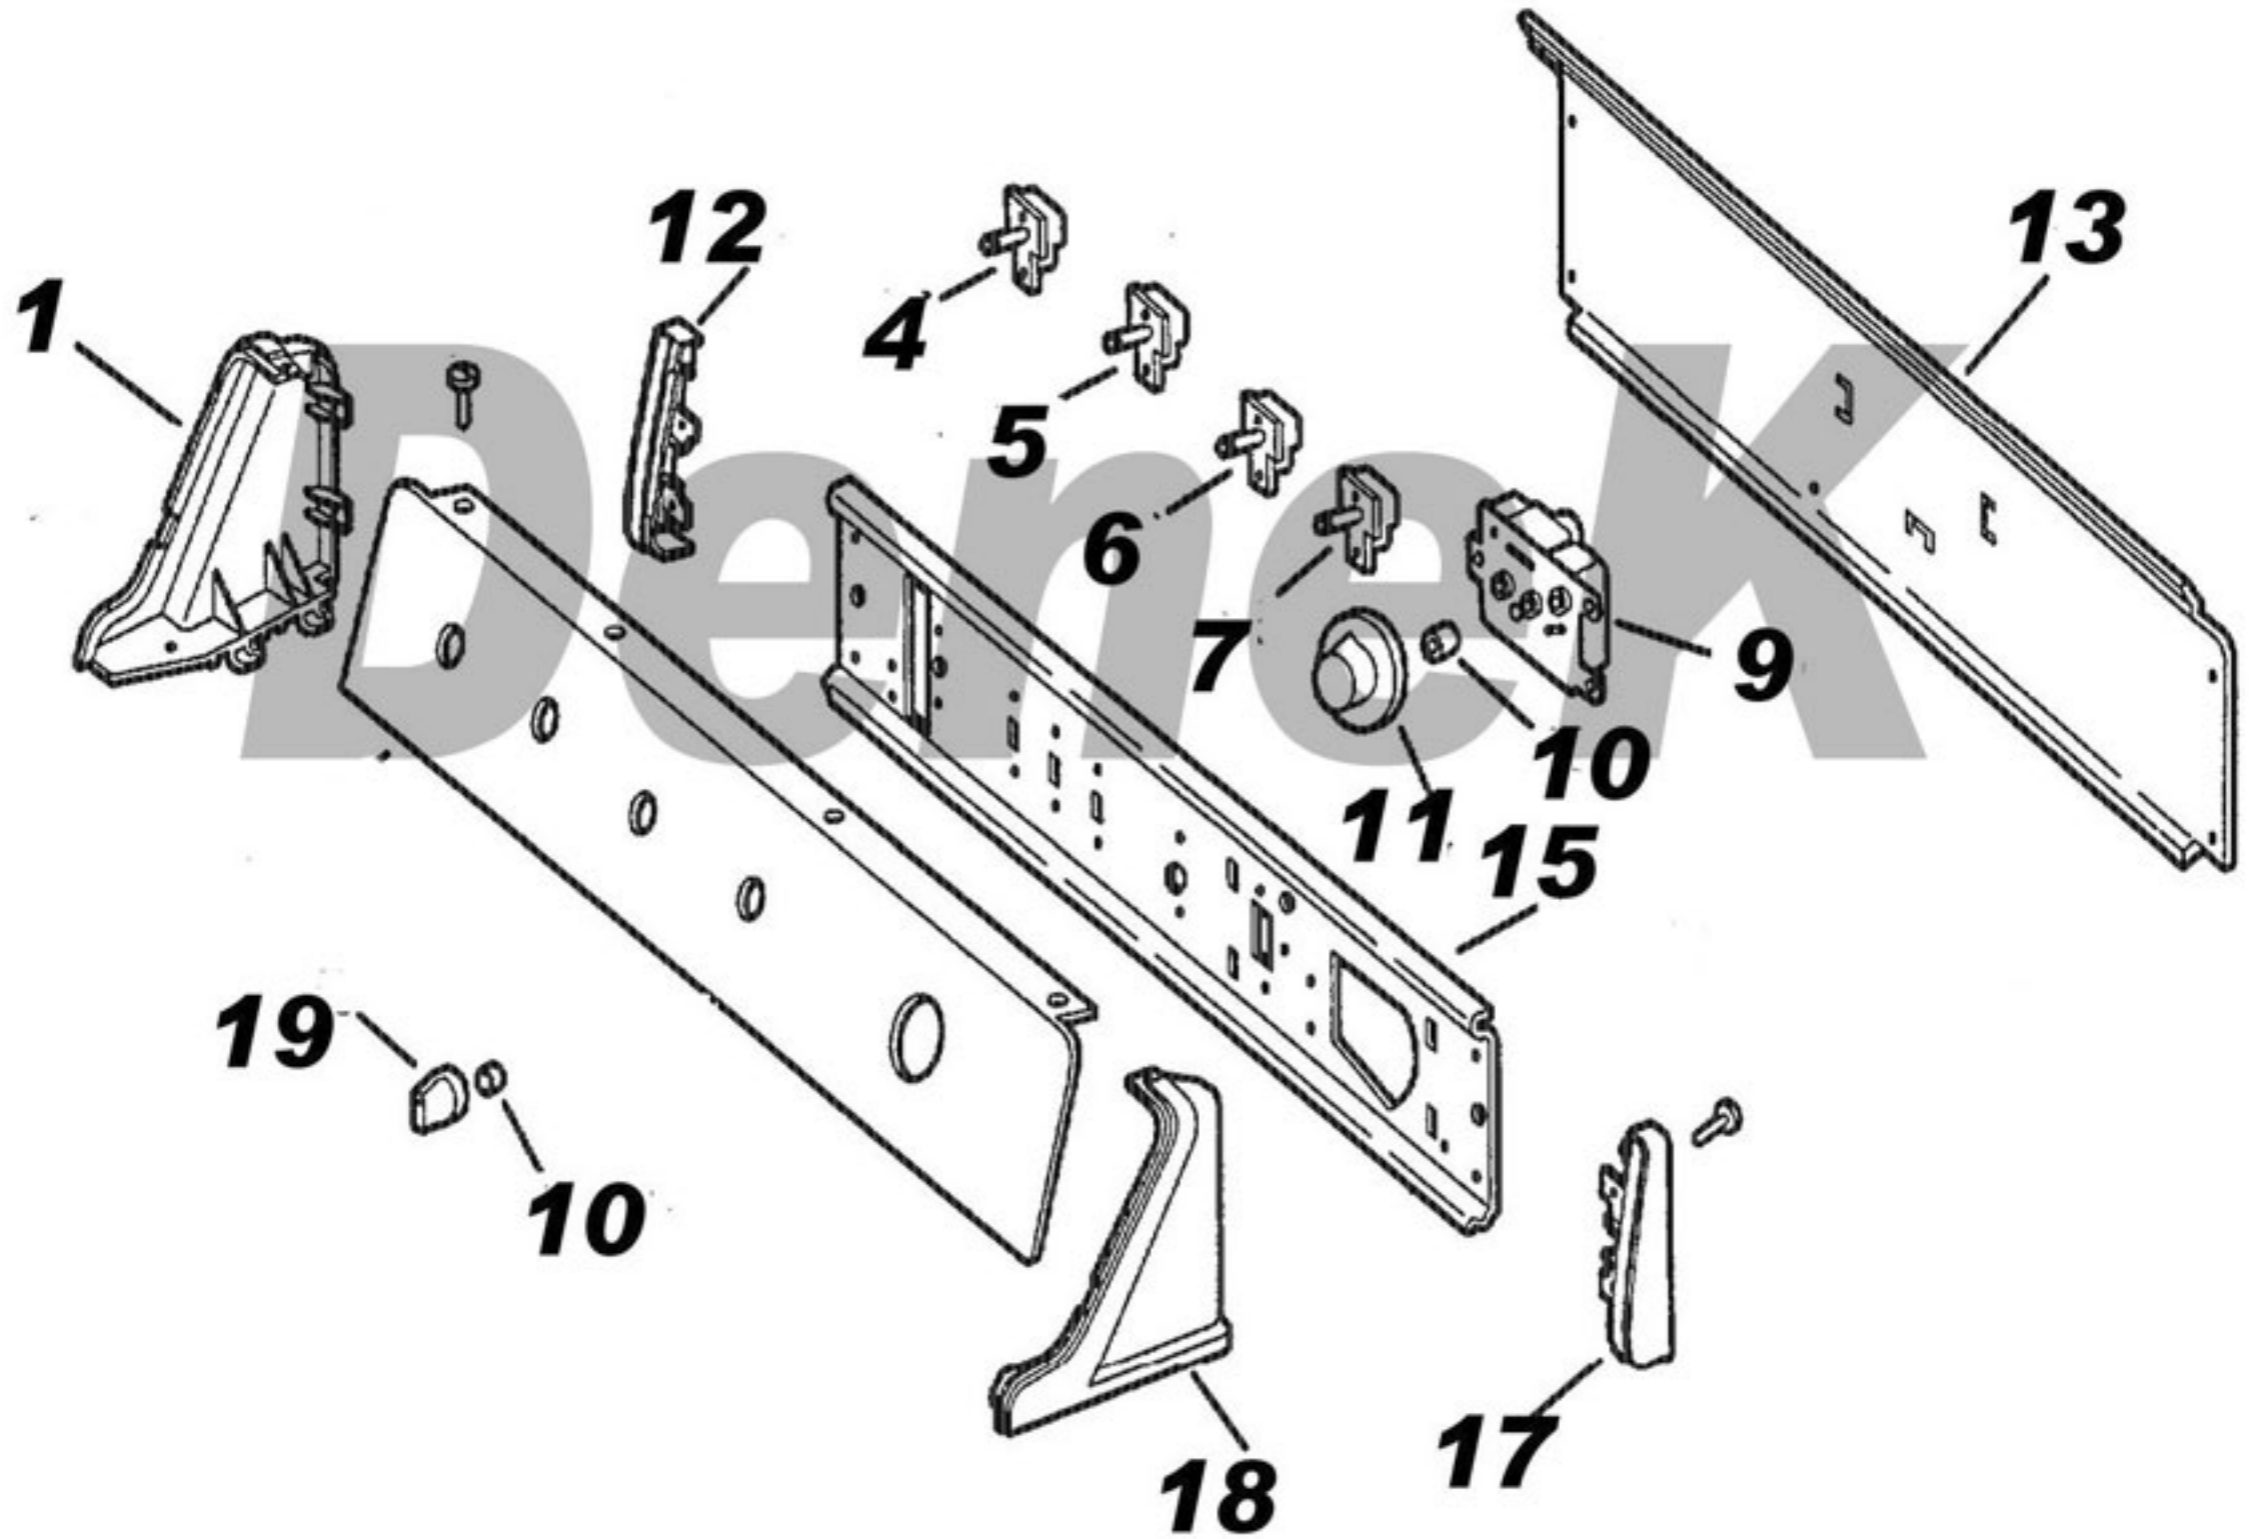


SECADORA EASY - G.E.
 PIEZAS DE:
 TABLERO CONTROL

EASY		G.E.
S	S	S
E	E	G
A	A	E
9	9	9
5	5	7
4	4	0
L	L	L
6	6	6
V	V	V
O	O	O
A	W	A
A	W	A

GUIA	NUMERO	DESCRIPCION	CANTIDAD		
1	WE19M940	REMATE IZQ.		1	
1	WE19M984	REMATE IZQ.	1		
2	WE19M1031	VISTA TABLERO	1		
2	WE19M1036	VISTA TABLERO		1	
2	WE19M1039	VISTA TABLERO			
4	WE4X881	SWITCH ENCENDIDO	1	1	
5	WE4M180	SWITCH TEMPERATURA	1	1	
6	WE4M177	SWITCH			
7	WH12X1005	TIMBRE			
9	WE4M188	TIMER	1	1	
9	WE4M189	TIMER			1
10	WE1M140	CLIP PERILLA	3	3	5
11	WE1X1267	PERILLA TIMER	1		
11	WE1M425	PERILLA TIMER		1	
11	WE1M427	PERILLA TIMER			1
12	WE19M987	SOP. REMATE IZQ.			1
12	WE19M1033	SOP. REMATE IZQ.	1		
12	WE19M1037	SOP. REMATE IZQ.		1	
13	WE20X811	PANEL	1	1	
15	WE19M1032	SOPORTE SWITCH	1	1	
15	WH46X340	SOPORTE SWITCH			1
17	WE19M988	SOPORTE REMATE DER.			1
17	WE19M	SOPORTE REMATE DER.	1		
17	WE19M1038	SOPORTE REMATE DER.		1	
18	WE19M941	REMATE DER.		1	
18	WE19M985	REMATE DER.	1		1
19	WE1M423	PERILLA SWITCH	2		
19	WE1M425	PERILLA SWITCH		2	
19	WE1M428	PERILLA SWITCH			4

Frente y puerta

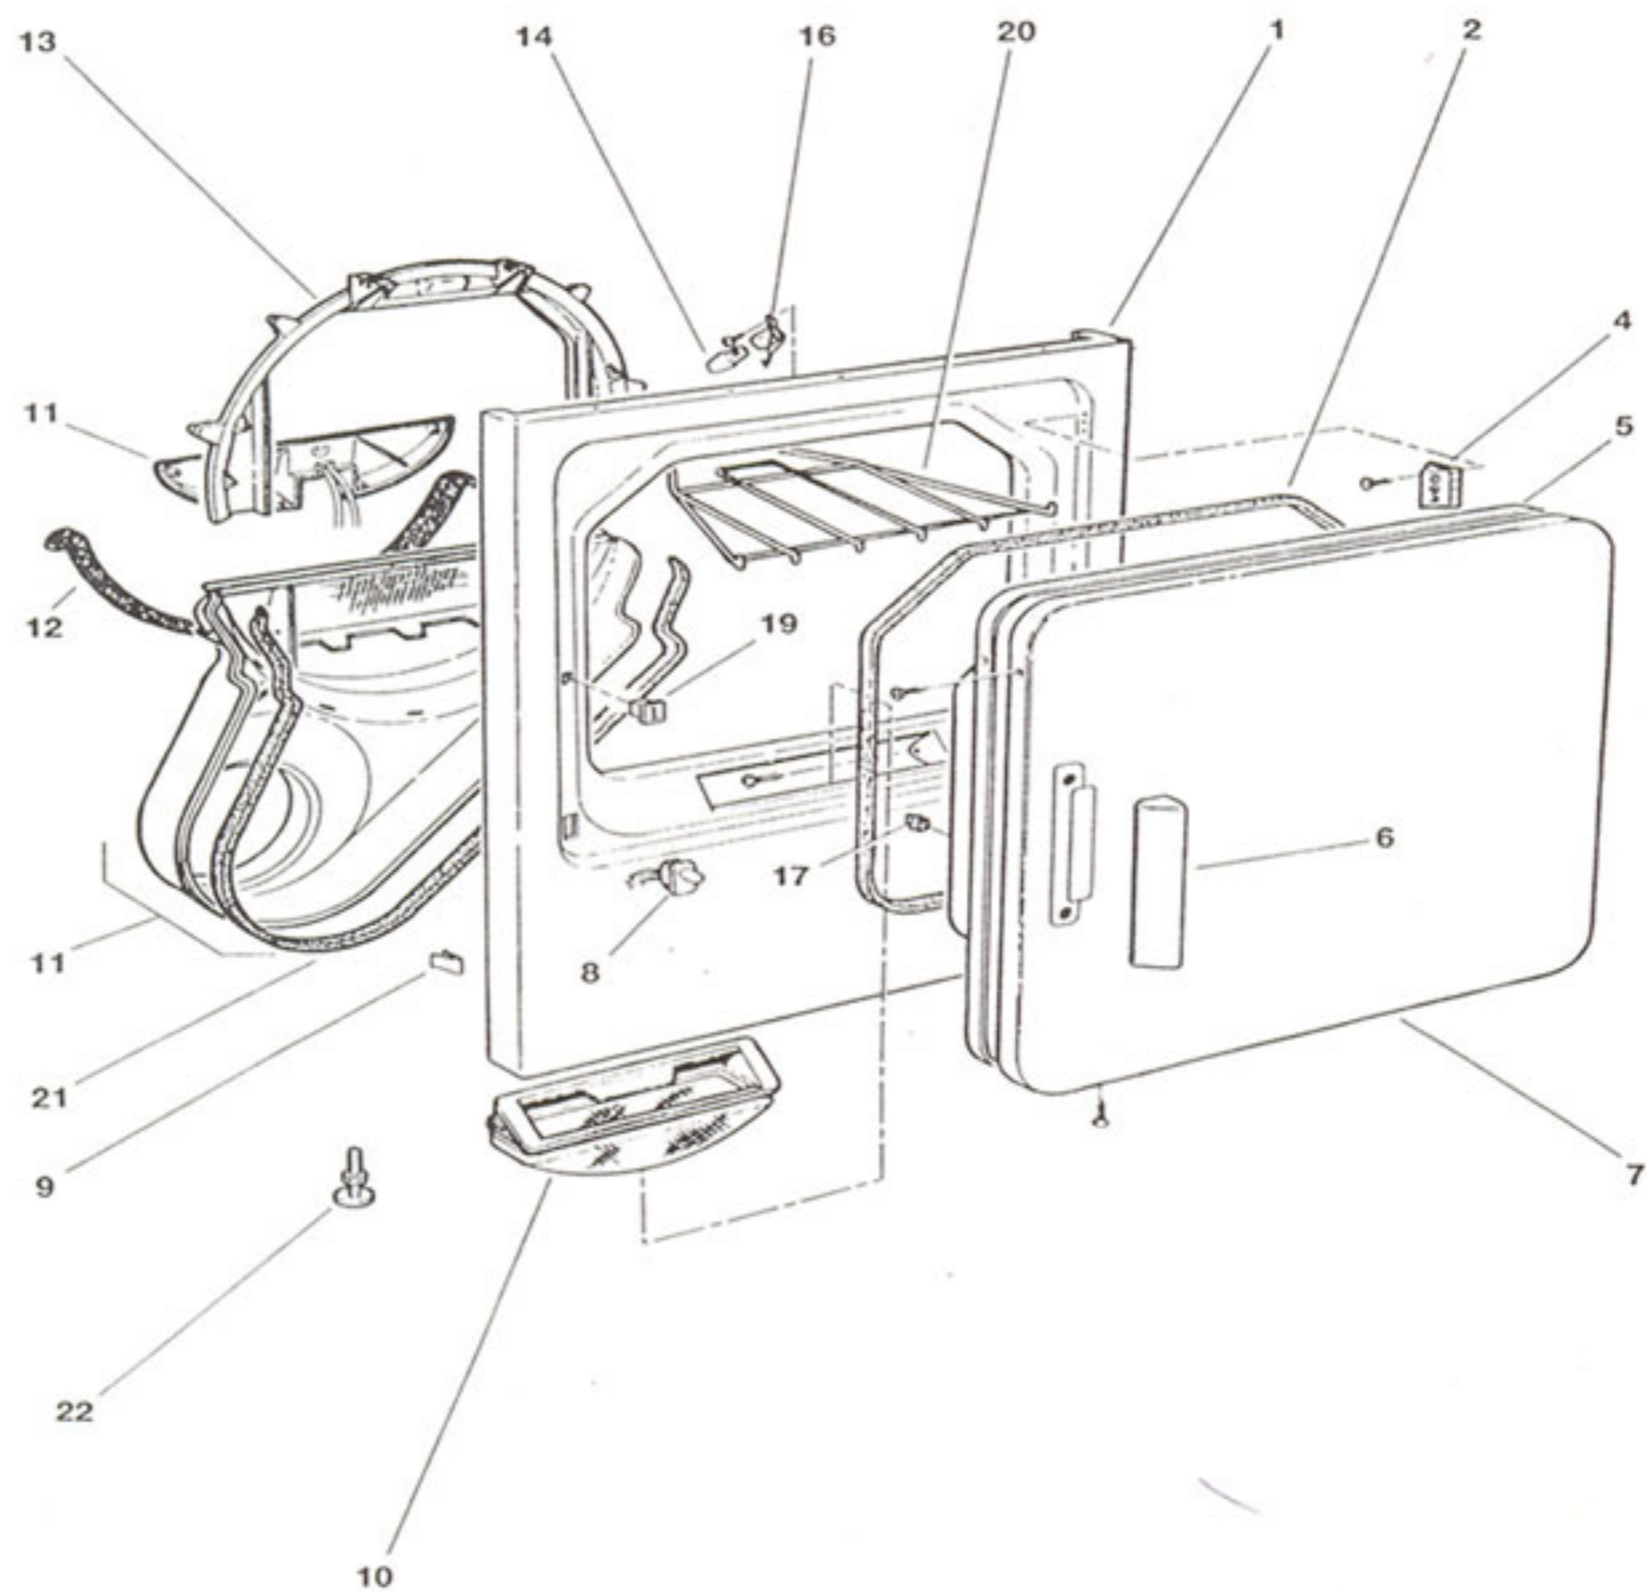

SECADORA EASY - G.E.

PIEZAS DE:

FRENTE Y PUERTA

EASY			G.E.	
S	S	S	S	S
E	E	E	G	G
A	A	A	E	E
9	9	9	9	7
5	5	7	7	9
4	4	4	0	0
L	L	Z	L	Z
6	6	6	6	6
V	V	V	V	V
O	O	O	O	O
A	W	W	A	W
A	W	W	A	W

GUIA	NUMERO	DESCRIPCION	CANTIDAD				
1	WE2M254	FRENTE GABINETE		1	1		1
1	WE20M255	FRENTE GABINETE	1				1
2	WE9M13	EMPAQUE	1	1	1		1
4	WE1M394	BISAGRA	2	2	2		2
5	WE10M92	PANEL PUERTA INT.		1	1		1
5	WE10M93	PANEL PUERTA INT.	1				1
6	WE1M380	JALADERA	1				1
6	WE1M381	JALADERA			1		1
7	WE10M96	PUERTA PANEL		1	1		1
7	WE10M97	PUERTA PANEL	1				1
8	WE4M126	SWITCH PUERTA	1	1	1		1
9	WE1X762	CLIP TIERRA	2	2	2		2
10	WE18M19	ATRAPAPELUSA	1	1	1		1
11	WE14M76	DUCTO DE AIRE	1	1	1		1
11	WE14M79	DUCTO DE AIRE					1
12	WE9M15	EMPAQUE FIELTRO	1	1	1		1
13	WE1M316	DESLIZADOR TAMBOR	2	2	2		2
13	WE1M333	DESLIZADOR TAMBOR	2	2	2		2
13	WE3M20	SOPORTE TAMBOR	1	1	1		1
14	WE4X718	FOCO			1		1
16	WE5M5	ENS. SOCKET			1		1
17	WE1M314	MUELLE CERROJO	1	1	1		1
19	WE1M197	CONTRA CERROJO	2	2	1		1
20	WE1M396	REJILLA			1		1
21	WE1M376	EMPAQUE	1	1	1		1