





Guía	Refacción	Descripción
1	WG04L07063	SUB ENSAMBLE PUERTA
2	WG04L07054	CUBIERTA BISAGRA PUERTA
3	WG04L07062	INTERRUPTOR DE CUBIERTA
4	WG04L07060	ENS. PANEL FRONTAL
5	WG04L07050	ASIENTO FIJO
6	WG04A04842	RIEL SUPERIOR DELANTERO
7	WG04L07056	ENS CHIMENEA DE AIRE
8	WG04F12313	ENS FILTRO DE PELUSAS
9	WG04L07058	ENS. SOPORTE FRONTAL
10	WG04F12320	LÁMPARA
11	WG04L07052	CUBIERTA LÁMPARA
13	WG04L07061	SUBENSAMBLE BASE
14	WG04F12314	ENS. TUBO VENTILACIÓN TRASERO
17	WG04L07051	PIN DEL PANEL FRONTAL
18	WG04L07059	PLACA LATERAL
19	WG04F12317	VÁLVULA ENTRADA AGUA
20	WG04L07095	TAPA DEL AGUJERO
21	WG04A04849	CINTURÓN
22	WG04L07146	CUBIERTA POSTERIOR GABINETE
23	WG04L07094	SOPORTE DE LA CESTA
24	WG04F12367	AIR FLUE ASSEMBLY
25	WG04F12375	INTERNAL WIRE ASSEMBLY
26	WG04F12372	CABLE TOMACORRIENTE
27	WG04L07092	MONTAJE DE LA CESTA
28	WG04L07091	PLACA DE CUBIERTA SUPERIOR
29	WG04F12368	TARJETA CONTROL
30	WG04L07090	PLACA LATERAL
32	WG04F12369	TARJETA CONTROL
33	WG04L07083	CUBIERTA TRASERA DE CONTROL
34	WG04L07084	SUBENSAMBLE PANEL DE CONTROL
35	WG04L07086	ENS PERILLA
36	WG04L07057	ENS. LÁMINAS FIJAS
37	WG04L07053	ENS. IMPULSOR
38	WG04L07055	ENS. ESPIRAL
39	WG04F12318	SENSOR DE TEMPERATURA
40	WG04F12315	TERMOSTATO
41	WG04F12312	MOTOR ASÍNCRONO MONOFÁSICO

<b>Guía</b>	<b>Refacción</b>	<b>Descripción</b>
42	WG04A04844	RESORTE DEL CLIP
43	WG04A04839	SOPORTE ENS. POLEA TENSORA
44	WG04F12316	INTERRUPTOR DE SEGURIDAD
45	WG04A04843	RESORTE
46	WG04A04841	SOPORTE MOTOR
47	WG04F12377	ENS VÁLVULA GAS
48	WG04A04884	SOPORTE
49	WG04A04840	SOPORTE DEL CALENTADOR
50	WG04A04888	AGUJA DE ENCENDIDO
51	WG04F12374	INTERRUPTOR DE LLAMA
52	WG04F12366	CÁMARA DE COMBUSTIÓN
53	WG04F12370	TERMOSTATO
54	WG04A04885	SOPORTE
55	WG04F12371	TERMOSTATO
56	WG04L07145	QUEMADOR
57	WG04F12373	ENS CABLE INTERNO
58	WG04A04848	FELT
59	WG04L07085	ELEVADOR