


Refrigerador Whirlpool WD2620S00

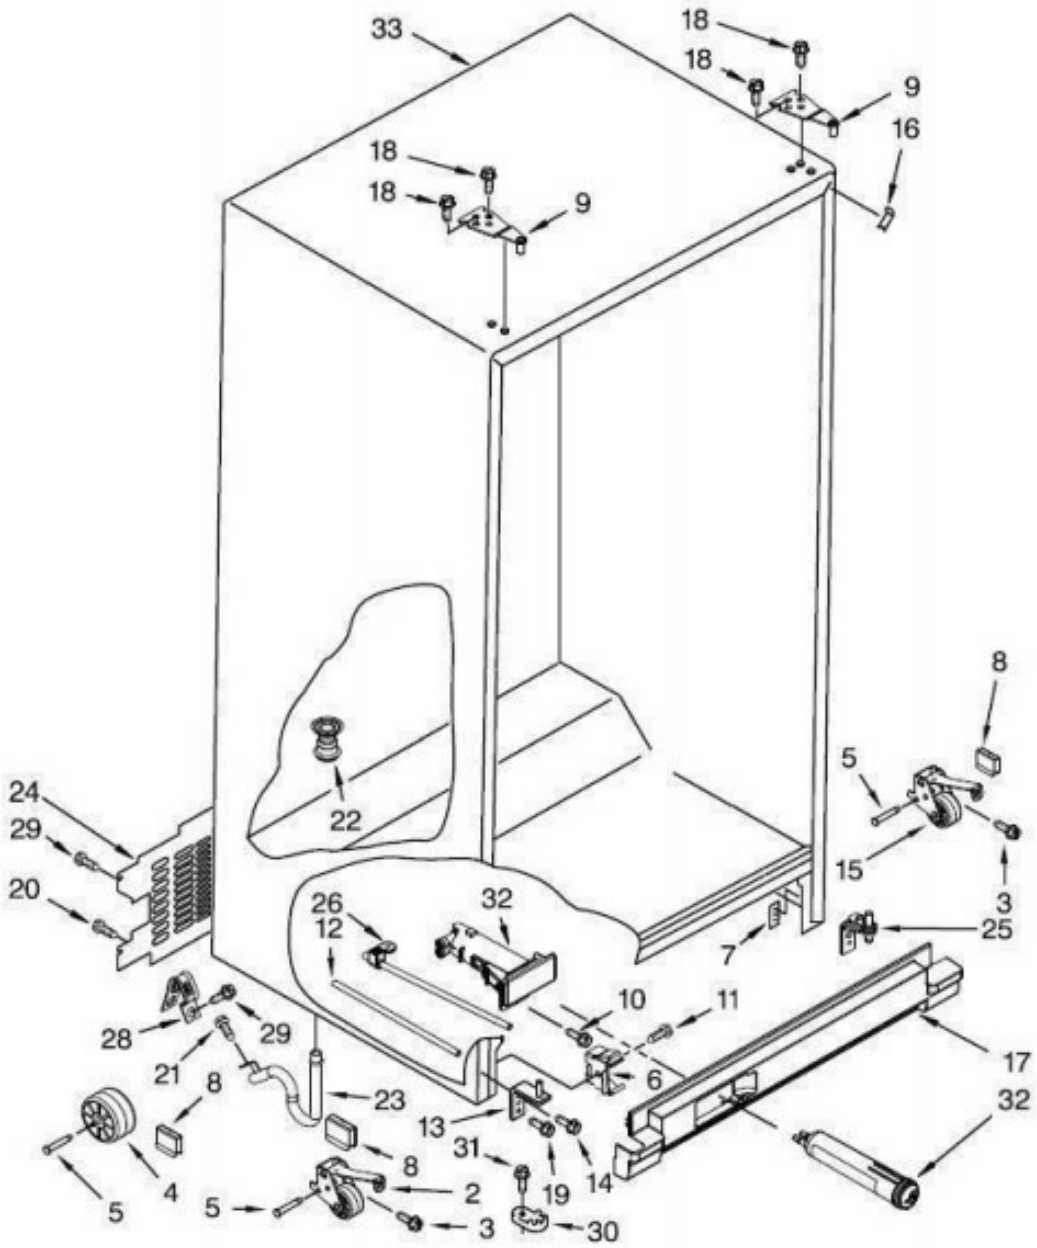




Refrigerador Whirlpool WD2620S00


No. Ilus.	DESCRIPCIÓN	No. de Parte
2	ROLLER	W10327666
4	ROLLER CABINET	2150304
5	AXLE, ROLLER	2262072
6	CLIP, GRILLE	2155013
7	PLATE, SCREW	W10247935
8	CLIP, ROLLER	W11087168
9	TOP HINGE RC	W10900868
	TOP HINGE FC	W10900869
10	SCREW	W10308751
11	SCREW	W10308751
12	TUBE FILTER - INLET	W10900449
13	HINGE, BOTTOM FC	W11093938
15	FRONT ROLLER RIGHT	W10327665
16	FILLER, WRAPPER	W11189126
17	GRILLE	W10905888
22	DRAIN FITTING	2304888
23	EXTENSION, DRAIN FITTING	W10153550
24	COVER UNIT	W10898351
25	HINGE, BOTTOM RC	W11097327
26	TUBE FILTER – OUTLET	W10900447
28	CLAMP, POWER CORD	W10303628
30	DOOR CLOSER, FREEZER	W11095731
32	HOUSING & FILTER ASSY.	W11030555

Refrigerador Whirlpool WD2620S00

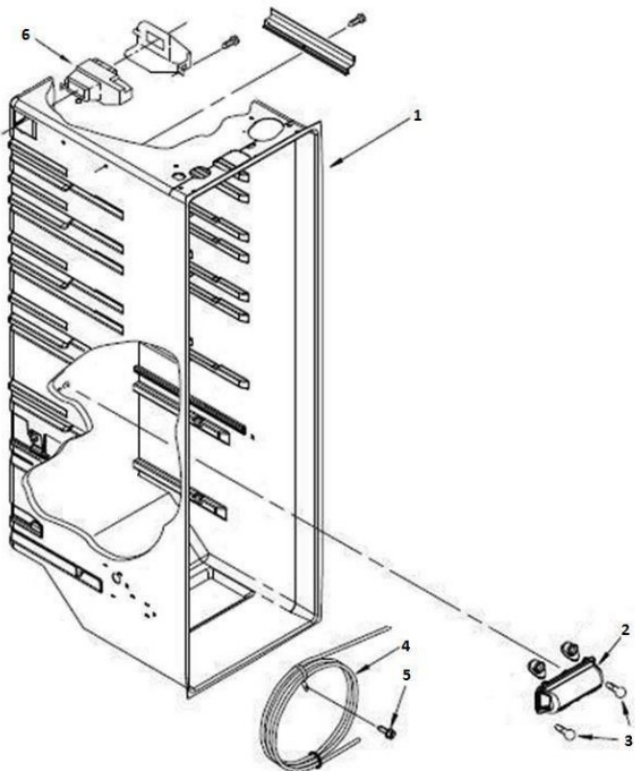

No.Ilus.	DESCRIPCIÓN	No. de Parte
1	LINER	No Servicable
2	SHIELD ASSY-LIGHT	W10166130
3	BULB, LIGHT	W11125625
4	RESERVOIR	W11183358
5	SCREW	No Servicable
6	AIR DIFFUSER ASSEMBLY	W11162983

Refrigerador Whirlpool WD2620S00

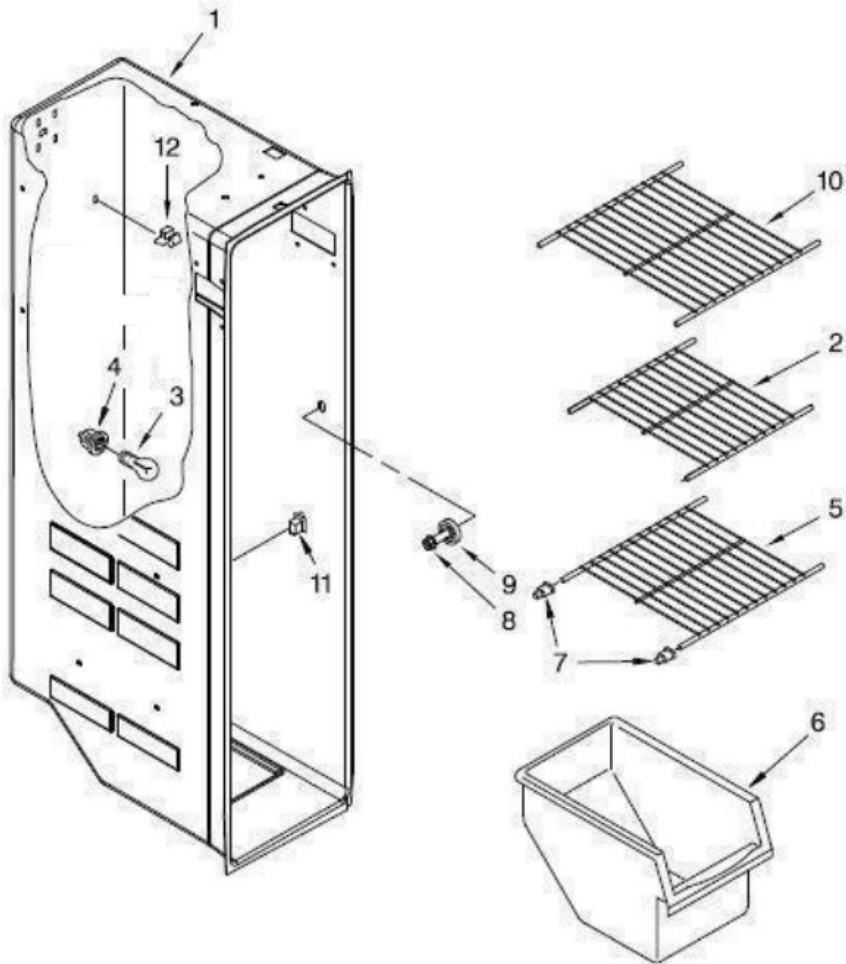




Refrigerador Whirlpool WD2620S00

No. Ilus.	DESCRIPCIÓN	No. de Parte
1	LINER	No Servicable
2	SHELF, WIRE	W10318952
3	BULB, LIGHT	W10805744
4	SOCKET, LIGHT	W10134764
5	SHELF, WIRE	W10318953
6	FREEZER BIN	2309758
7	CUP, SHELF	W10130299
8	SCREW	No Servicable
9	STUD ASSEMBLY	W10173126
10	SHELF, WIRE	W10318960
11	SWITCH, ROCKER ARM	2261344
12	CLIP, AIR DUCT	2315163

Refrigerador Whirlpool WD2620S00

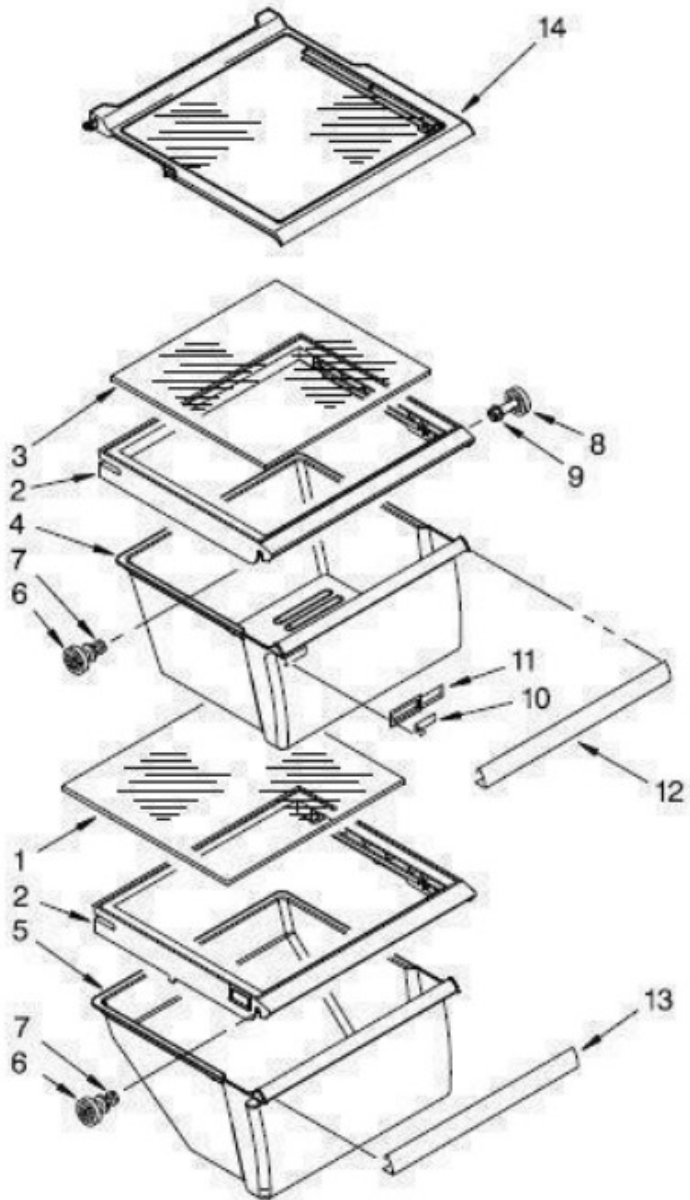




Refrigerador Whirlpool WD2620S00

No. Ilus.	DESCRIPCIÓN	No. de Parte
1	GLASS, COVER	W10898364
2	COVER, CRISPER	W11041180
3	GLASS, COVER	W10898364
4	CRISPER, PAN	W10902067
5	MEAT, PAN	W11035216
6	STUD, ASSEMBLY	W10173126
7	SCREW	No servicable
8	STUD ASSEMBLY	W10173126
9	SCREW	No servicable
10	SLIDE, HUMIDITY CONTROL	W10532732
11	BODY, HUMIDITY CONTROL	W10532706
14	SHELF ASSEMBLY, SPILLGUARD	W11135529

Refrigerador Whirlpool WD2620S00

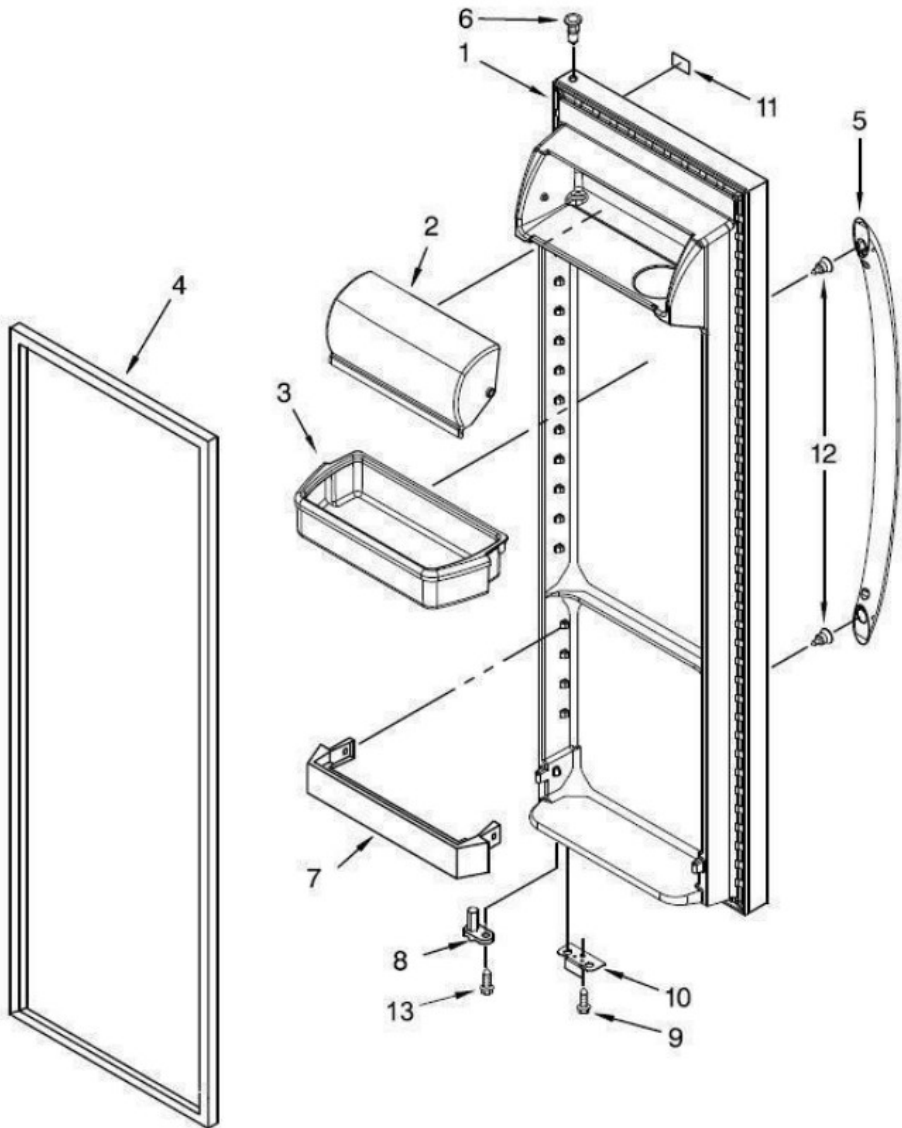




Refrigerador Whirlpool WD2620S00

No. Ilus.	DESCRIPCIÓN	No. de Parte
1	REFRIGERATOR DOOR	LW11110272
2	DOOR COMPARTMENT	2256101
3	BIN, DOOR	W10900538
4	DOOR GASKET MAGNETIC RC	W10912318
5	HANDLE	W11045530
6	THIMBLE	2200087
7	TRIVET	2309941
8	DOOR CLOSER, UPPER CAM	2200087
9	SCREW	No servicable
10	BRACKET, DOOR STOP	W10900463
11	NAMEPLATE	W10884773
12	SCREW	No servicable
13	SCREW	No servicable

Refrigerador Whirlpool WD2620S00

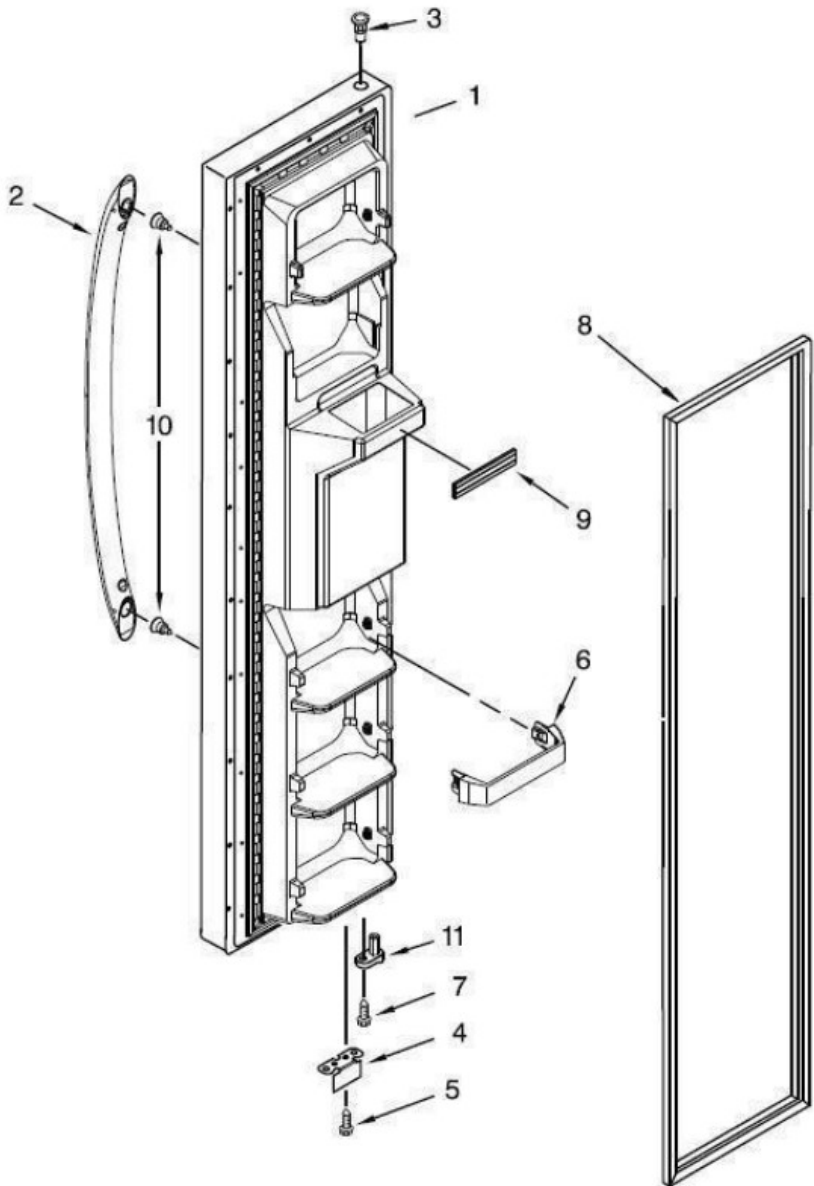




Refrigerador Whirlpool WD2620S00

No. Ilus.	DESCRIPCIÓN	No. de Parte
1	FREEZER DOOR (INCLUYE ITEM 8	LW11110268
2	HANDLE	W11045530
3	THIMBLE	2200087
4	BRACKET, DOOR STOP	W10900531
5	SCREW	No servicable
6	TRIM, DOOR	2309717
7	SCREW	No servicable
8	DOOR GASKET MAGNETIC	W10911461
9	TRIM, DOOR SHELF	W10307492
10	SCREW	No servicable
11	DOOR CLOSER, UPPER CAM	W10900532

Refrigerador Whirlpool WD2620S00

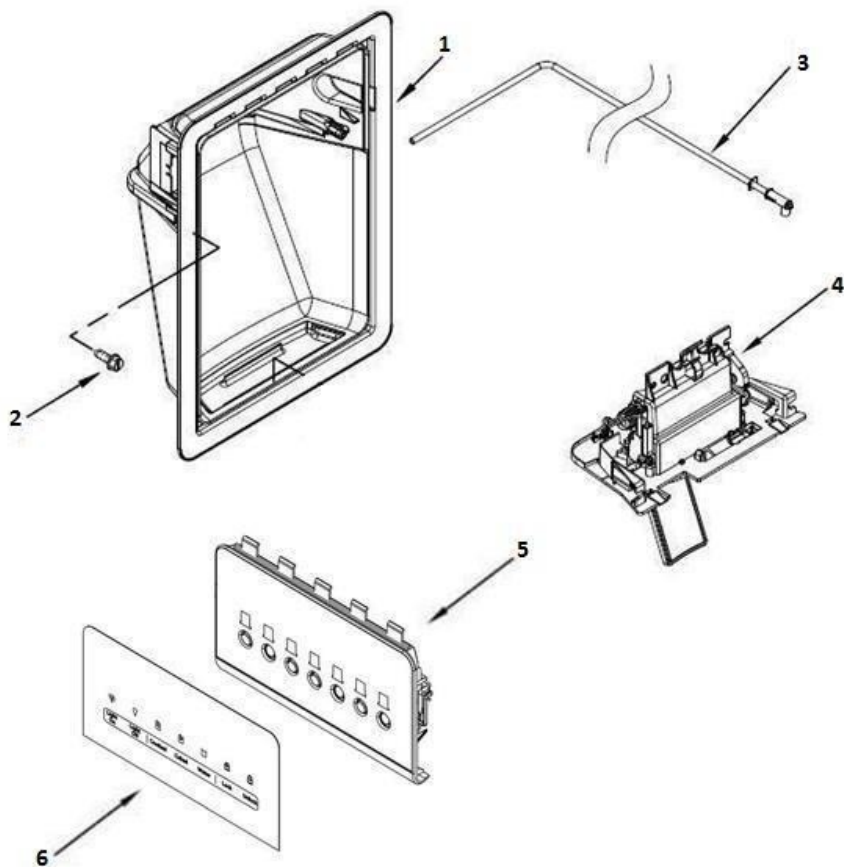




Refrigerador Whirlpool WD2620S00

No. Ilus.	DESCRIPCIÓN	No. de Parte
1	HOUSING, DISPENSER	No servicable
2	SCREW	No servicable
3	WATER FITTING ASSEMBLY	W10284458
4	SEPARATOR ASSEMBLY	W11024790
5	U.I. ASSEMBLY	W10902337
6	OVERLAY	W10902338

Refrigerador Whirlpool WD2620S00

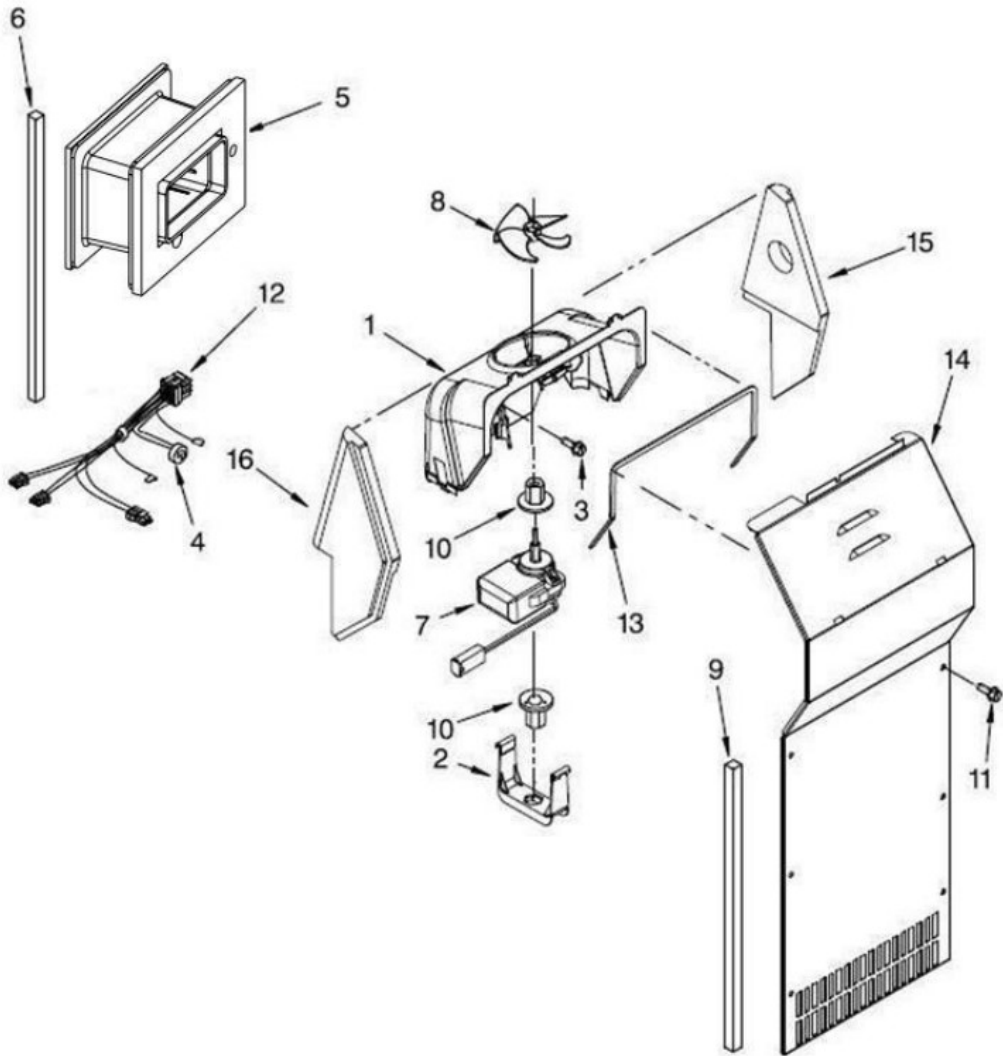



Refrigerador Whirlpool WD2620S00


No. Ilus.	DESCRIPCIÓN	No. de Parte
1	SCROLL, FAN	2182119
2	RETAINER, FAN MOTOR	W10188846
3	SCREW	No servicable
4	THERMISTOR RC	W10384183
5	AIR DUCT FREEZER	W10128722
6	GASKET	2155788
7	FAN MOTOR	2315549
8	BLADE, FAN	2169142
9	GASKET, EVAPORATOR COVER	2304241
10	GROMMET, MOTOR	2176759
11	SCREW	No servicable
12	HARNESS, FAN TUBE EVAPORATOR	W10911770
13	GASKET, EVAPORATOR COVER	2304241
14	COVER, EVAPORATOR	W10463010



Refrigerador Whirlpool WD2620S00

15	SUPPORT, RIGHT HAND	2203595
16	SUPPORT, LEFT HAND	2203596

Refrigerador Whirlpool WD2620S00

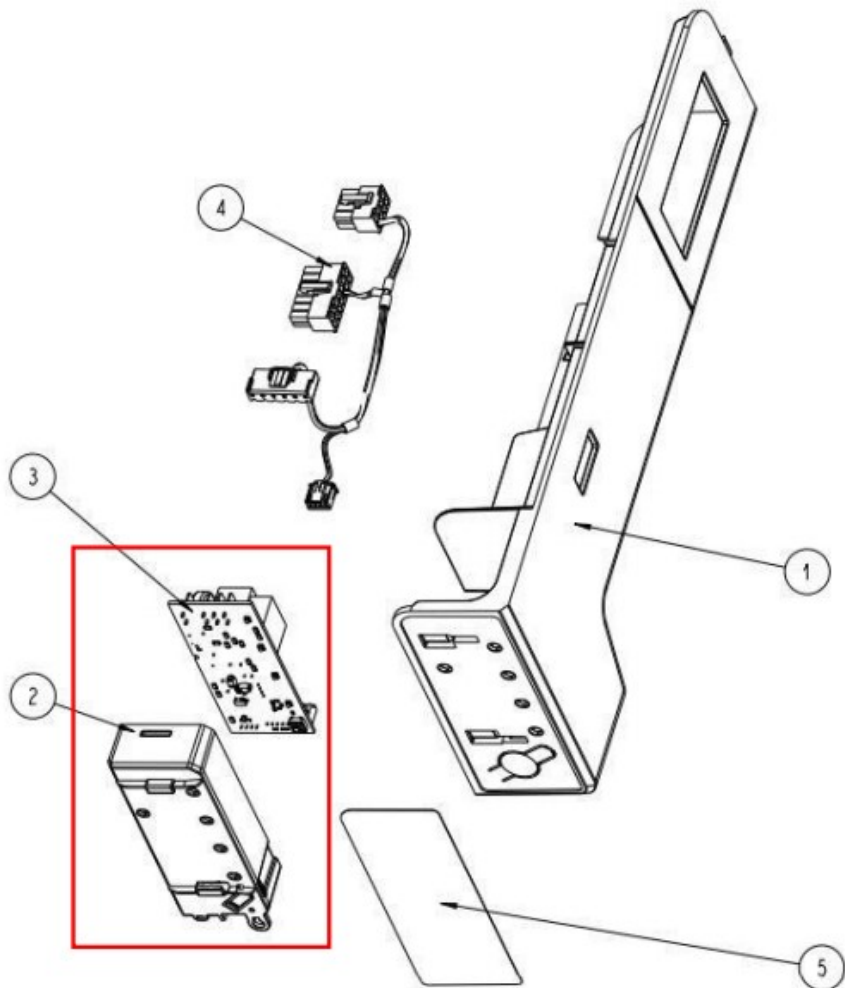



Refrigerador Whirlpool WD2620S00


No. Ilus.	DESCRIPCIÓN	No. de Parte
1	CONTROL BOX PLASTIC	W10901822
2	BASE CONTROL BOX	Solicitar Núm 3
3	ELEC CONTROL ATHENA	W11159777
4	HARNESS - CTL BOX	W10901824
5	OVERLAY WHIRLPOOL D LITE	W11026462
	CONTROL BOX ASSEMBLY	W11026019

Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas

Refrigerador Whirlpool WD2620S00

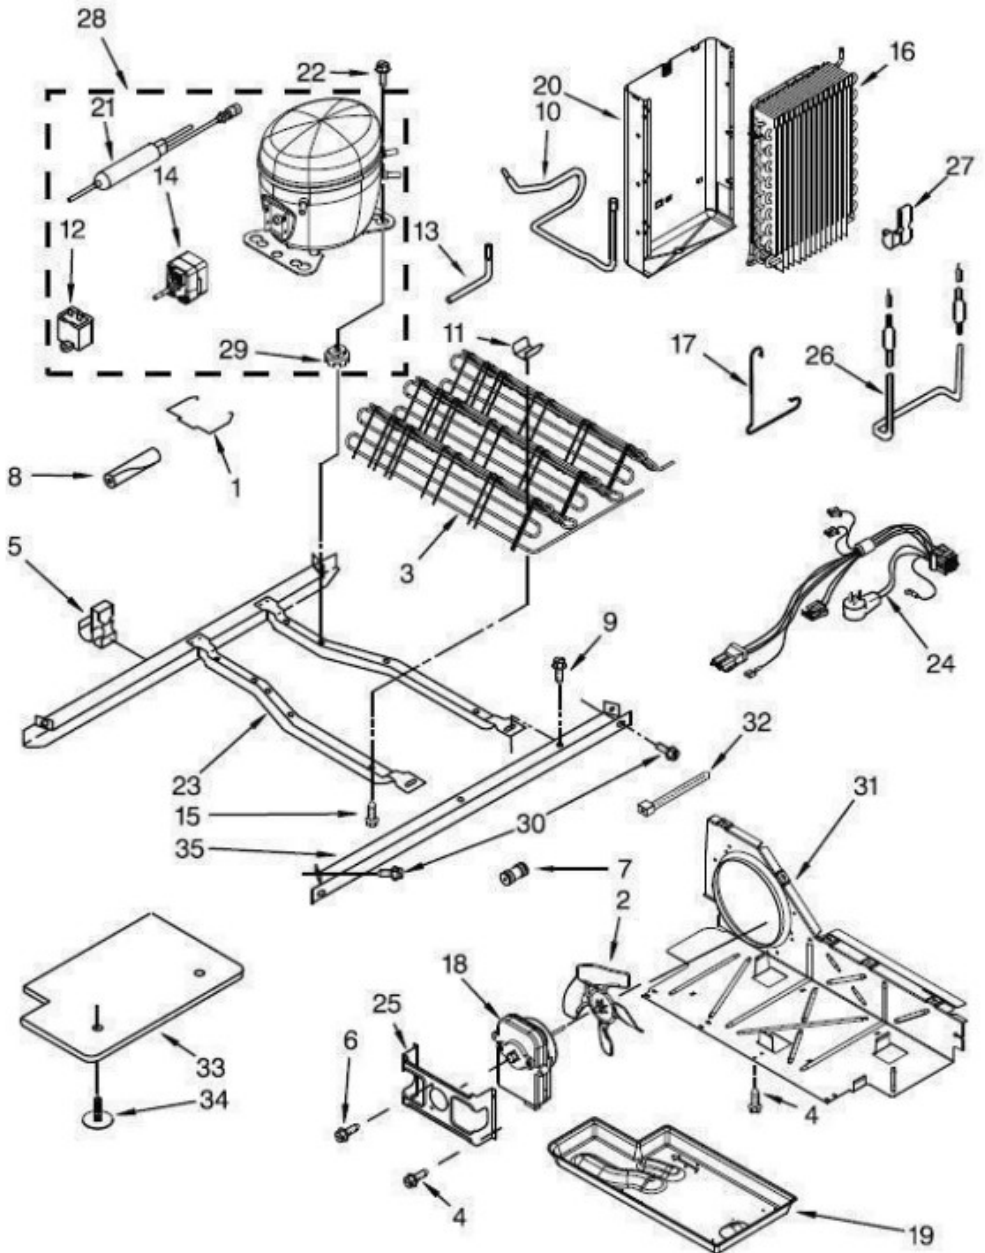



Refrigerador Whirlpool WD2620S00


No. Ilus.	DESCRIPCIÓN	No. de Parte
1	Strap, Bale	2212996
2	Blade, Fan	2225834
3	Condenser Assembly	W10904626
4	Screw	No servicable
5	Clip, Wire	2223913
6	Screw	No servicable
7	Connector, Water Tube	W10271541
8	Sleeve, Pressure Switch Hose	2161302
9	Screw	No servicable
10	Tube, Suction	W10745338
11	Clip, Condenser	2311725
12	Capacitor	W10350564
13	Tube, Process	No servicable
14	Start Device Combination (Start	W10197428
15	Screw	No servicable
16	Evaporator, FC	2188822
17	Clip, Defrost Heater	2161324
18	Motor, Condenser	W10522629
19	Tray, Evaporator	W10897557
20	Heat Shield and Drain Pan	W10194474
21	Drier	W10771114
22	Screw	No servicable
23	Frame, Unit Mounting	W10905881
24	Unit, Harness	W10670169
25	Bracket, Fan Motor	2181929
26	Heater, Defrost	W10495967
27	Clip, Defrost Heater	2161324
28	Compressor	W11045354



Refrigerador Whirlpool WD2620S00

No. Ilus.	DESCRIPCIÓN	No. de Parte
29	Grommet	W10836504
30	Screw	489340
31	Air Baffle	W10896764
32	Tie, Wire	2263990
33	Unit Cover, Bottom	W10905883
34	Clip	489396
35	Rail, Unit Mounting	W10905882

Refrigerador Whirlpool WD2620S00

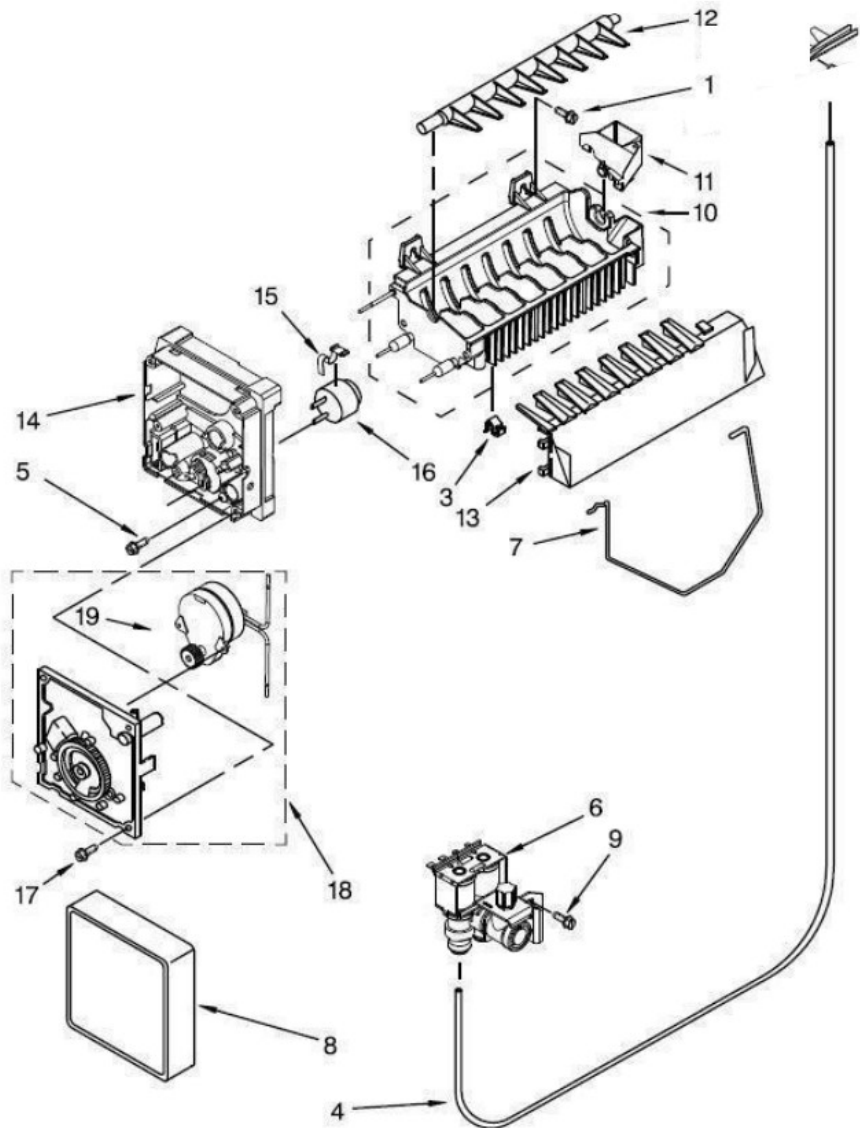

Refrigerador Whirlpool WD2620S00

No. Ilus.	DESCRIPCIÓN	No. de Parte
1	SCREW	No servicable
3	CLIP, THERMAL FUSE	628379
4	TUBE, WATER	W10357069
5	SCREW	No servicable
6	FILTER VALVE ASSEMBLY	W10179146
7	ARM, SHUTT OFF	W10512602
8	COVER, ICEMAKER	W10289690
9	SCREW	No servicable
10	ASSEMBLY, MOLD & HEATER	W10477139
11	CUP-WATER FILL	W10435665
12	EJECTOR, ARM	W10318914
13	STRIPPER, ICE	W10699925
14	SUPPORT	2194712
15	RETAINER, THERMOSTAT	2315522
16	THERMOSTAT	2321258
17	SCREW	No servicable
18	ASSEMBLY, MODULE	626681
19	MOTOR (NO SERVICIABLE)	No servicable
20	SCREW	No servicable
	COMPLETE ICEMAKER ASSEMBLY	W10300022



Filtro W10790813