 


Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones  
Electrodomesticas

# Refrigerador Whirlpool WD6575S01

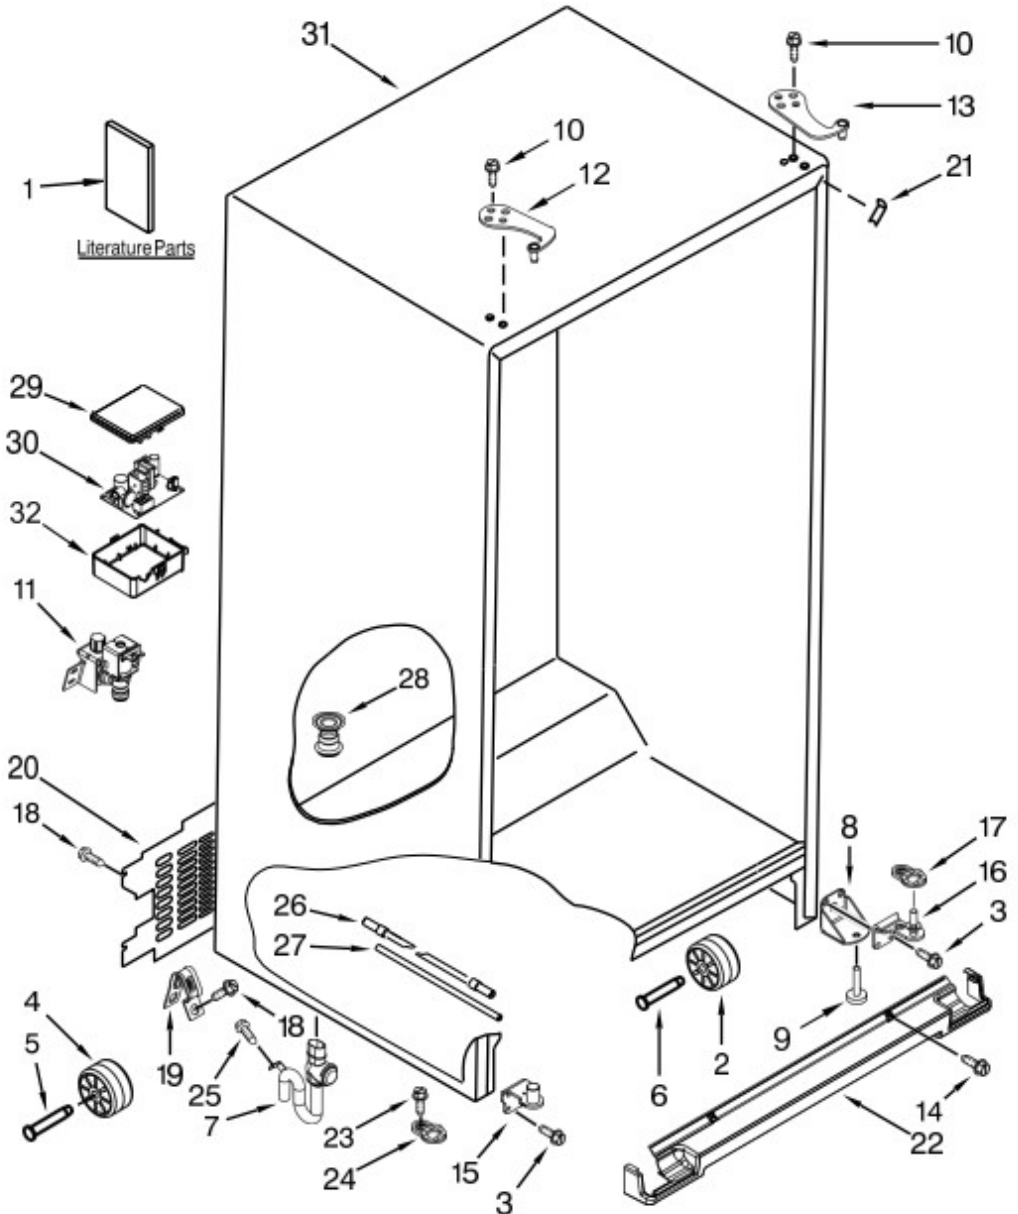



## Refrigerador Whirlpool WD6575S01

<b>No. Ilus.</b>	<b>DESCRIPCIÓN</b>	<b>No. de Parte</b>
	Use & Care Guide	W11117955
<b>2</b>	Roller	2150304
<b>3</b>	Screw	W10297485
<b>4</b>	Roller	12477102
<b>5</b>	Axle, Roller	12477202
<b>6</b>	Rivet, Roller	981125
<b>7</b>	Tube, Drain	W10379525
<b>8</b>	Bracket, Foot	W10900758
<b>9</b>	Brake, Roller	W10141622
<b>11</b>	Valve, Inlet	W10498992
<b>12</b>	Hinge, Top (Freezer)	W10901054
<b>13</b>	Hinge, Top (Refrigerator)	W10901049
<b>14</b>	Screw	W10308489
<b>15</b>	Hinge, Bottom (Freezer)	W10249952
<b>16</b>	Hinge, Bottom (Refrigerator)	W10492501
<b>17</b>	Closer, Door (Refrigerator)	W10738911
<b>18</b>	Screw	W10141645
<b>19</b>	Clamp, Power Cord	W10634815
<b>20</b>	Cover, Unit	W10257325
<b>21</b>	Filler, Wrapper	12587703AP
<b>22</b>	Grille	W10713153
<b>23</b>	Screw	W10142234
<b>24</b>	Closer, Door (Freezer)	W10770893
<b>25</b>	Screw	W10001250
<b>26</b>	Tube, Filter Inlet	W10279882
<b>27</b>	Tube, Filter Outlet	W10279884
<b>28</b>	Fitting, Drain	W10370680
<b>29</b>	Lid, HV Box	12957702



## Refrigerador Whirlpool WD6575S01

 
<b>No. Ilus.</b>	<b>DESCRIPCIÓN</b>	<b>No. de Parte</b>
<b>30</b>	Control, Electronic	W10887255
<b>32</b>	Box, Control	W10247993

Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones  
Electrodomesticas

# Refrigerador Whirlpool WD6575S01

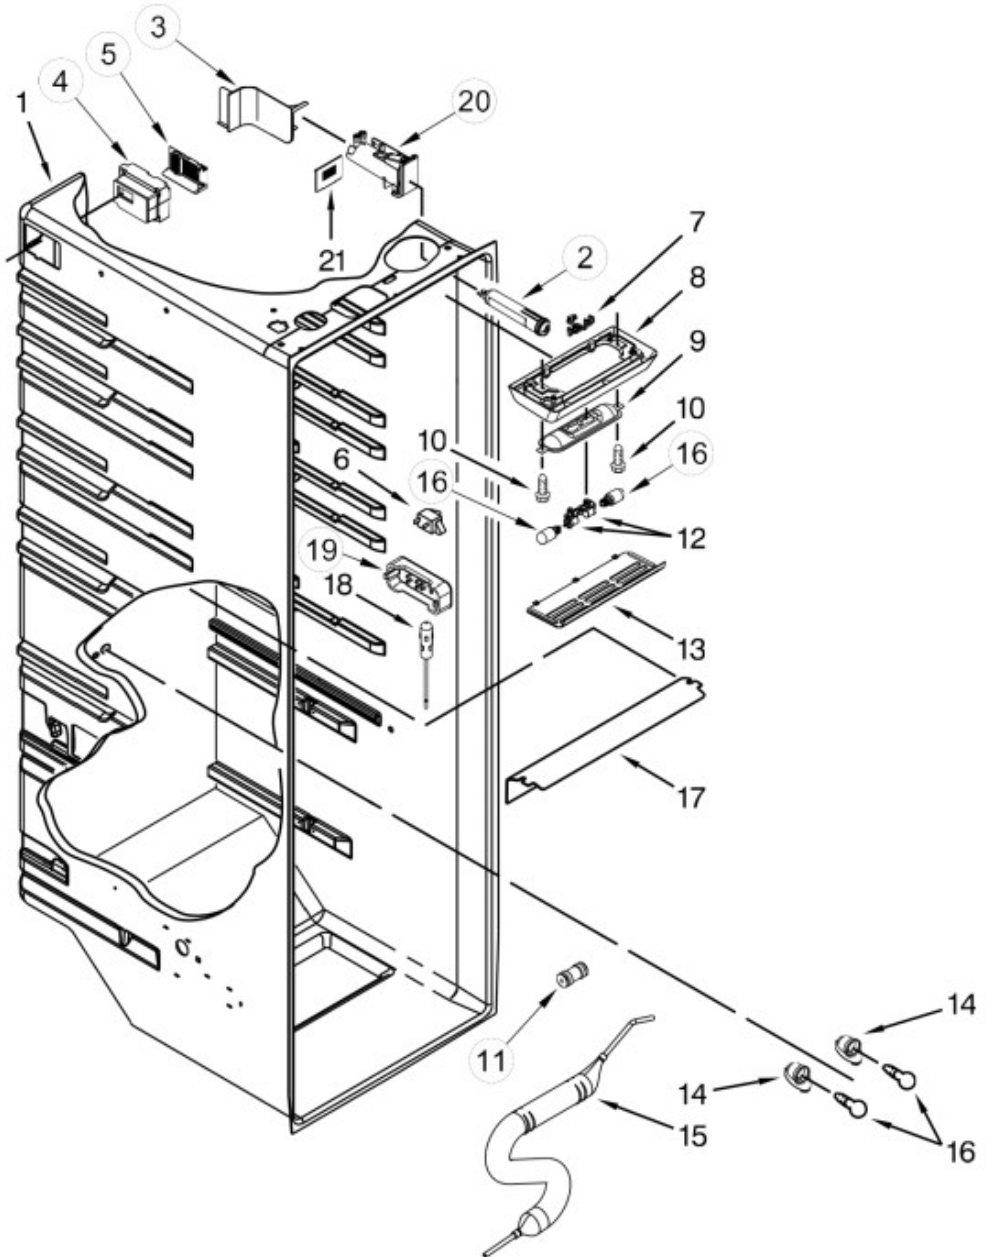




## Refrigerador Whirlpool WD6575S01

<b>No. Ilus.</b>	<b>DESCRIPCIÓN</b>	<b>No. de Parte</b>
<b>1</b>	Liner	No serviceable
<b>2</b>	Filter, Water	W10790813
<b>3</b>	Cover, Water Filter	W10300482
<b>4</b>	Assembly, Air Diffuser	W11175955
<b>5</b>	Cover, Air Diffuser	W10457601
<b>6</b>	Switch, Light	W10656773
<b>7</b>	Assembly, Top Light Wire	W10253300
<b>8</b>	Trim, Light	W10280178
<b>9</b>	Shield, Heat	2223680
<b>10</b>	Screw	W10141632
<b>11</b>	Connector, Water Tube	W10271543
<b>12</b>	Socket, Light	2162085
<b>13</b>	Lens, Top Light	W10280420
<b>14</b>	Socket, Light	2162085
<b>15</b>	Reservoir	W10366790
<b>16</b>	Lamp, LED	2326255
<b>17</b>	Lens, Light	W10269099
<b>18</b>	Thermistor	W10280385
<b>19</b>	Cover, Thermistor	W10425252
<b>20</b>	Housing, Water Filter	W10844058
<b>21</b>	Cover, Air Filter	W10457603

 Refrigerador Whirlpool WD6575S01





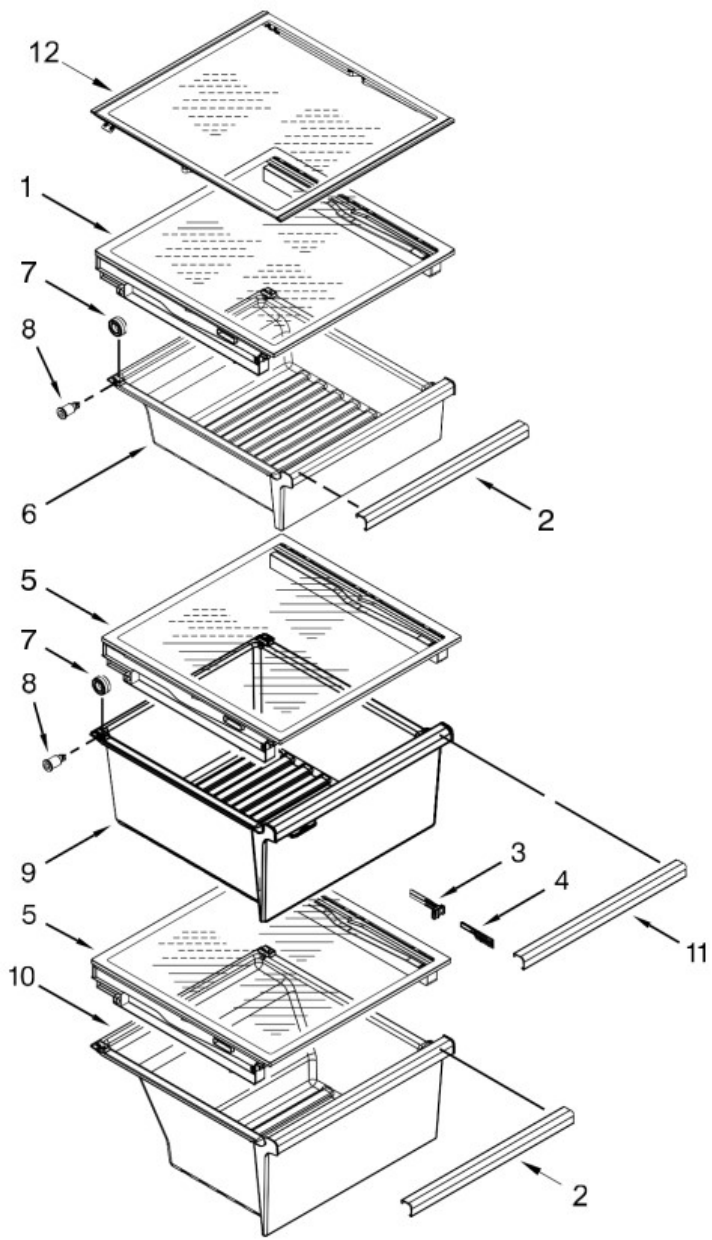




## Refrigerador Whirlpool WD6575S01

<b>No. Ilus.</b>	<b>DESCRIPCIÓN</b>	<b>No. de Parte</b>
<b>1</b>	Shelf, Snack Pan	W10463648
<b>2</b>	Trim, Handle	W10256775
<b>3</b>	Slide, Humidity	W10282883
<b>4</b>	Housing, Humidity	W10282880
<b>5</b>	Assembly, Cover	W10463650
<b>6</b>	Pan, Snack	W10256770
<b>7</b>	Roller	W10628713
<b>8</b>	Axle, Roller	W10628712
<b>9</b>	Pan, Crisper	W10278653
<b>10</b>	Pan, Meat	W10256774
<b>11</b>	Trim, Handle	W10309637
<b>12</b>	Assembly, Shelf	W10773888

     Refrigerador Whirlpool WD6575S01

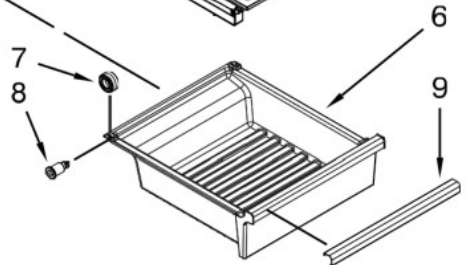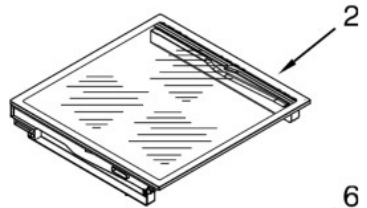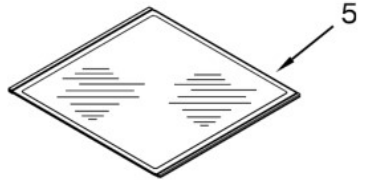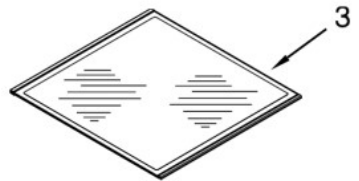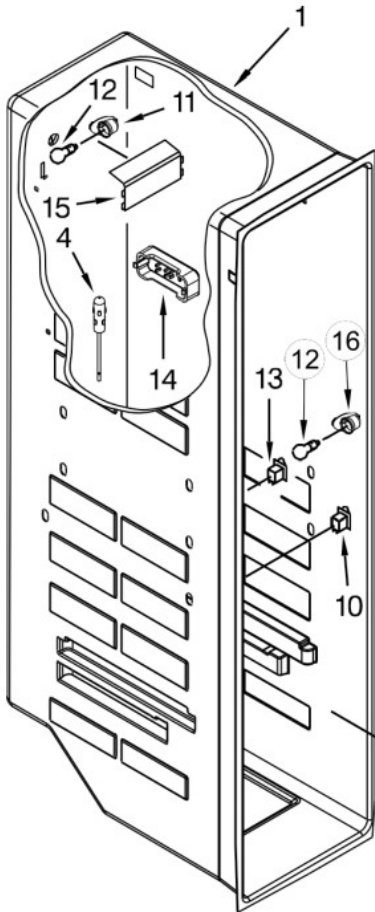









## Refrigerador Whirlpool WD6575S01

<b>No. Ilus.</b>	<b>DESCRIPCIÓN</b>	<b>No. de Parte</b>
<b>1</b>	Liner	No serviceable
<b>2</b>	Assembly, Cover	W10463653
<b>3</b>	Shelf, Glass Upper	W10773890
<b>4</b>	Thermistor	W10280386
<b>5</b>	Shelf, Glass Lower	W10773892
<b>6</b>	Pan, Freezer	W10260985
<b>7</b>	Roller	W10628713
<b>8</b>	Axle, Roller	W10628712
<b>9</b>	Trim, Handle	W10260986
<b>10</b>	Switch, Rocker Arm	W10656771
<b>11</b>	Socket, Light	2162085
<b>12</b>	Lamp, LED	2311792
<b>13</b>	Switch, Rocker Arm	W10656772
<b>14</b>	Cover, Thermistor	W10425252
<b>15</b>	Lens	W10269101
<b>16</b>	Socket, Light	2155597
    
# Refrigerador Whirlpool WD6575S01

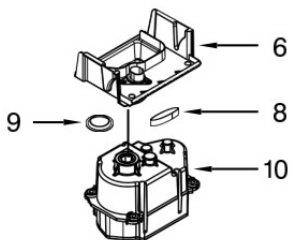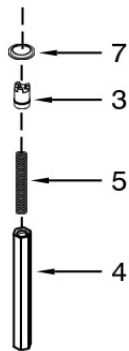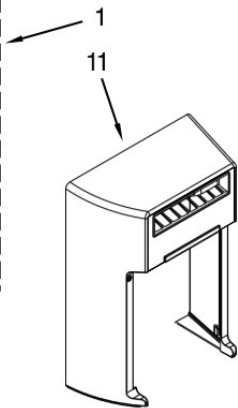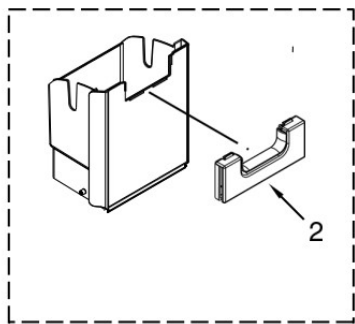




## Refrigerador Whirlpool WD6575S01

<b>No. Ilus.</b>	<b>DESCRIPCIÓN</b>	<b>No. de Parte</b>
<b>1</b>	Ice Container (Complete)	W10774957
<b>2</b>	Assembly, Latch	W10693542
<b>3</b>	Coupling, Bottom	2220458
<b>4</b>	Shaft, Drive	W10258544
<b>5</b>	Spring, Coupling	W10754509
<b>6</b>	Assembly, Mounting Plate	W10293211
<b>7</b>	Seal	2198628
<b>8</b>	Gasket	W10291905
<b>9</b>	Washer	2212370
<b>10</b>	Motor, Dispenser	W10225313
<b>11</b>	Cover, Container	W10669473

 Refrigerador Whirlpool WD6575S01

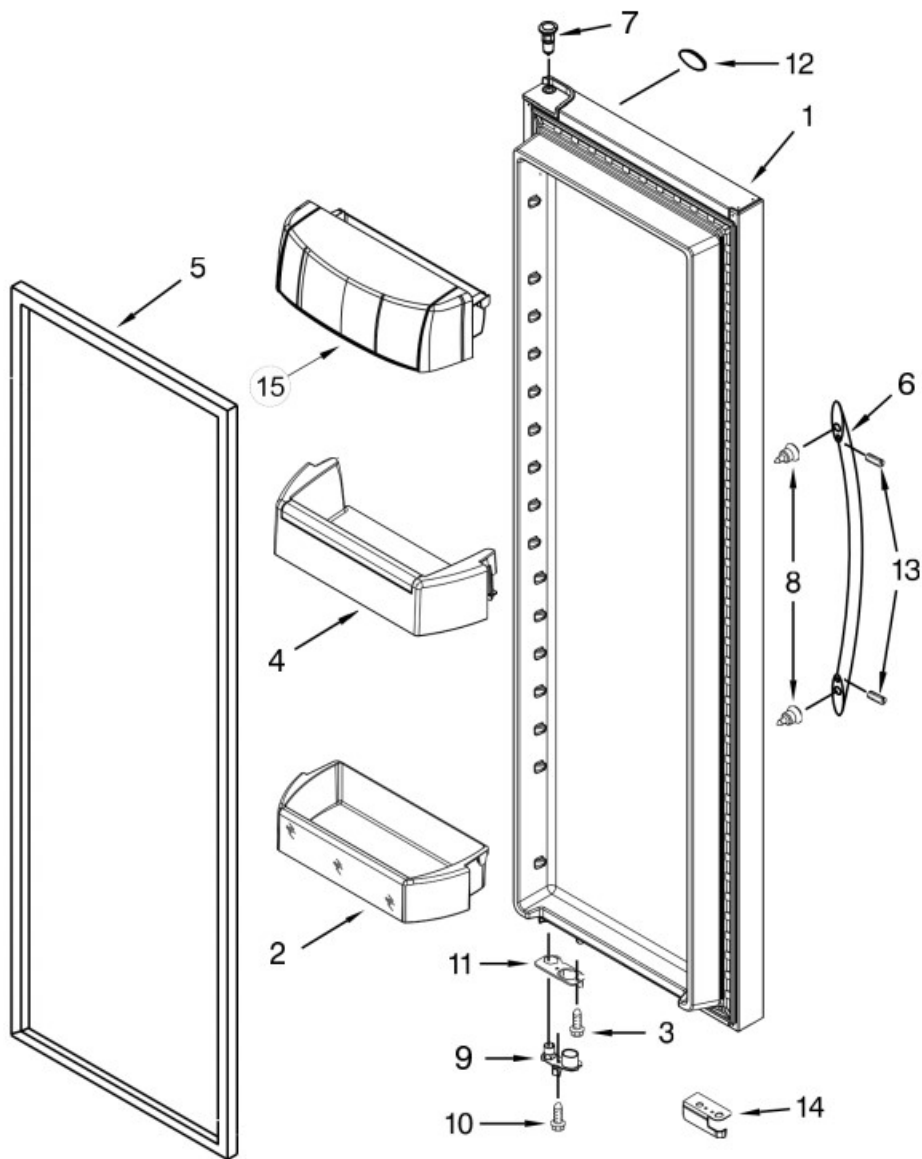




## Refrigerador Whirlpool WD6575S01

<b>No. Ilus.</b>	<b>DESCRIPCIÓN</b>	<b>No. de Parte</b>
<b>1</b>	Door, Refrigerator	W10651576
<b>2</b>	Bin, Gallon Door	W10527271
<b>3</b>	Screw	W10296816
<b>4</b>	Bin, Shallow Door	W10296855
<b>5</b>	Gasket, Door	W10249916
<b>6</b>	Handle	W10678291
<b>7</b>	Thimble, Top	2200086
<b>8</b>	Screw	W10460893
<b>9</b>	Closer, Upper Cam Door	W10257203
<b>10</b>	Screw	W10296804
<b>11</b>	Bracket, Door Stop	W10888898
<b>12</b>	Nameplate	W10511972
<b>13</b>	Screw	W10010140
<b>14</b>	Cover, Door Stop	W10789147
<b>15</b>	Assembly, Utility Compartment	W10324760

 Refrigerador Whirlpool WD6575S01

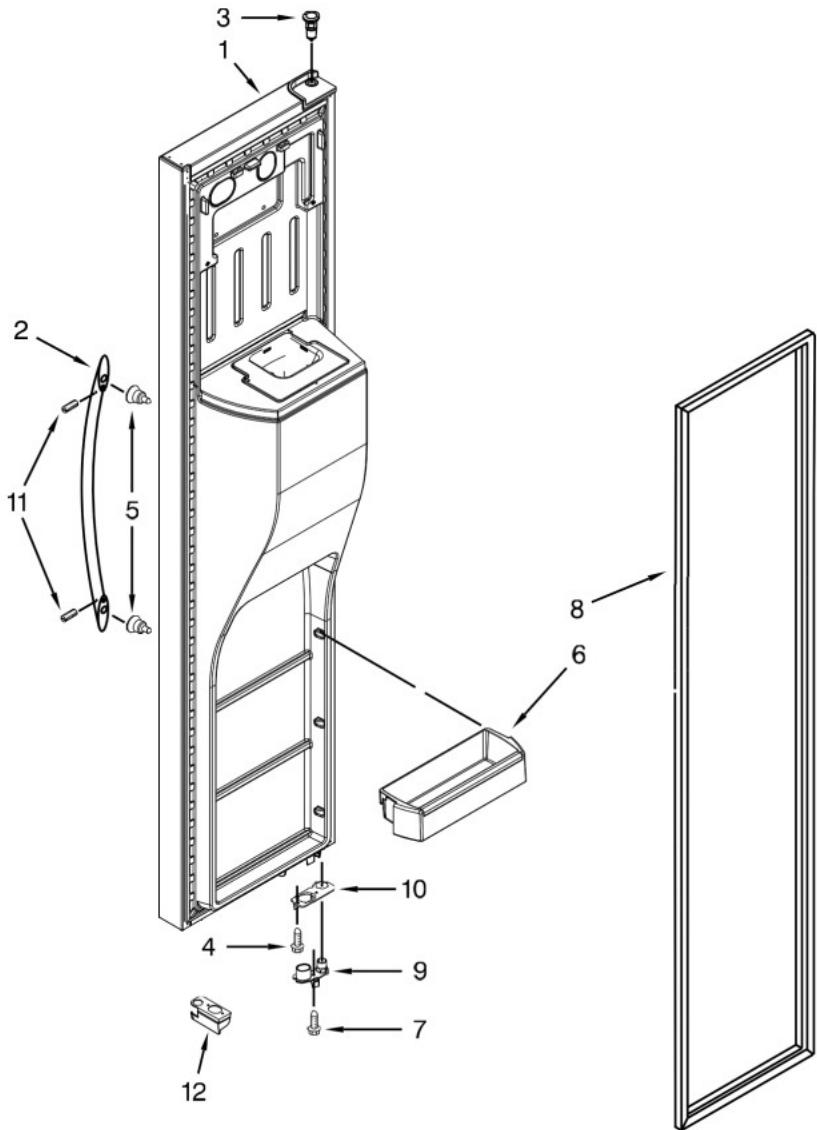




## Refrigerador Whirlpool WD6575S01

<b>No. Ilus.</b>	<b>DESCRIPCIÓN</b>	<b>No. de Parte</b>
<b>1</b>	Door, Freezer	W10802792
<b>2</b>	Handle	W10678291
<b>3</b>	Thimble, Top	2200086
<b>4</b>	Screw	W10296804
<b>5</b>	Screw	W10460893
<b>6</b>	Bin, Door	W10296857
<b>7</b>	Screw	W10296816
<b>8</b>	Gasket, Door	W10249917
<b>9</b>	Closer, Upper Cam Door	W10257206
<b>10</b>	Bracket, Door Stop	W10247907
<b>11</b>	Set Screw	W10010140
<b>12</b>	Cover, Door Stop	W10632062

 Refrigerador Whirlpool WD6575S01

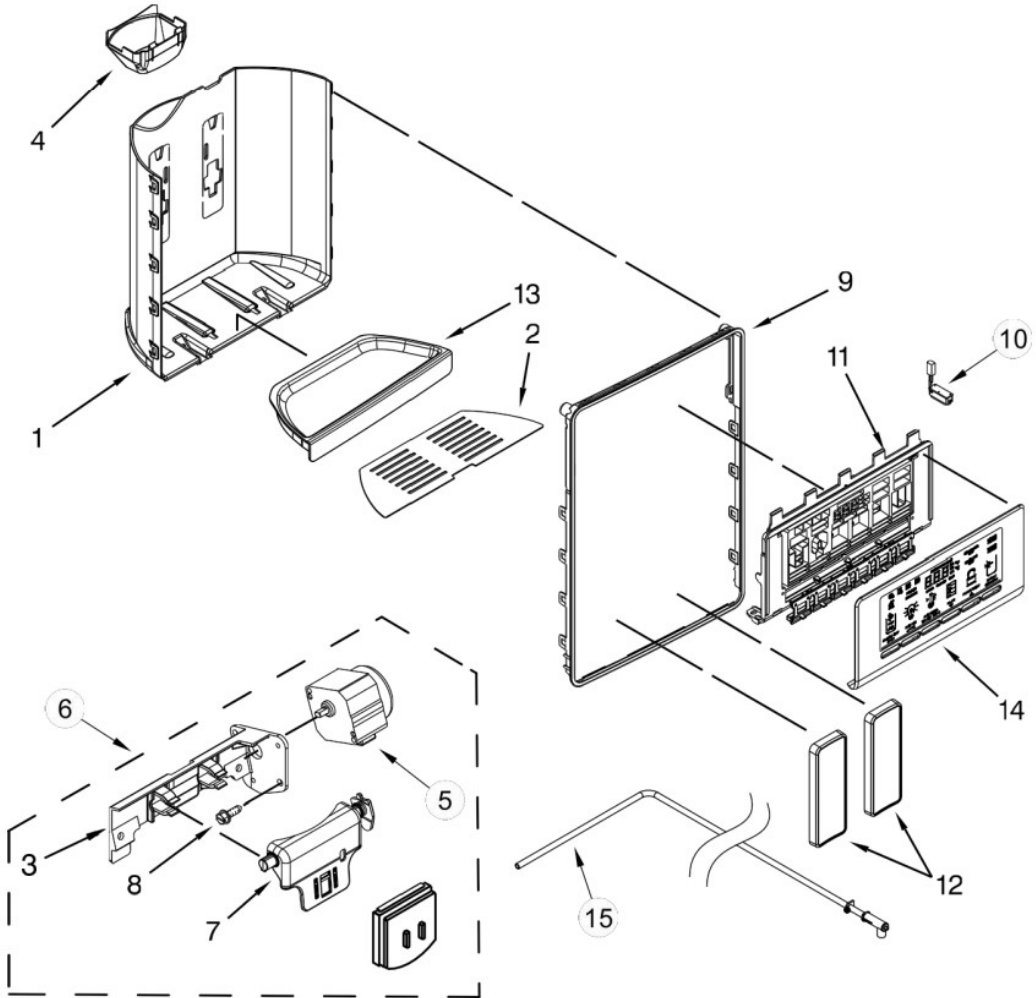





## Refrigerador Whirlpool WD6575S01

 
<b>No. Ilus.</b>	<b>DESCRIPCIÓN</b>	<b>No. de Parte</b>
<b>1</b>	Housing, Dispenser	No serviceable
<b>2</b>	Grate, Drip Tray	W10276223
<b>3</b>	Bracket, Ice Door	W10174827
<b>4</b>	Guide, Ice	W10435760
<b>5</b>	Motor, Dispenser	W10205978
<b>6</b>	Assembly, Separator	W10781993
<b>7</b>	Support, Ice Door	W10346124
<b>8</b>	Screw	4449745
<b>9</b>	Ring, Trim	W10276227
<b>10</b>	Assembly, LED	N/A
<b>11</b>	Assembly, User Interface	W10758671
<b>12</b>	Pad, Ice and Water	W10370594
<b>13</b>	Tray, Drip	W10276224
<b>14</b>	Cover, Front	W10276229
<b>15</b>	Assembly, Water Fitting	W10386778

Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones  
Electrodomesticas

## Refrigerador Whirlpool WD6575S01

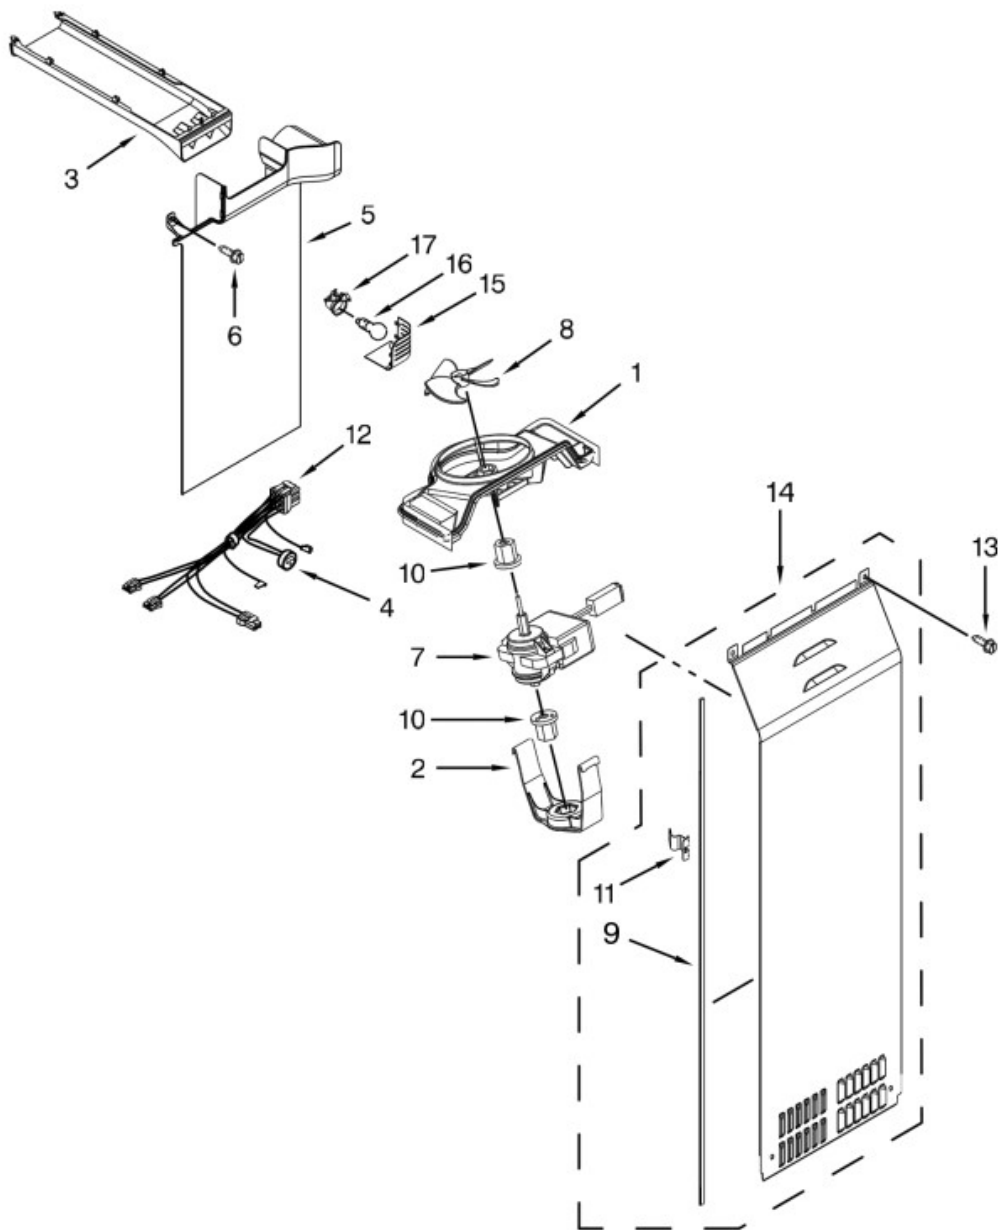




## Refrigerador Whirlpool WD6575S01

<b>No. Ilus.</b>	<b>DESCRIPCIÓN</b>	<b>No. de Parte</b>
<b>1</b>	Fan Scroll	W10251462
<b>2</b>	Retainer, Fan Motor	W10260421
<b>3</b>	Duct, Upper Air	W10550199
<b>4</b>	Bi-Metal, Defrost	W10260437
<b>5</b>	Duct, Freezer Air	W10260378
<b>6</b>	Screw	W10001260
<b>7</b>	Motor, Fan	2315549
<b>8</b>	Blade, Fan	2169142
<b>9</b>	Gasket, Evaporator Cover	W10240370
<b>10</b>	Grommet, Motor	2176759
<b>11</b>	Clip, Evaporator Cover	W10369602
<b>12</b>	Assy Evaporator Fan Wire	W11050120
<b>13</b>	Screw	W10142292
<b>14</b>	Cover, Evaporator	W10388268
<b>15</b>	Cover, Light	W10260382
<b>16</b>	Lamp, LED	2311792
<b>17</b>	Socket, Light	2162085

 Refrigerador Whirlpool WD6575S01

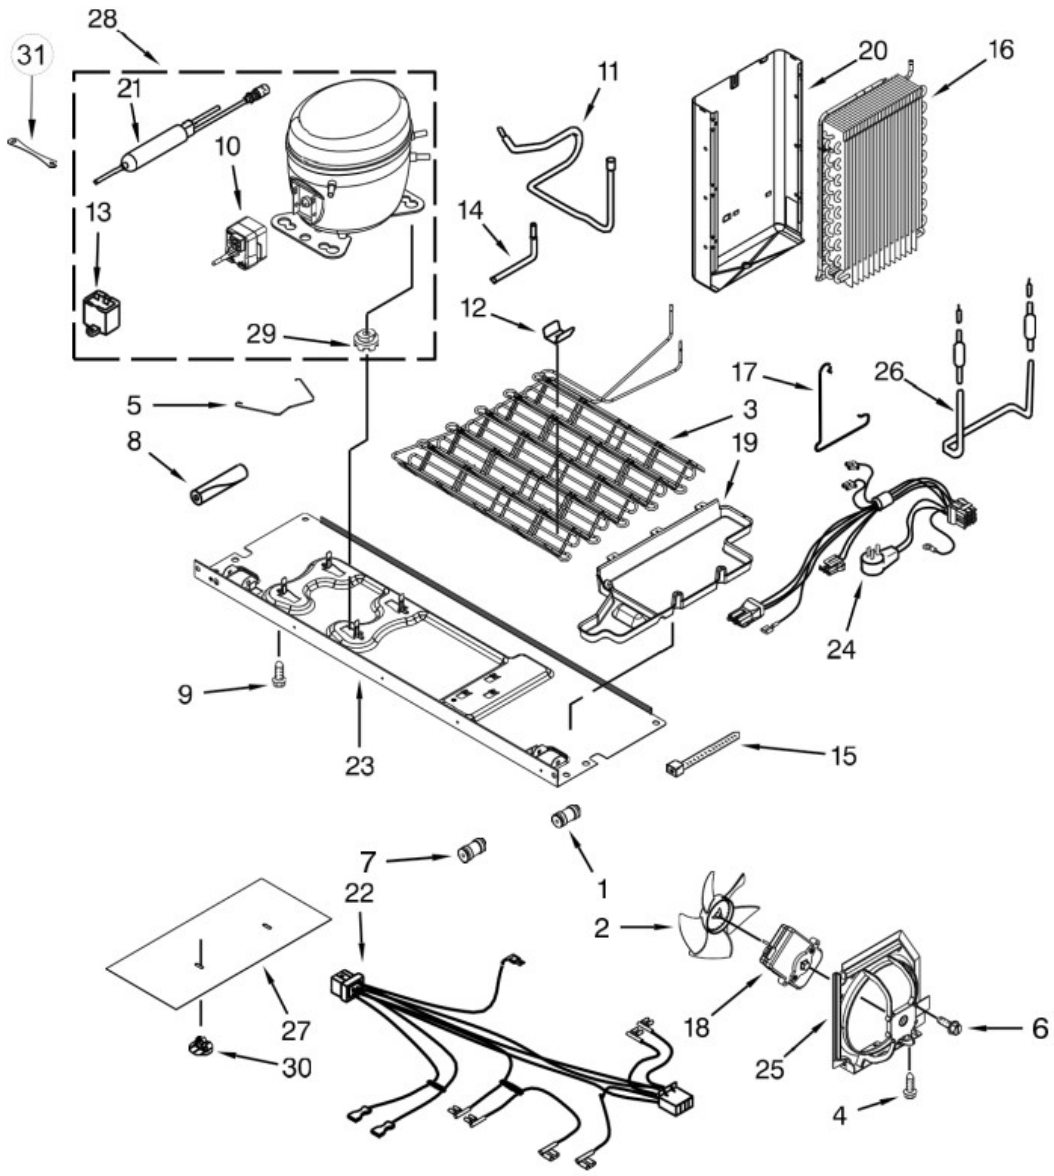



## Refrigerador Whirlpool WD6575S01

 
<b>No. Ilus.</b>	<b>DESCRIPCIÓN</b>	<b>No. de Parte</b>
<b>1</b>	Connector, Union	W10271541
<b>2</b>	Blade, Fan	2225834
<b>3</b>	Condenser	W10276899
<b>4</b>	Screw	W10142255
<b>5</b>	Strap, Bale	2212996
<b>6</b>	Screw	W10171469
<b>7</b>	Connector, Water	W10277958
<b>8</b>	Sleeve	W10303521
<b>9</b>	Bolt	W10142287
<b>10</b>	Device, Combination Start	W10197428
<b>11</b>	Tube, Suction	W10219381
<b>12</b>	Clip, Condenser	W10248621
<b>13</b>	Capacitor	W10350564
<b>14</b>	Tube, Process	2325479
<b>15</b>	Tie, Wire	2205813
<b>16</b>	Evaporator	2188822
<b>17</b>	Clip, Defrost Heater	2161324
<b>18</b>	Motor, Condenser Fan	W10909387
<b>19</b>	Tray, Evaporator	W10703218
<b>20</b>	Shield, Heat	W10274575
<b>21</b>	Drier	W10771114
<b>22</b>	Assembly, Unit Wire	W10670174
<b>23</b>	Basepan	W10277704
<b>24</b>	Cord, Power	W10634815
<b>25</b>	Baffle, Air	W10251467
<b>26</b>	Heater, Defrost	W10495967
<b>27</b>	Cover, Condenser (Bottom)	W10278140
<b>28</b>	Compressor	W10200250



## Refrigerador Whirlpool WD6575S01

<b>No. Ilus.</b>	<b>DESCRIPCIÓN</b>	<b>No. de Parte</b>
<b>29</b>	Grommet	10835903
<b>30</b>	Clip, Bottom Cover	W10815861
<b>31</b>	Strap, Compressor	W10236396

# Refrigerador Whirlpool WD6575S01

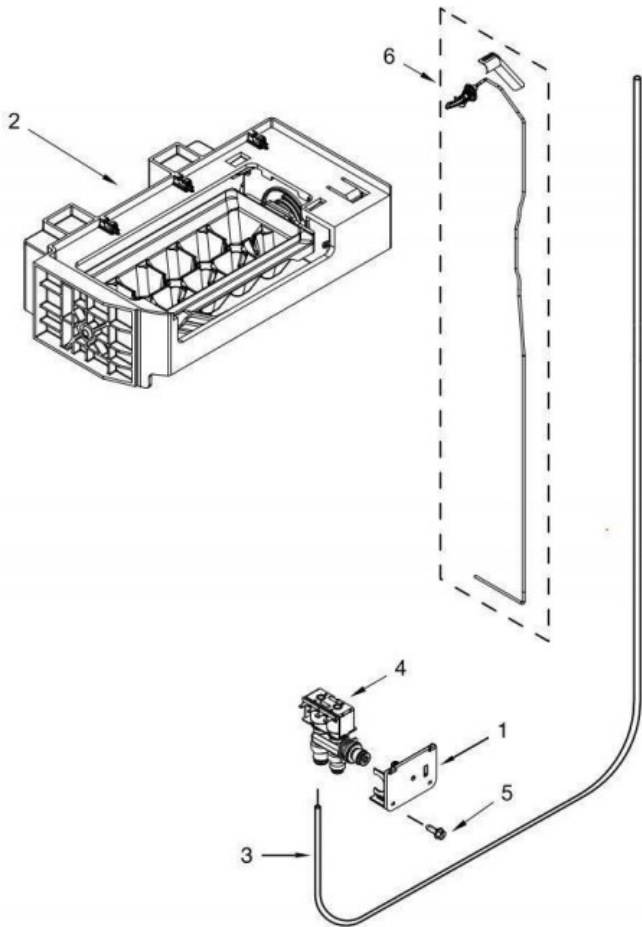



## Refrigerador Whirlpool WD6575S01

<b>No. Ilus.</b>	<b>DESCRIPCIÓN</b>	<b>No. de Parte</b>
<b>1</b>	Bracket, Water Valve	W10237915
<b>2</b>	Assembly, Ice Maker	W10798411
<b>3</b>	Tube, Water	W10238092
<b>4</b>	Assembly, Water Valve	W10341320
<b>5</b>	Screw	W10141625
<b>6</b>	Fill Tube Assembly	No serviceable