 


Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas

Refrigerador Whirlpool WD6580S00

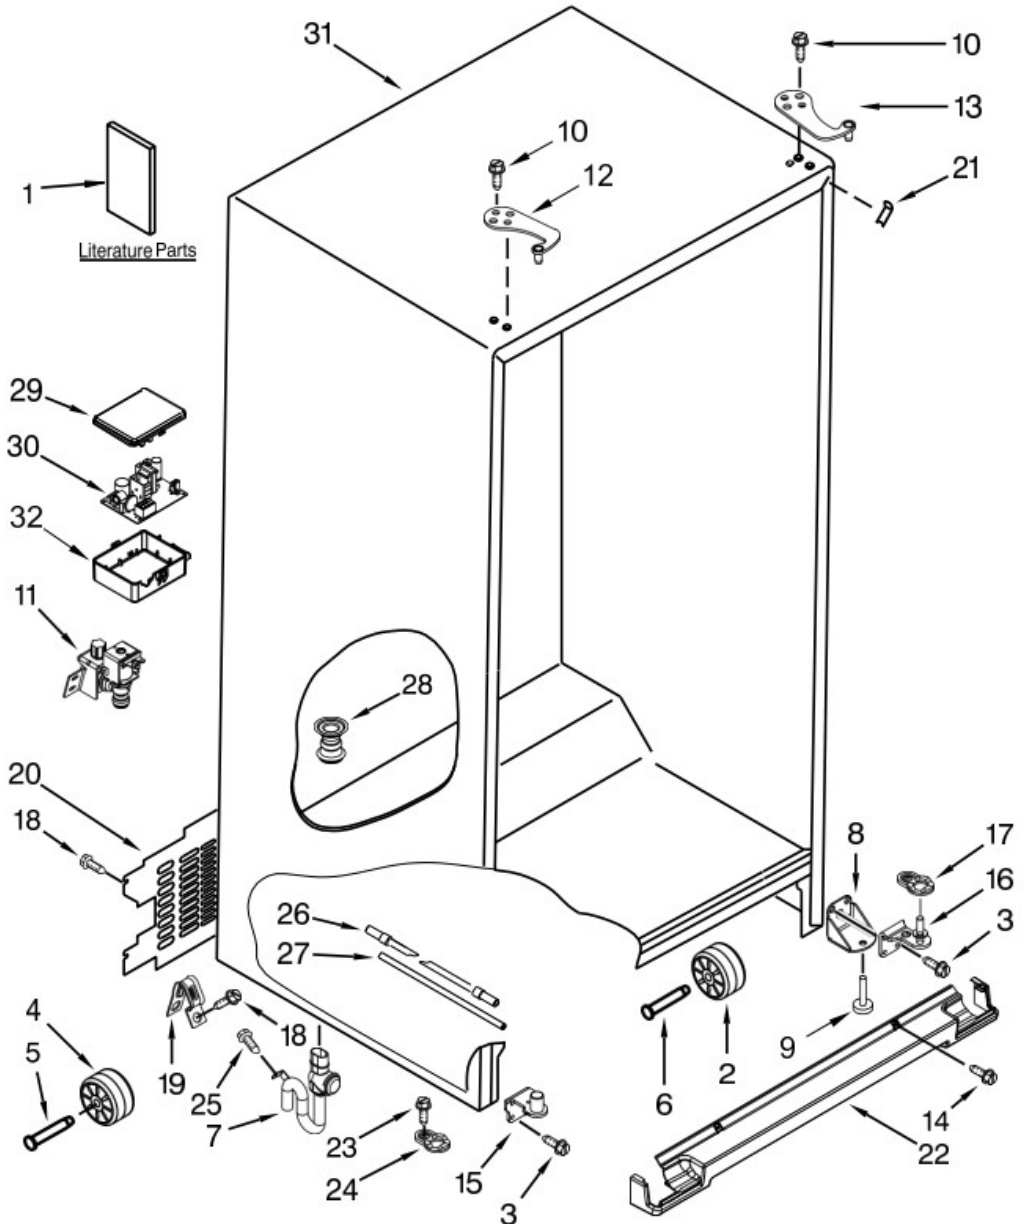



Refrigerador Whirlpool WD6580S00

No. Ilus.	DESCRIPCIÓN	No. de Parte
1	Literature Parts	----
	Use & Care Guide	No serviceable
2	Roller	2150304
3	Screw	----
4	Roller	12477102
5	Axle, Roller	12477202
6	Rivet, Roller	981125
7	Tube, Drain	W10379525
8	Bracket, Foot	W10900758
9	Brake, Roller	W10141622
10	Screw	----
11	Valve, Inlet	W10498992
12	Hinge, Top (Freezer)	W10901054
13	Hinge, Top (Refrigerator)	W10901049
14	Screw	----
15	Hinge, Bottom (Freezer)	W10249952
16	Hinge, Bottom (Refrigerator)	W10492501
17	Closer, Door (Refrigerator)	W10738911
18	Screw	----
19	Clamp, Power Cord	6-919724
20	Cover, Unit	W10257325
21	Filler, Wrapper	12587703AP
22	Grille	W10713153
23	Screw	----
24	Closer, Door (Freezer)	W10770893
25	Screw	----
26	Tube, Filter Inlet	W10279882
27	Tube, Filter Outlet	W10279884



Refrigerador Whirlpool WD6580S00


No. Ilus.	DESCRIPCIÓN	No. de Parte
28	Fitting, Drain	W10370680
29	Lid, HV Box	12957702
30	Control, Electronic	W10900856
31	Cabinet	No serviceable
32	Box, Control	W10247993

Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas

 Refrigerador Whirlpool WD6580S00

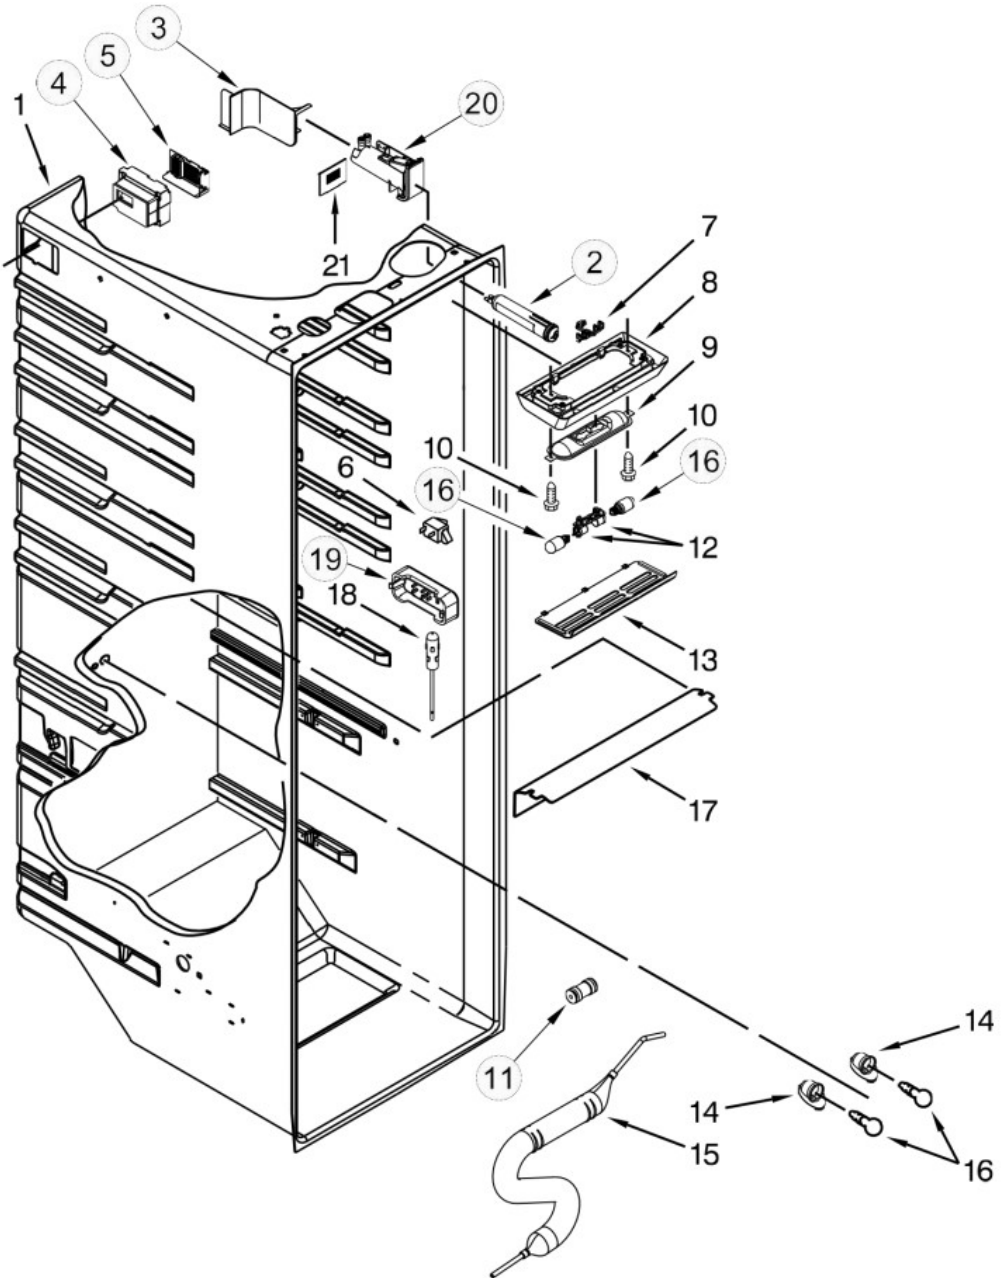




Refrigerador Whirlpool WD6580S00

No. Ilus.	DESCRIPCIÓN	No. de Parte
1	Liner	No serviceable
2	Filter, Water	W10790813
3	Cover, Water Filter	W10300482
4	Assembly, Air Diffuser	W10457605
5	Cover, Air Diffuser	W10457601
6	Switch, Light	W10656773
7	Assembly, Top Light Wire	W10253300
8	Trim, Light	W10280178
9	Shield, Heat	2223680
10	Screw	----
11	Connector, Water Tube	W10271543
12	Socket, Light	W10191429
13	Lens, Top Light	W10280420
15	Reservoir	W10366790
17	Lens, Light	W10269099
18	Thermistor	W10280385
19	Cover, Thermistor	W10425252
20	Housing, Water Filter	W10844058
21	Cover, Air Filter	W10457603

 Refrigerador Whirlpool WD6580S00





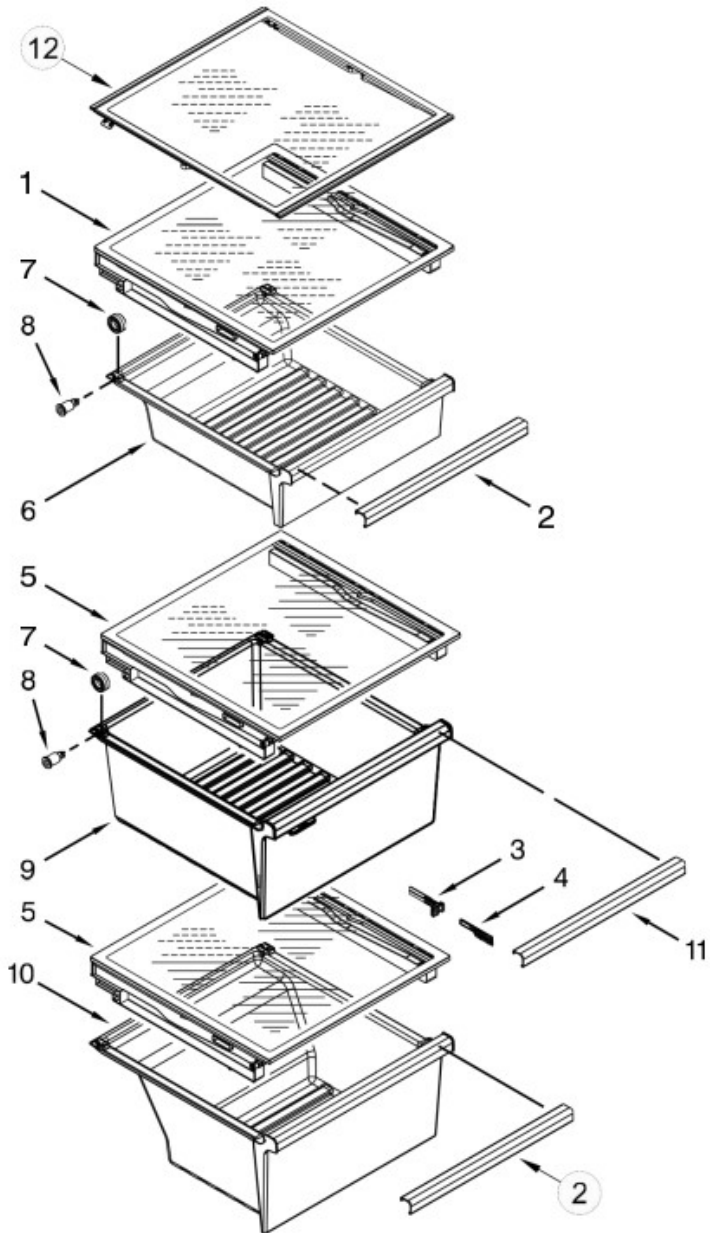




Refrigerador Whirlpool WD6580S00

No. Ilus.	DESCRIPCIÓN	No. de Parte
1	Shelf, Snack Pan	W10463648
2	Trim, Handle	W10281628
3	Slide, Humidity	W10282883
4	Housing, Humidity	W10282880
5	Assembly, Cover	W10463650
6	Pan, Snack	W10256770
7	Roller	W10628713
8	Axle, Roller	W10628712
9	Pan, Crisper	W10278653
10	Pan, Meat	W10256774
11	Trim, Handle	W10309635
12	Assembly, Shelf	W10774040

     Refrigerador Whirlpool WD6580S00

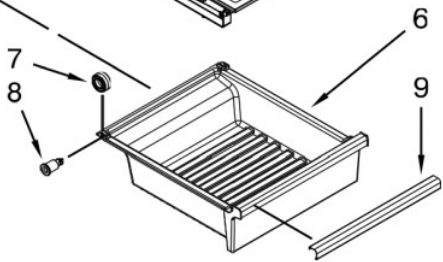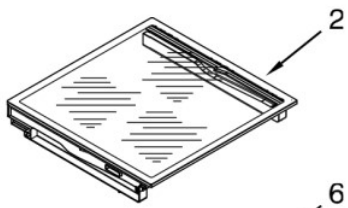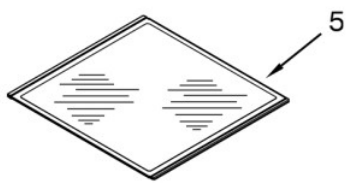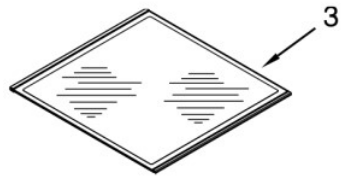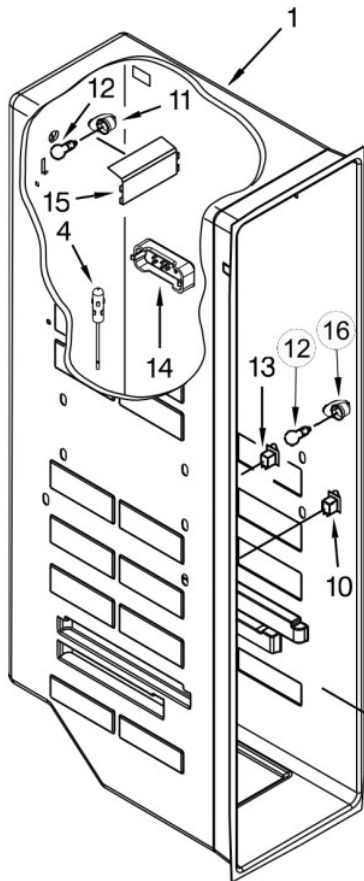




Refrigerador Whirlpool WD6580S00


No. Ilus.	DESCRIPCIÓN	No. de Parte
1	Liner	No serviceable
2	Assembly, Cover	W10463653
3	Shelf, Glass Upper	W10774055
4	Thermistor	W10280386
5	Shelf, Glass Lower	W10774058
6	Pan, Freezer	W10260985
7	Roller	W10628713
8	Axle, Roller	W10628712
9	Trim, Handle	W10281630
10	Switch, Rocker Arm	W10656771
13	Switch, Rocker Arm	W10656772
14	Cover, Thermistor	W10425252
15	Lens	W10269101
16	Socket, Light	2155597

 Refrigerador Whirlpool WD6580S00

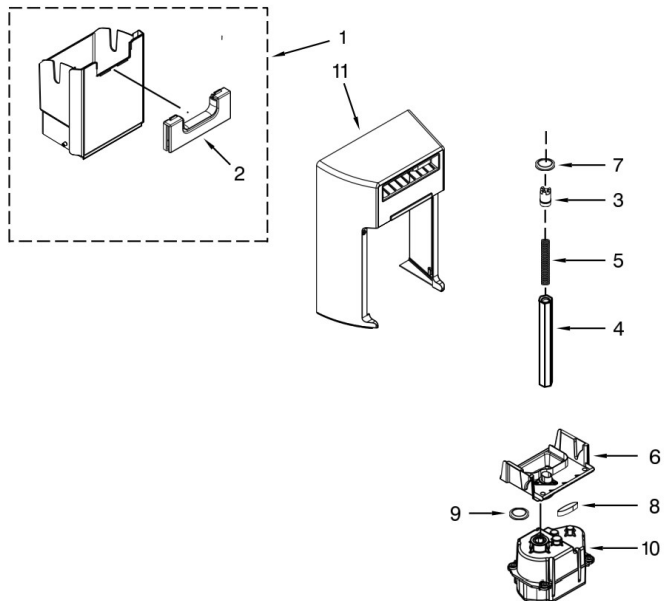

No. Ilus.	DESCRIPCIÓN	No. de Parte
1	Ice Container (Complete)	W10774957
2	Assembly, Latch	W10693542
3	Coupling, Bottom	2220458
4	Shaft, Drive	W10258544
5	Spring, Coupling	W10754509
6	Assembly, Mounting Plate	W10293211
7	Seal	2198628
8	Gasket	W10291905
9	Washer	2212370
10	Motor, Dispenser	W10225313
11	Cover, Container	W10287594

 Refrigerador Whirlpool WD6580S00

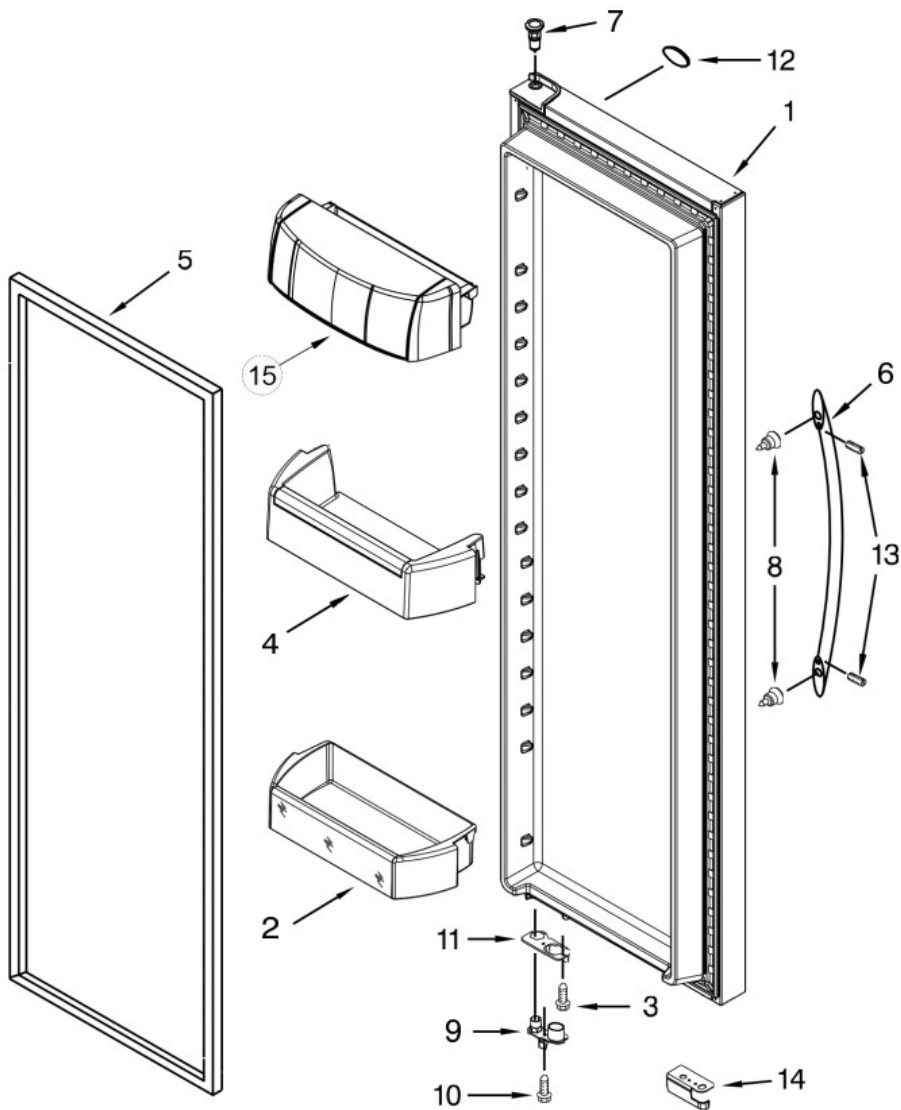




Refrigerador Whirlpool WD6580S00

No. Ilus.	DESCRIPCIÓN	No. de Parte
1	Door, Refrigerator	W10651576
2	Bin, Gallon Door	W10527272
3	Screw	----
4	Bin, Shallow Door	W10308388
5	Gasket, Door	W10249916
6	Handle	W10678291
7	Thimble, Top	2200086
8	Screw	----
9	Closer, Upper Cam Door	W10257203
10	Screw	----
11	Bracket, Door Stop	W10888898
12	Nameplate	W10511972
13	Screw	----
14	Cover, Door Stop	W10789147
15	Assembly, Utility	W10324760
	Compartment	

 Refrigerador Whirlpool WD6580S00

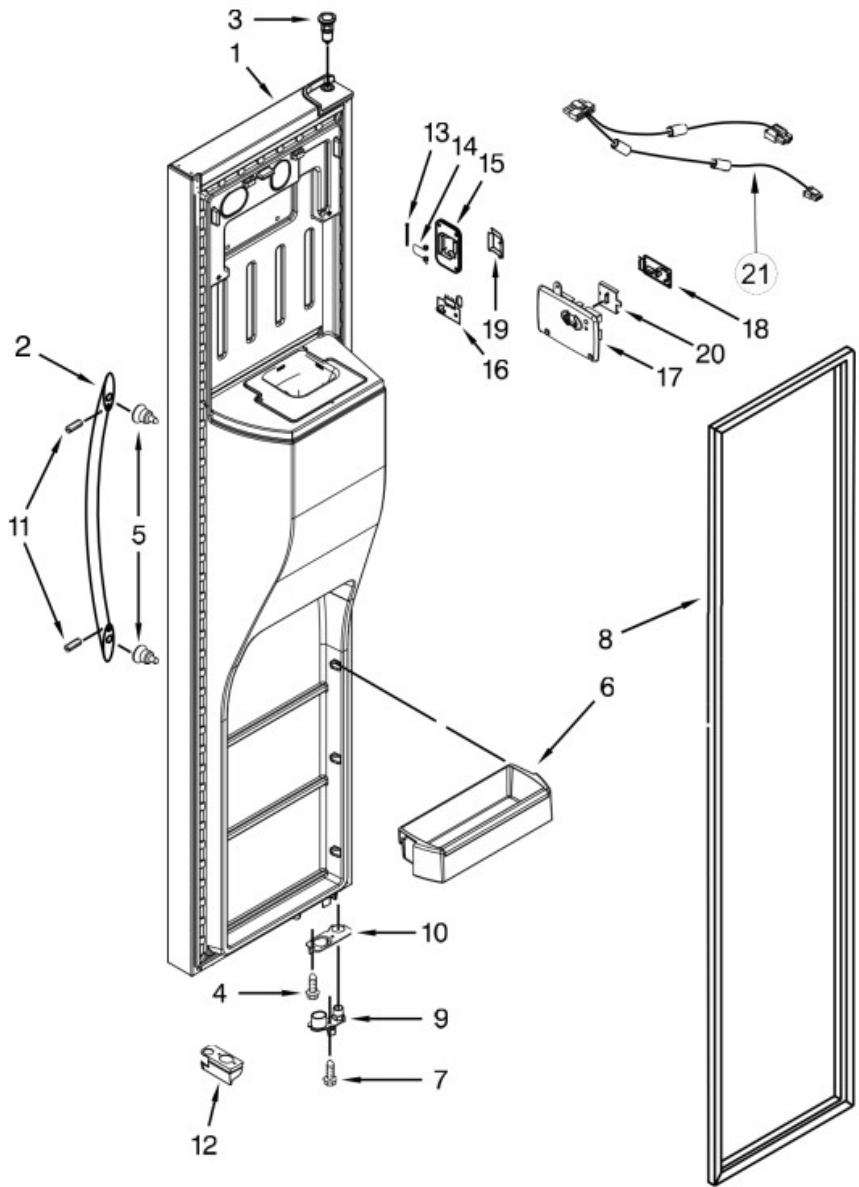




Refrigerador Whirlpool WD6580S00

No. Ilus.	DESCRIPCIÓN	No. de Parte
1	Door, Freezer	W10762949
2	Handle	W10678291
3	Thimble, Top	2200086
4	Screw	----
5	Screw	----
6	Bin, Door	W10296857
7	Screw	----
8	Gasket, Door	W10249917
9	Closer, Upper Cam Door	W10257206
10	Bracket, Door Stop	W10247907
11	Set Screw	----
12	Cover, Door Stop	W10632062
13	Pin, Door	2198634
14	Spring, Door	2198635
15	Cover, Emitter	W10258502
16	Board, Emitter Circuit	W10518659
17	Cover, Receiver	W10363396
18	Board, Receiver Circuit	W10518658
19	Door, Emitter	W10258520
20	Slide, Icemaker Shut Off	W10258540
21	Harness, Emitter and	W10411699
	Receiver	

 Refrigerador Whirlpool WD6580S00

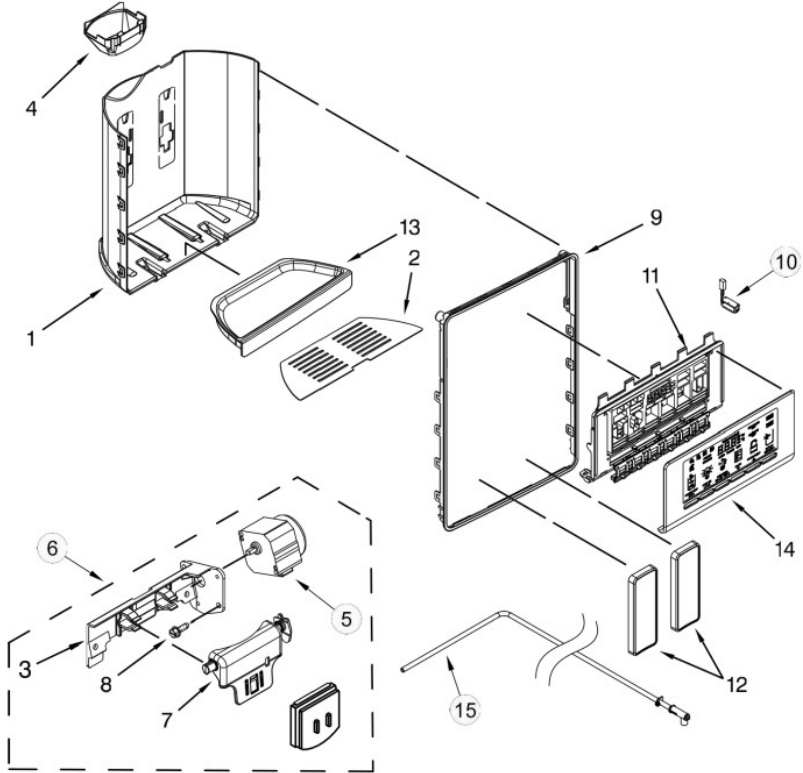



Refrigerador Whirlpool WD6580S00


No. Ilus.	DESCRIPCIÓN	No. de Parte
1	Housing, Dispenser	No serviceable
2	Grate, Drip Tray	W10276223
3	Bracket, Ice Door	W10174827
4	Guide, Ice	W10435760
5	Motor, Dispenser	W10205978
6	Assembly, Separator	W10781993
7	Support, Ice Door	W10346124
8	Screw	----
9	Ring, Trim	W10276227
10	Assembly, LED	W10238083
11	Assembly, User Interface	W10714048
12	Pad, Ice and Water	W10370594
13	Tray, Drip	W10276224
14	Cover, Front	W10276229
15	Assembly, Water Fitting	W10386778

Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas

 Refrigerador Whirlpool WD6580S00

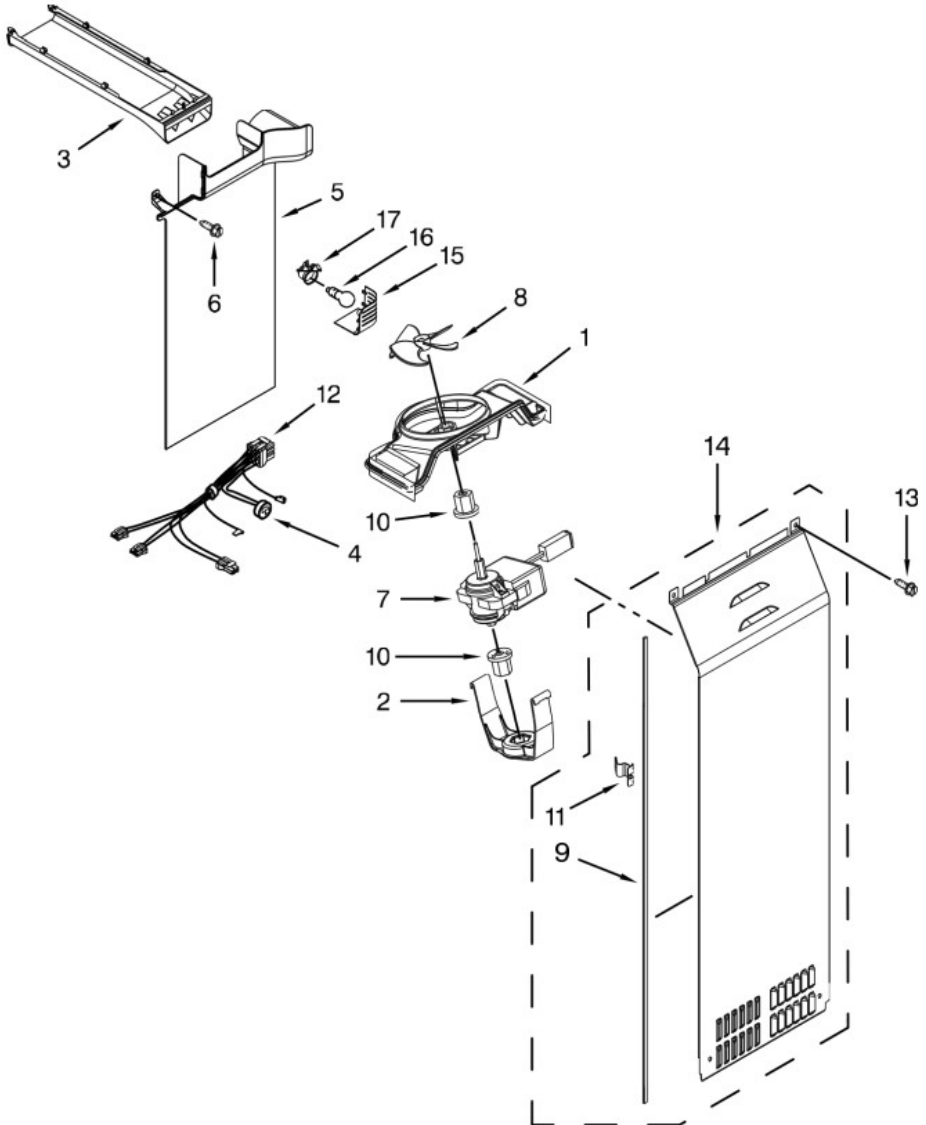




Refrigerador Whirlpool WD6580S00

No. Ilus.	DESCRIPCIÓN	No. de Parte
1	Fan Scroll	W10251462
2	Retainer, Fan Motor	W10260421
3	Duct, Upper Air	W10550199
4	Bi-Metal, Defrost	W10260437
5	Duct, Freezer Air	W10260378
6	Screw	----
7	Motor, Fan	2315549
8	Blade, Fan	2169142
9	Gasket, Evaporator Cover	W10240370
10	Grommet, Motor	2176759
11	Clip, Evaporator Cover	W10369602
12	Assy Evaporator Fan Wire	W11050120
13	Screw	----
14	Cover, Evaporator	W10388268
15	Cover, Light	W10260382

 Refrigerador Whirlpool WD6580S00

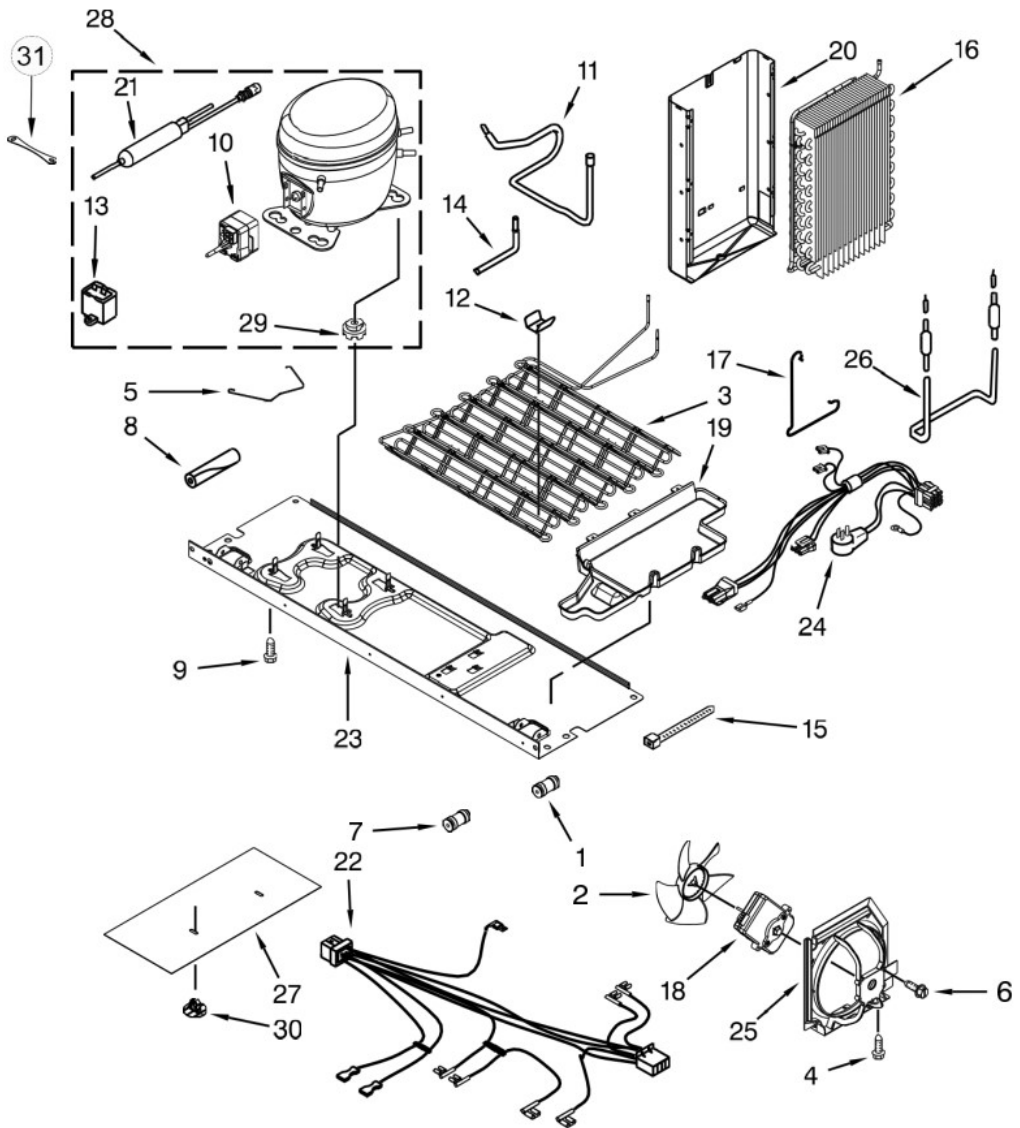



Refrigerador Whirlpool WD6580S00


No. Ilus.	DESCRIPCIÓN	No. de Parte
1	Connector, Union	W10271541
2	Blade, Fan	2225834
3	Condenser	W10276899
4	Screw	----
5	Strap, Bale	2212996
6	Screw	----
7	Connector, Water	W10277958
8	Sleeve	W10303521
9	Bolt	W10142287
10	Device, Combination Start	W10197428
11	Tube, Suction	W10219381
12	Clip, Condenser	W10248621
13	Capacitor	W10350564
14	Tube, Process	2325479
15	Tie, Wire	2205813
16	Evaporator	2188822
17	Clip, Defrost Heater	2161324
18	Motor, Condenser Fan	W10909387
19	Tray, Evaporator	W10703218
20	Shield, Heat	W10274575
21	Drier	W10771114
22	Assembly, Unit Wire	W10670174
23	Basepan	W10277704
24	Cord, Power	W10634815
25	Baffle, Air	W10251467
26	Heater, Defrost	W10495967
27	Cover, Condenser (Bottom)	W10278140
28	Compressor	W10200250



Refrigerador Whirlpool WD6580S00

No. Ilus.	DESCRIPCIÓN	No. de Parte
29	Grommet	10835903
30	Clip, Bottom Cover	W10815861
31	Strap, Compressor	W10236396

 Refrigerador Whirlpool WD6580S00

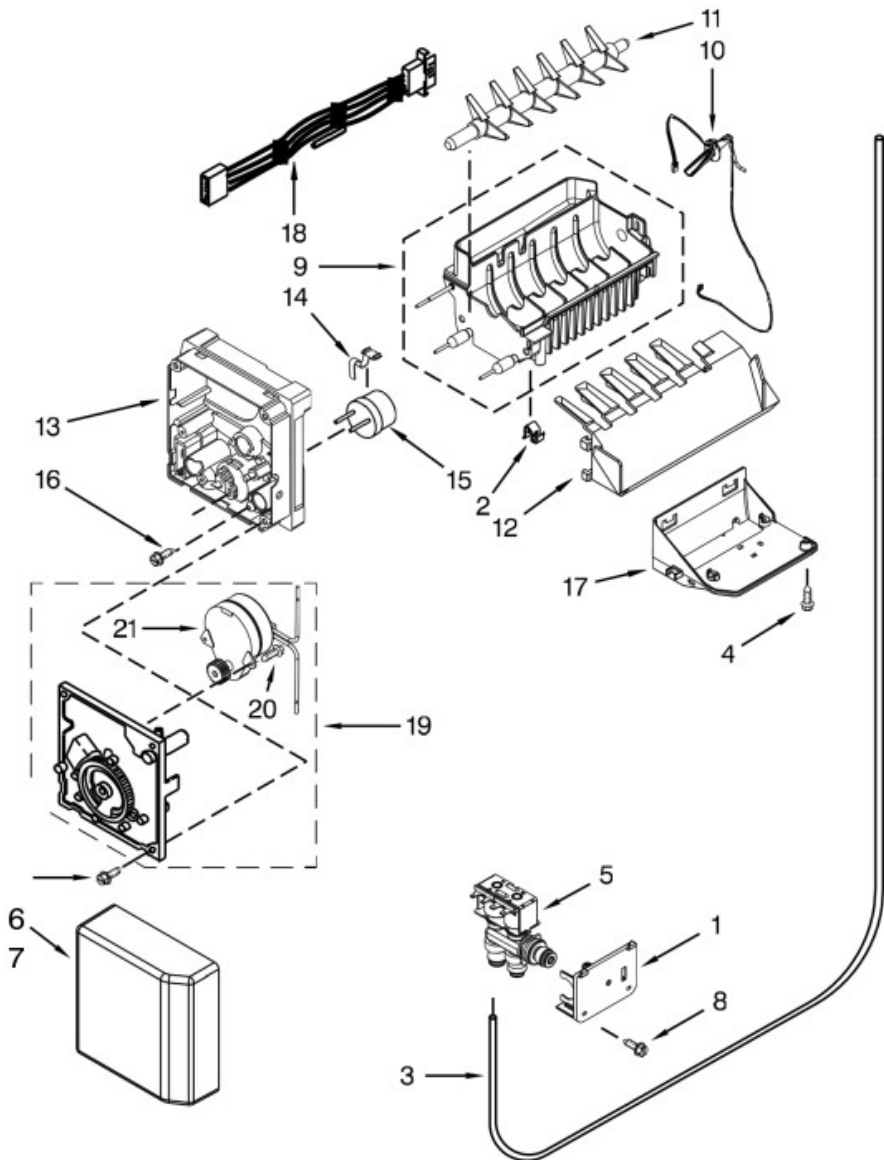



Refrigerador Whirlpool WD6580S00

No. Ilus.	DESCRIPCIÓN	No. de Parte
1	Bracket, Water Valve	W10237915
2	Clip, Thermal Fuse	628379
3	Tube, Water	W10238092
4	Screw	----
5	Assembly, Water Valve	W10341320
6	Screw	W10001240
7	Cover, Icemaker	W10251088
8	Screw	----
9	Assembly, Mold and Heater	W10251081
10	Assembly, Fill Tube	W10347034
11	Ejector	W10318644
12	Stripper, Ice	W10747731
13	Support, Housing	2194712
14	Retainer, Thermostat	2315522
15	Thermostat	2321258
16	Screw	----
17	Bracket, Mounting	W10747726
18	Harness, Wiring	W10242365
19	Assembly, Module and Motor	626691
20	Screw	----
21	Motor	No serviceable
-	Complete Icemaker Assembly	W10122576