


Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas

Secadora W.W. WDG336RBD1

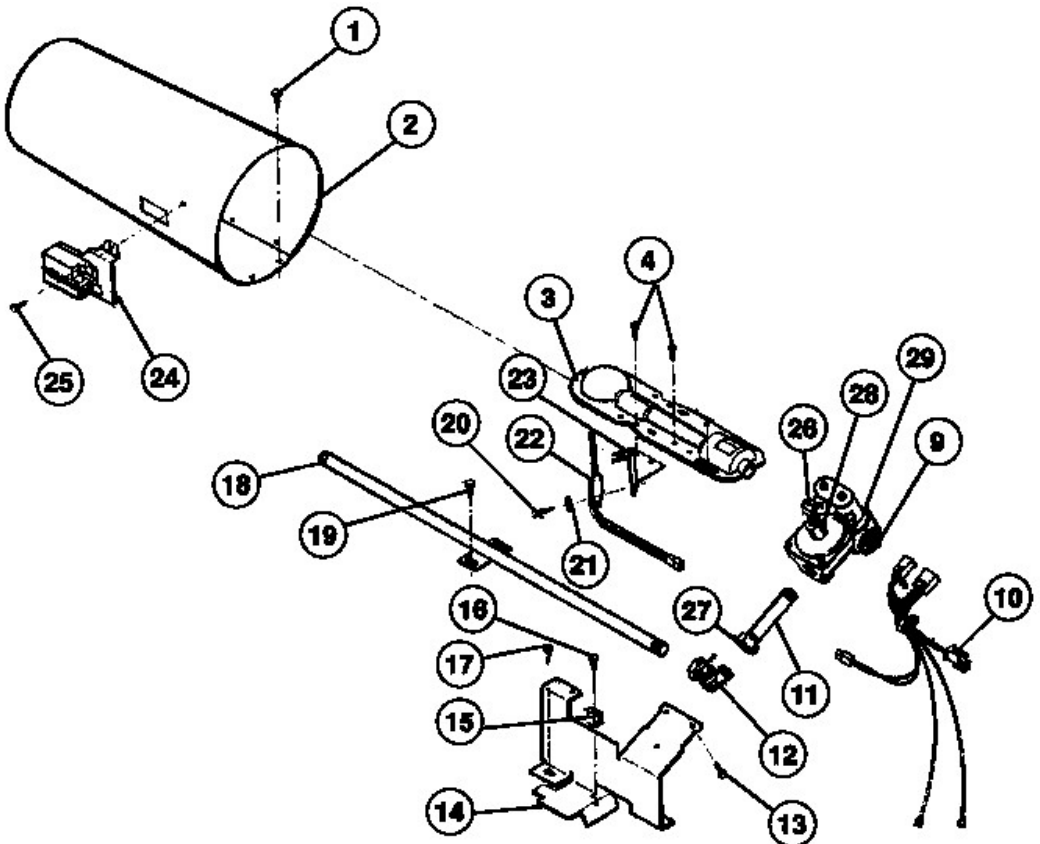



Secadora W.W. WDG336RBD1


Guía	N.P.	Descripción
2	3201240	Burner tube assembly
3	131361100	Dryer burner
4	131243800	Laundry appliance screw, #8-32 x 3/8-in
6	3205701	Screw
7	5303281138	Shutter
8	5303281148	Nut
9	5303281147	Valve
10	5303281137	Harness
11	5303212837	Union
12	5303207407	Valve-shut o
14	5303281145	Bracket
15	3281126	Clip
17	3281134	Screw
18	08015271-	Pipe
19	5303010202	Screw
20	5303281150	Screw
21	3201209	Washer
22	5303281151	Dryer burner igniter
23	5303281149	Bracket
24	5303281135	Dryer radiant sensor
25	5303281035	Screw
26	08015677-	Orifice
27	5308015194	Dryer gas valve hex nut
28	5300622602	Dryer valve coil kit
29	5308015680	Dryer valve coil kit

Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas

Secadora W.W. WDG336RBD1

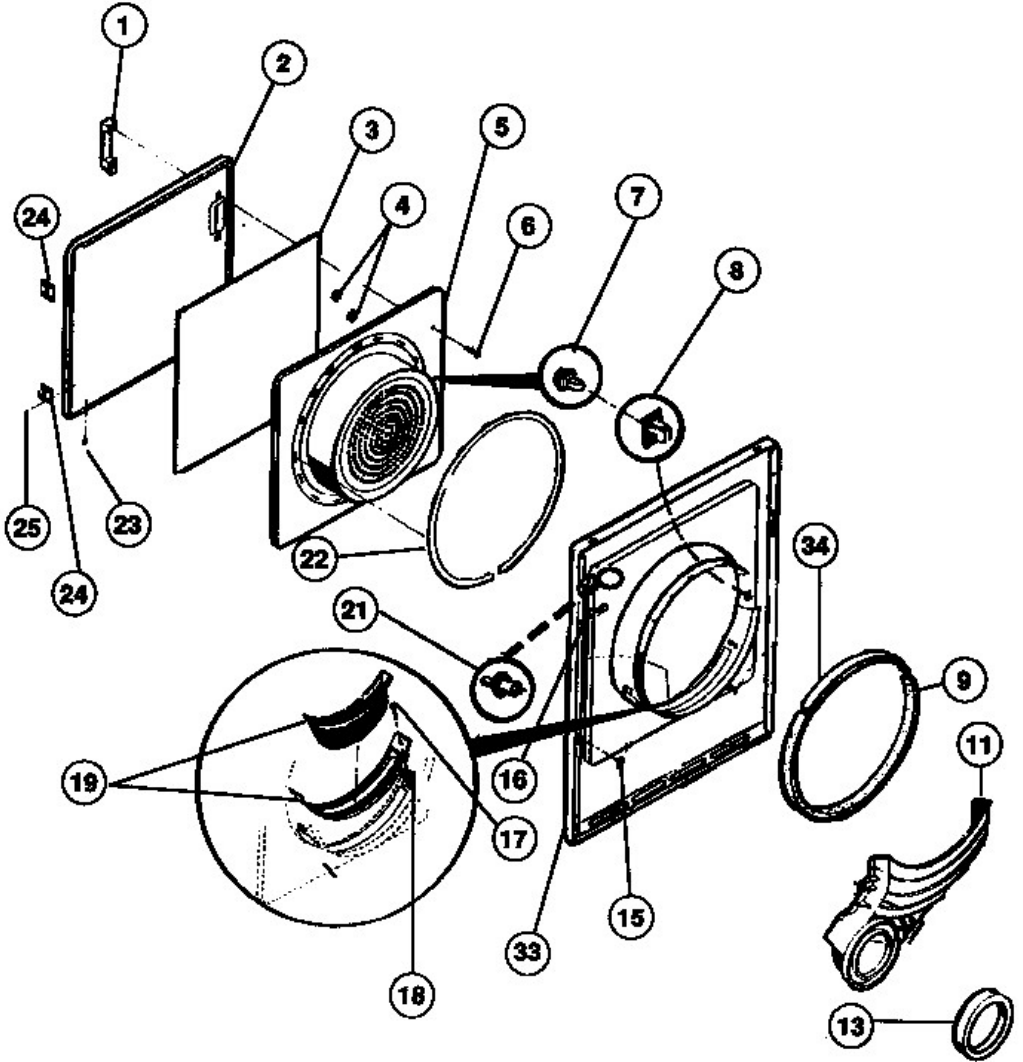




Secadora W.W. WDG336RBD1

Guía	N.P.	Descripción
1	131194200	Handle-alm
1	131194202	Handle (white)
2	5303299161	Door
2	5303299162	Door
3	5303281067	Shield
4	3201205	Spacer washer
5	3201207	Door (almond)
5	3201206	Door (white)
6	5303281051	Screw
7	5303211430	Washer door strike
8	5307521419	Dryer door catch
9	5303281049	Washer seal
11	5303937116	Duct-air kit
13	5303281013	Dryer air duct seal
15	5303281074	Dryer cabinet clip
16	131063700	Dryer clip
17	3281178	Laundry appliance screw
18	3281061	Dryer clip
19	5303270382	Screen
21	5308001614	Dryer door switch
22	5303201210	Dryer door seal
24	5303281050	Door hinge
25	5303161187	Screw
33	5303937118	Front panel
33	5303937122	Panel
34	5303937139	Dryer felt and glide kit

Secadora W.W. WDG336RBD1

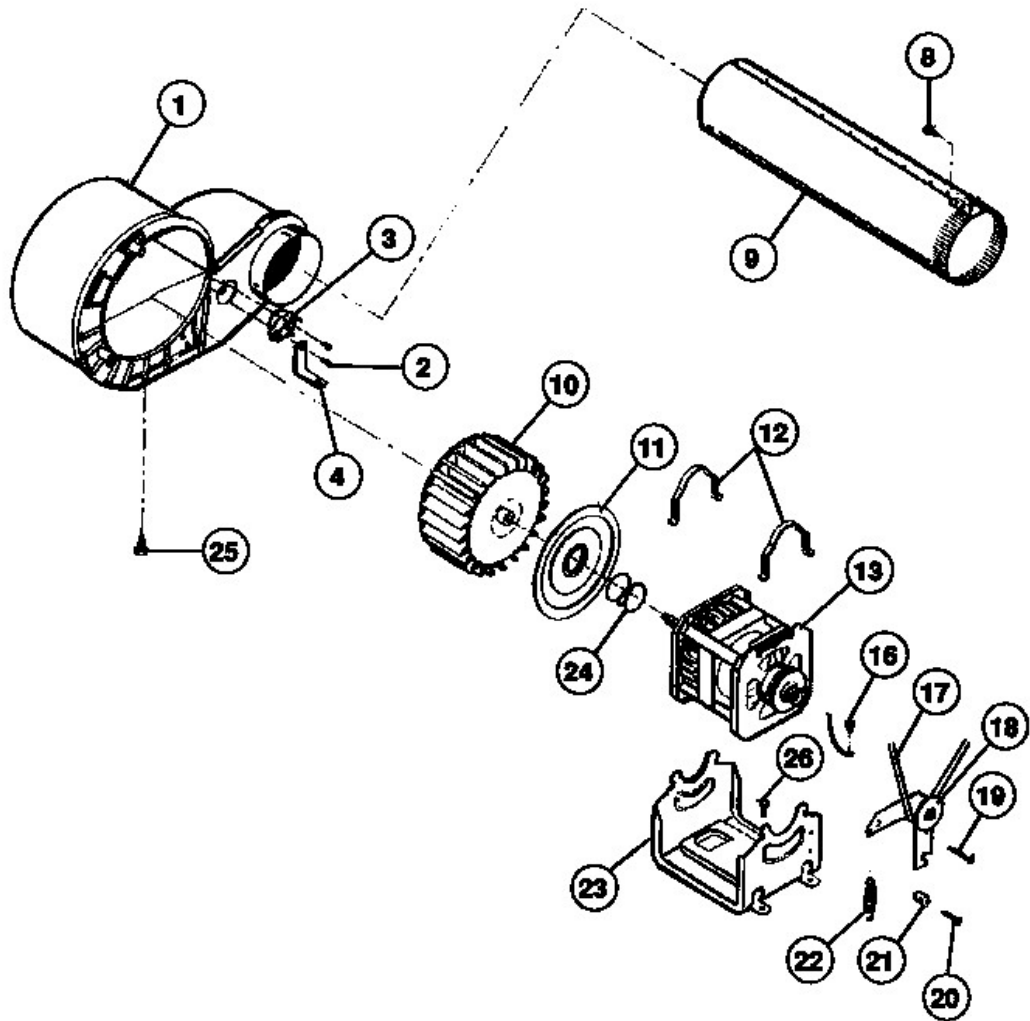



Secadora W.W. WDG336RBD1


Guía	N.P.	Descripción
1	5303270858	Housing
2	3261048	Screw
3	131298400	Dryer operating thermostat
3	131383100	Thermostat
3	5308015398	Dryer thermostat
8	5303015671	Screw
9	5303269973	Duct
10	5303281079	Wheel
11	5303281080	Cover
12	5303212834	Dryer motor clamp
13	5303283470	Dryer motor
16	3281120	Screw
17	134503600	Dryer drum belt
18	5303212849	Dryer idler assembly
19	3261230	Screw
20	131017900	Screw
21	5303281076	Spacer washer
22	5303281085	Dryer idler spring
23	131367101	Motor support
24	5303281083	Spring
25	3281036	Screw
26	131168200	Laundry appliance screw, #8-18 x 31/100

Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas

Secadora W.W. WDG336RBD1

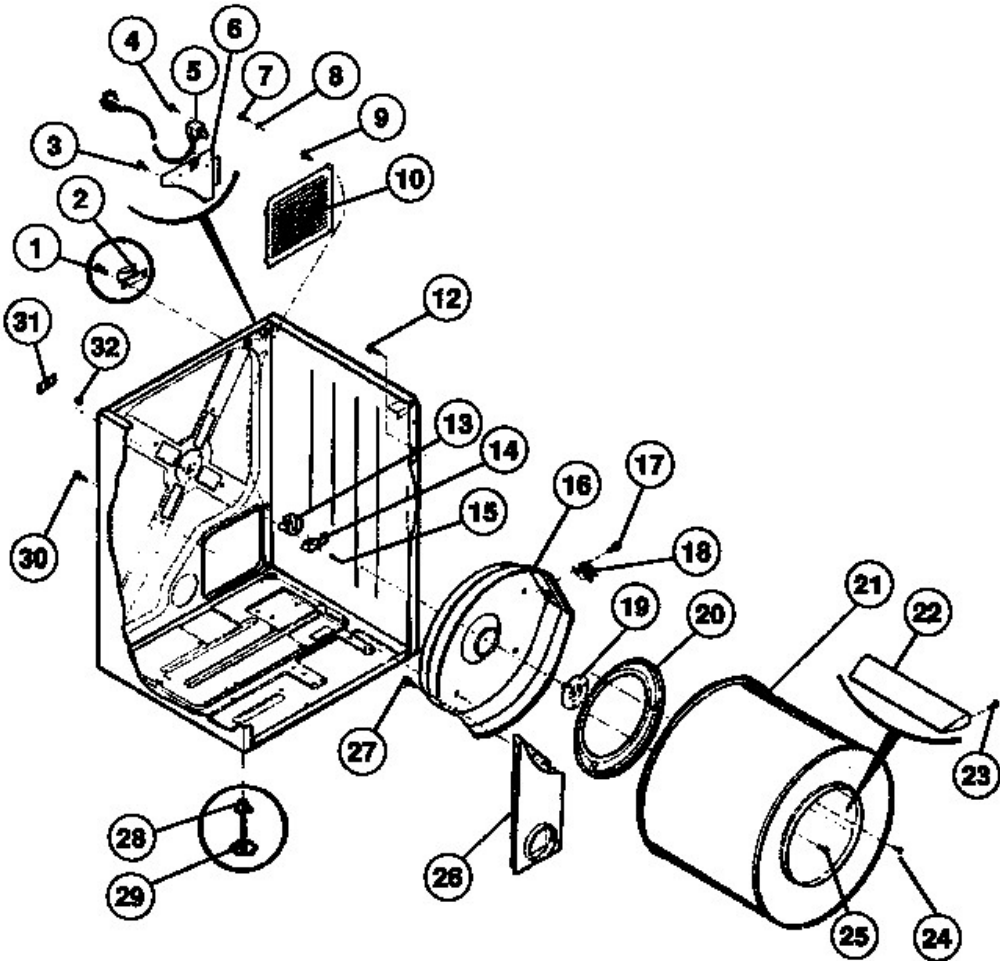




Secadora W.W. WDG336RBD1

Guía	N.P.	Descripción
1	08011338	Screw
2	3281175	Hinge
3	5303015671	Screw
4	5308015309	Screw
5	5303281129	Dryer 3-prong power cord
6	3281130	Cover
7	131301100	Dryer screw
8	3281107	Washer
9	5303281035	Screw
10	5303281018	Cover
13	131825900	Dryer drum bearing
14	5303281023	Dryer drum bearing bracket
15	5303281033	Washer screw
16	5303281119	Housing
17	3281120	Screw
18	5308015399	Dryer safety thermostat
19	5303931781	Dryer drum support shaft
20	3204254	Dryer heater baffle
21	3201199	Dryer drum
22	5303201200	Dryer drum baffle
23	3202754	Dryer drum baffle screw
24	131378200	Laundry appliance screw, #8-18 x 31
25	5303205255	Screw
26	3281123	Duct assembly
28	3201202	Grommet
29	5303281032	Foot
31	5303281020	Dryer rear bearing clip
32	5303281019	Dryer grounding ball

Secadora W.W. WDG336RBD1

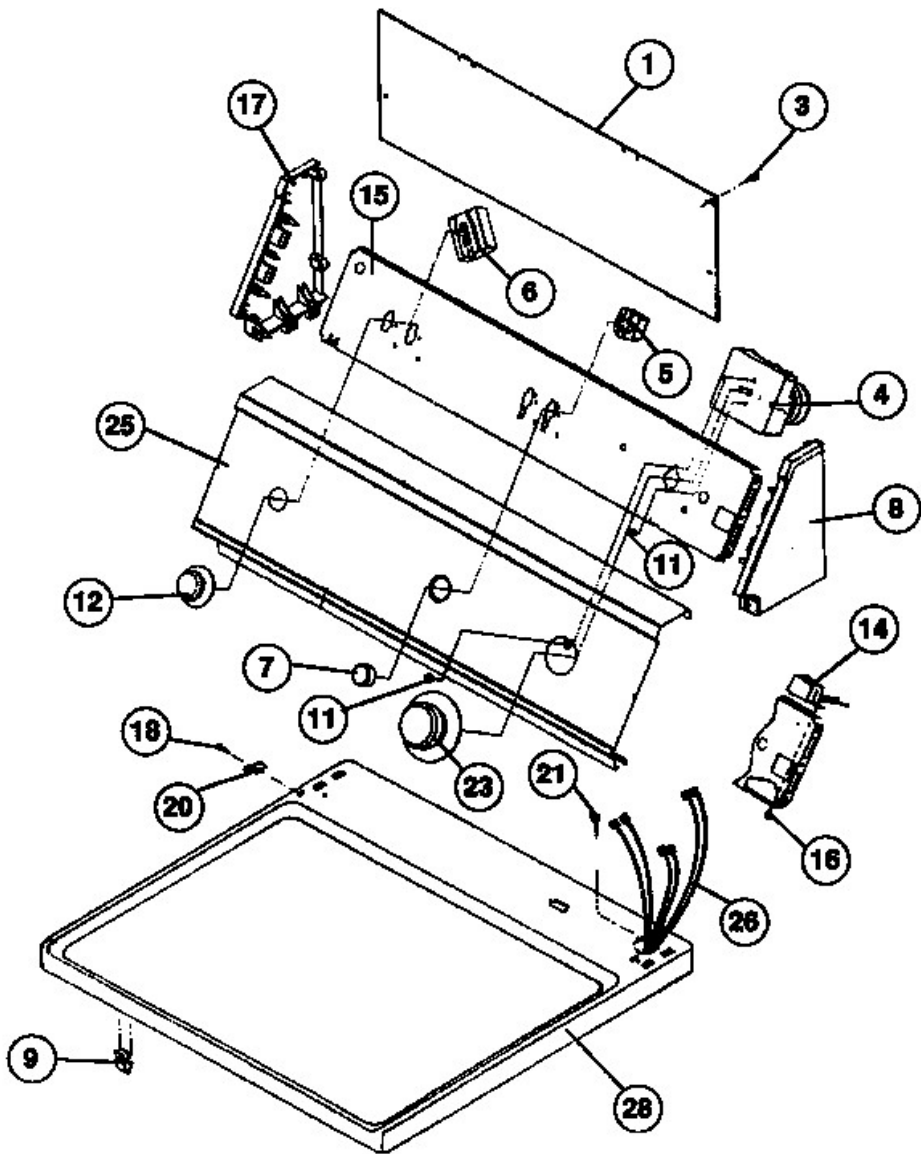



Secadora W.W. WDG336RBD1

Guía	N.P.	Descripción
1	3205898	Cover
3	5308006553	Washer screw
4	5303297139	Dryer timer
4	131062400	Dryer timer
5	131048000	Switch
6	131288900	Dryer temperature switch
7	131111501	Laundry appliance start button (white)
7	131111500	Push-to-start knob
8	5303291352	End cap, right
8	5303291351	End cap
9	3205821	Dryer top panel clip
11	5303283289	Screw
12	131118602	Washer control knob
14	5303210285	Buzzer
15	131297306	Control bracket
16	5303015671	Screw
17	5303291343	End cap
17	5303291344	Laundry appliance control panel end cap
18	5303297854	Screw
18	5303289526	Screw
20	131197000	Laundry appliance clip
21	131243800	Laundry appliance screw, #8-32 x 3/8-in
23	131118903	Dryer knob
23	131118902	Dryer control knob



Secadora W.W. WDG336RBD1

Guía	N.P.	Descripción
25	131260300	Control panel
25	131416400	Control panel
25	131416500	Control panel
25	131416700	Control panel
26	131384500	Electronic harness
28	131130402	Panel
28	131130304	Panel-top/al