

Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas

Horno Whirlpool WOA120S

No. Ilus.	DESCRIPCIÓN	No. de Parte
1	Heat dissipation thermostat	30100800003
2	Temperature control switch	30100900001
3	Thermostat switch sensor fixer	30304100001
4	Lamp	30102500060
5	Top of the shell cover	30302800016
6	Rear cover plate	30302200026
7	Plug	30102400151
8	Bulb Subassembly	30101000003
9	Nozzle holder	30313300008
10	Hiding Board of Wiring Terminal	30102600014
11	Inner rear bracket	30301500008
12	Lower fixed seat of guide rail bracket	30400300004
13	Housing bottom connecting plate	30302700050
14	Inner bottom insulation fiber	30600100006
15	Israeli connection	30402300002
16	Esprea Gas Natural	30402100078
	Esprea Gas LP	30402100111
17	Inner ring insulation fiber	30600100006
18	Left rail bracket	30400200002
19	Right guide bracket	30400200003
20	Thermocouple	30401800062
21	Ignition	30402400032
22	Inlet regulating ring	30302700055
23	Inner panel support	30301600002
24	Fixed block	30401600006
25	Combustion tube assembly	30401500001
26	Shelf handle	30400800002

Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas

Horno Whirlpool WOA120S

No. Ilus.	DESCRIPCIÓN	No. de Parte
27	Burner fixing plate	30304000009
28	Housing backplane	30302000012
29	Wire rack	30400100012
30	Grase Collector	30304200002
31	Burner baffle	30303900013
32	Door bracket pin	30406200006
33	Baffle of heat dissipation fan	30700300007
34	Movable shaft fixing block (right)	30214900002
35	Inner glass	30500400007
36	Inner glass block (right)	30200900006
37	Door frame right bracket	30303400008
38	Hinge assembly (No. 17)	30400600034
39	Door panel	30500200656
40	Door support pin spring	30405800002
41	Inlet pipe retainer plate	30312900002
42	Handle fixing plate	30201300001
43	Handle fixing sleeve	30303600001
44	Decorative board for door panel	30304500011
45	Handle-16	30400700022
46	Inner glass block (left)	30200900005
47	Movable shaft fixing block (left)	30214900001
48	Door frame left bracket	30303400007
49	Middle glass fixing plate	30500300022
50	Middle glass	30201000012
51	Knob-32	30402500041
52	Decorative panel for switch panel	30304400176
53	Switch panel	30500100101

Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas



Horno Whirlpool WOA120S

No. Ilus.	DESCRIPCIÓN	No. de Parte
54	Switch panel connecting plate	30302700005
55	Switch panel fixing plate	30301400006
56	Door support (gas)	30303500013
57	Thermostat valve	30405300005
58	Rotary roasting bar rack	30400500004
59	Rotary baking rod assembly	30400400002
60	Inner panel	30315000010
61	Housing right bracket	30302400008
62	Housing side plate	30302300013
63	Door seal assembly	2030400003
64	Inner ring assembly	2030300012
65	Hinge fixing plate	30302600007
66	Housing left bracket	30302400007
67	electric heating tube	30101200102
68	Exhaust pipe lower plate	30303800010
69	Exhaust pipe upper plate	30303800009
70	Exhaust pipe flue plate	30301800016
71	Exhaust pipe coverplate	30312600013
72	Cooling fan assembly	30100400027
73	Upper cover plate	30302100004
74	Pulser	30102300002
75	Inlet pipe (70L gas)	30405200015
76	Thermostat alve connecting pipe	30405400012
77	Back electric heat pipe baffle	30301100013
78	Rotating motor assembly	30101300010
79	Circulating fan assembly	30100300001
80	Timer component	30100100002
81	Overheat protector	30100700008
-	Wiring	30102100550