




30" BUILT-IN ELECTRIC COMBINATION MICROWAVE WALL OVEN

MODELS:

WOC54EC0AB02 (Black)
WOC54EC0AW02 (White)
WOC54EC0AS02 (Stainless)

HORNO WOC54EC0AB02

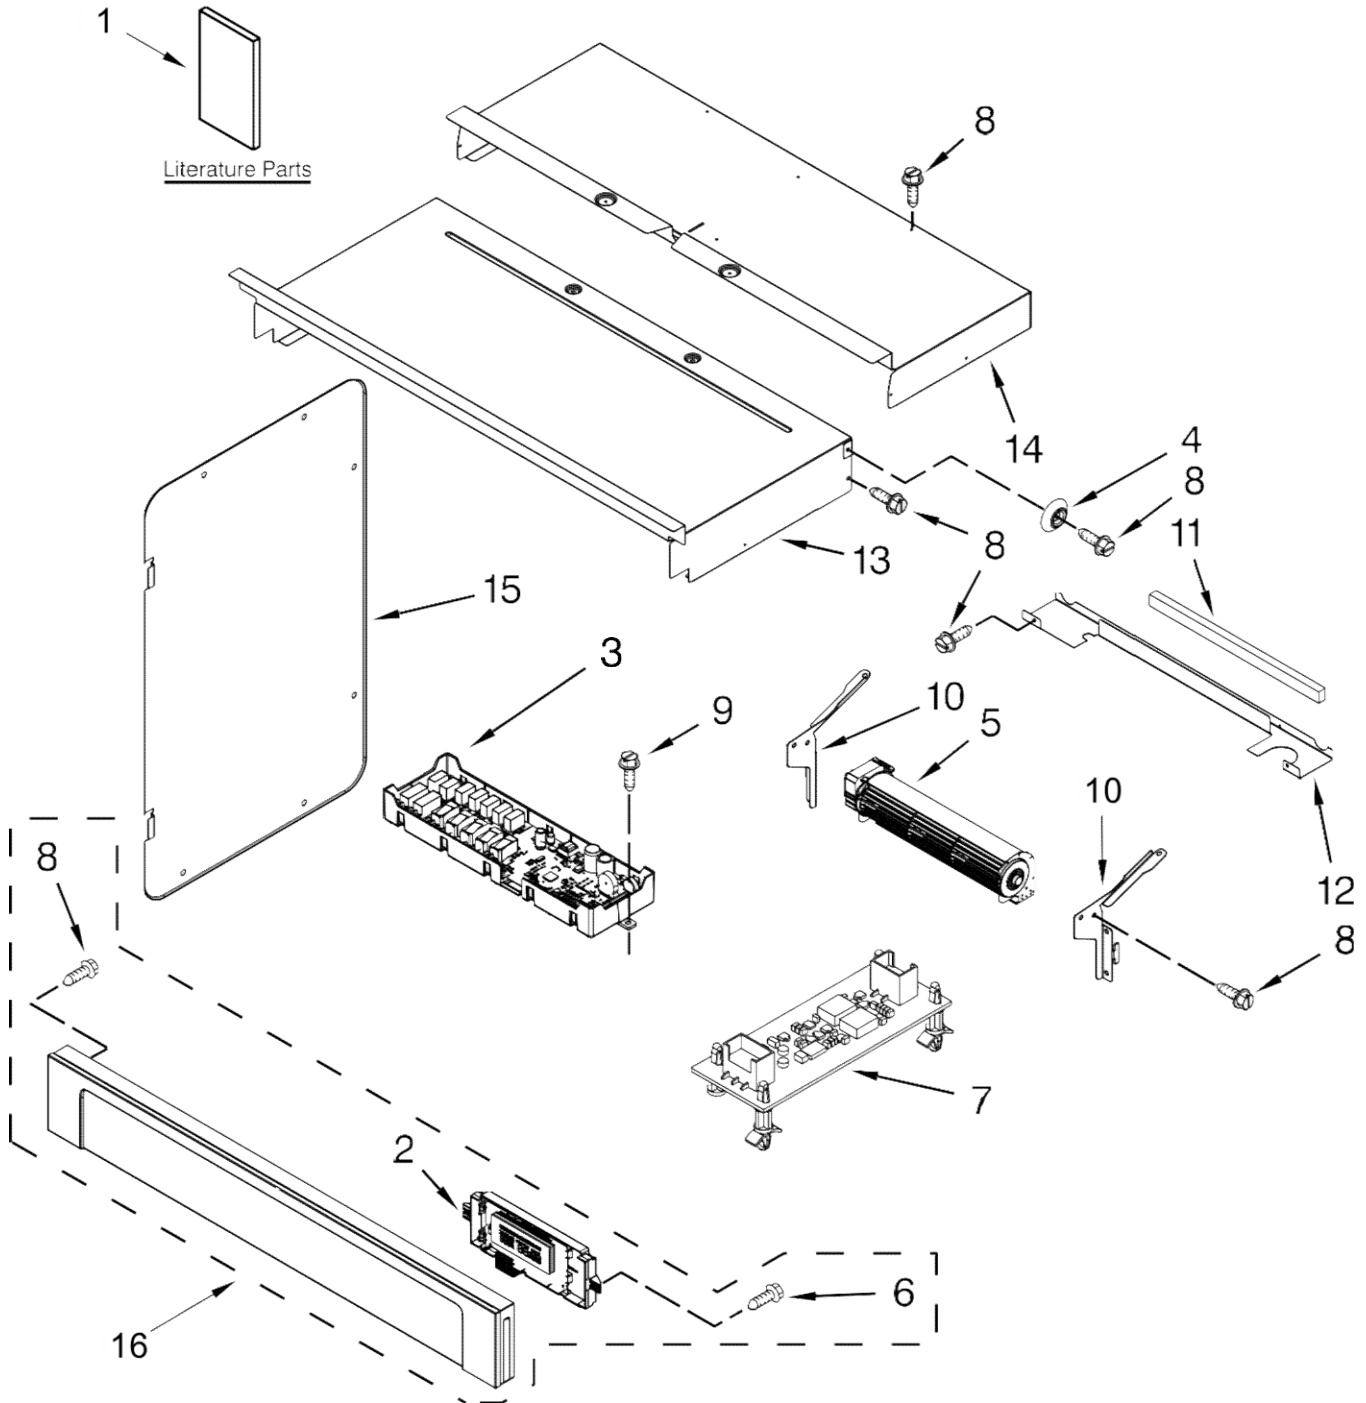


HORNO WOC54EC0AB02

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts
	W10354187	Guide, Use & Care (Oven)
	W10354188	Guide, Use & Care (Microwave Oven)
	W10351241	Instructions, Installation
	W10425195	Sheet, Tech
2	W10532438	Board, Display MRC2
3	W10632435	Board, MRC2 Main
4	W10618105	Spacer, Lateral
5	W10661038	Blower
6	7101P403-60	Screw
7	W10412514	Board, Wide Interface
8	7101P426-60	Screw
9	7101P434-60	Screw
10	W10655463	Bracket, Blower (Left)
	W10655462	Bracket, Blower (Right)
11	4451758	Block, Foam
12	W10655465	Chassis, Back Divider
13	W10318158	Chassis, Cover Top Front 30"

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
14	W10283031	Chassis, Cover Top Back 30"
15	W10283033	Chassis, Side

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
16		Assembly, Control Panel (Includes Overlay)
	W10540030	Black
	W10540031	White
	W10540029	Stainless
		FOLLOWING PARTS NOT ILLUSTRATED
	W10601518	Harness, Main
	W10389372	Harness, Fan & Turntable
	W10406103	Harness, Inverter
	W10371814	Harness, Interlock
	W10286223	Harness, Communication
	W10573327	Harness, Door Latch
	W10392129	Strap, Ground
	4450800	Screw, Grounding
	4448664	Clamp, Conduit
	W10190263	Clip, Latch Harness
	4450950	Conduit, Combo

HORNO WOC54EC0AB02

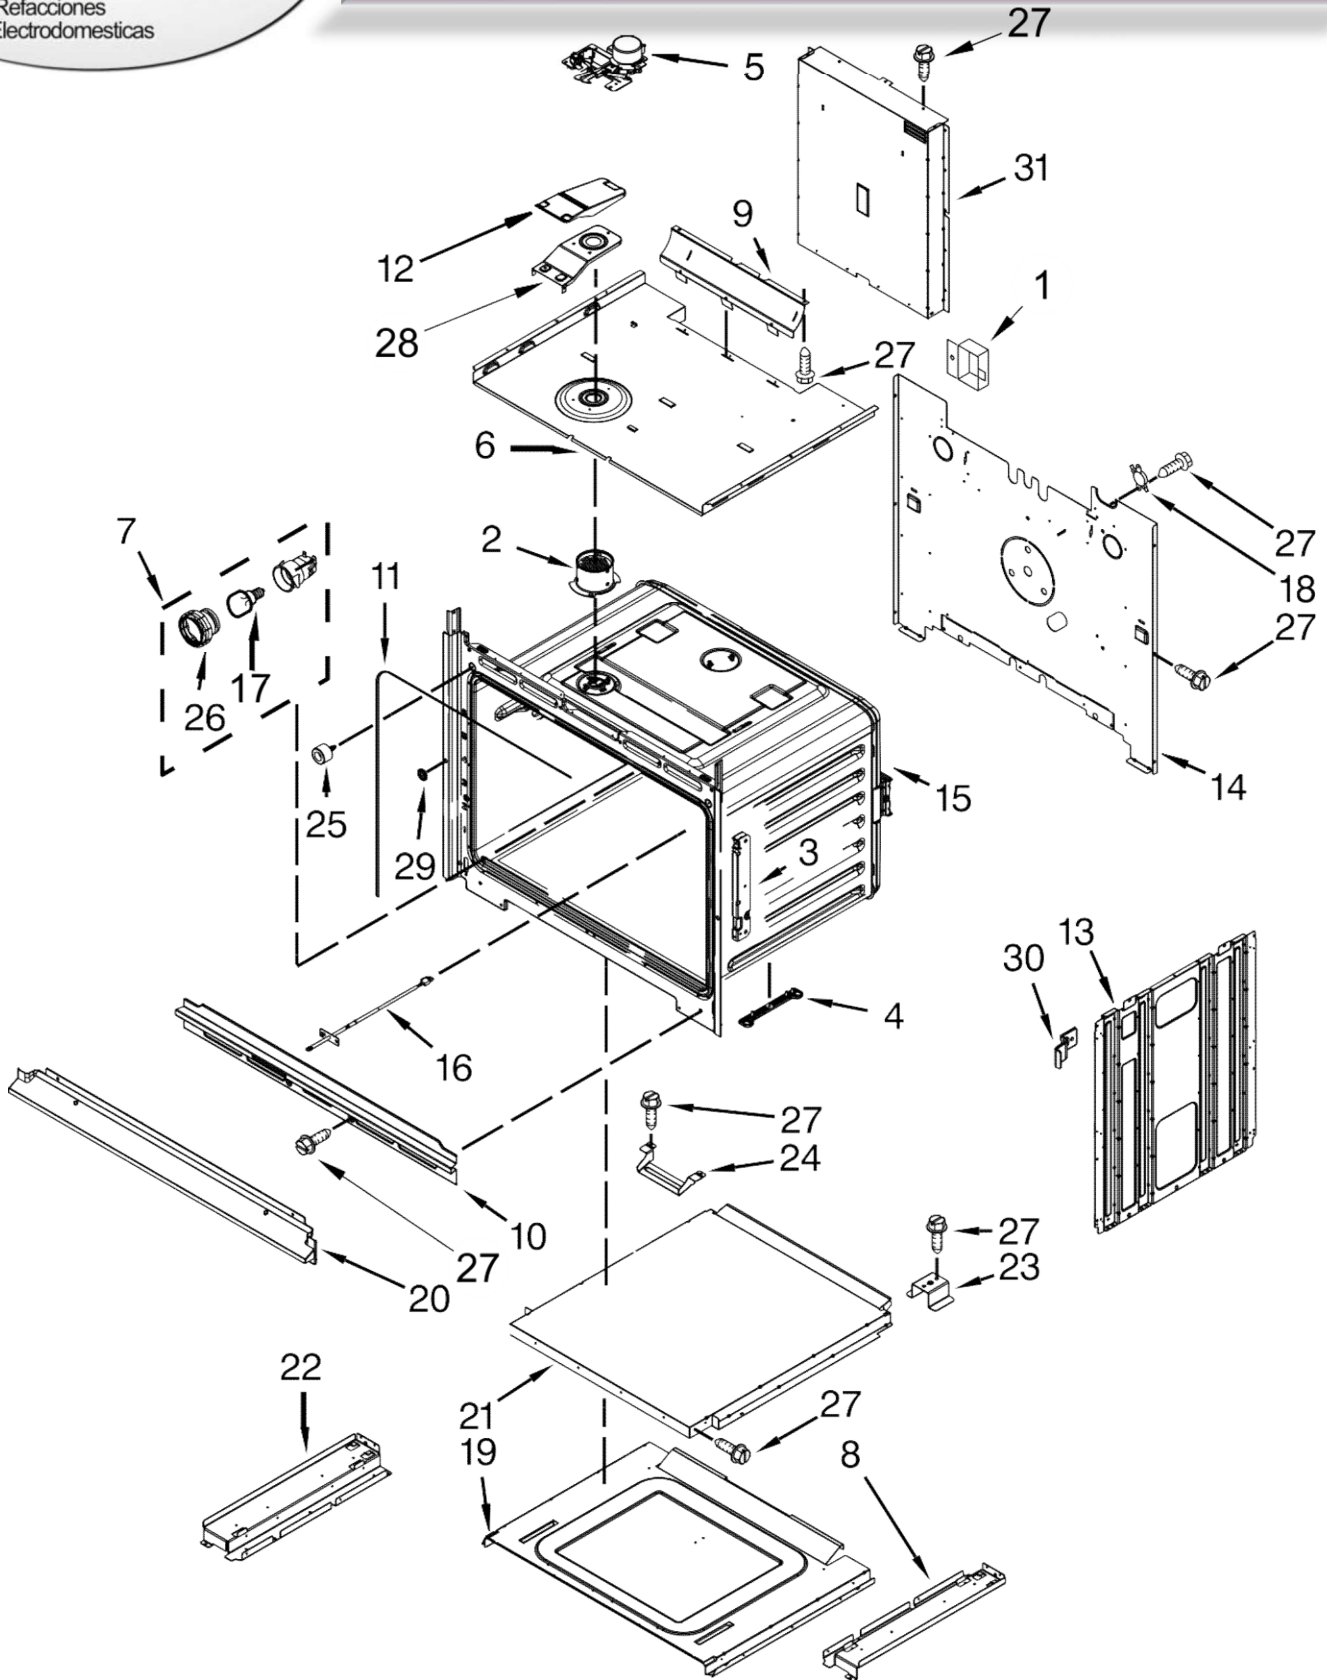


HORNO WOC54EC0AB02

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	8285593	Cover, Connector
2	W10282946	Tube, Vent
3	W10616802	Receiver, Hinge
4	W10618102	Spacer, Base
5	W10314880	Latch, Motorized
6	W10730172	Top, Chassis
7	W10734063	Assembly, Light
8	W10283021	Support, Base (Right)
9	W10641572	Deflector, Blower
10	W10283042	Vent, Combo Center
11	W10282960	Gasket
12	W10616810	Cover, Vent Exhaust
13	W10318190	Side, Chassis

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
14	W10696134	Back, Chassis
15		Liner, Oven (Not Serviceable)
16	W10622170	Probe, Sensor
17	W10412711	Bulb, Light
18	4449751	Thermostat (TOD)
19	W10282900	Base, Chassis
20		Assembly, Bottom Vent
	W10327373	Black
	W10351279	Stainless
21	W10283008	Chassis, Bottom Duct
22	W10283020	Support, Base (Left)
23	W10213759	Support, Air Channel

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
24	W10351308	Spacer, Chassis Bottom Duct
25	W10351278	Bumper & Screw
26	W10412722	Lens, Light
27	7101P426-60	Screw
28	W10616809	Base, Vent Exhaust
29	W10283016	Grommet, Front Frame
30	W10618106	Spacers, Front
31	W10519703	Cover, Back Duct
		Following Parts Not Illustrated
	W10520715	Insulation, Wrap
	W10282944	Insulation, Cavity

HORNO WOC54EC0AB02

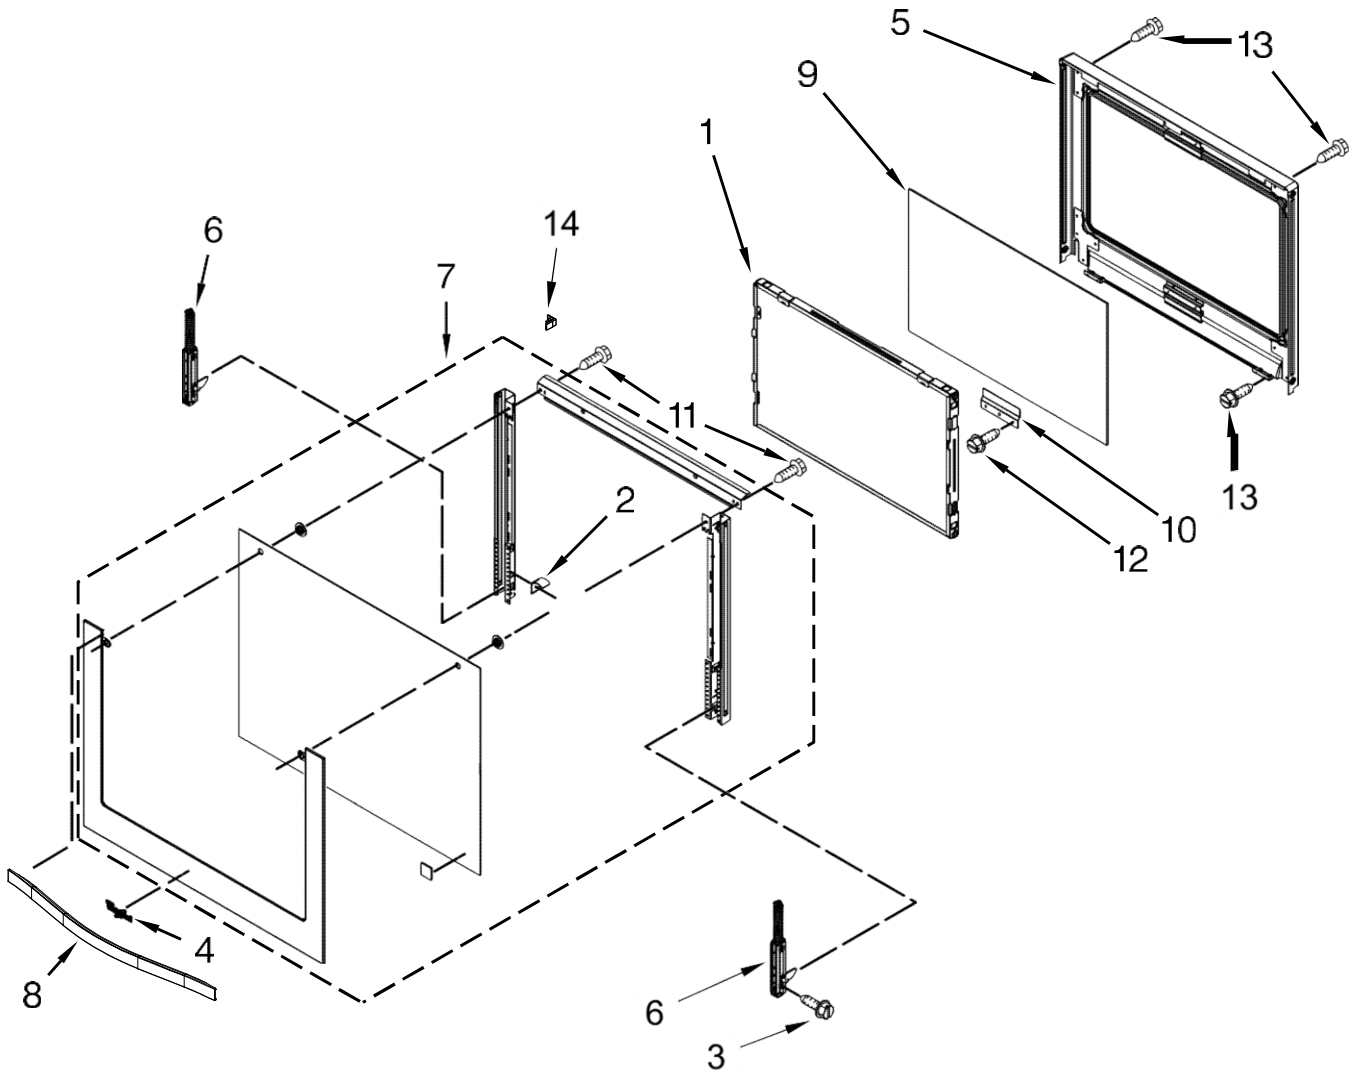



HORNO WOC54EC0AB02

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10347596	Assembly, Window Pack
2	W10284285	Spring, Door Glass Fixation
3	3196183	Screw
4		Badge
	W10481433	Grey
	W10481434	White
5	W10320791	Assembly, Liner
6	W10639069	Hinge, Door

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
7		Assembly, Door
	W10587549	Black
	W10587550	White
	W10587556	Stainless
8		Assembly, Handle
	W10327379	Black
	W10327380	White
	W10317136	Stainless
9	W10618107	Glass, Inner

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
10	W10284297	Bracket, Glass
11	488130	Screw
12	7101P426-60	Screw
13	7101P633-60	Screw (Black)
14	W10653954	Clip, Spring Metal

HORNO WOC54EC0AB02

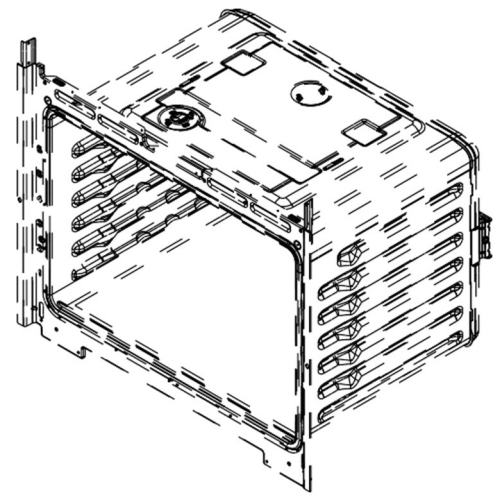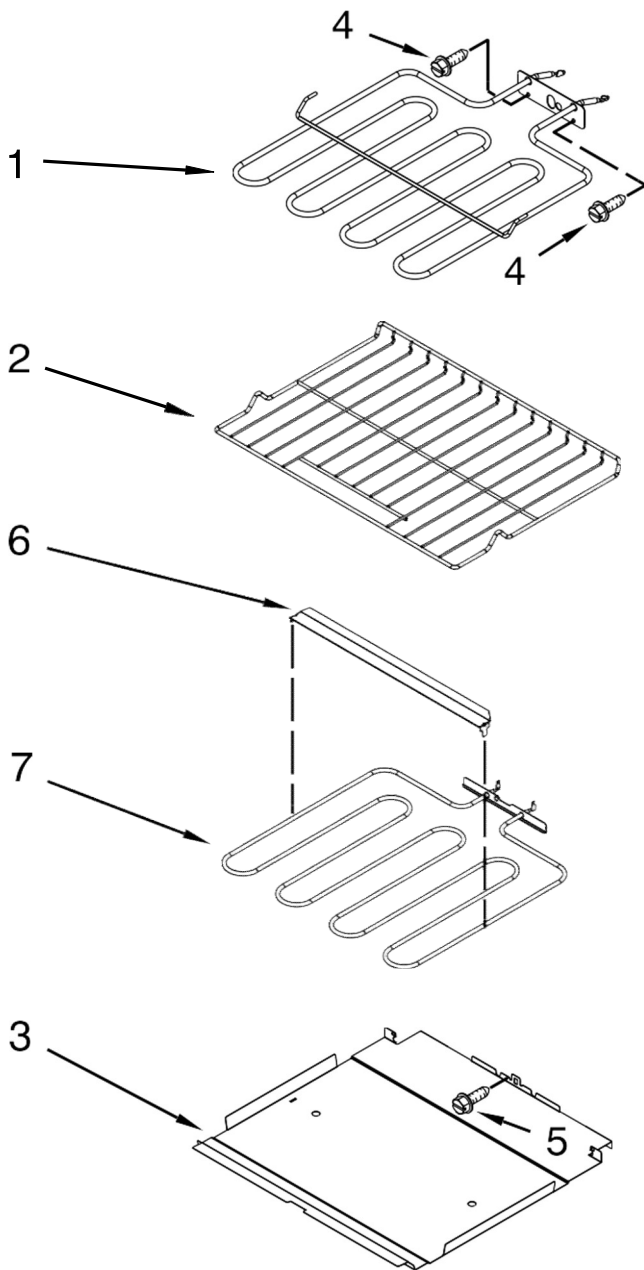

Distribuidor Autorizado



Venta de Refacciones
Electrodomesticas


HORNO WOC54EC0AB02

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10260252	Element, Broil
2	W10317430	Rack, Oven
3	W10318198	Tray, Hidden Bake

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4	7101P376-60	Screw
5	7101P426-60	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
6	W10282957	Crossbar, Hidden Bake Tray
7	W10546517	Element, Bake

HORNO WOC54EC0AB02

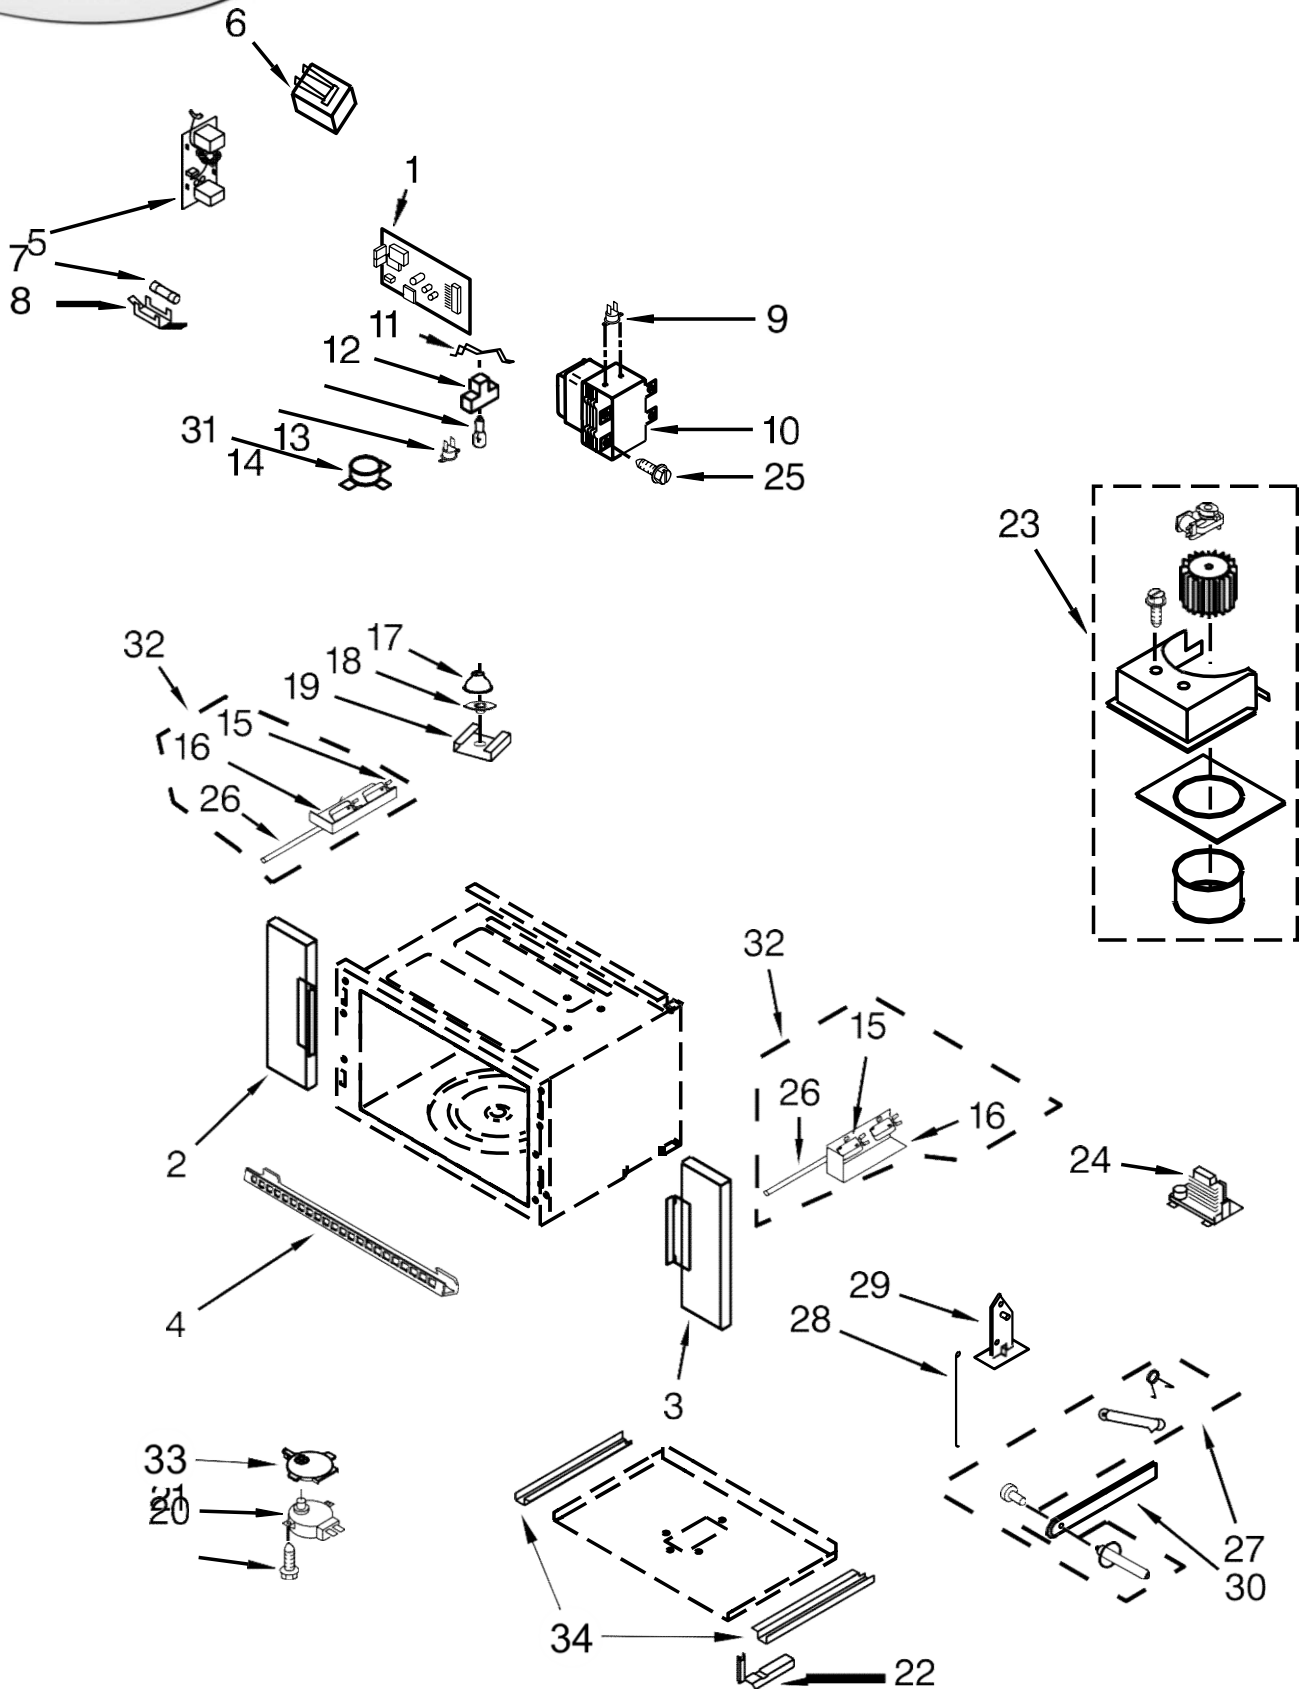




HORNO WOC54EC0AB02

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10586836	Control, Electric
2	W10486208	Trim, Side (Left)
3	W10486209	Trim, Side (Right)
4	W10486211	Vent, Top Microwave
5	W10692851	Filter, Noise
6	8205692	Transformer
7	241908600053	Fuse
8	4375231	Block, Fuse
9	W10287986	Thermostat
10	W10120113	Magnetron
11	W10465869	Spring, Lamp
12	W10490593	Holder, Lamp
13	W10287972	Lamp, Halogen
14	W10389447	Thermostat

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
15	W10330566	Switch
16	8205683	Holder, Switch
17	4375320	Reflector
18	4375318	Lens, Lamp
19	W10120231	Clip, Spring
20	W10510101	Motor, Turntable
21	4375202	Screw
22	W10510097	Hinge, Door
23	461968969271	Assembly, Cooling Fan
24	W10468206	Inverter
25	W10130890	Screw
26	W10120235	Rod, Release
27	W10128850	Assembly, Sliding Arm
28	8205704	Spring, Torsion
29	8205686	Support

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
30	W10120236	Arm, Sliding
31	W10460457	Sensor, Humidity
32	W10358241	Assembly, Interlock Switch
33	W10656578	Cover, Turntable Motor
34	8205707	Support, Bottom

HORNO WOC54EC0AB02

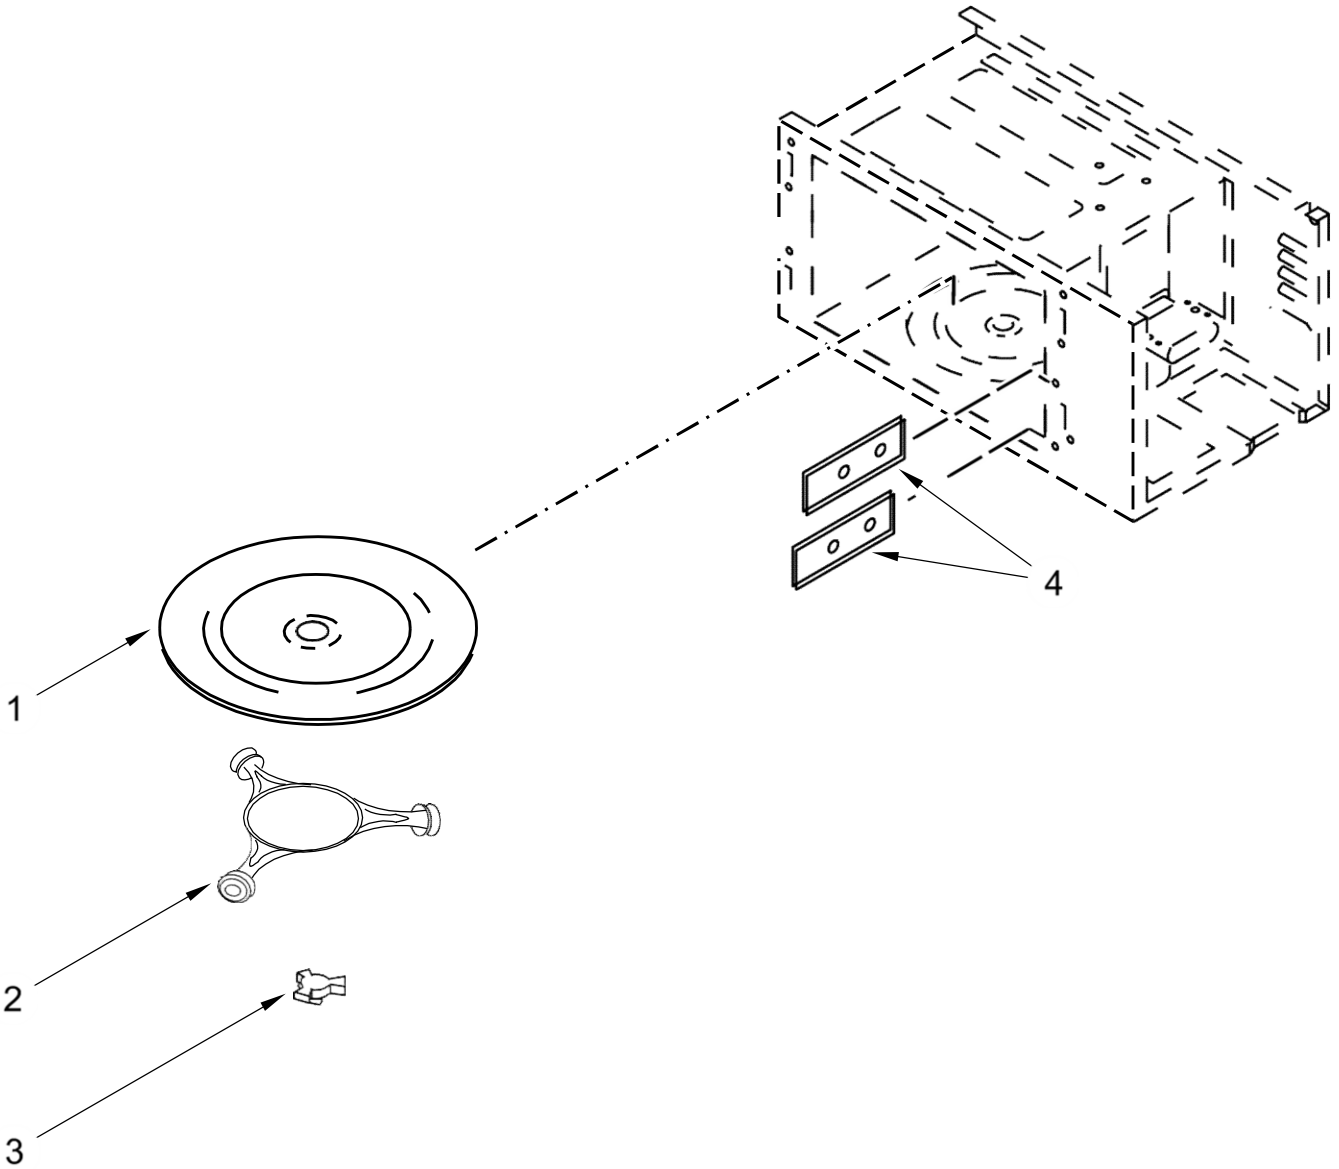




HORNO WOC54EC0AB02

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	4375274	Turntable
2	W10367316	Ring, Turntable

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
3	W10545578	Drive, Turntable
4	W10120230	Plate, Cover

HORNO WOC54EC0AB02

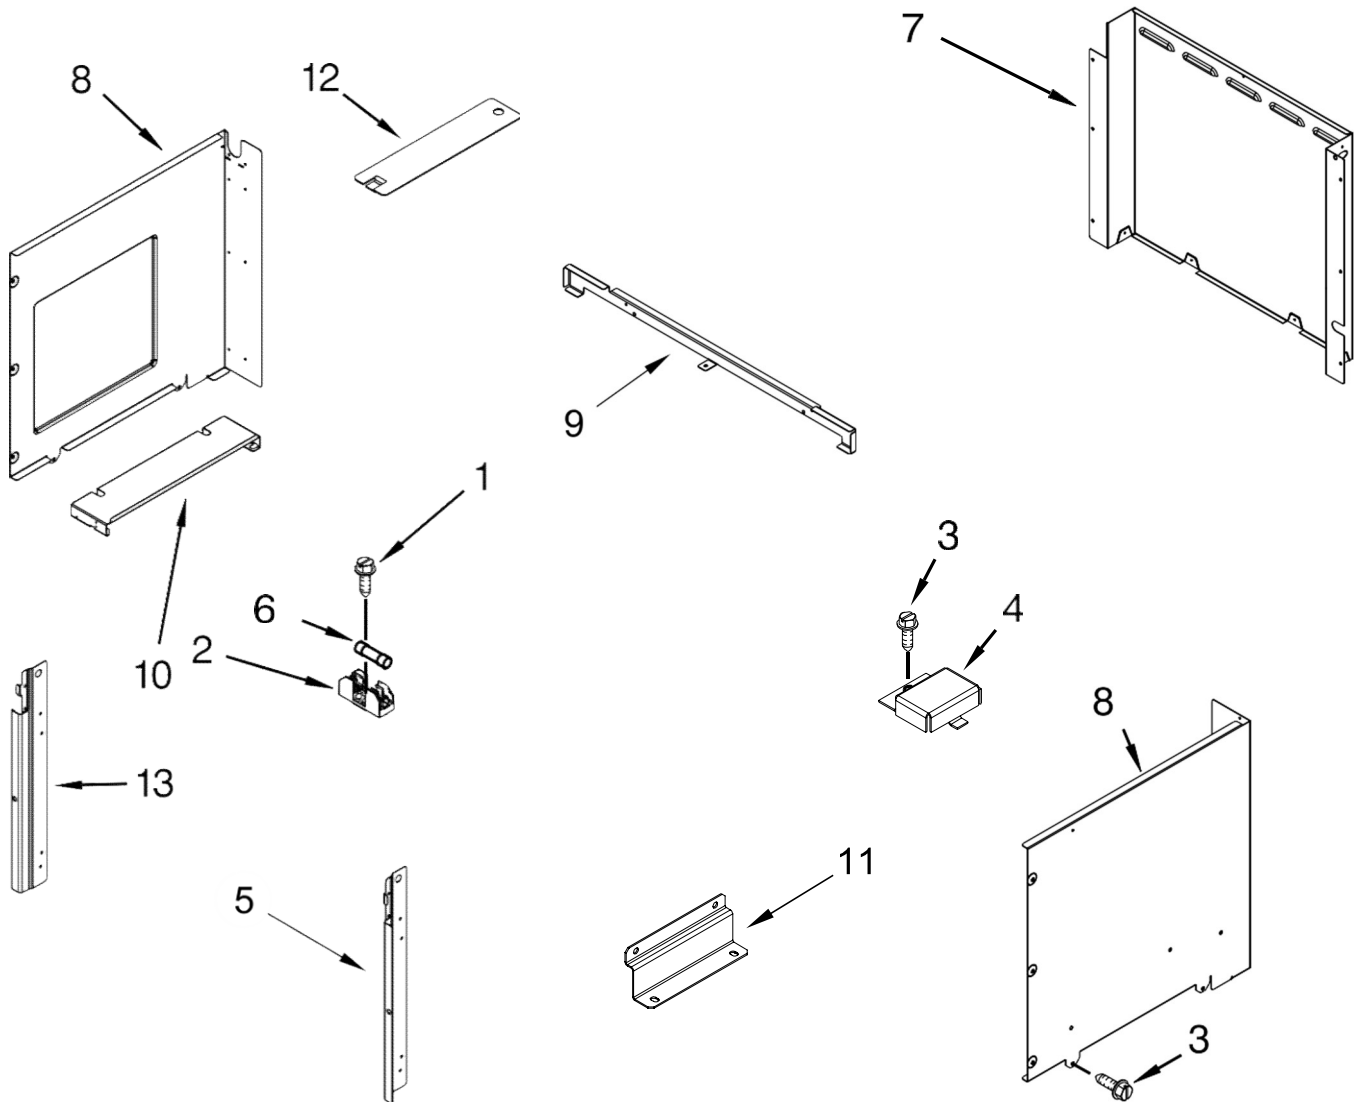


HORNO WOC54EC0AB02

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	7101P060-60	Screw
2	4454949	Holder, Fuse
3	7101P426-60	Screw
4	8285593	Cover, Connector
5	W10360518	Rail, Side (Right)
6	W10017410	Fuse, Time Delay

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
7	W10519707	Cover, Back Duct
8	W10655466	Chassis, Combo Side (Left)
	W10655467	Chassis, Combo Side (Right)
9	W10283022	Support, Crossbar
10	W10356644	Support, Microwave Module

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
11	W10283024	Side, Bracket
12	W10356437	Cover, Slot Module
13	W10360516	Rail, Side (Left)

HORNO WOC54EC0AB02

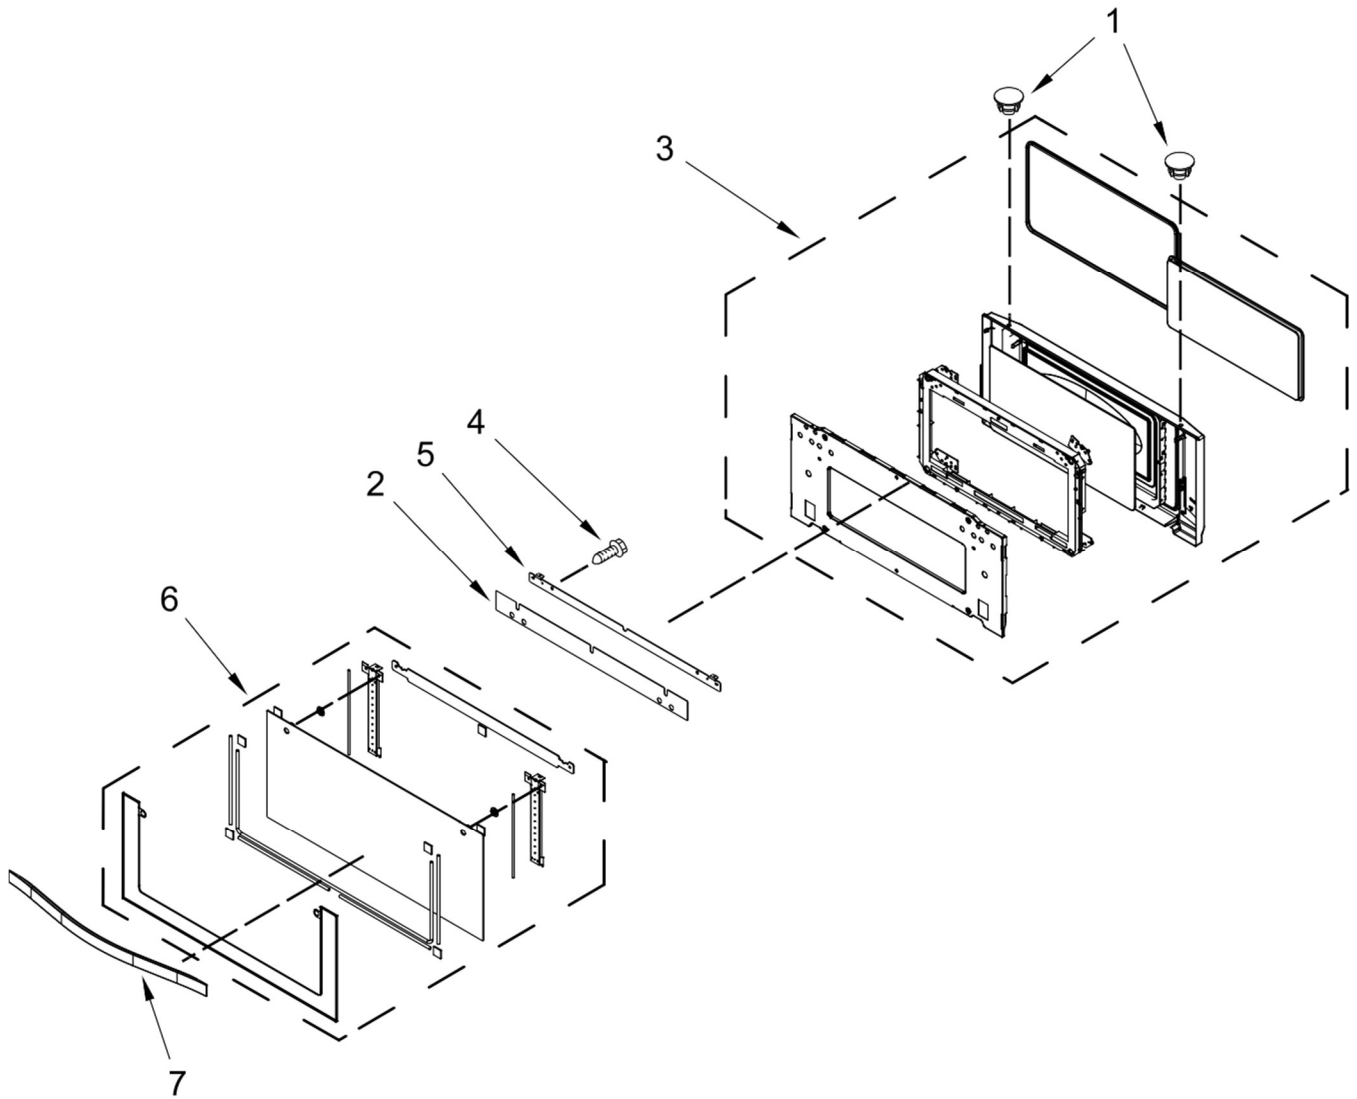

HORNO WOC54EC0AB02

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	8304588BL	Cap, Screw
2	W10359769	Foam, Handle
3	W10687342	Assembly, Inner Door
4	7101P338-60	Screw
5	W10407600	Bracket, Door

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
6		Assembly, Outer Door
	W10352610	Black
	W10352611	White
	W10329466	Stainless

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
7		Assembly, Handle
	W10327379	Black
	W10327380	White
	W10317136	Stainless

OPTIONAL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		PAINT, TOUCH-UP (1/2oz.)
	72017	White
	72032	Black
		PAINT, SPRAY
	350930	White
	261900	Citrine White
	830864	Black
		ADHESIVE
	482338	Sealer, Silastic
		ACCESSORIES
	W10123240	Rack, Broiler Pan & Roasting
	W10355016	Cleaner, Stainless Steel
	W10355010	Cleaner, Kitchen & Appliance
	4396923	Broiler Pan and Grid
	8205262RB	Steamer, Microwave