



30" BUILT-IN ELECTRIC COMBINATION MICROWAVE WALL OVEN

MODELS:

WOC54EC0AB03 (Black)
WOC54EC0AW03 (White)
WOC54EC0AS03 (Stainless)


HORNO WOC54EC0AB03

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts
	W10796009	Guide, Use & Care (Oven)
	W10798191	Guide, Use & Care (Microwave Oven)
	W10696163	Instructions, Installation
	W10796080	Sheet, Tech
2	W10752316	Board, Display MRC2
3	W10759189	Board, MRC2 Main
4	W10618105	Spacer, Lateral
5	W10661038	Blower
6	7101P403-60	Screw
7	W10412514	Board, Wide Interface
8	7101P426-60	Screw
9	7101P434-60	Screw
10	W10655463	Bracket, Blower (Left)
	W10655462	Bracket, Blower (Right)
11	4451758	Block, Foam
12	W10618126	Chassis, Back Divider
13	W10318158	Chassis, Cover Top Front 30"

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
14	W10283031	Chassis, Cover Top Back 30"
15	W10655467	Chassis, Combo Side

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
16		Assembly, Control Panel (Includes Overlay)
	W10812354	Black
	W10812355	White
	W10812356	Stainless
		FOLLOWING PARTS NOT ILLUSTRATED
	W10778560	Harness, Main
	W10389372	Harness, Fan & Turntable
	W10406103	Harness, Inverter
	W10371814	Harness, Interlock
	W10778562	Harness, Communication
	W10573327	Harness, Door Latch
	W10392129	Strap, Ground
	4450800	Screw, Grounding
	4448664	Clamp, Conduit
	W10190263	Clip, Harness
	4450950	Conduit, Combo

HORNO WOC54EC0AB03

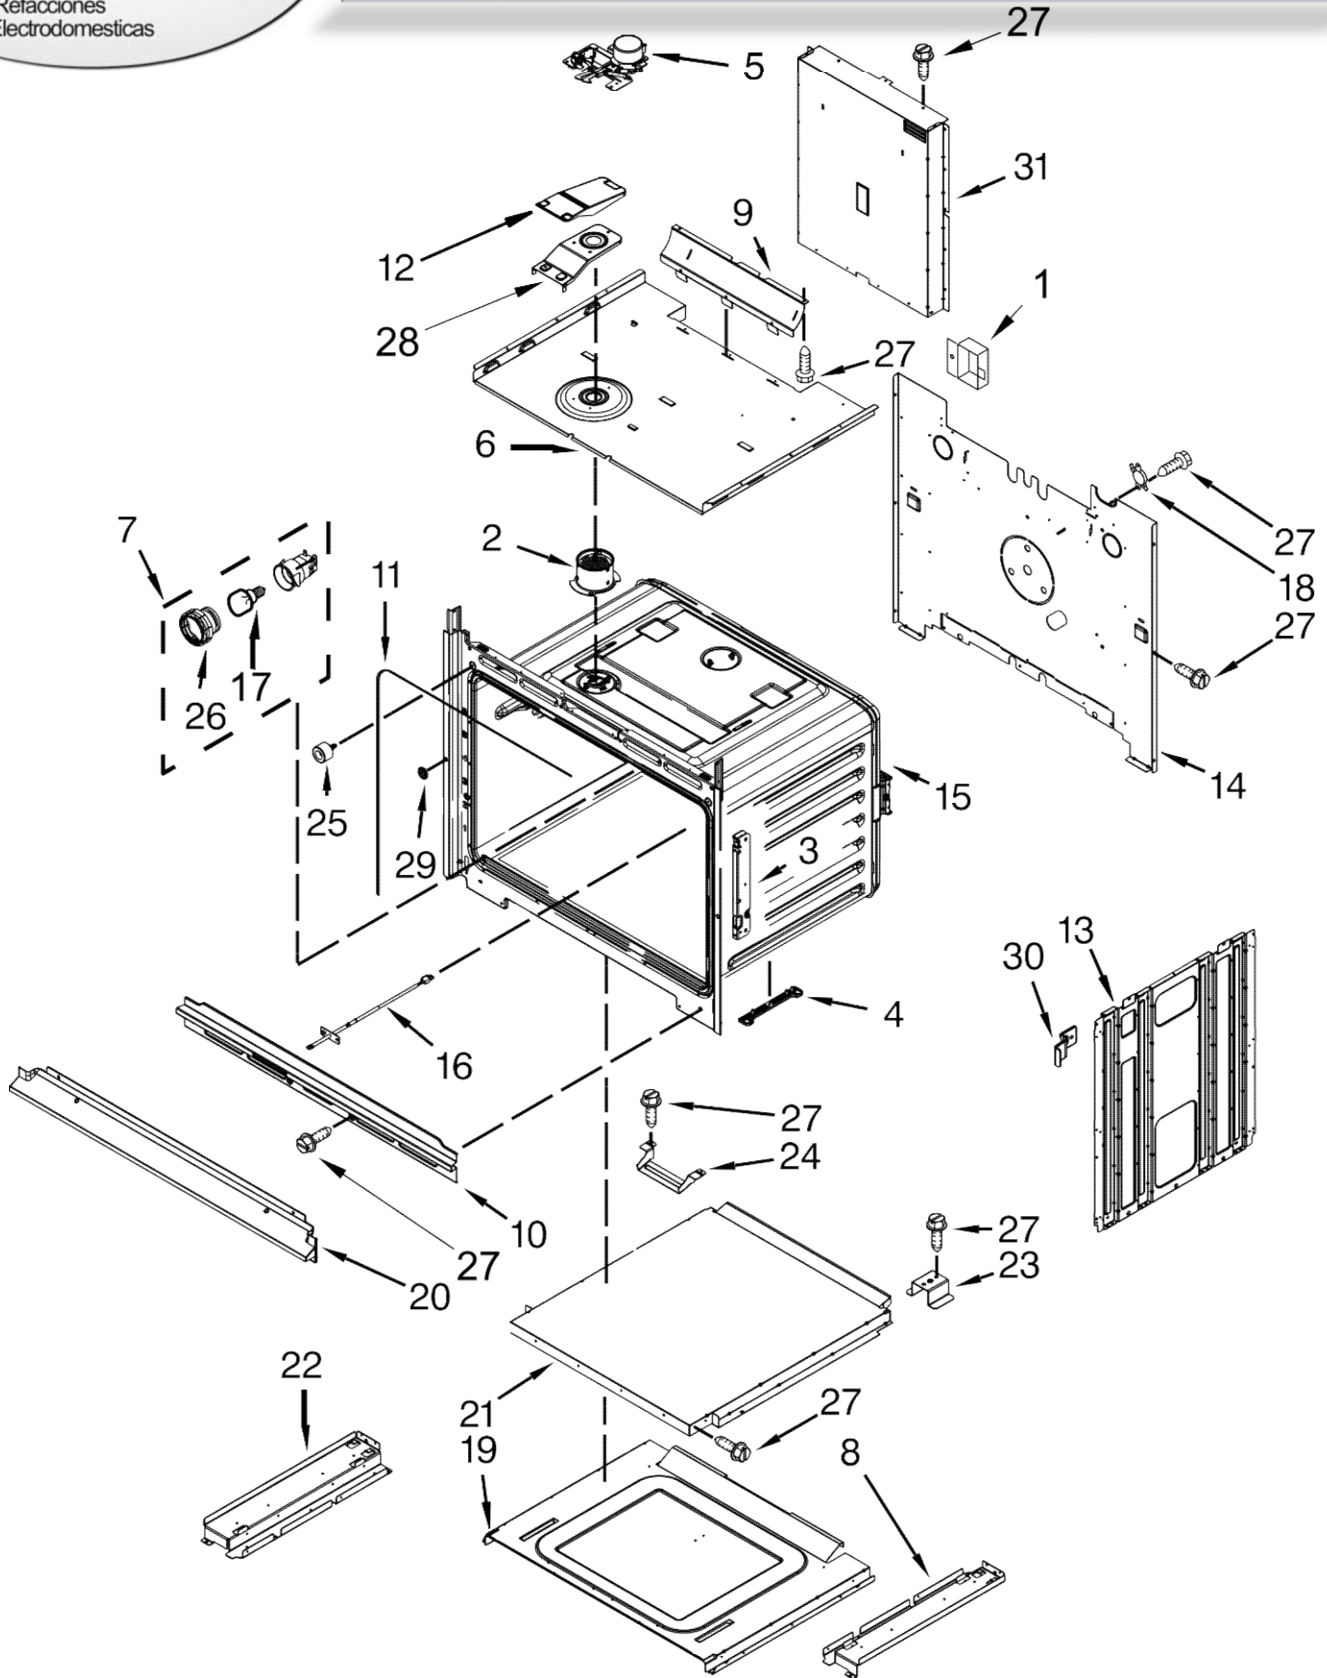


HORNO WOC54EC0AB03

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	8285593	Cover, Connector
2	W10282946	Tube, Vent
3	W10616802	Receiver, Hinge
4	W10618102	Spacer, Base
5	W10314880	Latch, Motorized
6	W10813743	Top, Chassis
7	W10734063	Assembly, Light
8	W10283021	Support, Base (Right)
9	W10641572	Deflector, Blower
10	W10283042	Vent, Combo Center
11	W10282960	Gasket
12	W10616810	Cover, Vent Exhaust
13	W10318190	Side, Chassis

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
14	W10813703	Back, Chassis
15		Liner, Oven (Not Serviceable)
16	W10622170	Probe, Sensor
17	W10412711	Bulb, Light
18	4449751	Thermostat (TOD)
19	W10834867	Base, Chassis
20		Assembly, Bottom Vent
	W10327373	Black
	W10351279	Stainless
21	W10283008	Chassis, Bottom Duct
22	W10283020	Support, Base (Left)
23	W10213759	Support, Air Channel

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
24	W10351308	Spacer, Chassis Bottom Duct
25	W10351278	Bumper & Screw
26	W10412722	Lens, Light
27	7101P426-60	Screw
28	W10616809	Base, Vent Exhaust
29	W10283016	Grommet, Front Frame
30	W10347649	Spacers, Front
31	W10519703	Cover, Back Duct
		Following Parts Not Illustrated
	W10520715	Insulation, Wrap
	W10282944	Insulation, Cavity

HORNO WOC54EC0AB03

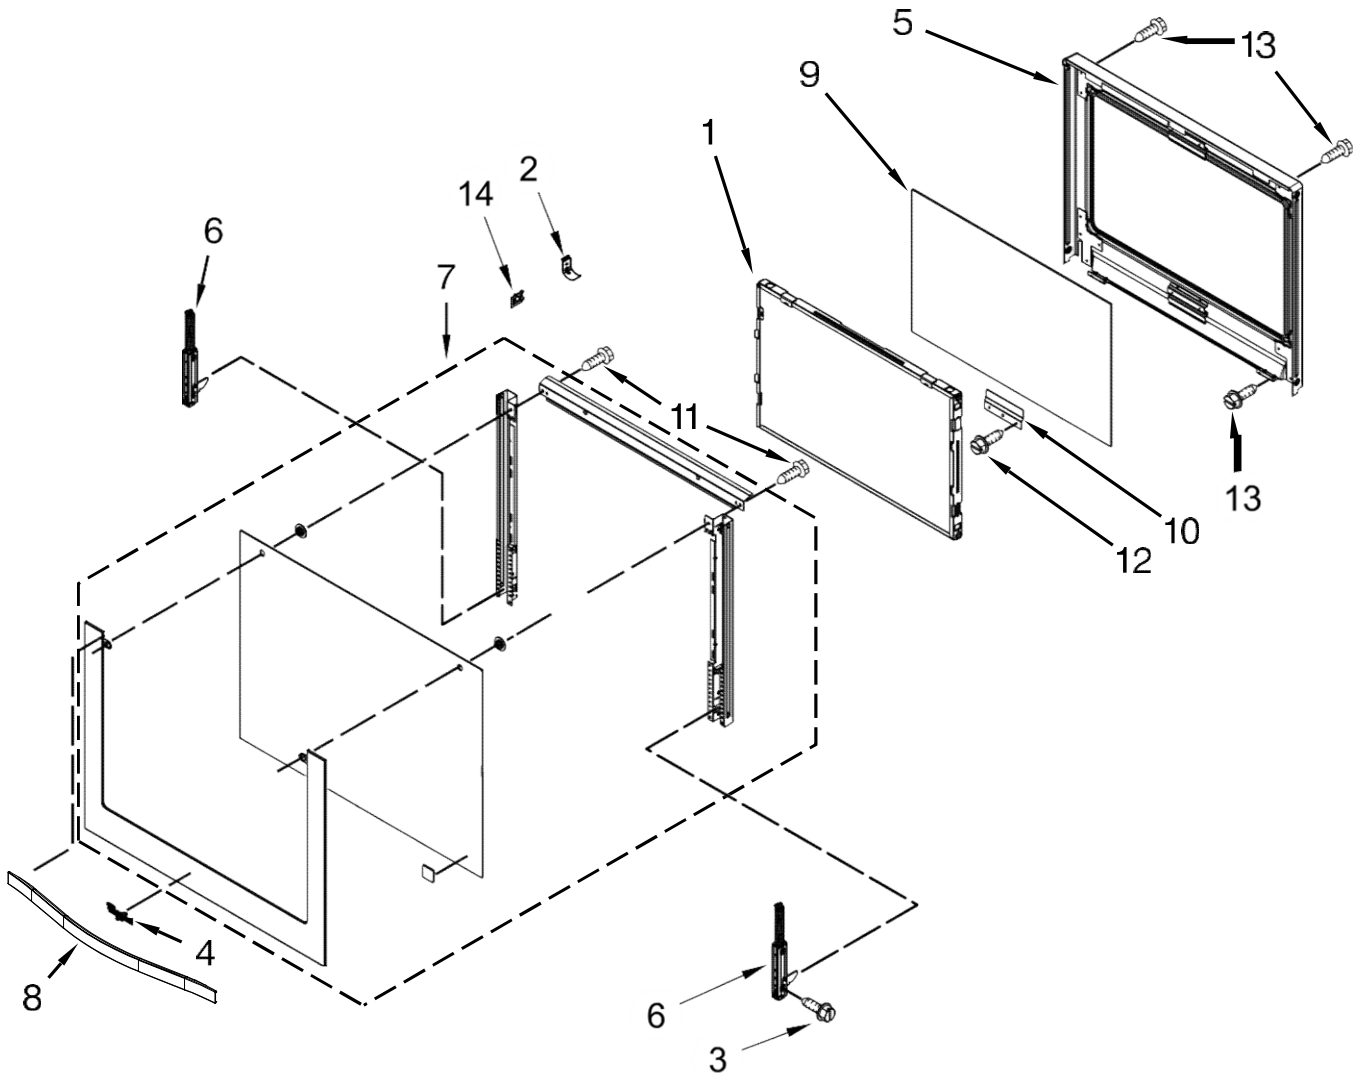



HORNO WOC54EC0AB03

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10347596	Assembly, Window Pack
2	W10284285	Spring, Door Glass Fixation
3	3196183	Screw
4		Badge
	W10481433	Grey
	W10481434	White
5	W10709147	Assembly, Liner
6	W10639069	Hinge, Door

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
7		Assembly, Door
	W10587549	Black
	W10587550	White
	W10587556	Stainless
8		Assembly, Handle
	W10327379	Black
	W10327380	White
	W10317136	Stainless
9	W10678524	Glass, Inner

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
10	W10284297	Bracket, Glass
11	488130	Screw
12	7101P426-60	Screw
13	7101P633-60	Screw (Black)
14	W10653954	Clip, Spring Metal

HORNO WOC54EC0AB03

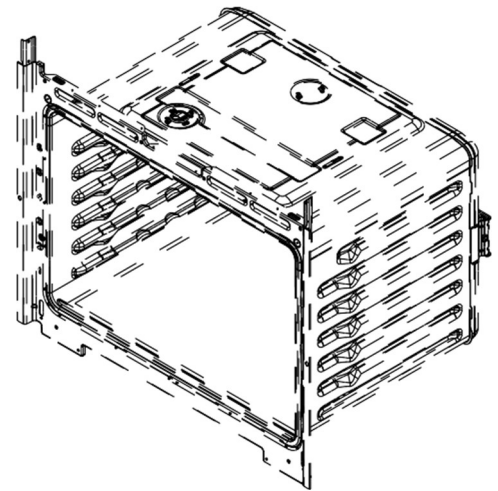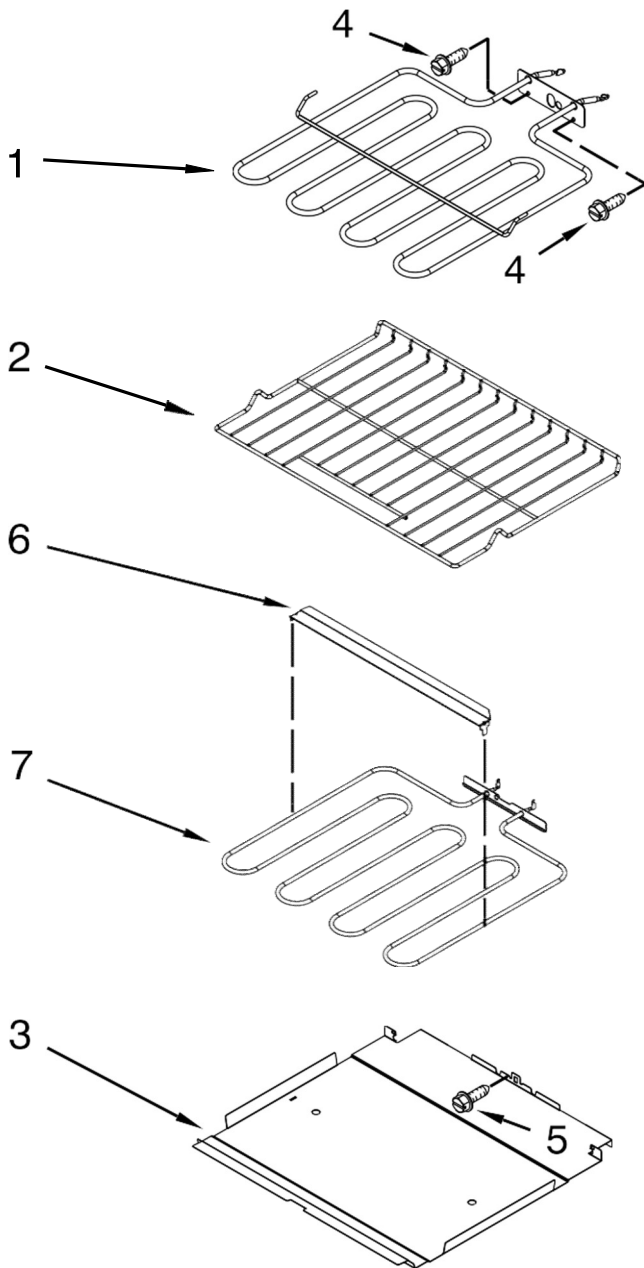

Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas




HORNO WOC54EC0AB03

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10260252	Element, Broil
2	W10317430	Rack, Oven
3	W10318198	Tray, Hidden Bake

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4	7101P376-60	Screw
5	7101P426-60	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
6	W10282957	Crossbar, Hidden Bake Tray
7	W10546517	Element, Bake

HORNO WOC54EC0AB03

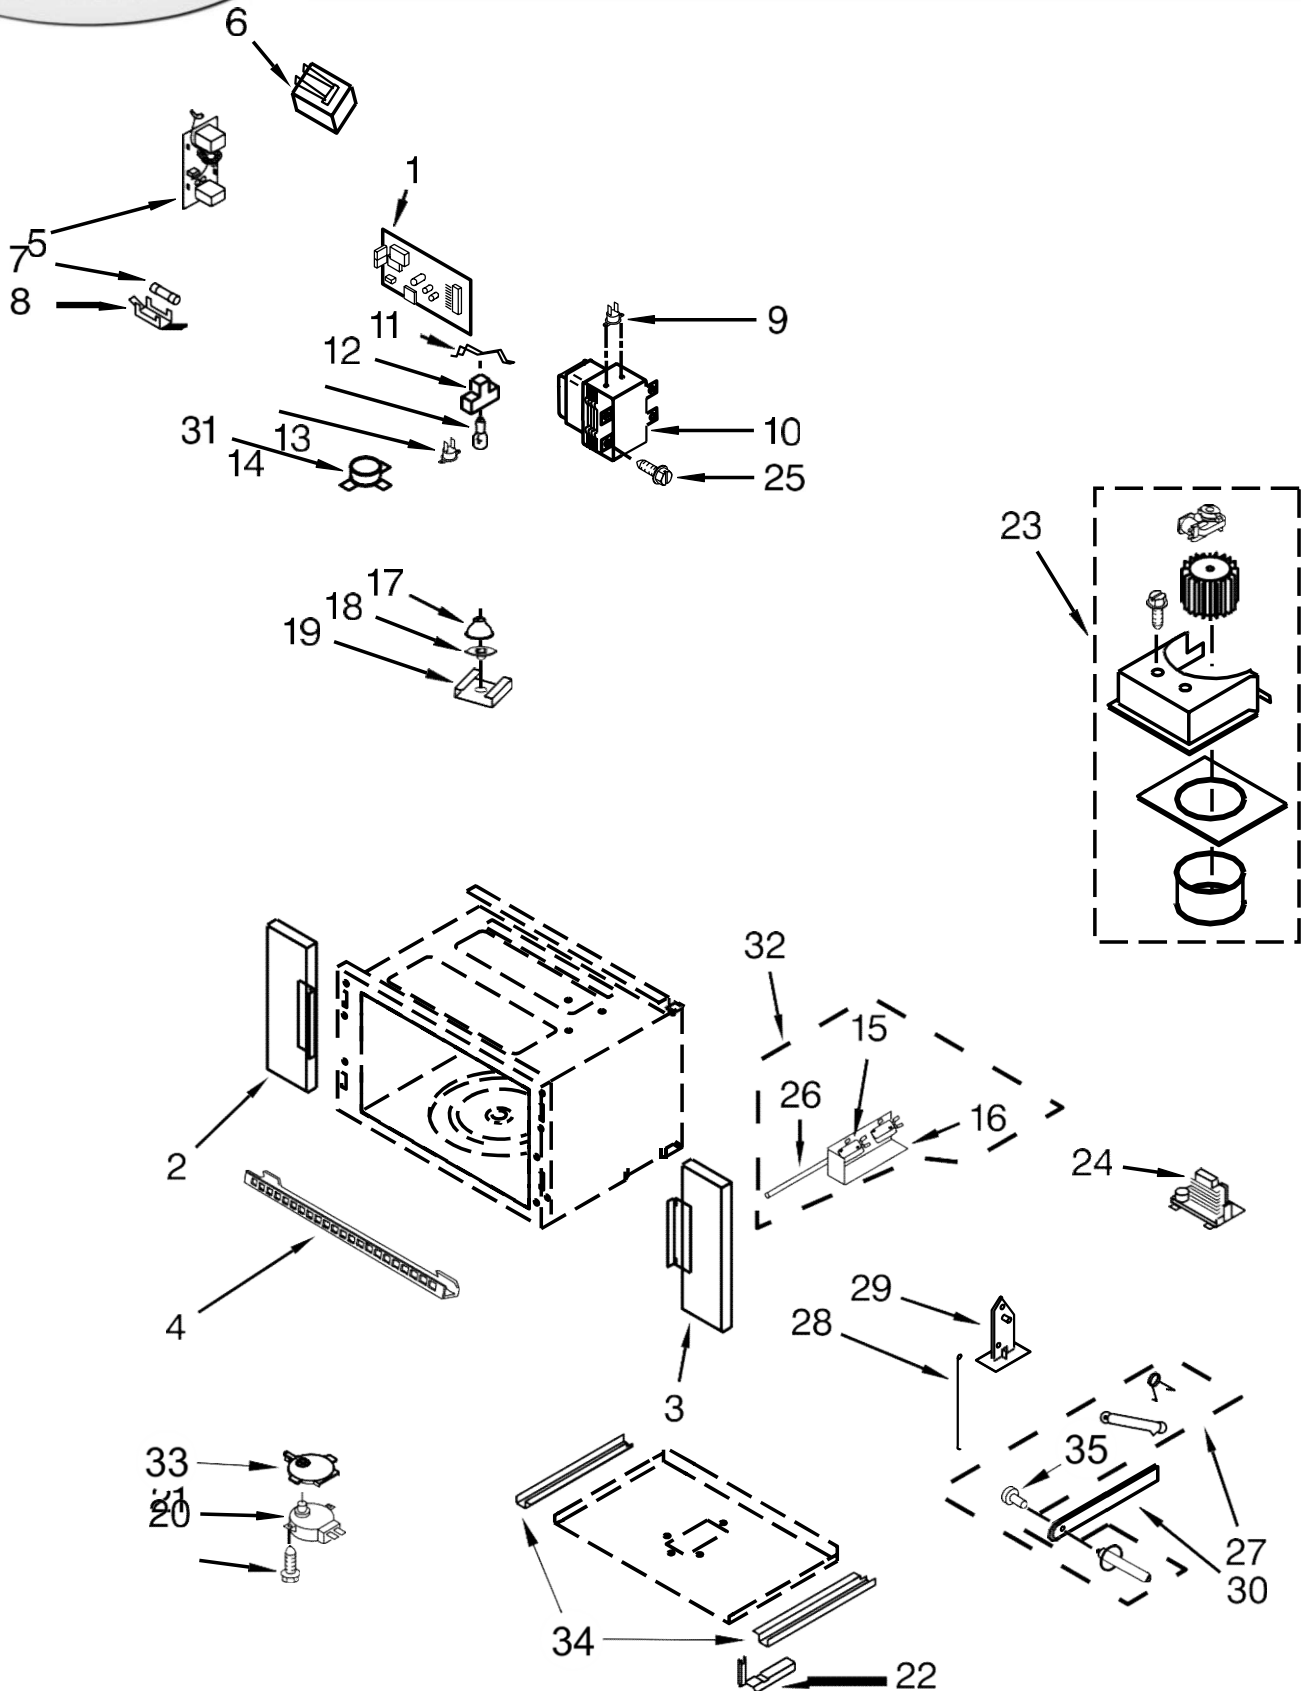


HORNO WOC54EC0AB03

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10586836	Control, Electric
2	461967017491	Trim, Side (Left)
3	W10367739	Trim, Side (Right)
4	461968973241	Vent, Top Microwave
5	W10692851	Filter, Noise
6	461967848621	Transformer, Light (20V)
7	241908600053	Fuse
8	4375231	Block, Fuse
9	461967846741	Thermostat, Magnetron
10	461967847321	Magnetron
11	W10465869	Spring, Lamp

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
12	W10490593	Holder, Lamp
13	W10795595	Lamp, Halogen
14	W10389447	Thermostat
15	W10330566	Switch
16	8205683	Holder, Switch
17	423107022541	Reflector
18	423107720491	Lens, Lamp
19	461967010591	Clip, Spring
20	461967848971	Motor, Turntable
21	461967825321	Screw
22	461968979601	Hinge, Door
23	461968969271	Assembly, Cooling Fan
24	W10468206	Inverter

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
25	461967825971	Screw
26	W10120235	Rod, Release
27	251968600013	Pin, Damper
28	461967570351	Spring, Torsion
29	461967750494	Support
30	461967750483	Arm, Sliding
31	W10460457	Sensor, Humidity
32	W10358241	Assembly, Interlock Switch
33	461967753742	Adapter, Turntable Motor
34	461967008461	Support, Bottom
35	461967510191	Bushing

HORNO WOC54EC0AB03

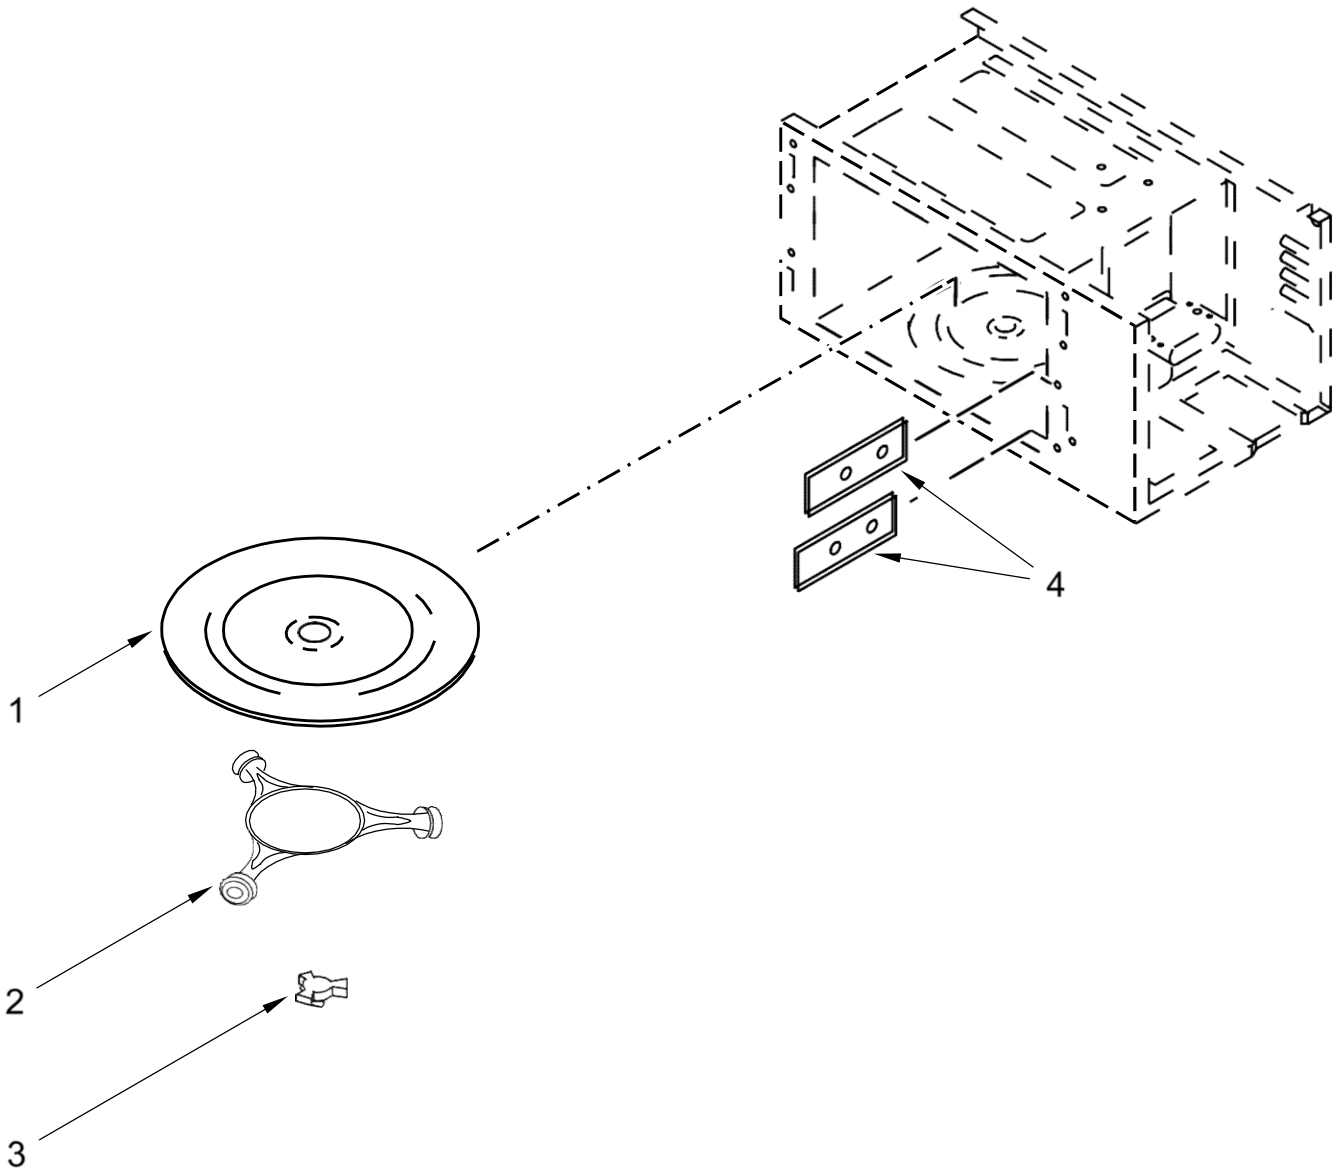




HORNO WOC54EC0AB03

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	461967720541	Turntable
2	W10367316	Ring, Turntable

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
3	W10545578	Drive, Turntable
4	461967451001	Plate, Cover

HORNO WOC54EC0AB03

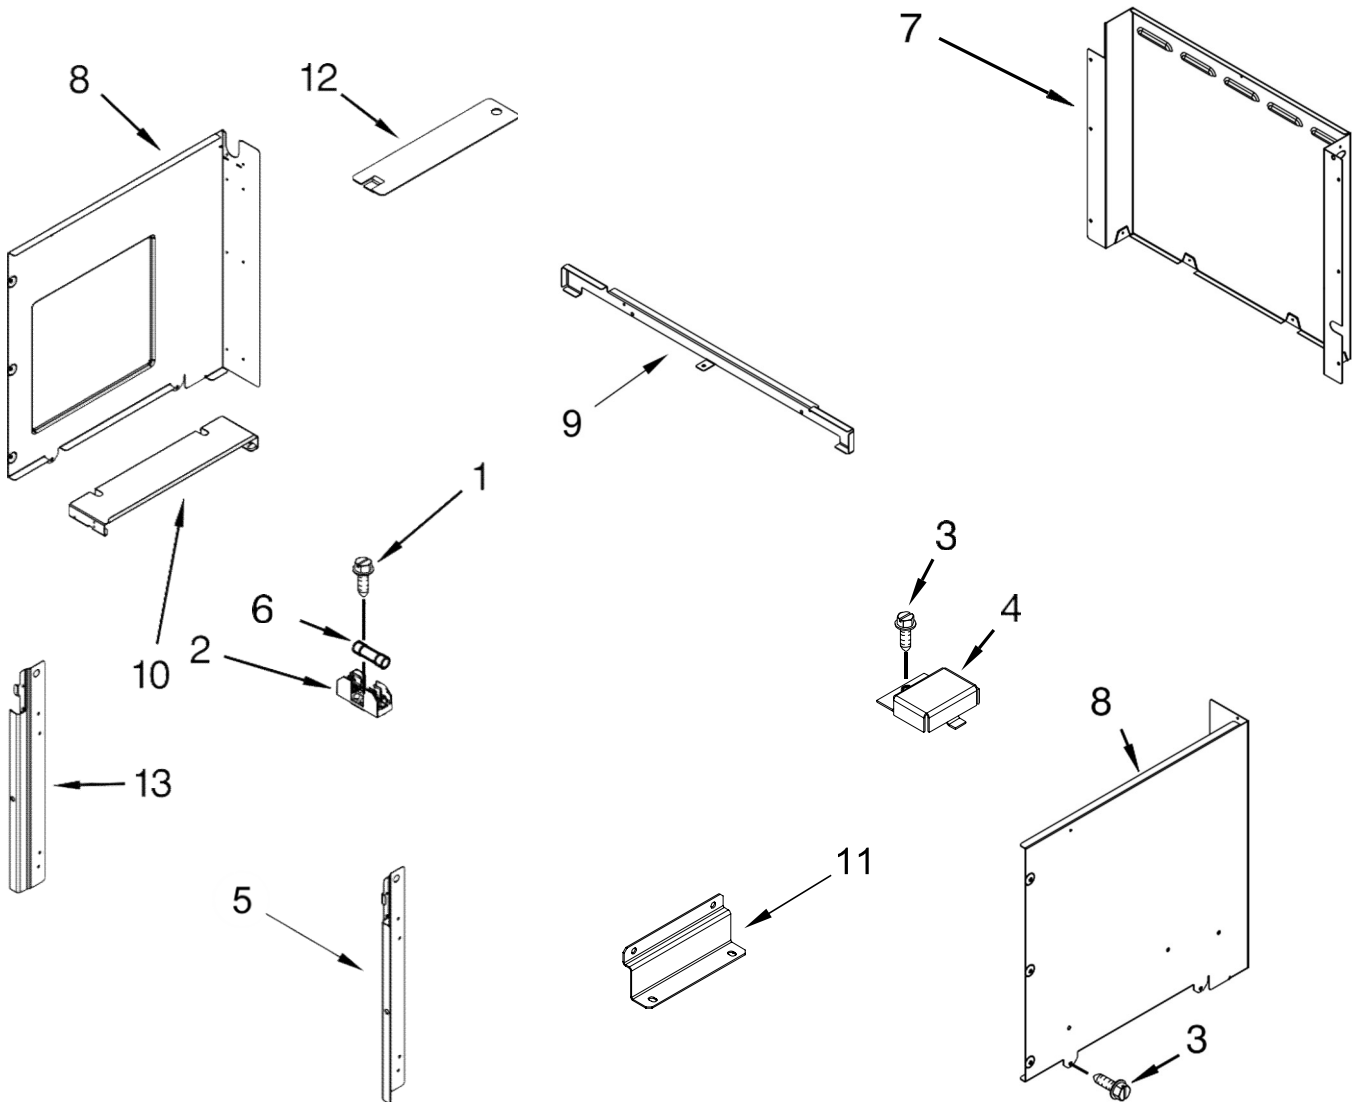


HORNO WOC54EC0AB03

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	7101P060-60	Screw
2	4454949	Holder, Fuse
3	7101P426-60	Screw
4	8285593	Cover, Connector
5	W10360518	Rail, Side (Right)
6	W10017410	Fuse, Time Delay

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
7	W10519707	Cover, Back Duct
8	W10655466	Chassis, Combo Side (Left)
	W10283029	Chassis, Combo Side (Right)
9	W10283022	Support, Crossbar
10	W10356644	Support, Microwave Module

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
11	W10283024	Side, Bracket
12	W10356437	Cover, Slot Module
13	W10360516	Rail, Side (Left)

HORNO WOC54EC0AB03

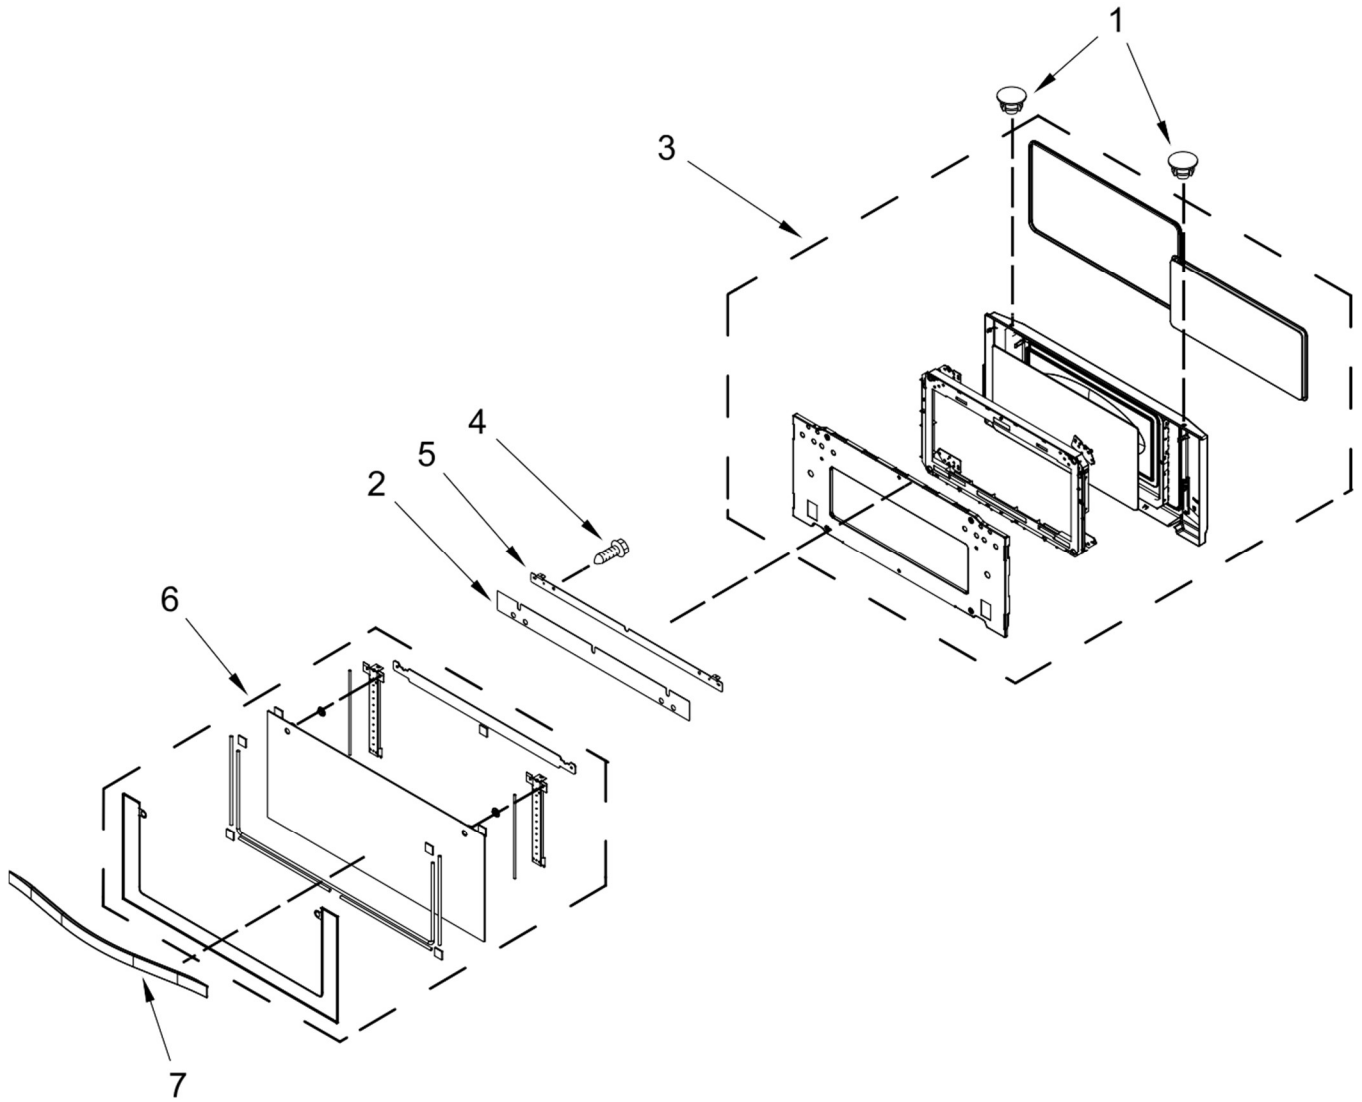

Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas

HORNO WOC54EC0AB03

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	8304588BL	Cap, Screw
2	W10359769	Foam, Handle
3	W10687342	Assembly, Inner Door
4	7101P338-60	Screw
5	W10407600	Bracket, Door

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
6		Assembly, Outer Door
	W10352610	Black
	W10352611	White
	W10329466	Stainless

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
7		Assembly, Handle
	W10327379	Black
	W10327380	White
	W10317136	Stainless

OPTIONAL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		PAINT, TOUCH-UP (1/2oz.)
	72017	White
	72032	Black
		PAINT, SPRAY
	350930	White
	261900	Citrine White
	830864	Black
		ADHESIVE
	482338	Sealer, Silastic
		ACCESSORIES
	W10123240	Rack, Broiler Pan & Roasting
	W10355016	Cleaner, Stainless Steel
	W10355010	Cleaner, Kitchen & Appliance
	4396923	Broiler Pan and Grid
	8205262RB	Steamer, Microwave