

Distribuidor Autorizado

 
 
SurteRápido.com

Venta de Refacciones
Electrodomesticas

Microondas Mabe XO1120MD

MICROWAVE OVEN

XO1120MD

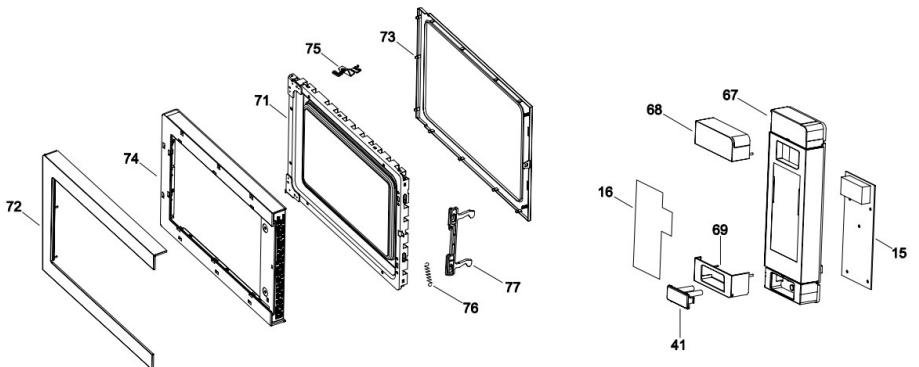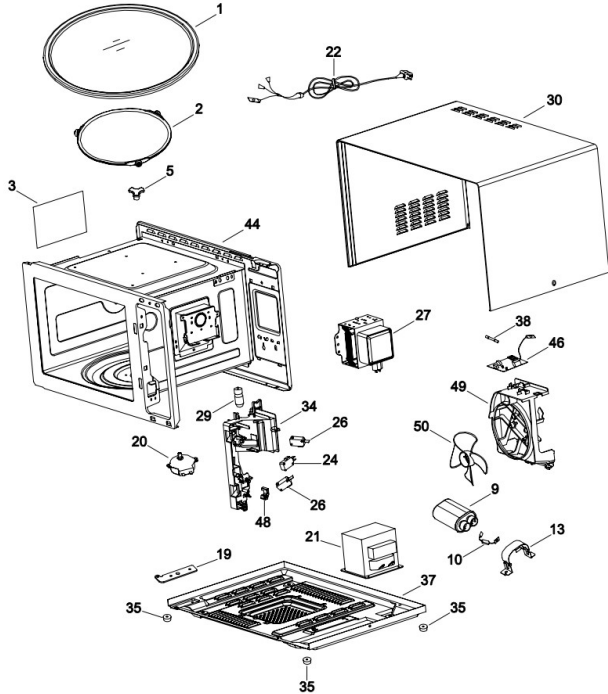

Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas

Microondas Mabe XO1120MD

Guía	Componente	Descripción
1	252100500503	PLATO GIRATORIO
2	252200200010	RING ROTATING ASSY
3	261500700600	COVER WAVE GUIDE
5	252200100008	TT DRIVER
9	251200701306	H.V CAPACITOR
10	251200900021	H.V. DIODE
11	252010000000	DOOR LATCH SPRING
13	251501500010	CAPACITOR CLAMP
15	251400101467	TARJETA PRINCIPAL
16	261820900573	MEMBRANE
16	261820900573A	MEMBRANE
19	251502502589	ASS"Y BRKT HINGE U
20	251200301364	MOTOR TRAY
21	251200200329	TRANSFORMADOR
22	261201001590	POWER CORD
24	251201600004	MICROSWITCH MONITOR
26	251201600002	SWITCH
26	17470000002311	SWITCH
27	251200100068	MAGNETRON
29	261201500300	LAMPARA
30	251502600101	CASE OUT
34	256301302749	BOARD LATCH
35	256302000004	LEG
37	251501400170	BASE PLATO
38	256201200605	FUSE
41	251516901917	BUTTON DOOR OPEN
44	251500100372	ASS"Y CAVITY
46	256400301372	FILTER NOISE

Distribuidor Autorizado

SurteRápido.com

Venta de Refacciones
Electrodomesticas

Microondas Mabe XO1120MD

Guía	Componente	Descripción
48	256301102641	INTERRUPTOR PALANCA
49	251300800011	GUIDE FAN
50	251300900015	FAN
67	251300201952	PANEL CONTROL
68	251508801998	DECO.C/PANEL.U
69	251508701999	DECO.C/PANEL.T
71	251500200108	DOOR FRAME ASSEMBLY(MARCO)
72	252200400382	DECORATION DOOR PANEL
73	256300600075	GASKET DOOR
74	251300101304	PANEL DOOR
75	256502400556	ASS"Y BRACKET HINGE T
77	256300500035	LATCH