


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST



Lavadora Whirlpool 7MWT99940VH1

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	W10155455	Installation Instructions
	W10213638	Use & Care Guide
	W10213648	Feature Sheet
	W10216203	Energy Guide
	W10213426	Wiring Diagram
2		Top
	W10203530	White
	W10212420	Red
3	62750	Spacer, Cabinet To Top (4)
4	W10192089	Dispenser, Bleach Cabinet
5	63424	White
	W10205707	Red
6	62780	Clip, Top & Cabinet & Rear Panel (2)
7	W10177046	Cabinet – Damper, Sound (3)
8	3351614	Screw, Ground
9	8533959	Nut, Hex
10	W10208782	Spring–Extension, Glass Lid
11	8318084	Switch, Lid
12	W10119828	Screw, Lid Hinge Mounting (4)
13	8559336	Hinge, Lid (L.H.)
14	W10202542	Hinge, Lid (R.H.)
15	3350828	Clip, Retainer
16	8319539	Bearing, Lid Hinge (2)
17		Lid Assembly
	W10164516	White
	W10212192	Red
18	3390631	Screw, 10–16 x 3/8 (4)

Lavadora Whirlpool 7MWT99940VH1

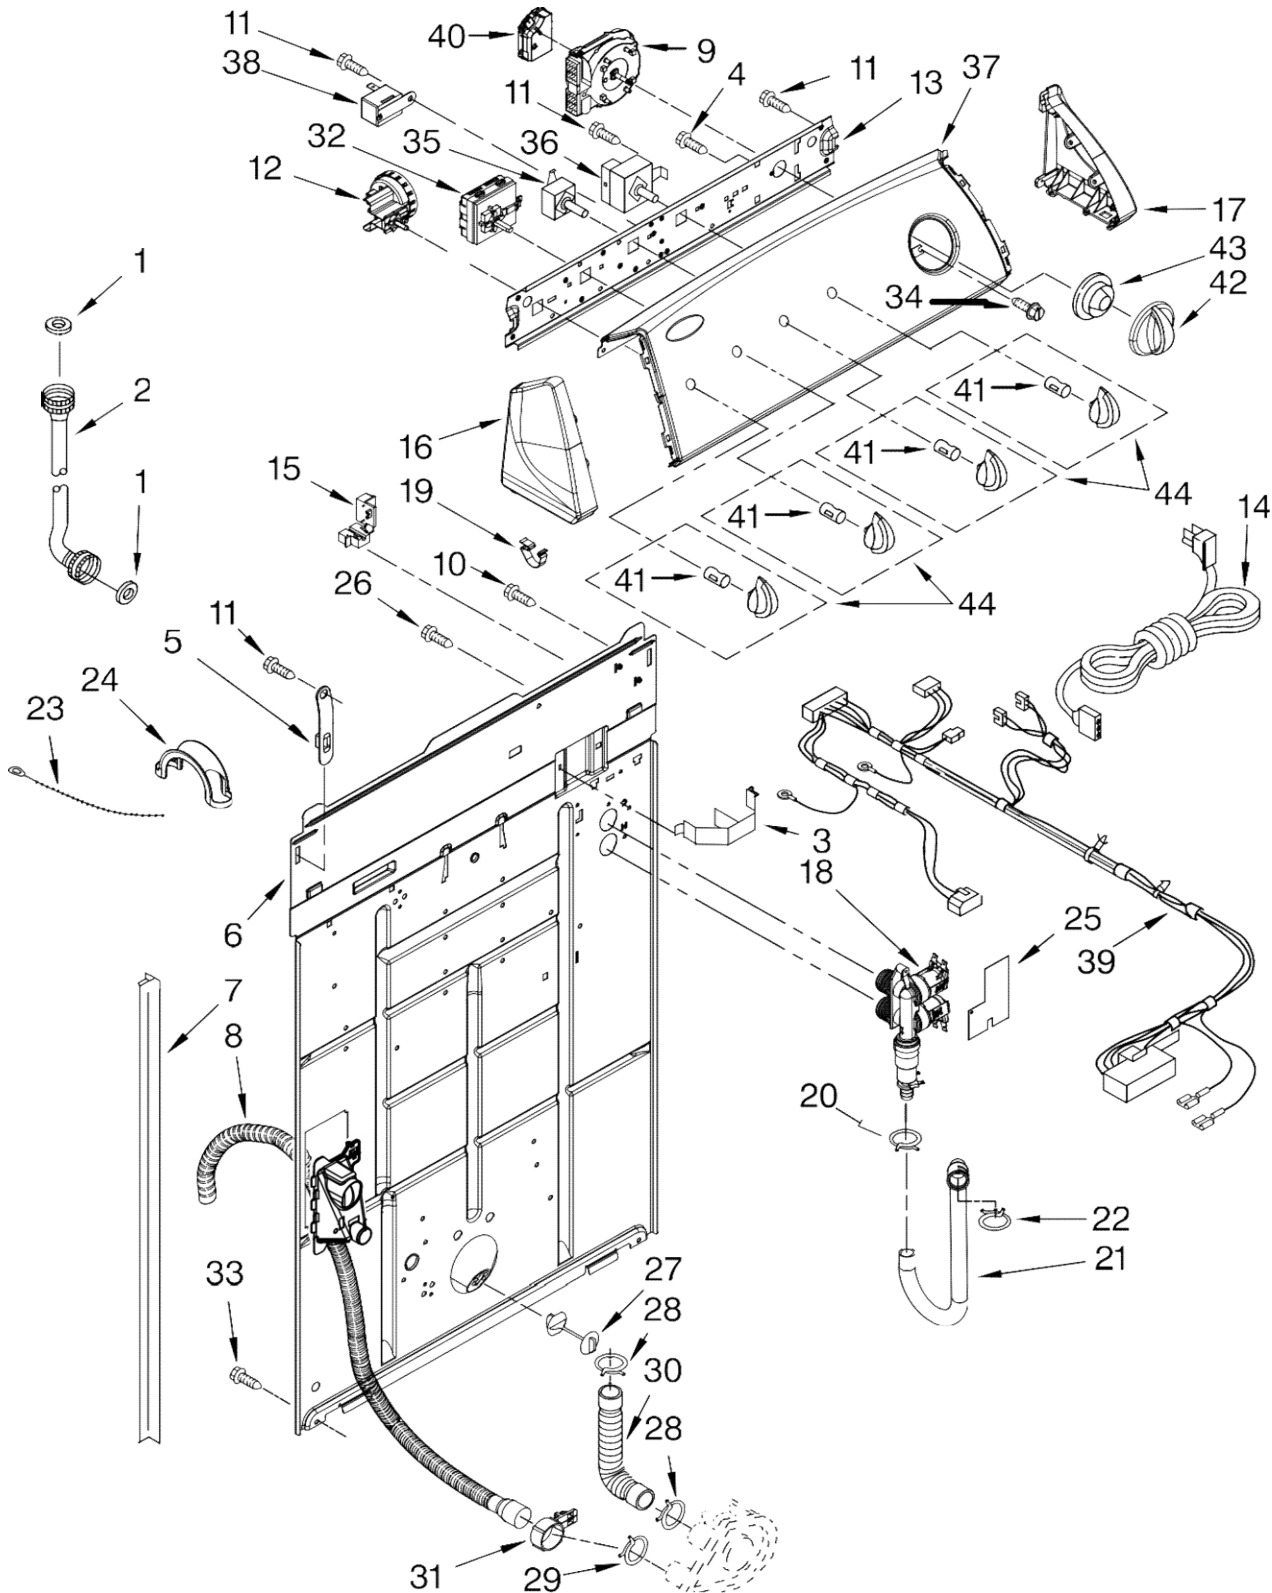

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST



Lavadora Whirlpool 7MWT99940VH1


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	3976300	Washer, Water Inlet Hose (4) (1-1/16 x 5/8)	13	8566003	Bracket, Control	27	8519200	Support, Rear Panel
2		Hose, Water Inlet (2)	14	W10115689	Cord, Power (Includes Item 15)	28	3363366	Clamp, Hose
	W10194210	Cold Water	15	3952821	Strain Relief, Power Cord	29	8317496	Clamp, Hose
	W10196191	Hot Water	16		Cap, End (L.H.) (Includes Item 19)	30	3951449	Hose, Pump To Tub (Includes Item 28)
3	8055003	Clip, Harness & Pressure Hose		8566035	White	31	8541668	Clamp, Hose
4	3400073	Screw, Ground		W10205959	Red	32	W10184148	Switch, Water Temperature (ATC)
5	8568314	Strap, Console (2)	17		Cap, End (R.H.) (Includes Item 19)	33	62863	Screw, 10-16 x 3/8
6	W10194451	Panel, Rear		8566032	White	34	3400818	Screw, Timer Mounting
7	62747	Pad, Rear Panel		W10205953	Red	35	3950356	Switch, Rotary
8	W10189267	Drain Hose Assembly (Includes Includes Item 31)	18	W10175893	Valve, Water Inlet	36	W10163674	Switch, Rotary
9	8577787	Timer, Control (60 Hz.) (Motor Not A Service Part)	19	8312709	Clip, Console	37	W10209247	Panel, Console
10	3351614	Screw, Ground	20	W10185367	Clamp, Hose	38	694419	Buzzer, Mini
11	90767	Screw, 8-18 X 3/8	21	W10232966	Hose, Valve To Tub Ring	39	W10214752	Harness, Wiring (For Detail See Pages 9 & 10)
12	W10177243	Switch, Water Level	22	W10117298	Clamp, Hose	40	8578411	Circuit Board, Agitation Delay
			23	3347868	Cable Tie	41	8536939	Clip, Knob
			24	8577378	U-Bend, Drain Hose	42	W10034730	Knob, Timer
			25	W10274310	Shield, Suds	43	8566018	Dial, Timer
			26	9740848	Screw, 8-18 x 1/2	44	W10034380	Knob, Control



Lavadora Whirlpool 7MWT99940VH1


Illus. No.	Part No.	DESCRIPTION
1	8528278	Dispenser, Fabric Softener
2	358237	Screw & Washer (5/16-24 x 1)
3	3949550	Washer
4	3947517	Agitator
5	W10167984	Tub Ring & Gasket
6	3359585	Seal, Tub Ring
7	3354845	Clip, Agitator
8	8543666	Washer, Agitator
9	8537433	Cam, Driven
10	3366877	Dog, Agitator Clutch (4)
11	8055141	Bearing-Driven Cam
12	W10116602	Nut, Spanner
13	W10006327	Basket
14	W10006326	Balance Ring
15	2219077	Clip, Pressure Switch Hose
16	63849	Tub
17	389140	Block, Basket Drive
18	383727	Gasket, Centerpost
19	W10211144	Hose, Pressure Switch
20	8538246	Agitator (Complete)
21	3946996	Auger, Agitator
22	8533540	Retainer, Spring
23	3946997	Spring, Compression
24	8577198	Filter, Lint

Lavadora Whirlpool 7MWT99940VH1

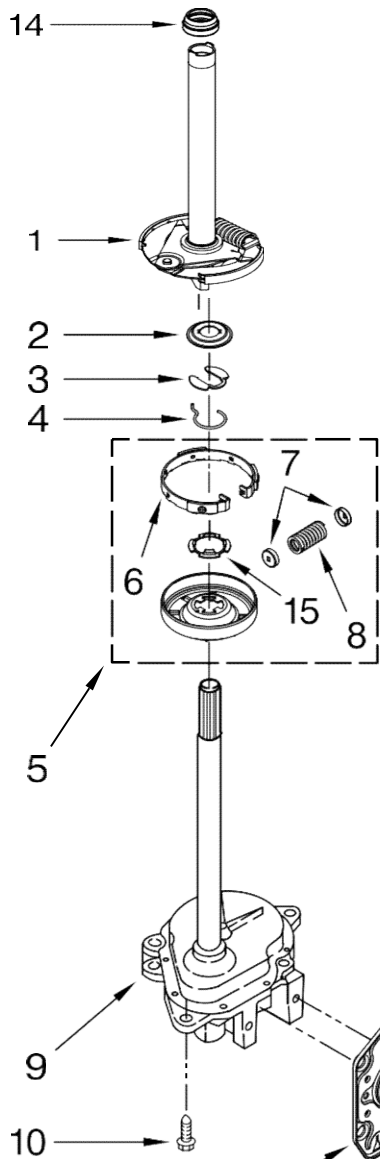


Illus. No.	Part No.	DESCRIPTION
1	388952	Brake & Drive Tube (Complete) (Refer To Page 11 For Further Breakdown)
2	63292	Washer, Spin Tube Thrust
3	62697	Ring, Spin Tube Support
4	63283	Ring, Retainer
5	3951311	Clutch (Complete)
6	3951308	Band & Lining, Clutch (Includes Items 7 & 8)
7	62646	Cap, Clutch Spring (2)
8	3946792	Spring, Clutch
9	8532118	Gearcase (Complete) (Refer To Page 12 For Further Breakdown)
10	3357334	Screw, Gearcase To Base (3)

Illus. No.	Part No.	DESCRIPTION
11	62611	Plate, Motor Mount To Gearcase
12	62691	Grommet, Motor (4)
13	3364003	Coupling, Motor & Isolation
14	8577374	Seal
15	3355454	Clip, Anti-Rattle
16	3400516	Screw
17	W10086010	Retainer, Motor (2)
18	3362089	Shield, Tub To Motor
19	661600	Motor, Main Drive
20	62850	Switch, Main Drive Motor
21	8546127	Retainer, Pump (2)
22	3363394	Pump (Complete)
23	3387485	Screw, 10-16 x 5/8
24	8316060	Shield, Motor
25	62863	Screw, 10-16 x 3/8
26	8572717	Capacitor
27	3949496	Clamp, Capacitor

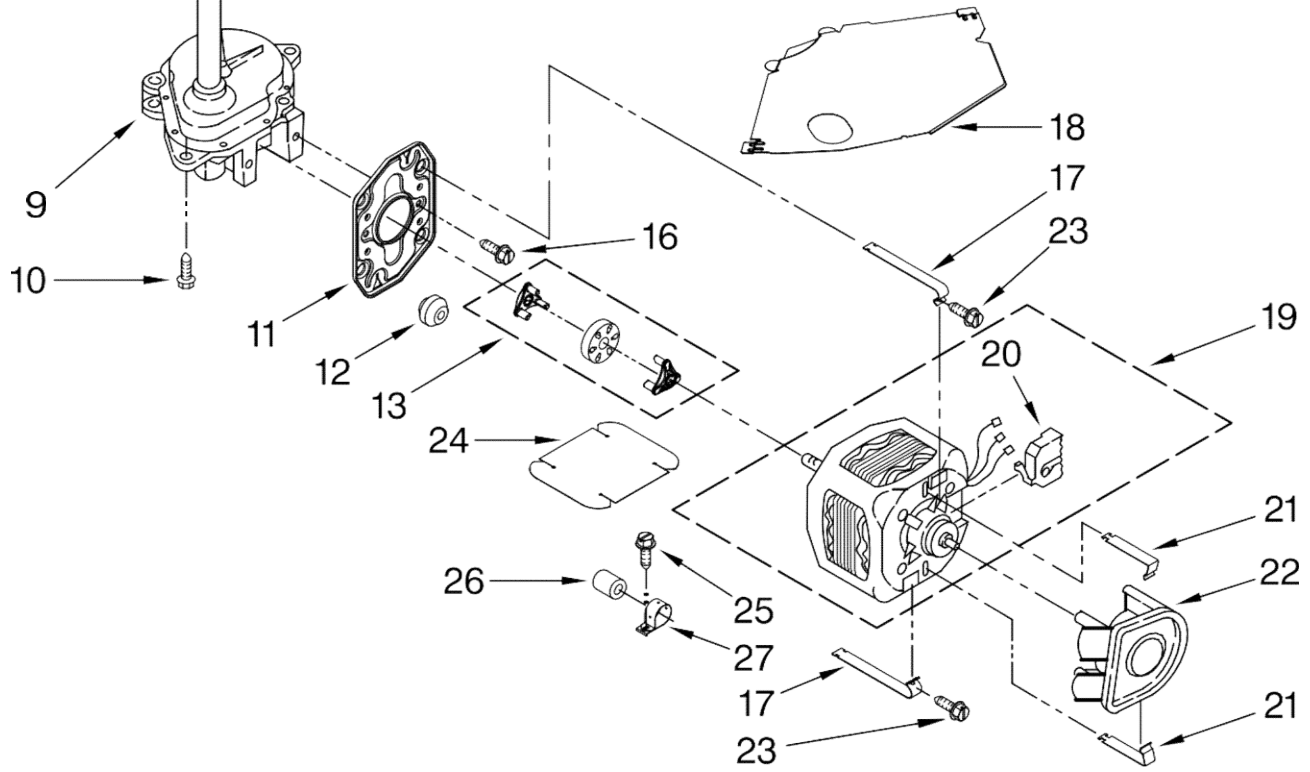


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

Lavadora Whirlpool 7MWT99940VH1

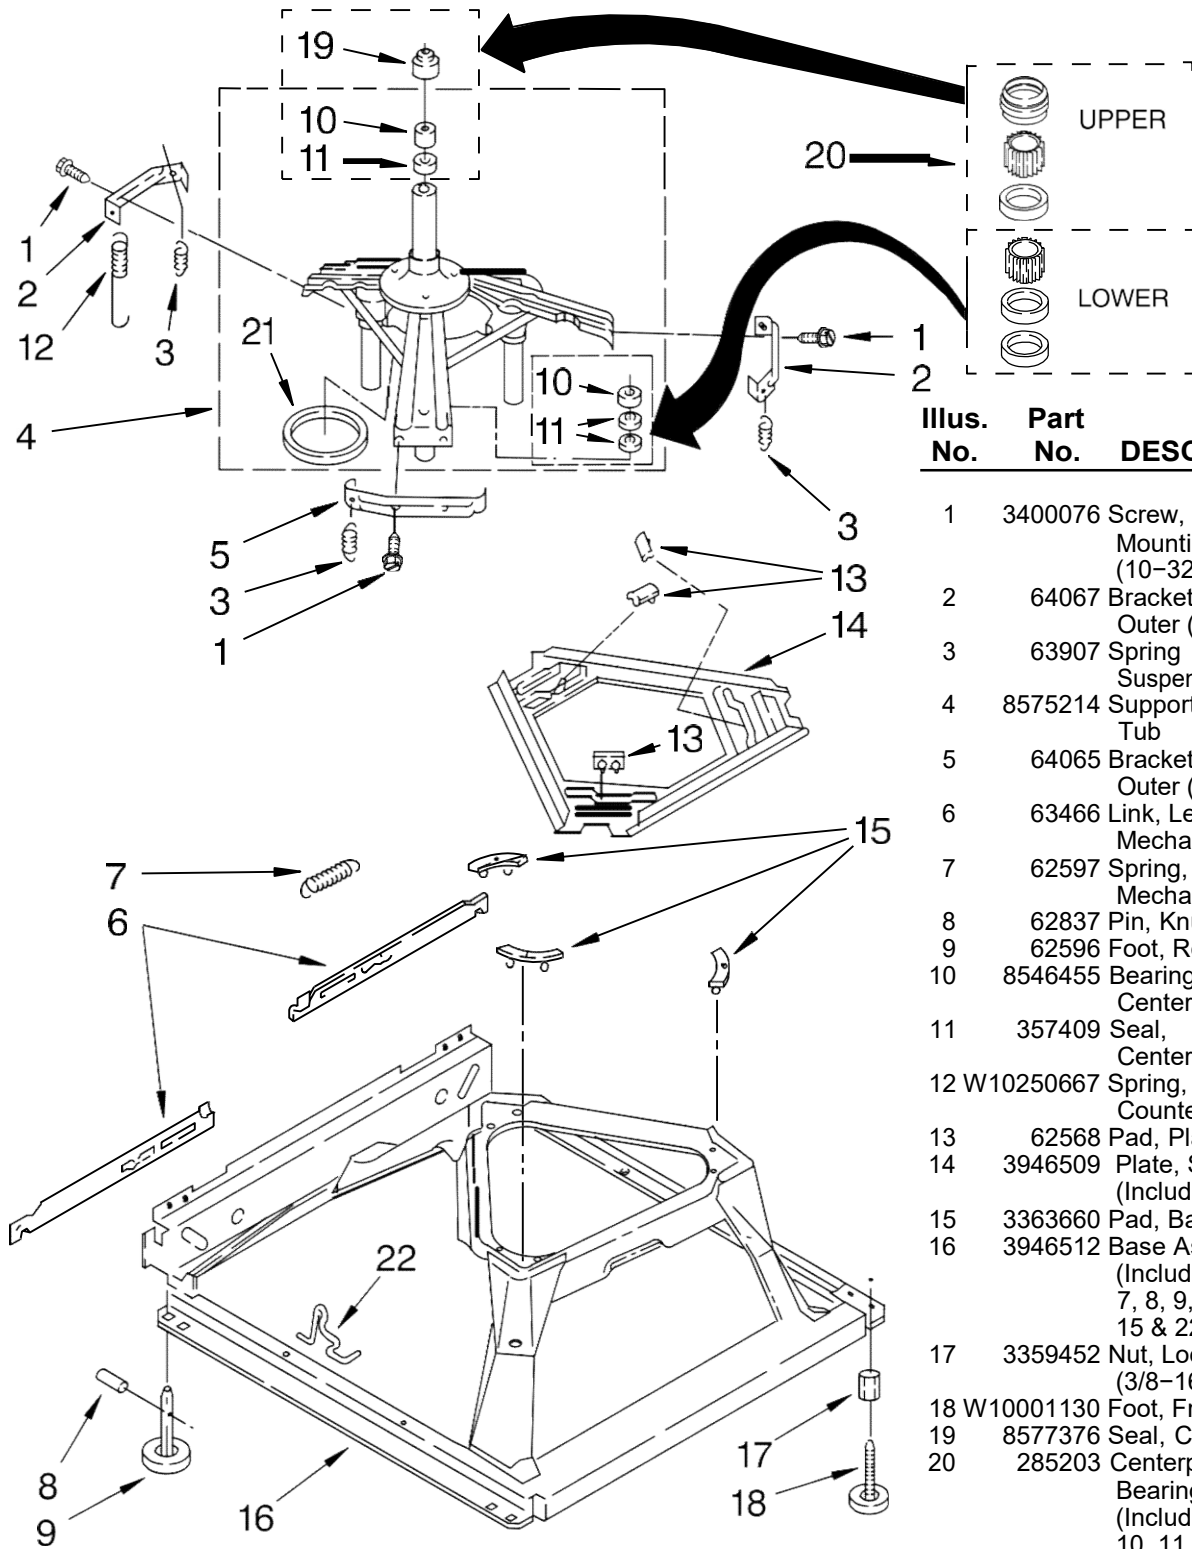

Illus. No.	Part No.	DESCRIPTION
1	3400076	Screw, Bracket Mounting (10-32 x 5/8)
2	64067	Bracket, Spring Outer (2)
3	63907	Spring Suspension,(3)
4	8575214	Support & Brake, Tub
5	64065	Bracket, Spring Outer (L.F.)
6	63466	Link, Leveling Mechanism (2)
7	62597	Spring, Leveling Mechanism
8	62837	Pin, Knurled
9	62596	Foot, Rear (2)
10	8546455	Bearing, Centerpost (2)
11	357409	Seal, Centerpost (3)
12	W10250667	Spring, Counterweight
13	62568	Pad, Plate
14	3946509	Plate, Suspension (Includes Item 13)
15	3363660	Pad, Base
16	3946512	Base Assembly (Includes Items 6, 7, 8, 9, 13, 14, 15 & 22)
17	3359452	Nut, Lock (2) (3/8-16)
18	W10001130	Foot, Front (2)
19	8577376	Seal, Centerpost
20	285203	Centerpost Bearing Kit (Includes Items 10, 11 & 19)
21	63134	Ring, Sound Deadening
22	W10145155	Retainer, Suspension Spring

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

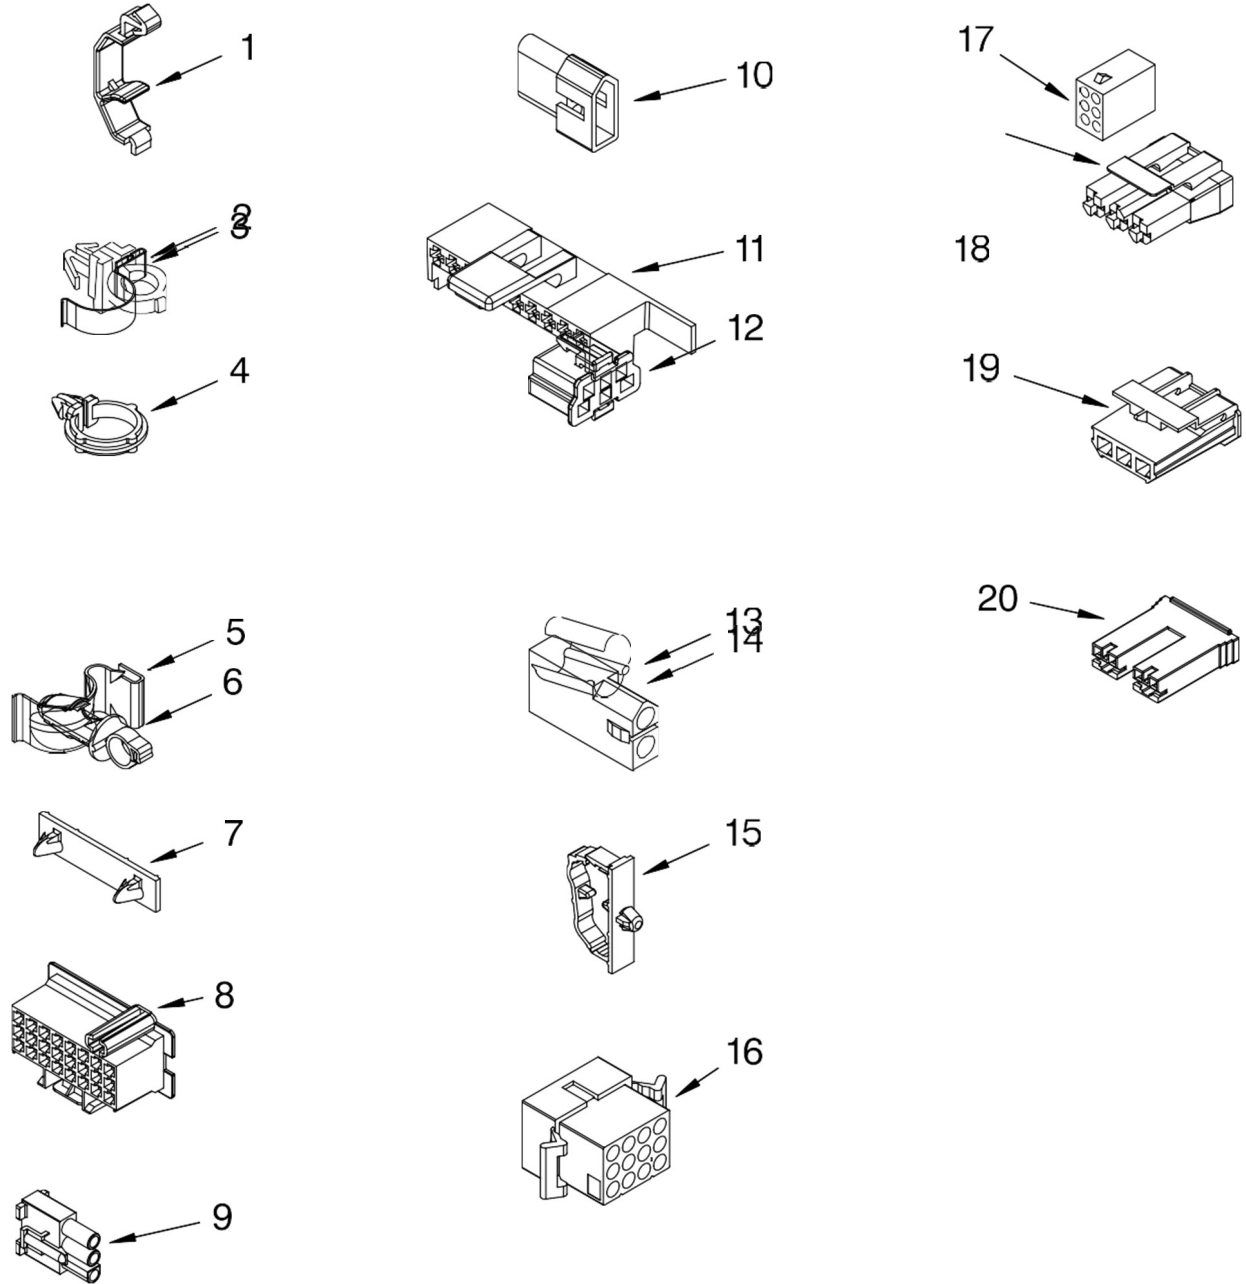

WH2J



Lavadora Whirlpool 7MWT99940VH1

Illus. No.	Part No.	DESCRIPTION
1	3349557	Retainer, Harness
2	388498	Clip, Harness
3	3347812	Clip, Harness
4	3352501	Clip, Harness (Push-In)
5	90016	Clip, Harness (Half-Harness)
6	3390496	Clip, Harness
7	389379	Retainer, Harness
8		Timer, Block Disconnect
	3948614	Natural
	352089	Black


Illus. No.	Part No.	DESCRIPTION
9	62889	Receptacle, Terminal (3-Way)
10	353424	Plug, Terminal (3-Way)
11	62505	Block, Disconnect (Motor 2 Speed)
12	3347243	Block, Disconnect
13	63523	Protector
14	717252	Connector (2-Way)
15	3352944	Clip, Harness

Illus. No.	Part No.	DESCRIPTION
16	3390423	Block, Disconnect (12-Way)
17	3347730	Receptacle (6-Way)
18	3948617	Connector (T.P.A.) (3-Circuit)
19	3360056	Plug (T.P.A.) (3-Circuit) (Pressure Switch)
20		Block, Connector
	3354925	Natural
	3354926	Red

**FOR COMPLETE WIRING HARNESS REFER TO
CONTROL AND REAR PANEL PARTS PAGE**

WH2J

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

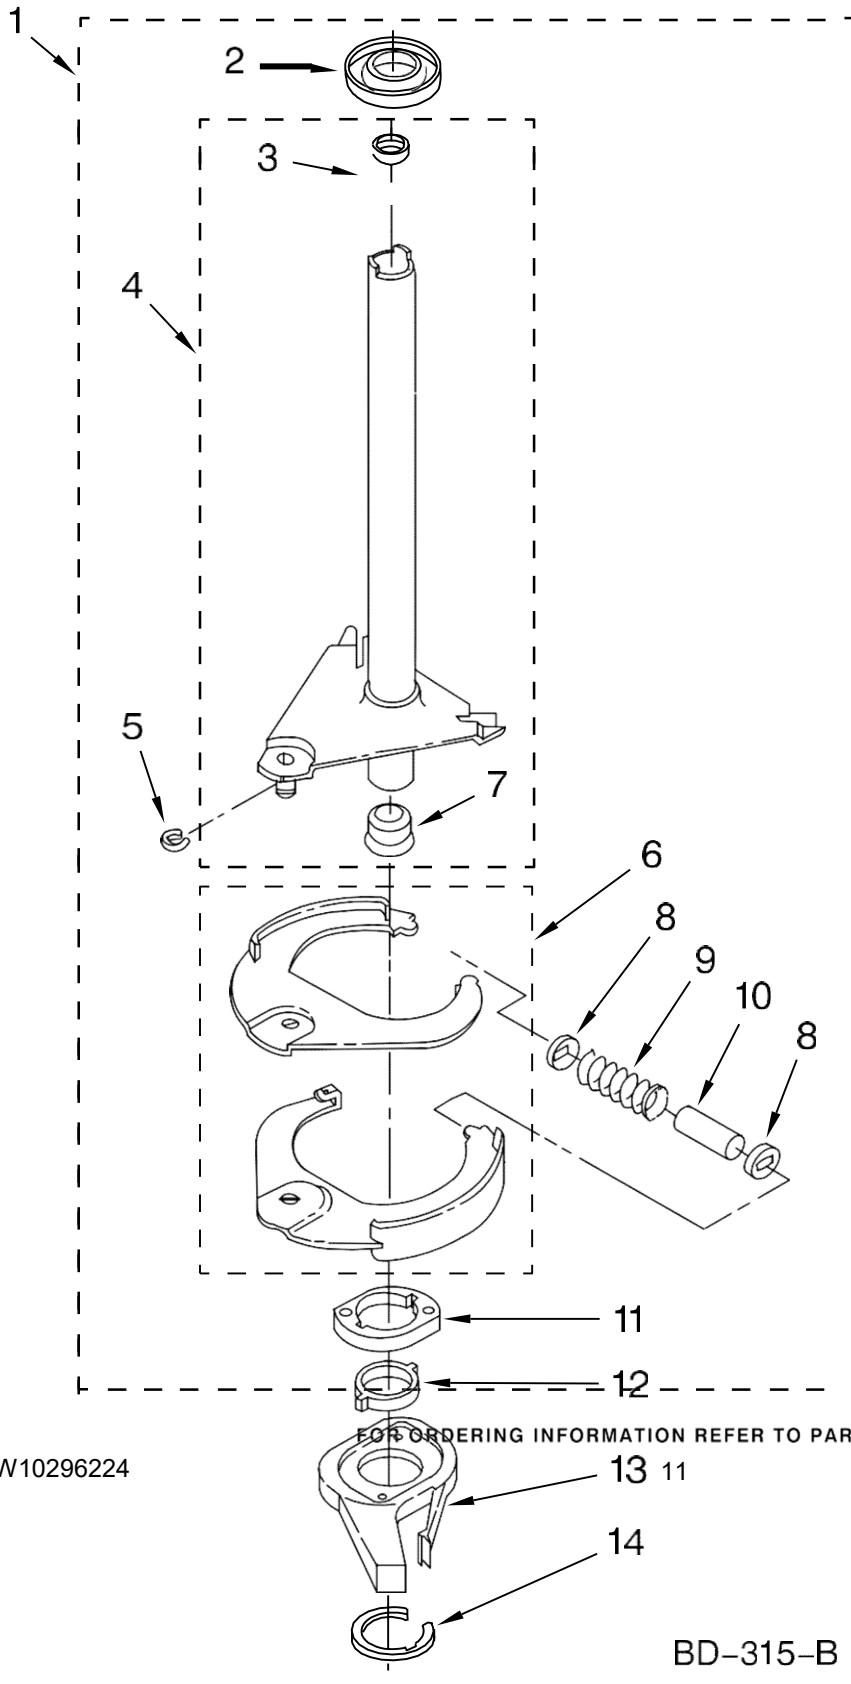


Illus. No.	Part No.	DESCRIPTION
1	388952	Brake And Drive Tube (Complete)
2	62658	Ring, Thrust
3	356427	Seal, Drive Tube
4	64027	Tube, Basket Drive (Includes Illus. 3, 4, 5 & 9)
5	64035	Ring, Retaining
6	64232	Shoe, Brake (2)
7	62703	"T" Bearing, Spin Tube
8	3353956	Cap, Brake Spring (2)
9	387806	Spring, Brake
10	3355360	Sleeve, Brake Spring
11	661516	Cam, Brake Release
12	63022	Sleeve, Cam
13	64194	Driver, Brake Cam
14	90368	Ring, Retaining

FOLLOWING PARTS NOT ILLUSTRATED

285208 Lubricant (Use Only In Brake Shoe Assembly On Roller & Pin)

W10296224

Lavadora Whirlpool 7MWT99940VH1

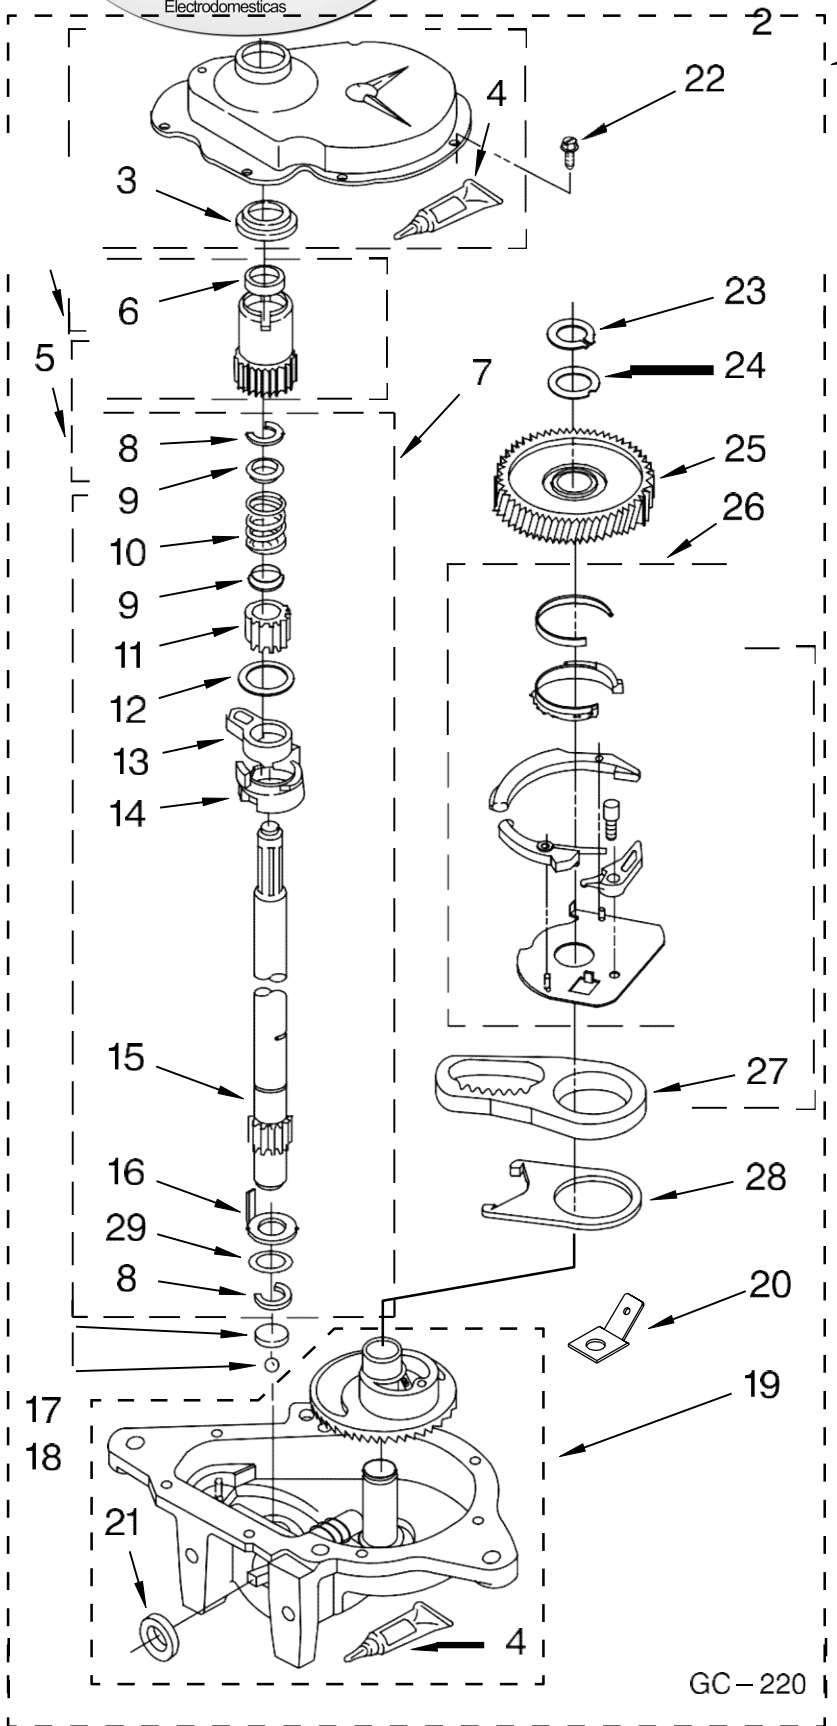

Illus. No.	Part No.	DESCRIPTION
1	8532118	Gearcase (Complete)
2	285202	Cover, Gearcase
3	3349985	Seal, Gearcase Cover
4	285195	Sealer, Gasket (.20 Fl. Oz.) (6 ml)
5	63320	Pinion, Spin (Includes Illus. 25)
6	356427	Seal, Spin Pinion
7	389387	Shaft, Agitator (Complete)
8	90369	Ring, Retaining (2)
9	62677	Retainer, Spring (2)
10	62676	Spring, Agitate
11	63273	Gear, Agitate (Includes 15 & 29)
12	62619	Washer, Agitate Gear
13	62580	Cam Follower (Includes 14)
14	62581	Cam, Agitate (Includes 13)
15	285509	Shaft, Agitator (Includes 11 & 29)
16	62618	Washer, Cam Thrust
17	16018	Bearing, Thrust (Includes 18)
18	85529	Ball, Bearing (Includes 17)
19	389230	Bottom and Pinion, Gearcase
20	3949116	Block Tab, Terminal
21	285352	Seal, Thrust Plug
22	3351614	Screw, Gearcase Cover Mounting (8) (10-24 x 3/8)
23	3362552	Ring, Retaining
24	285735	Washer Kit, Thrust
25	62570	Gear, Spin
26	388253	Neutral Assembly
27	3349296	Rack, Connecting
28	62621	Actuator, Shift
29	388815	Washer, Intermediate

GC-220

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST