

KitchenAid®


**5 QT. STAND MIXER
ARTISAN TILT HEAD**

MODELS:

KSM156WMAQ0 (Aqua Sky)
KSM156WMER0 (Empire Red)



BATIDORA KSM156WMER0

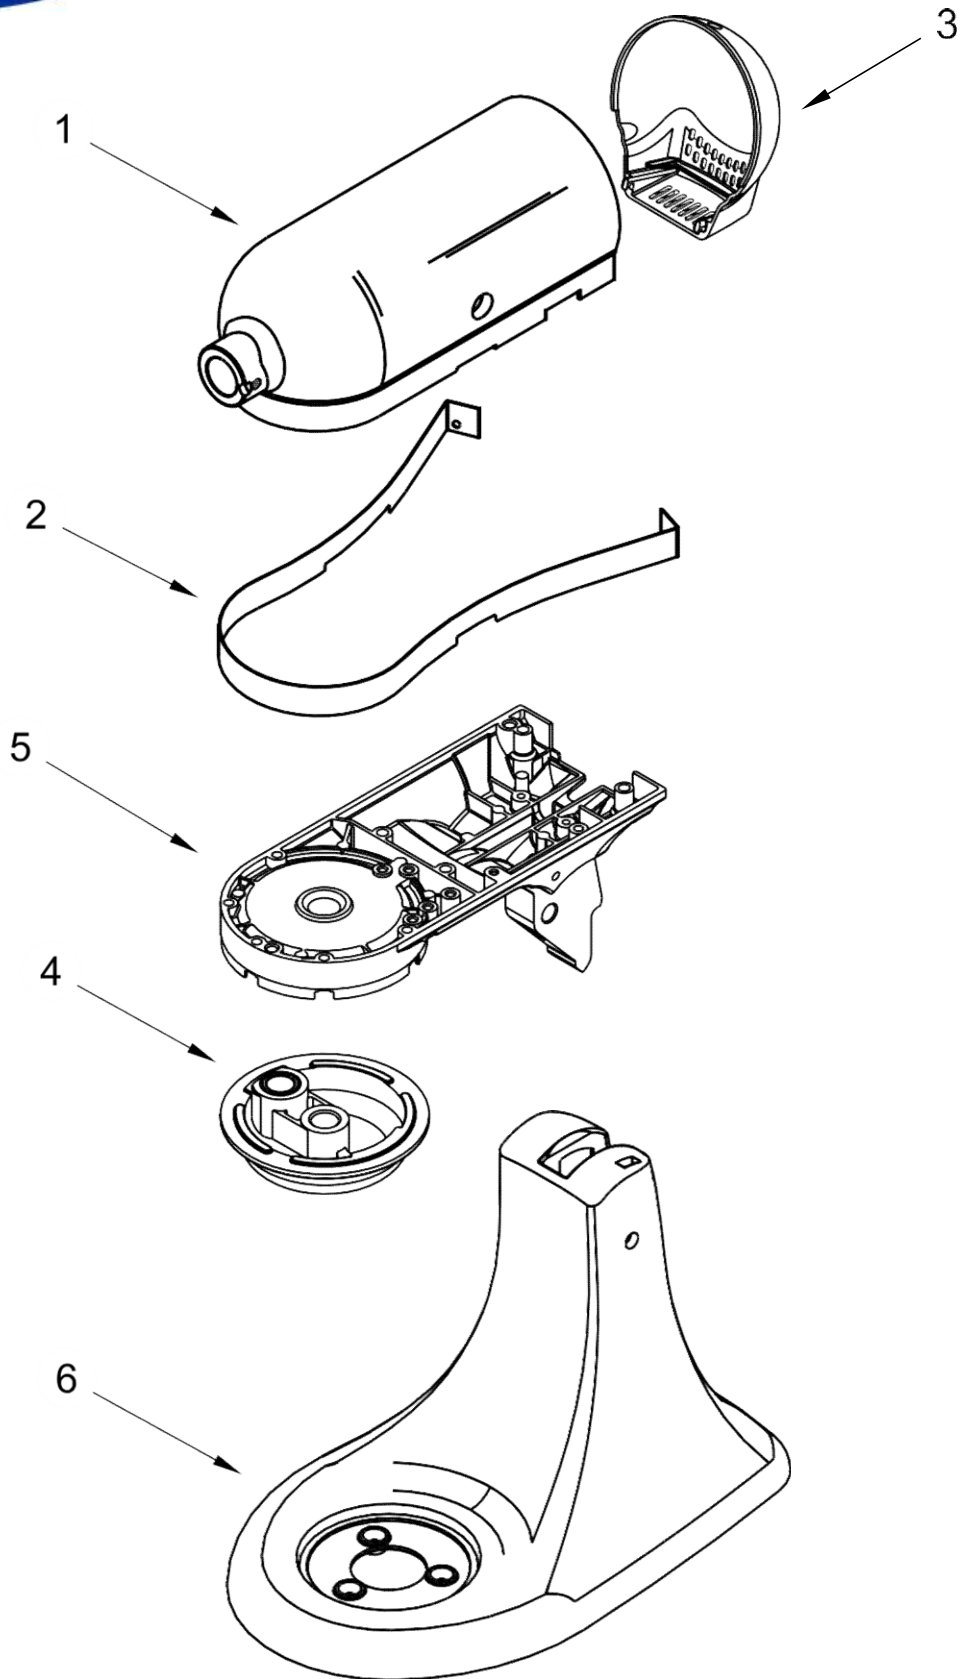




BATIDORA KSM156WMER0

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Motor Housing
	W10193501	Aqua Sky
	240291-21	Empire Red
2		Trim Band
	9706630	Black/Silver

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
3		End Cover
	W10193496	Aqua Sky
	240253-22	Empire Red
4		Planetary
	W10193498	Aqua Sky
	240286-23	Empire Red


<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
5		Lower Gearcase
	W10193504	Aqua Sky
	240350-84	Empire Red
6		Pedestal
	W10193506	Aqua Sky
	9702304	Empire Red

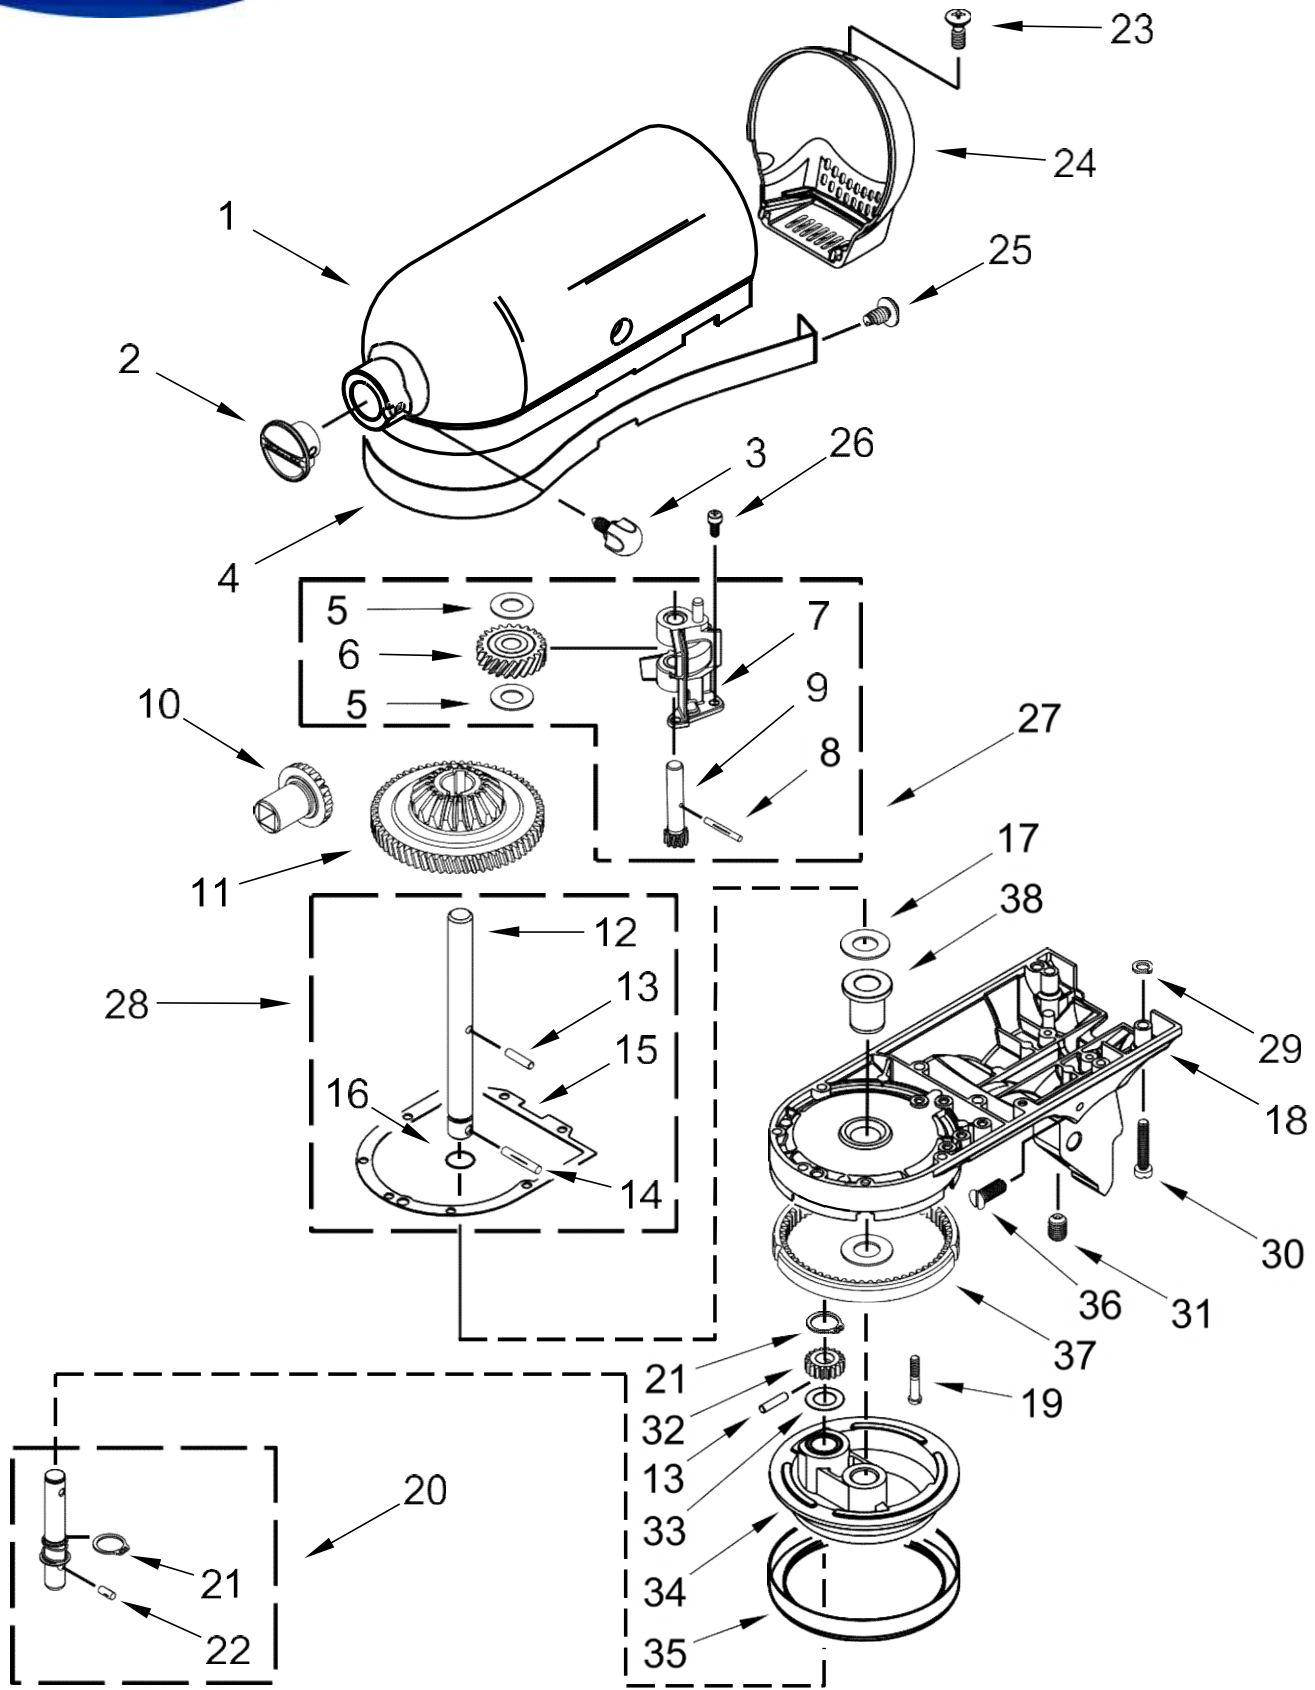



BATIDORA KSM156WMERO

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Gearcase Motor Housing (Refer to Color Variation Parts Page)	14	9705443	Pin, Grooved	30	9708652	Screw
			15	4162324	Gasket, Transmission	31	W11134949	Screw
			16	67500-55	"O" Ring	32	W10903540	Gear, Pinion
2	W10753041	Cap, Attachment Hub	17	W10323378	Washer	33	9706090	Washer
			18		Lower Gear Case (Refer to Color Variation Parts Page)	34		Planetary (Refer to Colc Variation Parts Page)
3	9709194	Thumb Screw Black				35	240285	Ring, Planetary Drip (Standard)
4		Band, Trim (Refer to Color Variation Parts Page)	19	9708651	Screw	36	89411	Screw
			20	243368	Shaft, Agitator	37	W10903534	Gear, Internal
5	W10323373	Washer, Fiber	21	9703438	Ring, Retaining	38	16897	Bearing, Lower Center
6	W10112253	Gear, Worm	22	9704677	Pin, Groove			
7	240308	Bracket, Worm Gear and Bearing	23	241877	Screw			
			24		Cover, End (Refer to Color variation Parts Page)			
8	9705444	Pin, Grooved	25	3400617	Screw			
9	240210-2	Gear, Pinion and Shaft	26	3400022	Screw			
10	W11175140	Gear, Attachment Hub	27	240309-2	Worm Gear Bracket and Gear Assembly			
11	W11175138	Gear, Center Bevel Pinion	28	4160474	Shaft, Center Agitator Assembly			
12	240026	Shaft, Vertical Center	29	8533914	Washer, Lock			
13	240018-1	Pin, Agitator Shaft						

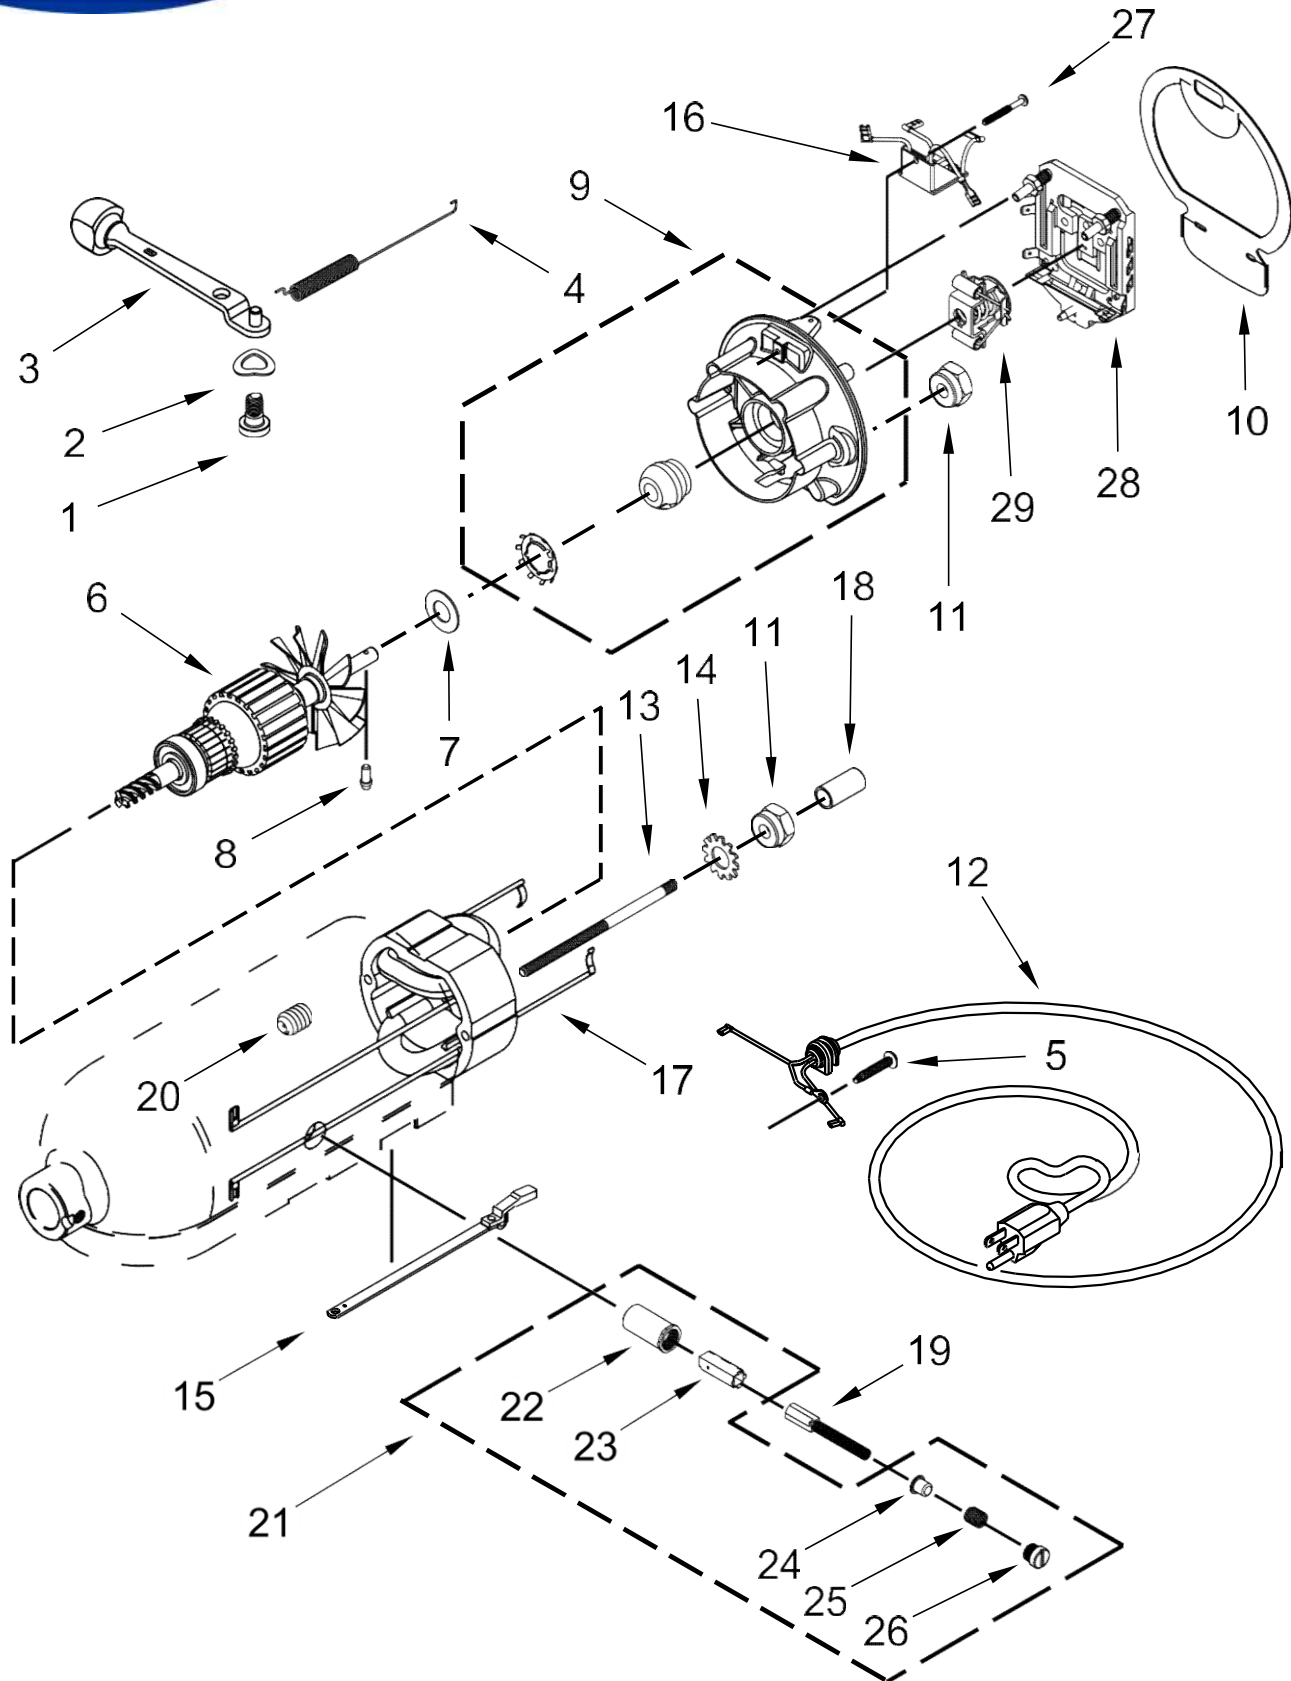




BATIDORA KSM156WMERO

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	110679	Screw
2	116241	Washer, Spring
3		Lever, Speed Control Assembly
	9709276	Black
4	3183680	Spring, Control Plate
5	W10351843	Screw
6	W10788161	Armature and Bearing Assembly, 120 Volt
7	W10323376	Washer, Spacing
8	16998	Stud, Governor Drive
9	3180526	Bearing and Bracket Assembly
10	240775-1	Seal, End

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
11	W10131078	Nut
12		Cord, Power
	W11359518	Black
13	240769	Screw, Stator
14	W10068270	Washer, Lock
15	W10898250	Link, Speed
16	W10325124	Phase Control, 120 Volt
17	W10787725	Field Assembly, 120 V
18	241356	Sleeve, Motor Stud
19	W10380496	Brush, Cap and Spring
20	9707926	Screw, Set
21	4162546	Brush Holder Assembly

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
22	3179908	Housing, Brush Holder
23	240680	insert, brush holder
24	116286	Spring, Seat-Cap
25	116287	Spring, Cap
26		Cap, Brush Holder
	3184212	Black
27	W10068260	Screw
28	W10119326	Control Plate Assembly
29	W10330804	Governor Assembly

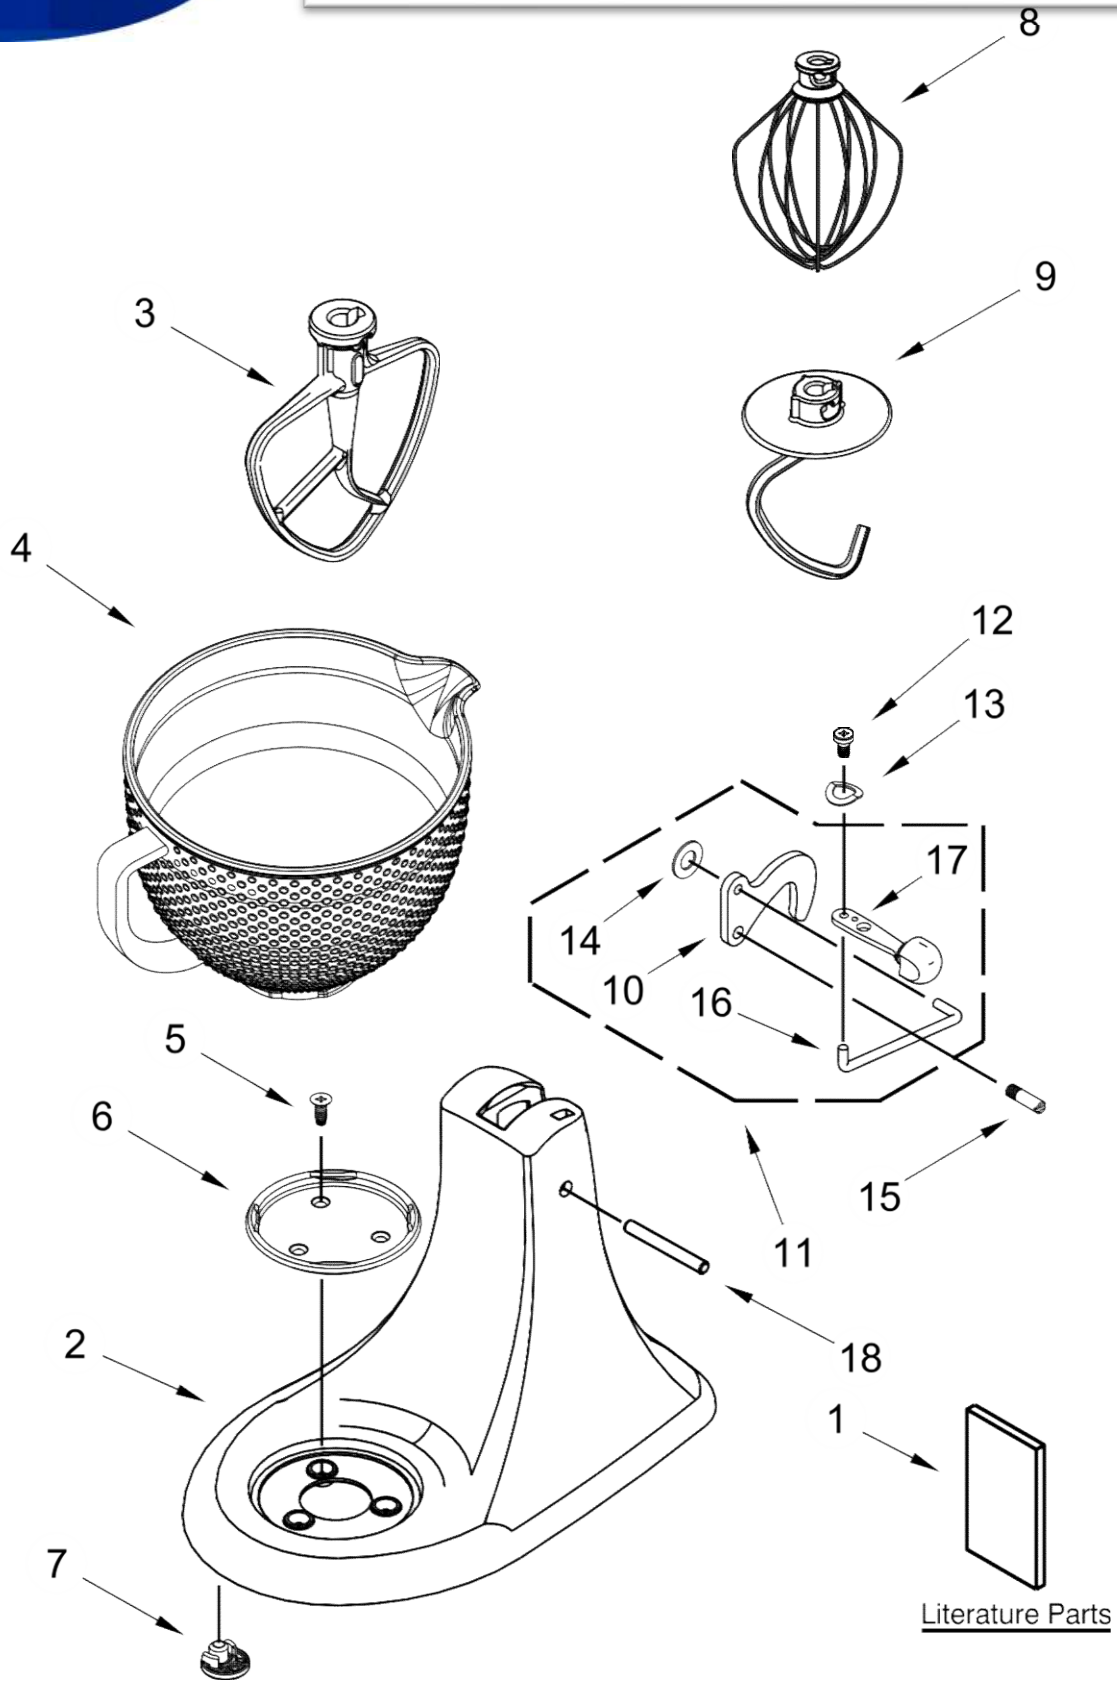



<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts
	W11368487	Use & Care Guide
2		Pedestal
		(Refer to Color Variation Parts Page)
3	W10672617	Beater, Flat (Coated)
4	W11380162	Bowl, 5 Qt.
5	3400020	Screw
6	W10191926	Cap, Bowl Screw

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
7	9709707	Foot
8	9704329	Whip, Wire
9	W10674618	Hook, Dough (Coated)
10	9709055	Latch
11		Latch, Link and Lever Assembly
	24452	Black
12	110679	Screw
13	116241	Washer, Spring

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
14	8533912	Washer
15	W10572158	Screw
16	24450	Link, Latch
17		Lever, Latch
	9709280	Black
18	16910	Pin, Hinge
		FOLLOWING PARTS NOT ILLUSTRATED
	W10672622	Beater, Flex Edge