

KitchenAid®

**6 QT. STAND MIXER
COSTCO - BOWL LIFT**

MODELS:

KSM6573CWH2 (White)

KSM6573COB2 (Onyx Black)

KSM6573CER2 (Empire Red)


KSM6573CCU2 (Contour Silver)

4KSM6573CWH2 (White)

4KSM6573COB2 (Onyx Black)

4KSM6573CER2 (Empire Red)

4KSM6573CCU2 (Contour Silver)

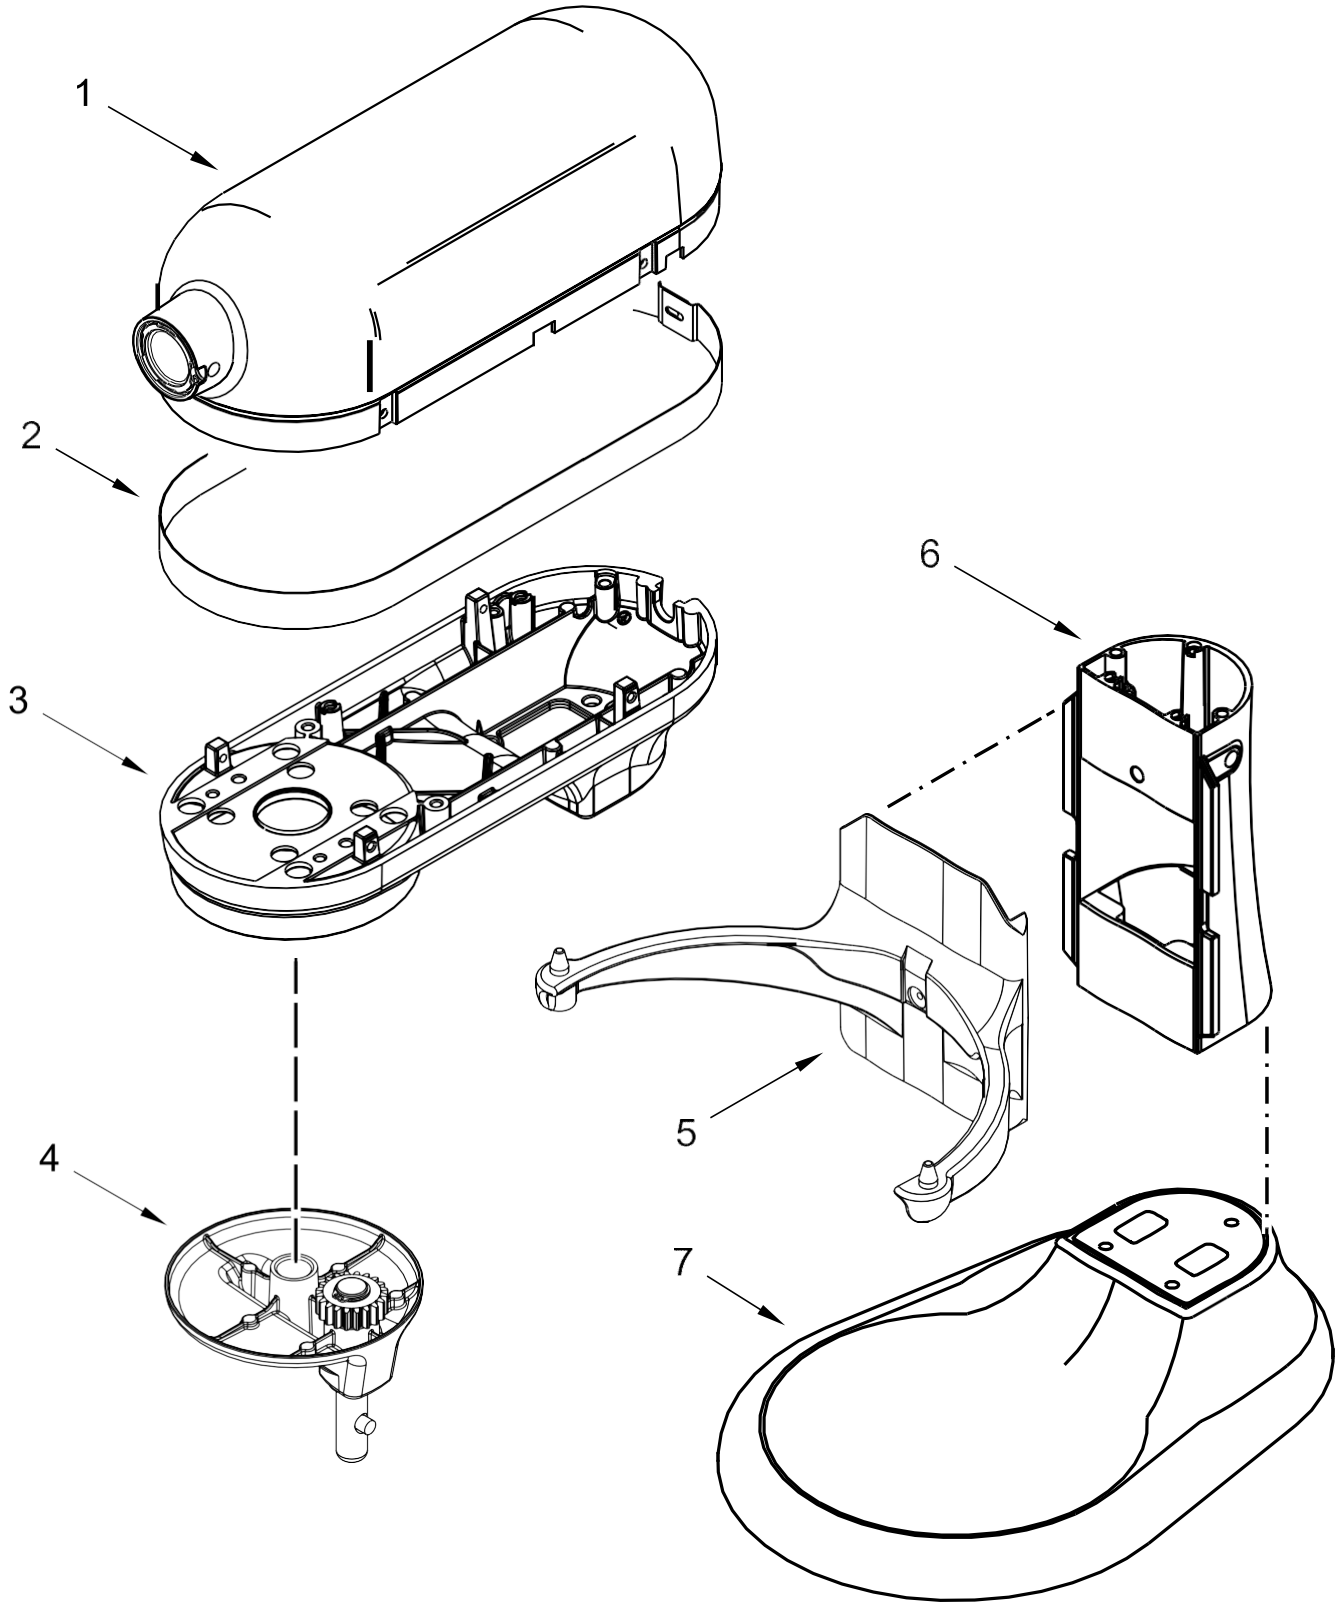




Batidora KitchenAid KSM6573CCU02

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Motor Housing
	9703311	White
	9705296	Onyx Black
	9705300	Empire Red
2	W10327951	Contour Silver Trim Band
	W10410026	Dark Platinum
3		Lower Gearcase
	W10234488	White
	W10410012	Onyx Black
	W10410011	Empire Red
	W10410010	Contour Silver

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
4		Planetary
	W10420628	White
	W10410018	Onyx Black
	W10419426	Empire Red
5	W10410016	Contour Silver
		Bowl Support and Pins
	9707633	White
	9707876	Onyx Black
	9707883	Empire Red
	W10410004	Contour Silver


<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
6		Column and Pins
	9703673	White
	9705320	Onyx Black
	9705324	Empire Red
7	W10328003	Contour Silver
		Base and Foot Assembly
	9703690	White
	9705344	Onyx Black
	9705348	Empire Red
	W10328017	Contour Silver

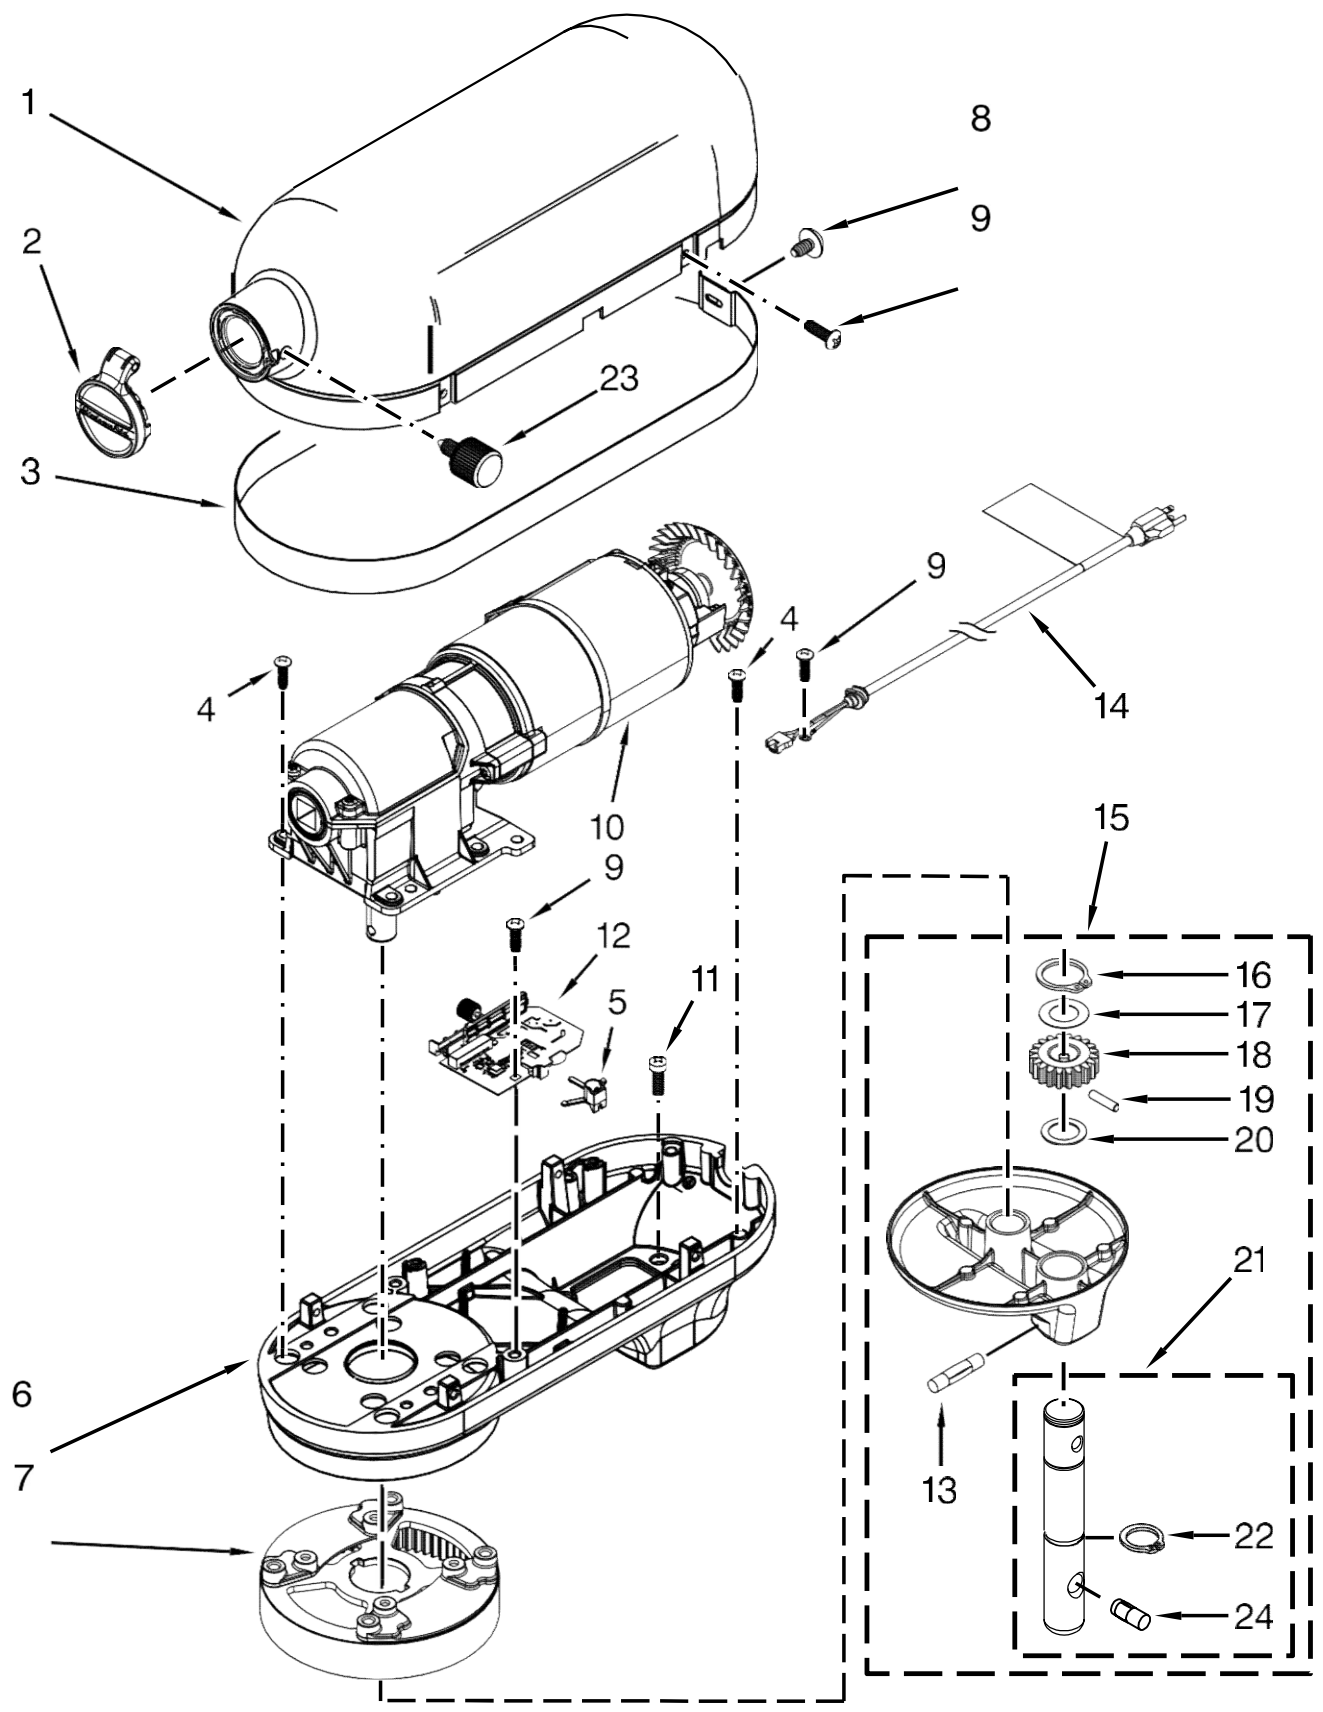



Batidora KitchenAid KSM6573CCU02

<u>Illus.</u> <u>No.</u>	<u>Part No.</u> <u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u> <u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u> <u>Description</u>
1	Motor Housing (Refer to Color Variation Parts Page)	8	3400617 Screw	16	9703438 Ring, Retaining
2	9703315 Cover, Attachment Hub	9	3400814 Screw	17	9706090 Washer
3	Trim Band (Refer to Color Variation Parts Page)	10	W10517938 Motor, 120 Volt Assembly	18	W10234643 Gear, Pinion
4	W10351843 Screw	11	3400200 Screw	19	9707223 Pin, Retaining
5	W10305968 Holder, Control	12	W10409930 Control Assembly	20	8533910 Washer
6	Lower Gearcase (Refer to Color Variation Parts Page)	13	W10234531 Pin, Groove	21	9708191 Shaft, Agitator
7	W10234493 Gear, Ring and Plate Assembly	14	Cord, Power W10234520 White W10338492 Black	22	9703680 Clip, Retaining Thumb Screw
		15	Planetary Assembly (Refer to Color Variation Parts Page)	23	W10417014 Chrome
				24	9704677 Pin, Groove

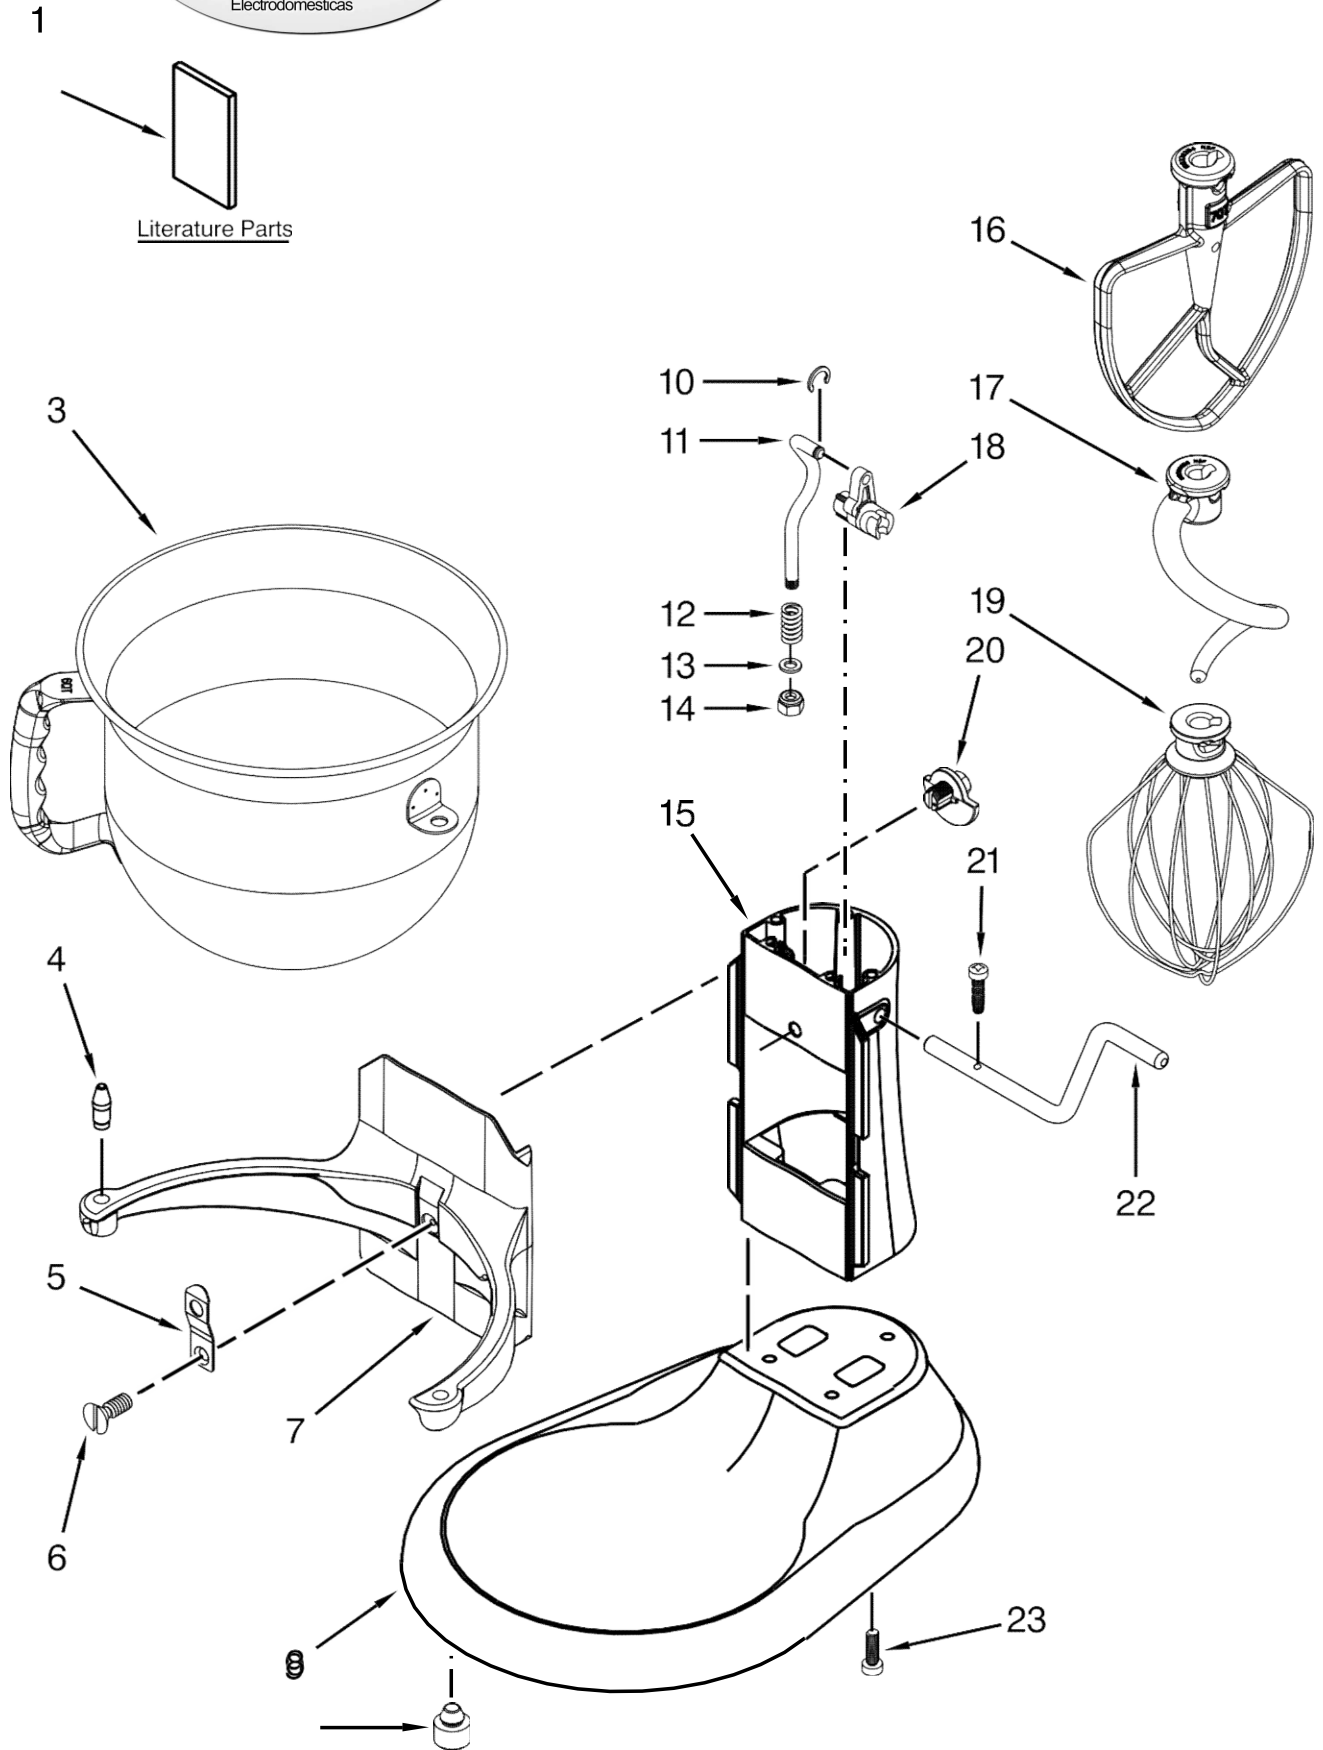



Batidora KitchenAid KSM6573CCU02

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts
	W10410027	Use and Care Guide, U.S.
3	W10177650	Bowl, 6 Qt.
4	240185	Pin, Retaining Bowl
5	9703474	Clip, Bowl Retainer
6	3400018	Screw
7		Bowl Support and Pins (Refer to Color Variation Parts Page)
8		Base and Foot Assembly (Refer to Color Variation Parts Page)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
9	9708649	Foot
10	9703307	Ring, Retaining
11	9706787	Rod, Bowl Lift
12	9237	Spring, Lift Rod 13
	9703439	Washer
14	8533907	Nut
15		Column and Pins (Refer to Color Variation Parts Page)
16	W10401173	Beater, Flat
17	W10335442	Hook, Dough
18	9706885	Arm, Bowl Lift
19	9704309	Whip, Wire

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
20	9703426	Cam, Adjusting
21	3400863	Screw
22	9706788	Handle, Bowl Lift
23	3400200	Screw