



Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	W10161714	Use & Care Guide
	W10205644	Energy Guide
	W10159832	Service & Wiring Sheet
	2306424	Icemaker and Ingredient Care Center Service Sheet
	2318069	Main Control Service Sheet
	W10291426	Installation Instructions
2		Cabinet (Not A Serviceable Part)
3	2260503B	Button, Filter
4	836054	Roller, Front & Rear (4)
5		Support, Leveler Assembly
	W10138423	Refrigerator Side
	W10279275	Freezer Side
6	2005032	Leveler, Adjustable (2)
7	2006841	Ring, Retaining (2) Flexible
8		Cap, Water Filter
	2260518B	Black
9	2307640	Mounting Stud, Grille

Illus. No.	Part No.	DESCRIPTION
10	2307584	Grommet, Crossover Tube
11	2005783	Cam, Door Closer
12	W10121140	Housing, Water Filter
13	2318189	Tray, Drip Filter
14	3400525	Screw
15	4396841	Filter, Water
16	489399	Screw
17	3400230	Screw, Door Stop
18	2257644	Hinge (Top)
19	W10223655	Bracket, Mtg (Water Filter)
20	489464	Screw
21	2004994	Lock, Adjustable Bushing
22	2300082	Bushing
23	W10001250	Screw
24	2221242	Spring, Door Closure
25	486194	Screw
26	2005008	Retaining Ring, Adjustable Bushing
27	W10129069	Wire Clip (5)
28	2006342	Gap, Cover Assembly (Bottom)
29		Hinge (Bottom)
	2006780	Freezer Side
	2006779	Refrigerator Side
30	2302876	Bushing, Adjustable
31	8533913	Screw 1/4-20 x 5/8
32		Skirt-Grille, Bottom
	2209026B	Black


Illus. No.	Part No.	DESCRIPTION
33		Extension Arm, Door Closer
	2307857	Right
	2302765	Left
34		Grille Bottom, Front
	2325186B	Black
35	2005921	Screw
36		Bracket, Support Base (Front)
	2006616	Left
	2006556	Right
37	1157158	Screw
38	2006617	Bracket, Support Base (Rear) (2)
39	2006346	Washer
40	2316859	Bushing, Extension Arm
41	1163283	Screw
42		Connector, Water Tube
	2209709	5/16-1/4"
	W10271541	1/4"
43	8281163	Screw
44		Switch, Rocker Arm
	1118894	Refrigerator Door Side
	1115373	Freezer Door Side
45	2215938	Cover, Switch (2)
46	487415	Screw (2)
47		Bracket, Switch
	2221097	Right
	2221096	Left
48	2215612	Cover, Rear

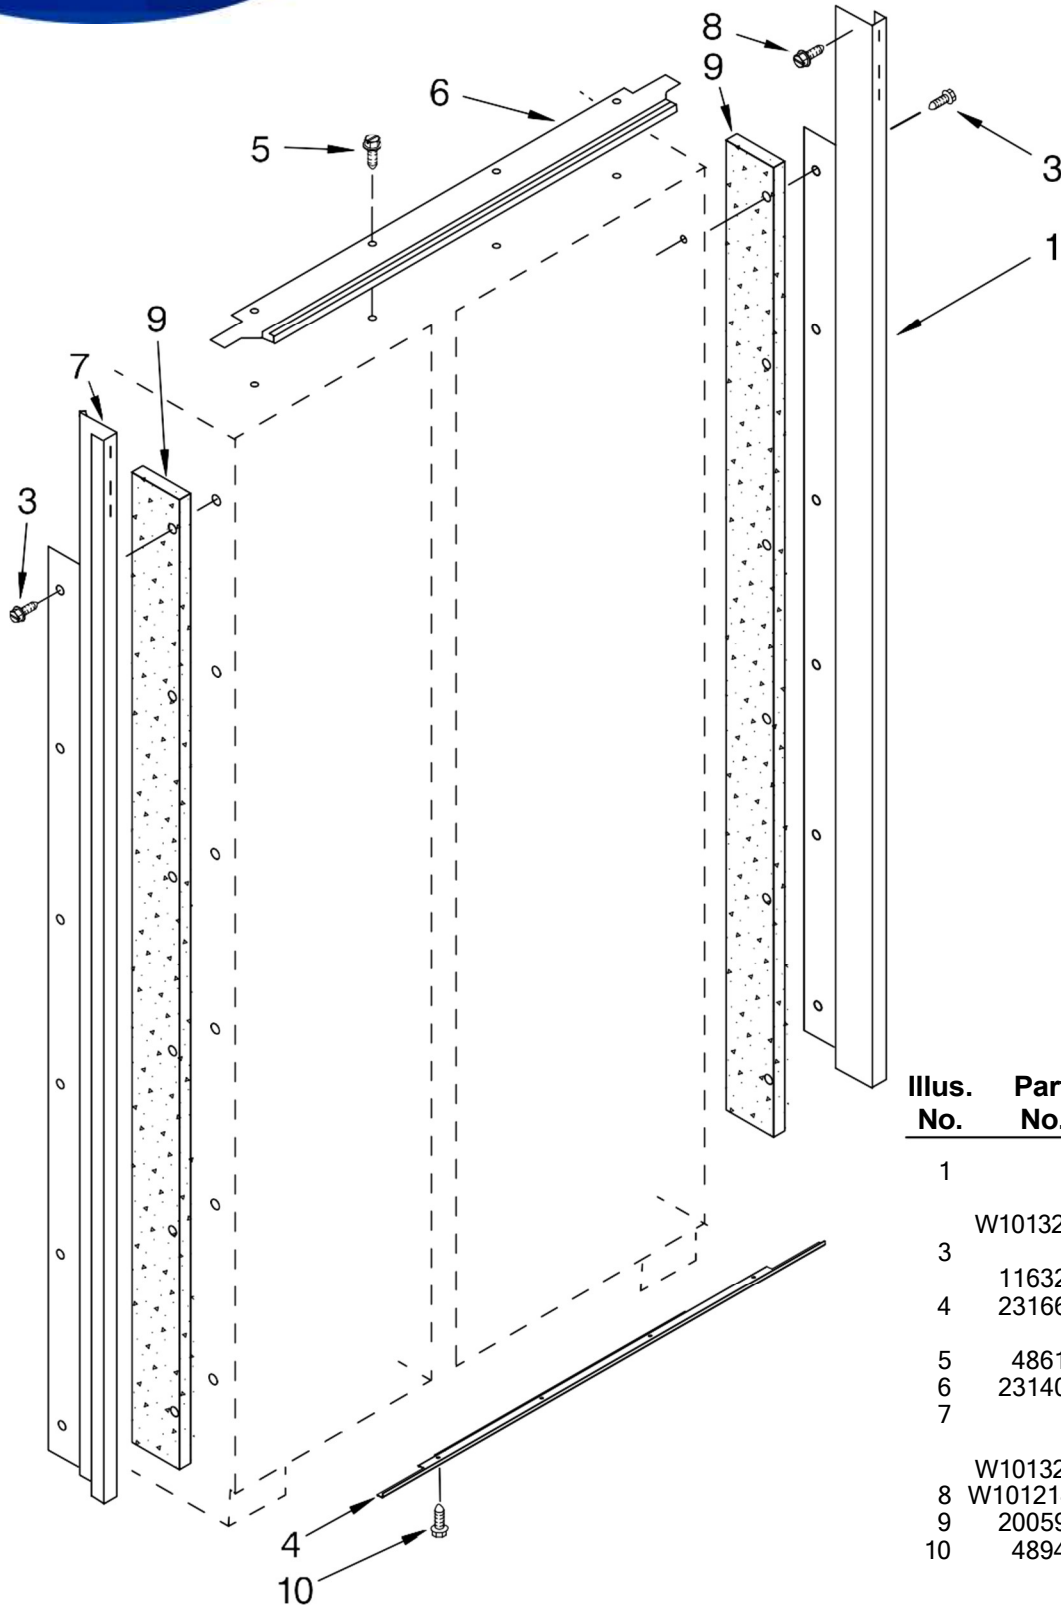


Illus. No.	Part No.	DESCRIPTION
1		Cabinet, Trim (Right Side)
	W10132472	Stainless Steel
3	1163283	Screw
	2316688	Stainless Steel
4	2316688	Cabinet, Trim (Bottom)
5	486194	Screw
6	2314018	Cabinet, Trim Top
7		Cabinet Trim (Left Side)
	W10132541	Stainless Steel
8	W10121451	Screw (4)
9	2005925	Seal-Trim, Side
10	489464	Screw

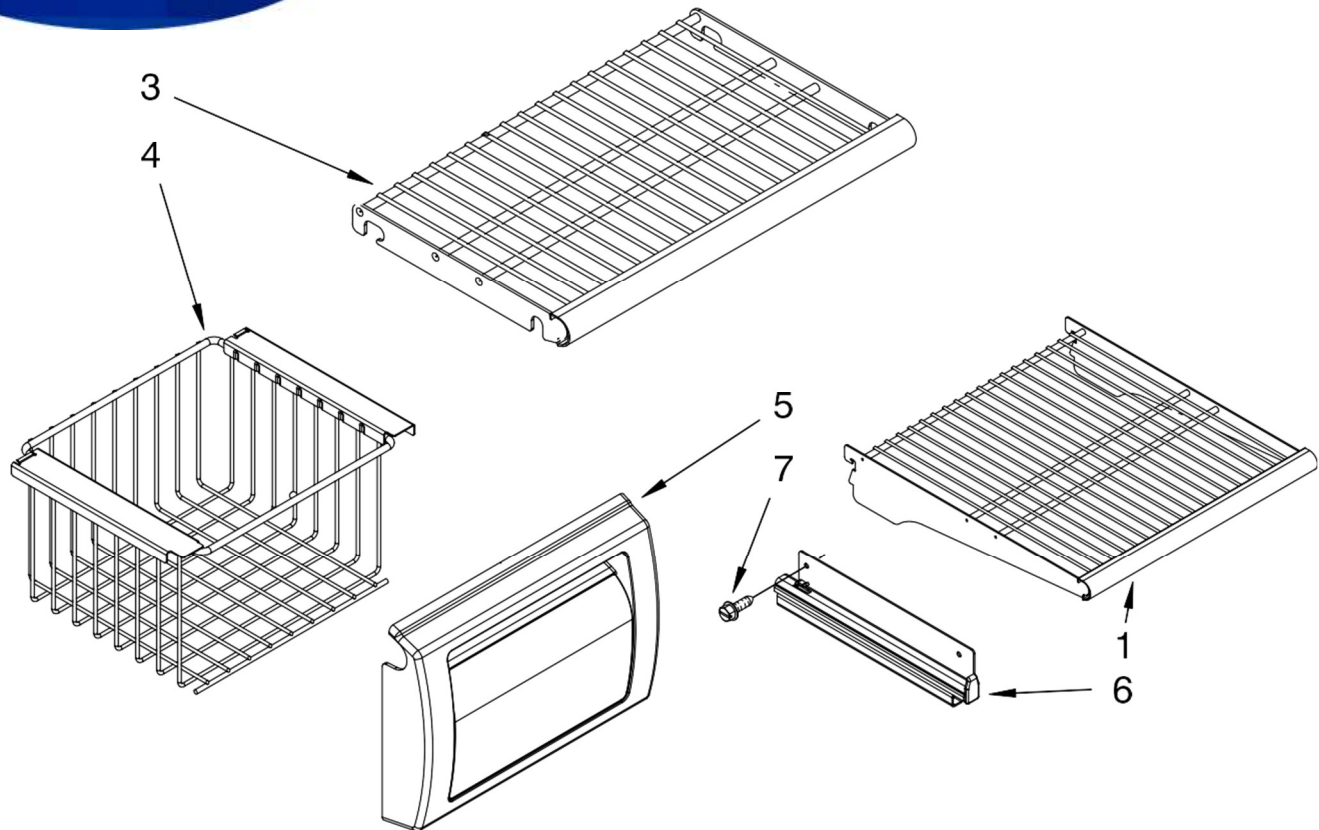


Illus. No.	Part No.	DESCRIPTION
	1	W10175906 Wire, Shelf (4)
	3	2302884 Shelf, Fixed (2)
	4	2259083 Basket
	5	2256271 Front, Basket
	6	Slide, Basket
		W10267101 Right Side
		W10267099 Left Side
	7	8533928 Screw

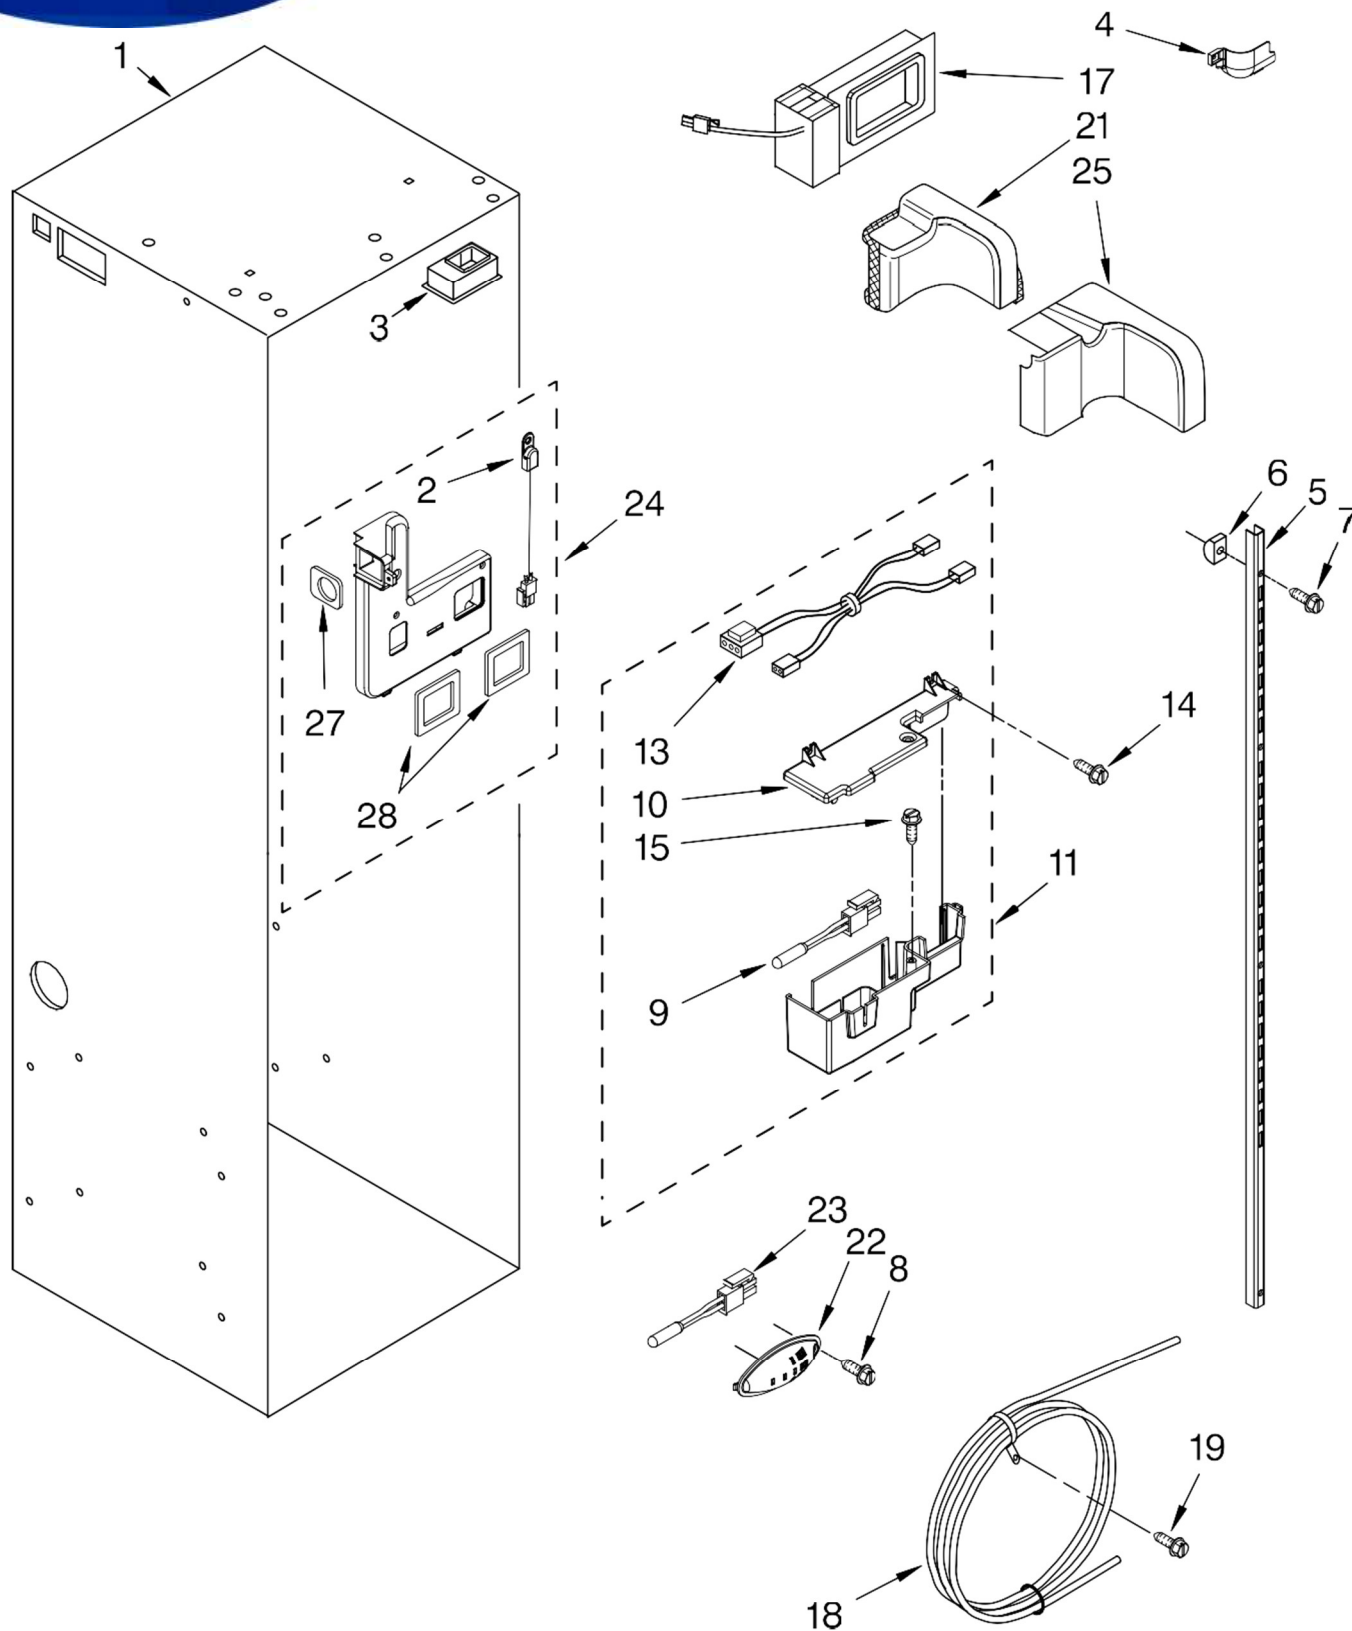

Illus. No.	Part No.	DESCRIPTION
1		Liner (Not A Serviceable Part)
2	2306010	Thermistor
3	2208970	Air Duct
4	2003577	Guard, Air Return
5	2259077	Ladder, Shelf (2)
6	520965	Screw Support, Ladder (8)
7	2006475	Screw
8	487539	Screw
9	2302937	Thermistor
10	2302986	Lid, Meat Pan Baffle
11	220377	Baffle Control Assembly
13	2310205	Jumper, Air Baffle
14	488357	Screw
15	486194	Screw
17	2315511	Air Baffle Assembly
18	2327509	Reservoir
19	488280	Screw
21	2309222	Diffuser Assembly
22	2317105	Cover, Thermistor
23	2188820	Thermistor
24	2302992	Spacer, Air-Baffle
25	2309087	Cover, Diffuser
27	2259412	Seal, Air Duct (Round Hole)
28	2259398	Seal, Air Duct (Square Hole)

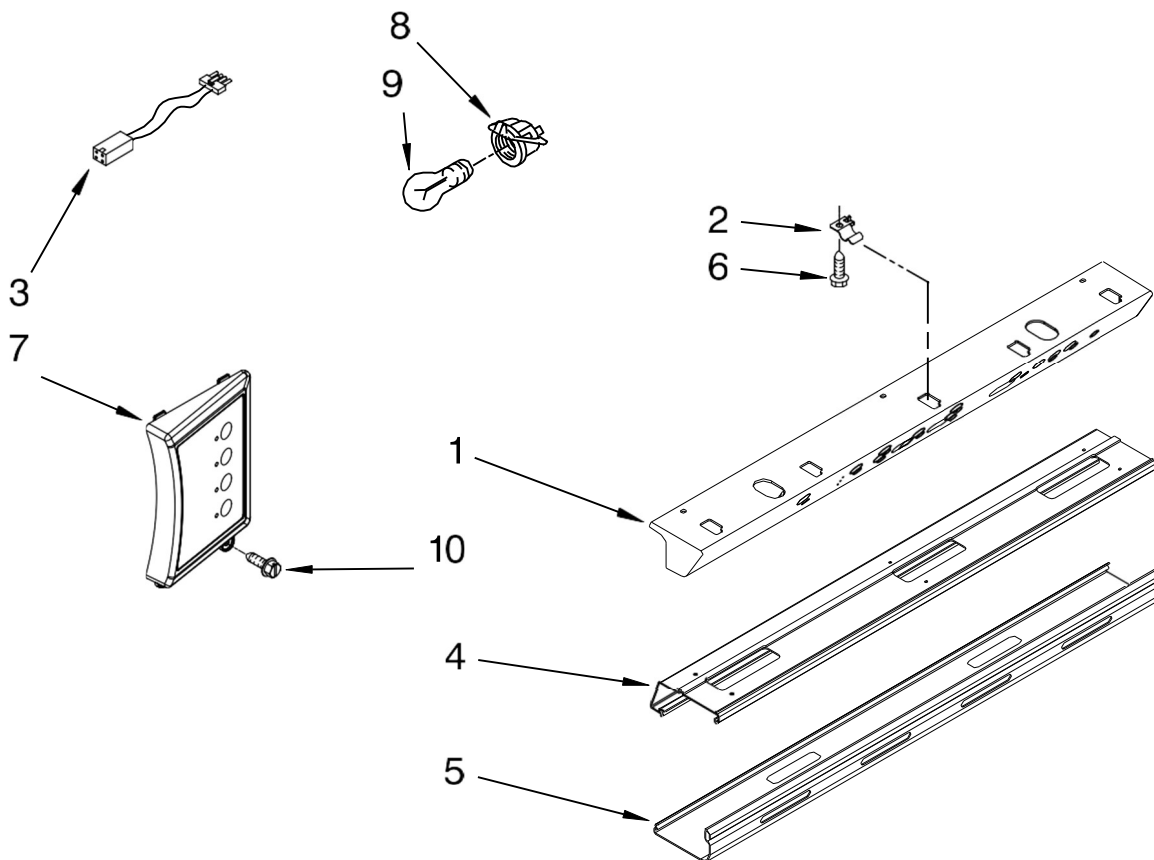


Illus. No.	Part No.	DESCRIPTION
1	2316546	Control Box
2	2317000	Clip, Box
3	2310390	Wire, Jumper
4	2324973	Bracket, Control Box
5	2307596	Shield, Control Box
6	487539	Screw (2)
7	2306086	Display, Ingredient Care Center
8	2223857	Socket, Light
9	2326255	Light Bulb (2)
10	8281185	Screw

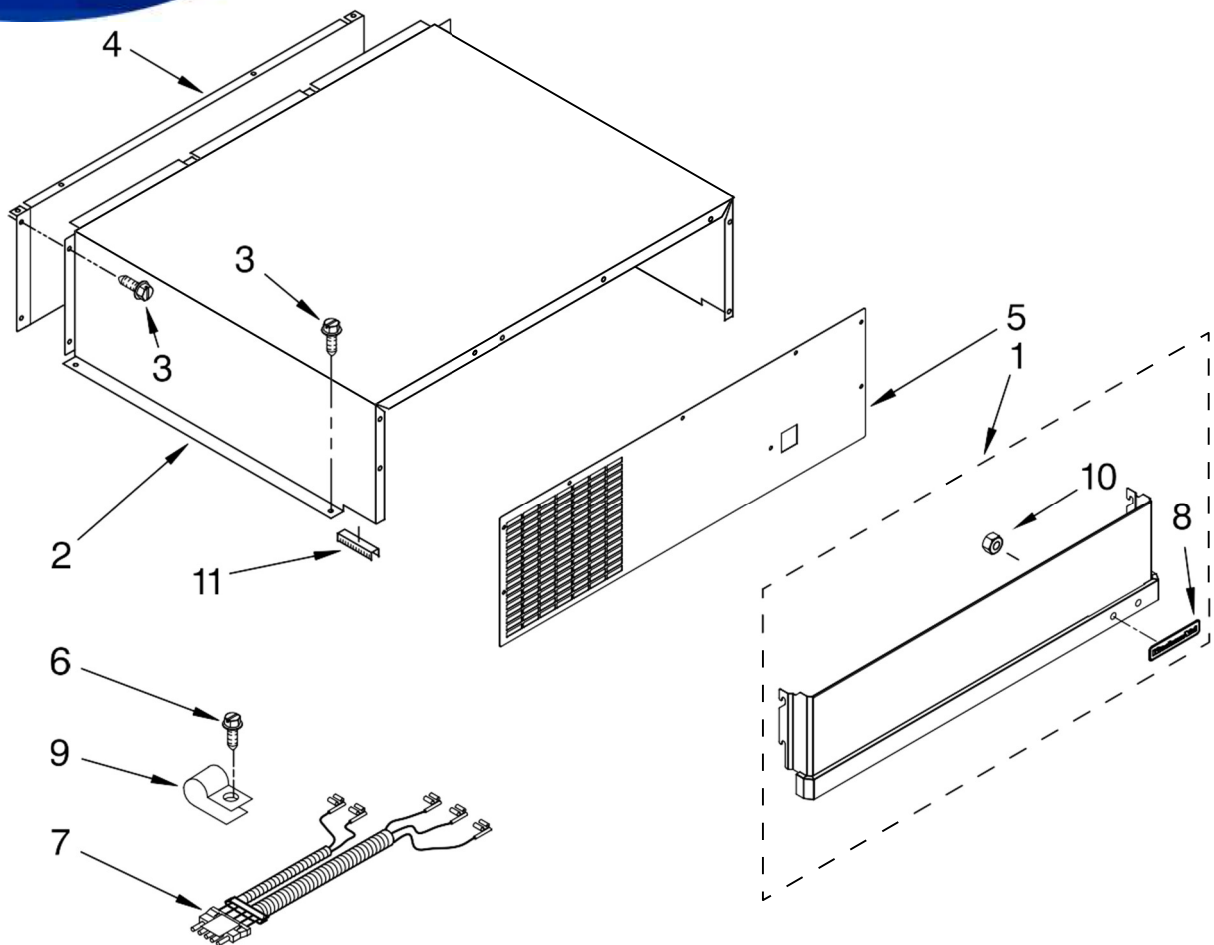


Illus. No.	Part No.	DESCRIPTION
1		Panel, Decorative Assembly 2316738S Stainless Steel
2	W10161693	Cover, Unit
3	486194	Screw
4	2256466	Back Panel
5	W10185625	Cover, Unit Front
6	487415	Screw
7	W10167456	Wire Assembly RC/FC Light Switch
8	2317923S	Badge, Kitchen Aid
9	489348	Clamp
10	2004333	Nut
11	2215910	Grommet, Flexible




REFRIGERADOR KSSC48QVS02

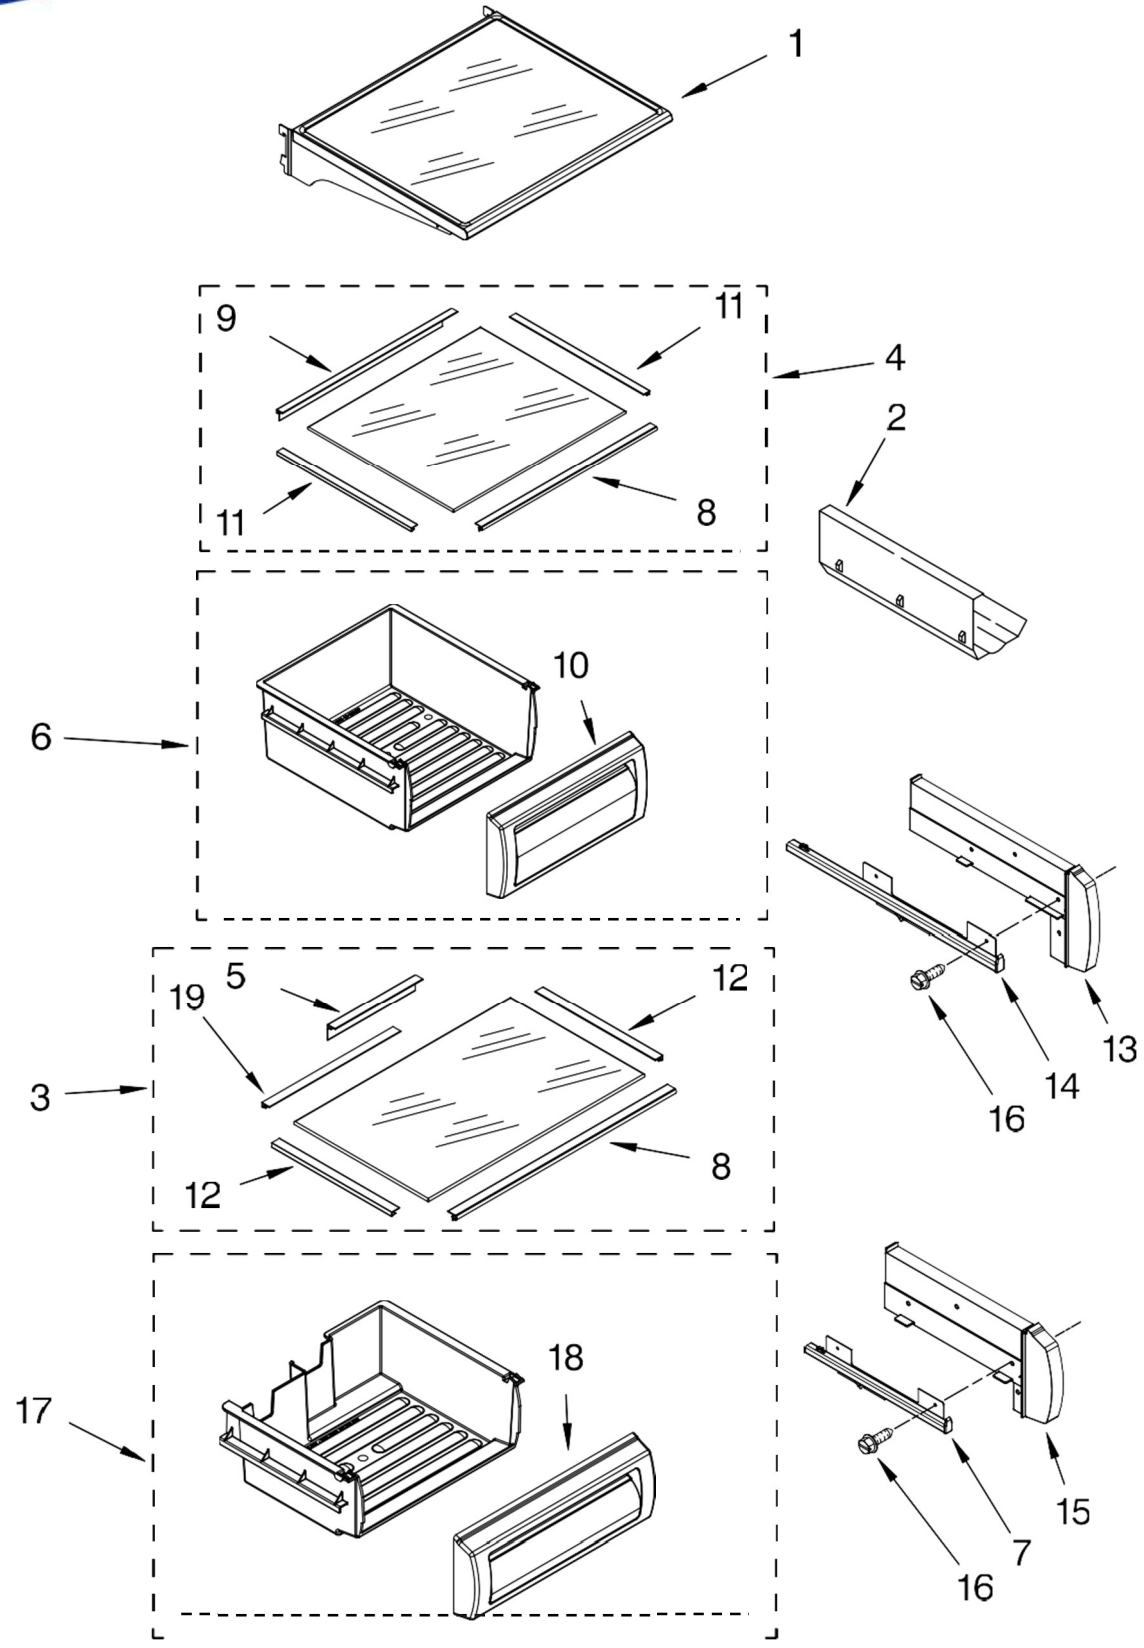

Illus. No.	Part No.	DESCRIPTION
1	2222593	Shelf Assembly (4)
2	2179375	Rack, Wine
3	2302843	Assembly, Meat Pan Cover
4	2302836	Assembly, Crisper Cover
5	2257583	Trim, Glass Rear
6	2252413	Crisper Pan (2)
7		Slide, Meat Pan
	W10267073	Left Side
	W10267075	Right Side
8		Trim, Glass Front (Not Serviceable)
9	2256255	Trim, Glass Rear
10	2256249	Front, Crisper Pan
11	2252255	Trim, Glass Side Crisper Pan
12	2256250	Trim, Glass Side Meat Pan
13		Spacer, Crisper
	2256222	Right Side (2)
	2256223	Left Side (2)
14		Slide, Crisper
	W10266850	Right Side
	W10266848	Left Side
15		Spacer, Meat Pan
	2256243	Left Side
	2256244	Right Side
16		Screw
	8533929	Right Side- (8-18 x 1.375)
	8533928	Left Side- (8-18 x .750)
17	2256370	Pan Assembly Meat
18	2256367	Front, Meat Pan
19	2257611	Trim, Glass

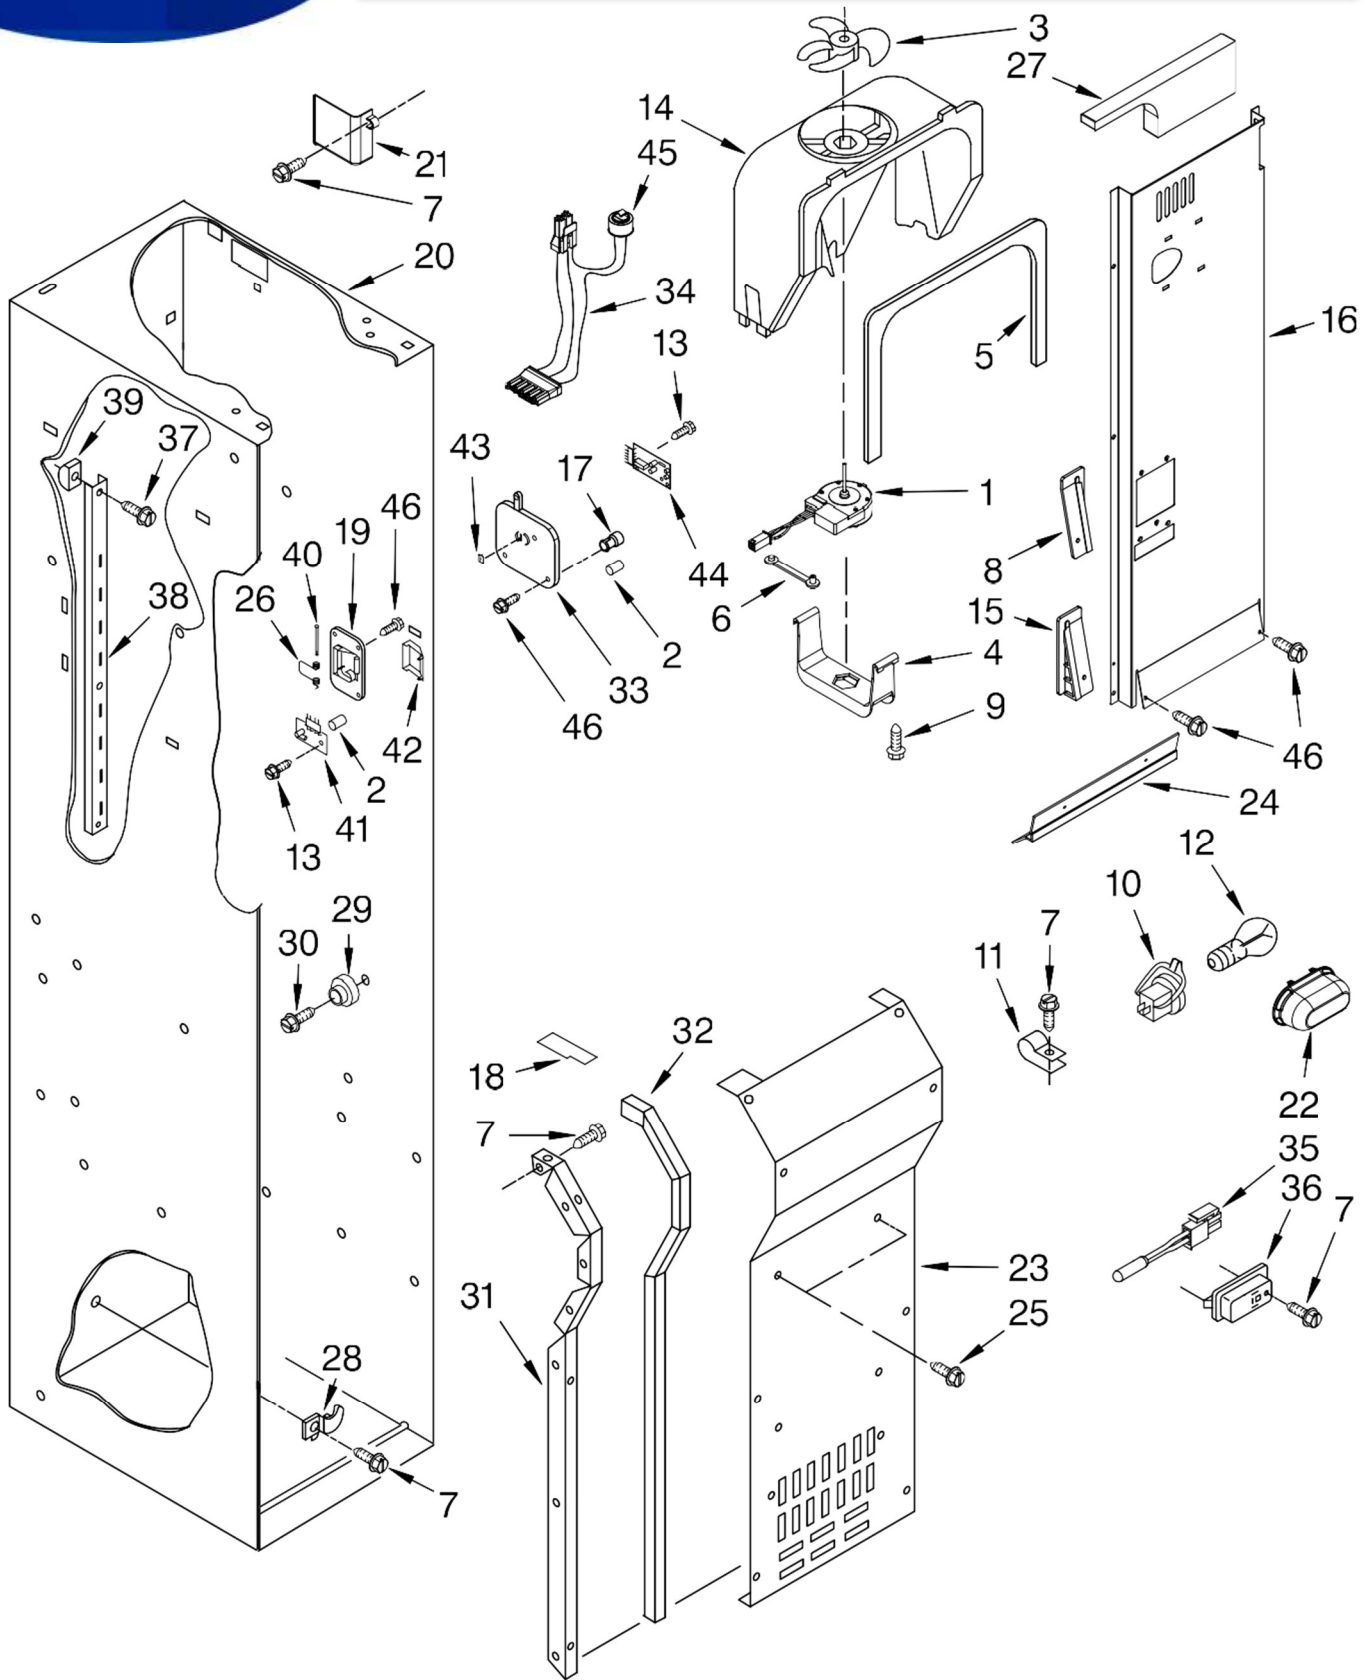


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	2259385	Fan Motor	18		Block, Fan Scroll	32	2220904	Gasket (2)
2	2198665	Tube, P.C. Board		2209482	Right			Evaporator Cover
3	2169142	Fan Blade		2209066	Left	33	2259493	Cover, Receiver
4	2223733	Retainer, Fan Motor	19	2215650	Cover, Emitter	34	W10139189	Harness, Evap Fan (Includes Item 45)
5	2302817	Gasket, Cover	20		Liner (Not A Serviceable Part)	35	2306010	Thermistor
6	2223986	Grommet	21	2259025	Cover, Air Outlet	36	2317105	Cover, Thermistor
7	486194	Screw	22	2307751	Light Shield	37	2006475	Screw
8	2259464	Wedge, Air Duct	23	W10158005	Cover, Evaporator	38	2259032	Ladder, Shelf
9	488500	Screw, Ground	24	2302851	Support, Air Duct	39	2259445	Support, Screw
10	2223857	Socket, Light (2)	25	487539	Screw	40	2198634	Pin
11	488937	Clamp, Nylon	26	2198635	Spring	41	W10193840	P.C. Board Emitter
12	2326255	Light Bulb	27	2309284	Deflector, Air Duct	42	2198633	Flipper
13	489214	Screw	28	1112260	Support, Evaporator	43	2255563	Slide, Icemaker Shut Off
14	2182120	Scroll, Fan	29	2196205	Shelf, Stud (20)	44	W10290817	P.C. Board, Receiver
15	2259465	Wedge, Air Duct	30	8281158	Screw	45	W10160570	Defrost, Bi-Metal
16	2307775	Air Duct	31		Evaporator, Cover Rail	46	8281185	Screw
17	2198643	Lens		2221107	Left Side			
				2259355	Right Side			

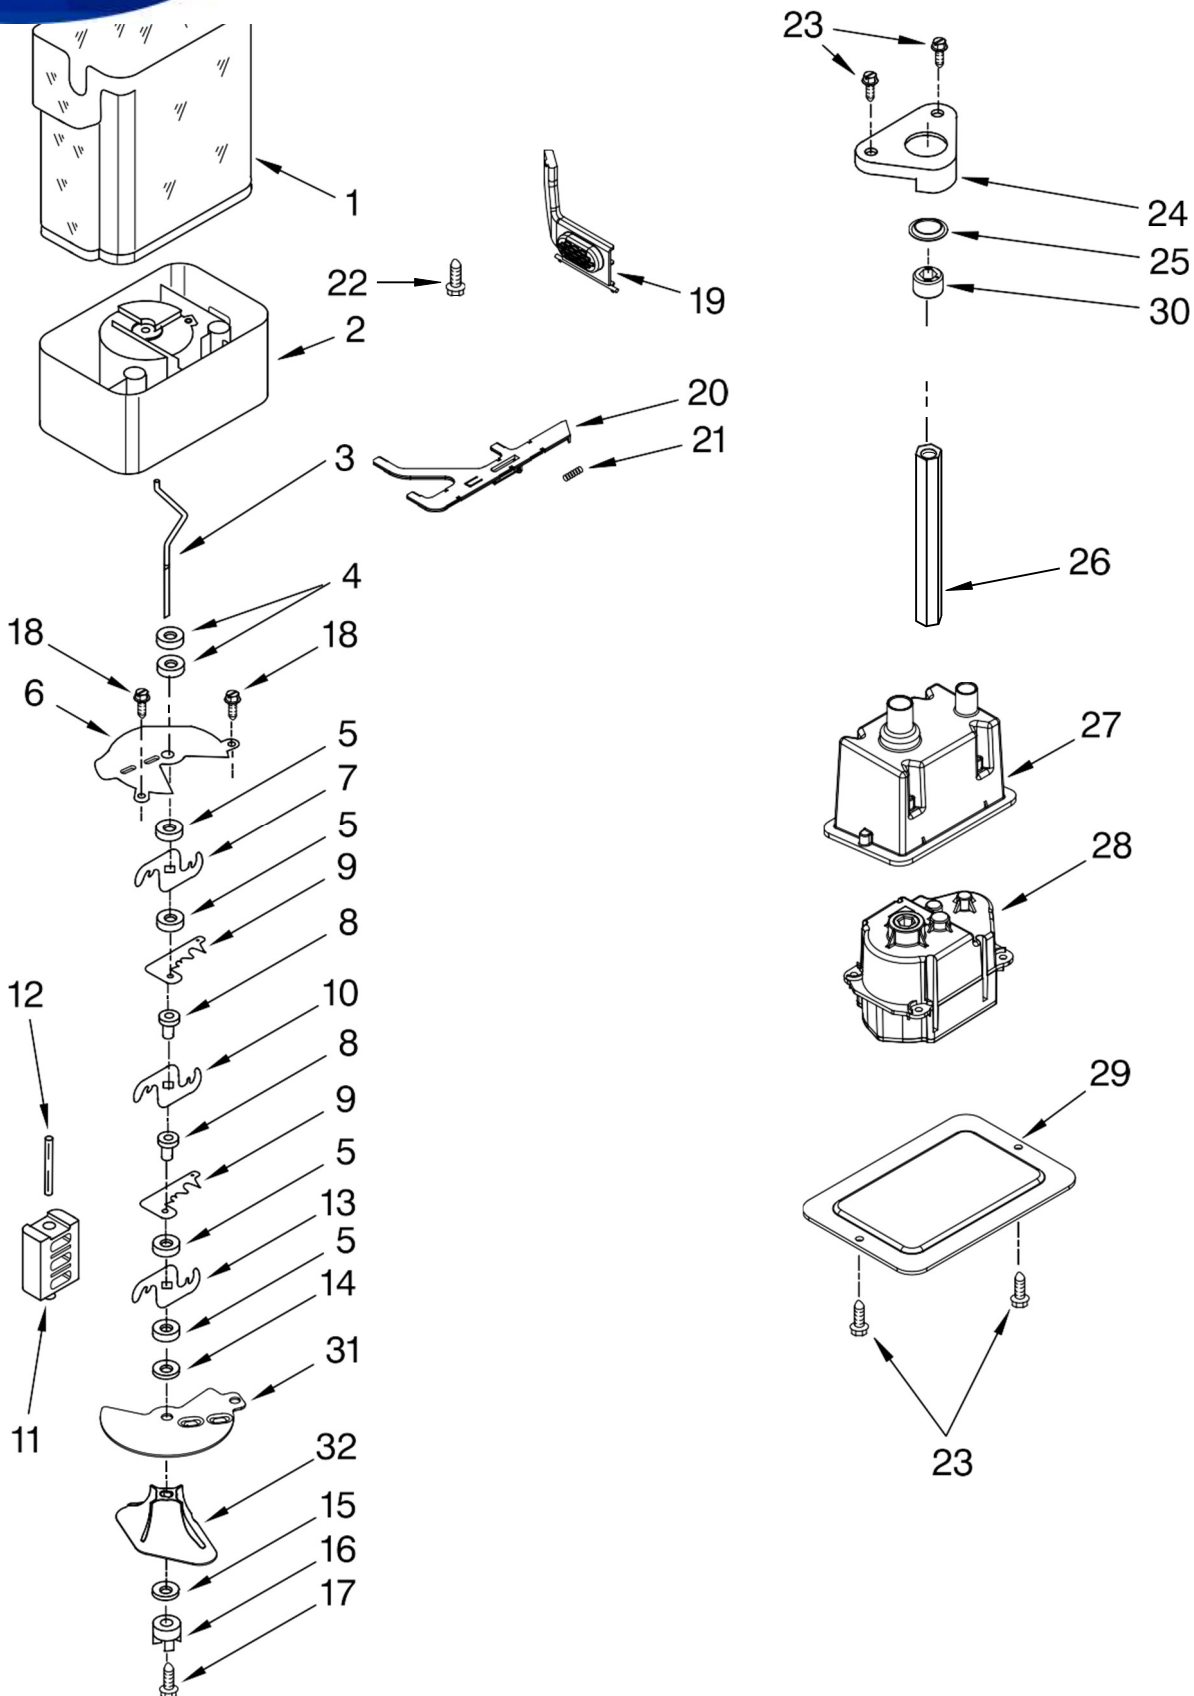

Illus. No.	Part No.	DESCRIPTION
1	2222970	Ice Bin
2	W10134777	Crusher Bin
3	W10140642	Auger
4	2258220	Washer, Auger
5	1119007	Spacer, Flat (6)
6	2317248	Cover, Crusher
7	W10278733	Blade, Rotary
8	1119005	Spacer, Step (2)
9	2257020	Blade, Fixed
10	W10278732	Blade, Rotary
11	2317239	Block, Blade
12	489229	Roll Pin
13	W10278731	Blade, Rotary
14	489235	Washer, Plain
15	2198661	Washer, Coupling
16	2188918	Coupling, Top
17	8281164	Screw
18	3400065	Screw
19	2252265	Button, Bin
20	W10134785	Latch, Bin
21	2198608	Spring, Latch
22	2198671	Screw (2)
23	8281163	Screw
24	2188919	Holder
25	2198628	Seal
26	2318030	Drive Shaft
27	2318011	Enclosure, Motor
28	2315547	Dispenser, Motor
29	2318028	Cover
30	2315559	Sleeve. Coupling
31	2317250	Divider, Chamber
32	2317243	Wiper




REFRIGERADOR KSSC48QVS02

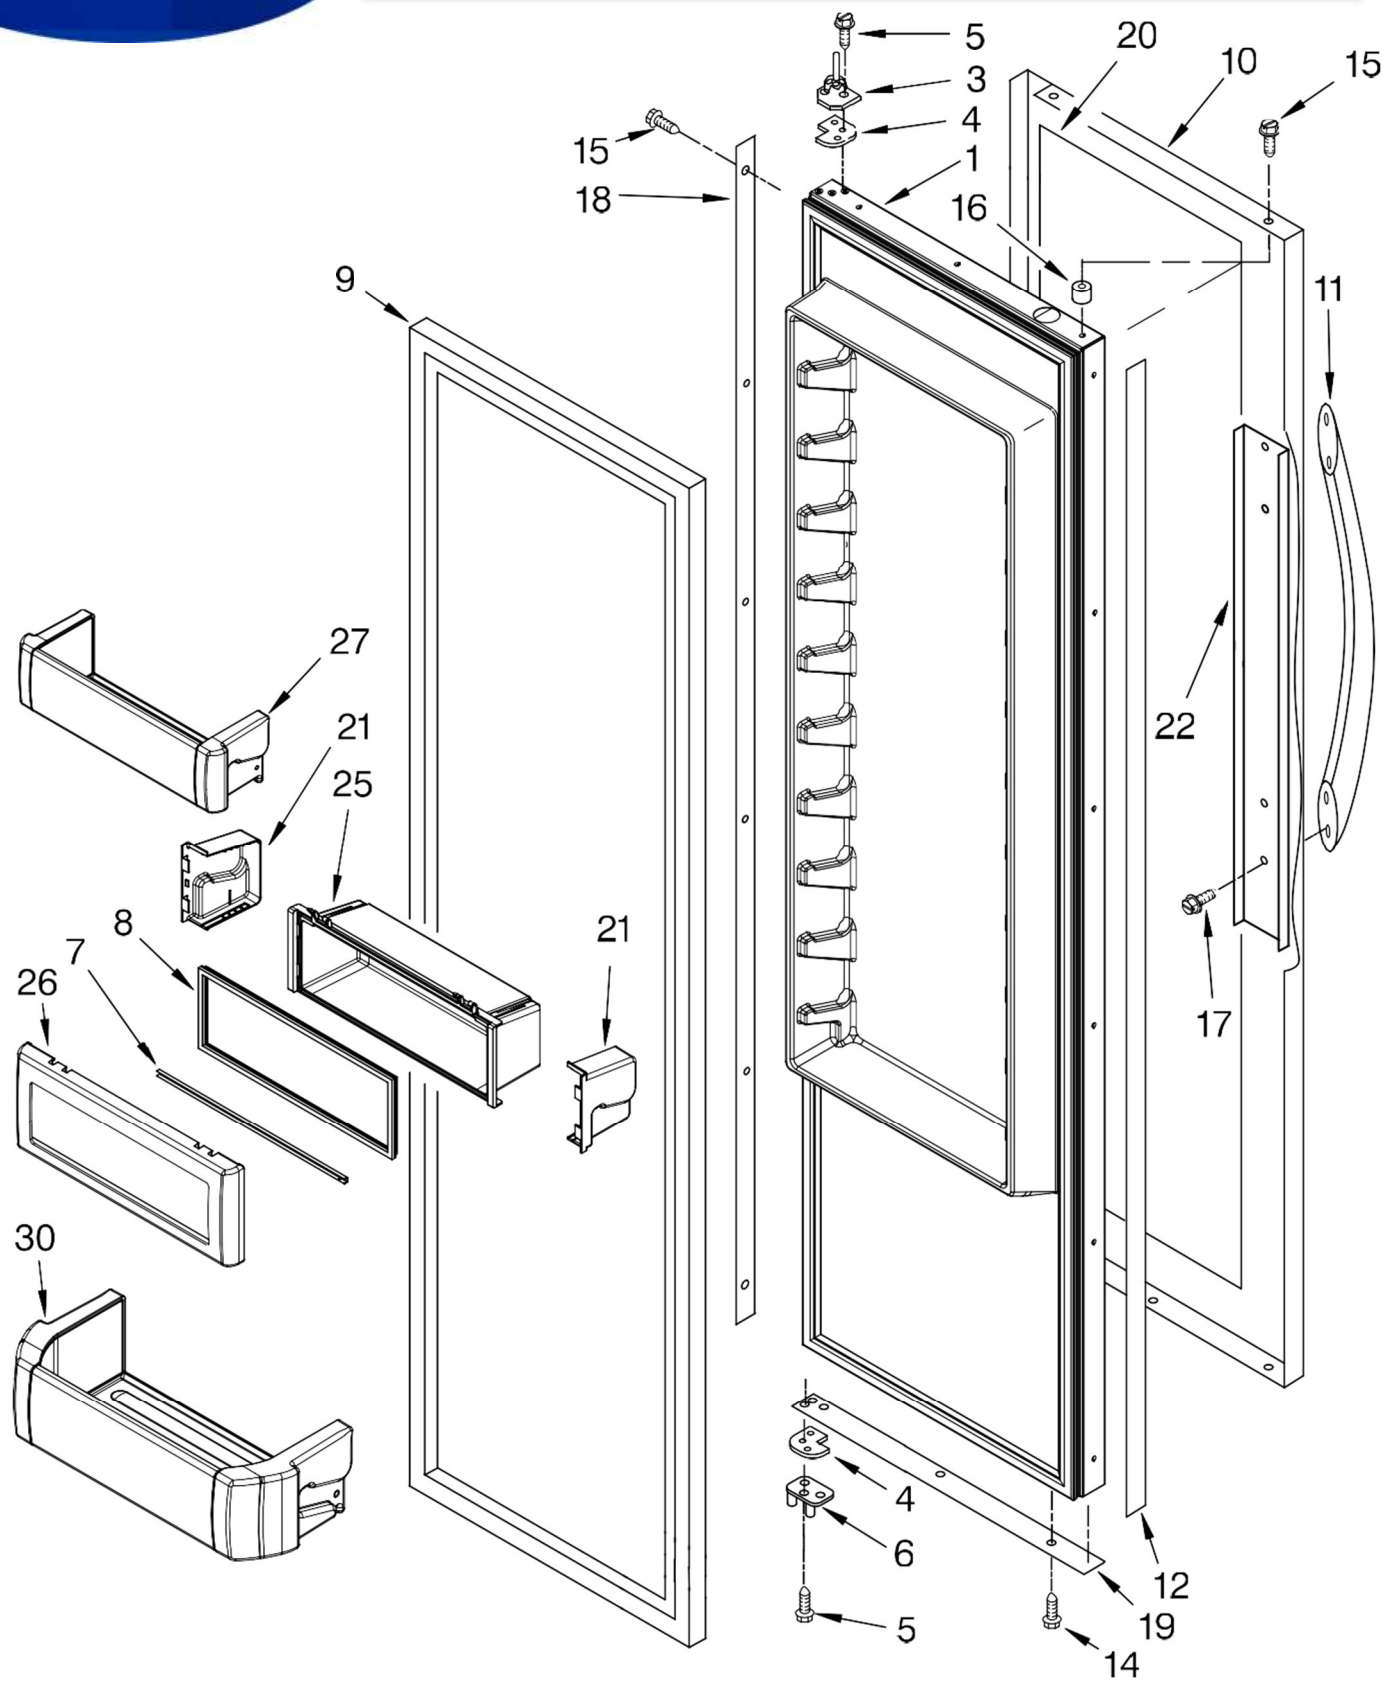


BENITO JUÁREZ #1500 GPE ZITON, CD. GUADALUPE NUEVO LEÓN TEL: 8183377999 Y 49
HORARIOS: LUNES A VIERNES 8:30 A 6:00 PM Y SÁBADOS DE 8:30 A 2:00 PM
www.denek.com

Illus. No.	Part No.	DESCRIPTION
1	W10193491	Refrigerator Door Panel (Includes Item #9)
3	2266854	Hinge Assembly, Top
4	2316804	Spacer-Door, Top & Bottom
5	489282	Screw
6	2302878	Hinge Assembly, Bottom
7	2222797	Rail, Lid
8	2222983	Gasket, Utility Bin
9	2222812	Door Gasket, Magnetic
10		Skin, Door
	2307754	Stainless Steel
11		Handle, Door
	2316868	Stainless Steel
12		Spacer, Door-Skin (Handle Side)
	2309060	For Stainless Steel Model
14	488568	Screw
15		Screw, 8-15 x .500
	8281250	Stainless Steel
16	2005433	Spacer, Door-Skin (Top)
17	308544	Screw, Handle
18	W10142296	Spacer, Door-Skin (Hinge Side)
19	2004935	Spacer, Door-Skin (Bottom)
20	2005327	Filler, Door
21		End Cap
	2222919	Right Side
	2222920	Left Side
22	W10127710	Plate, Door-Handle
25	2222923	Bin, Utility Center
26	2257617	Door, Utility Bin
27	2222774	Bin, Door (3)
30	2222771	Bin, Door

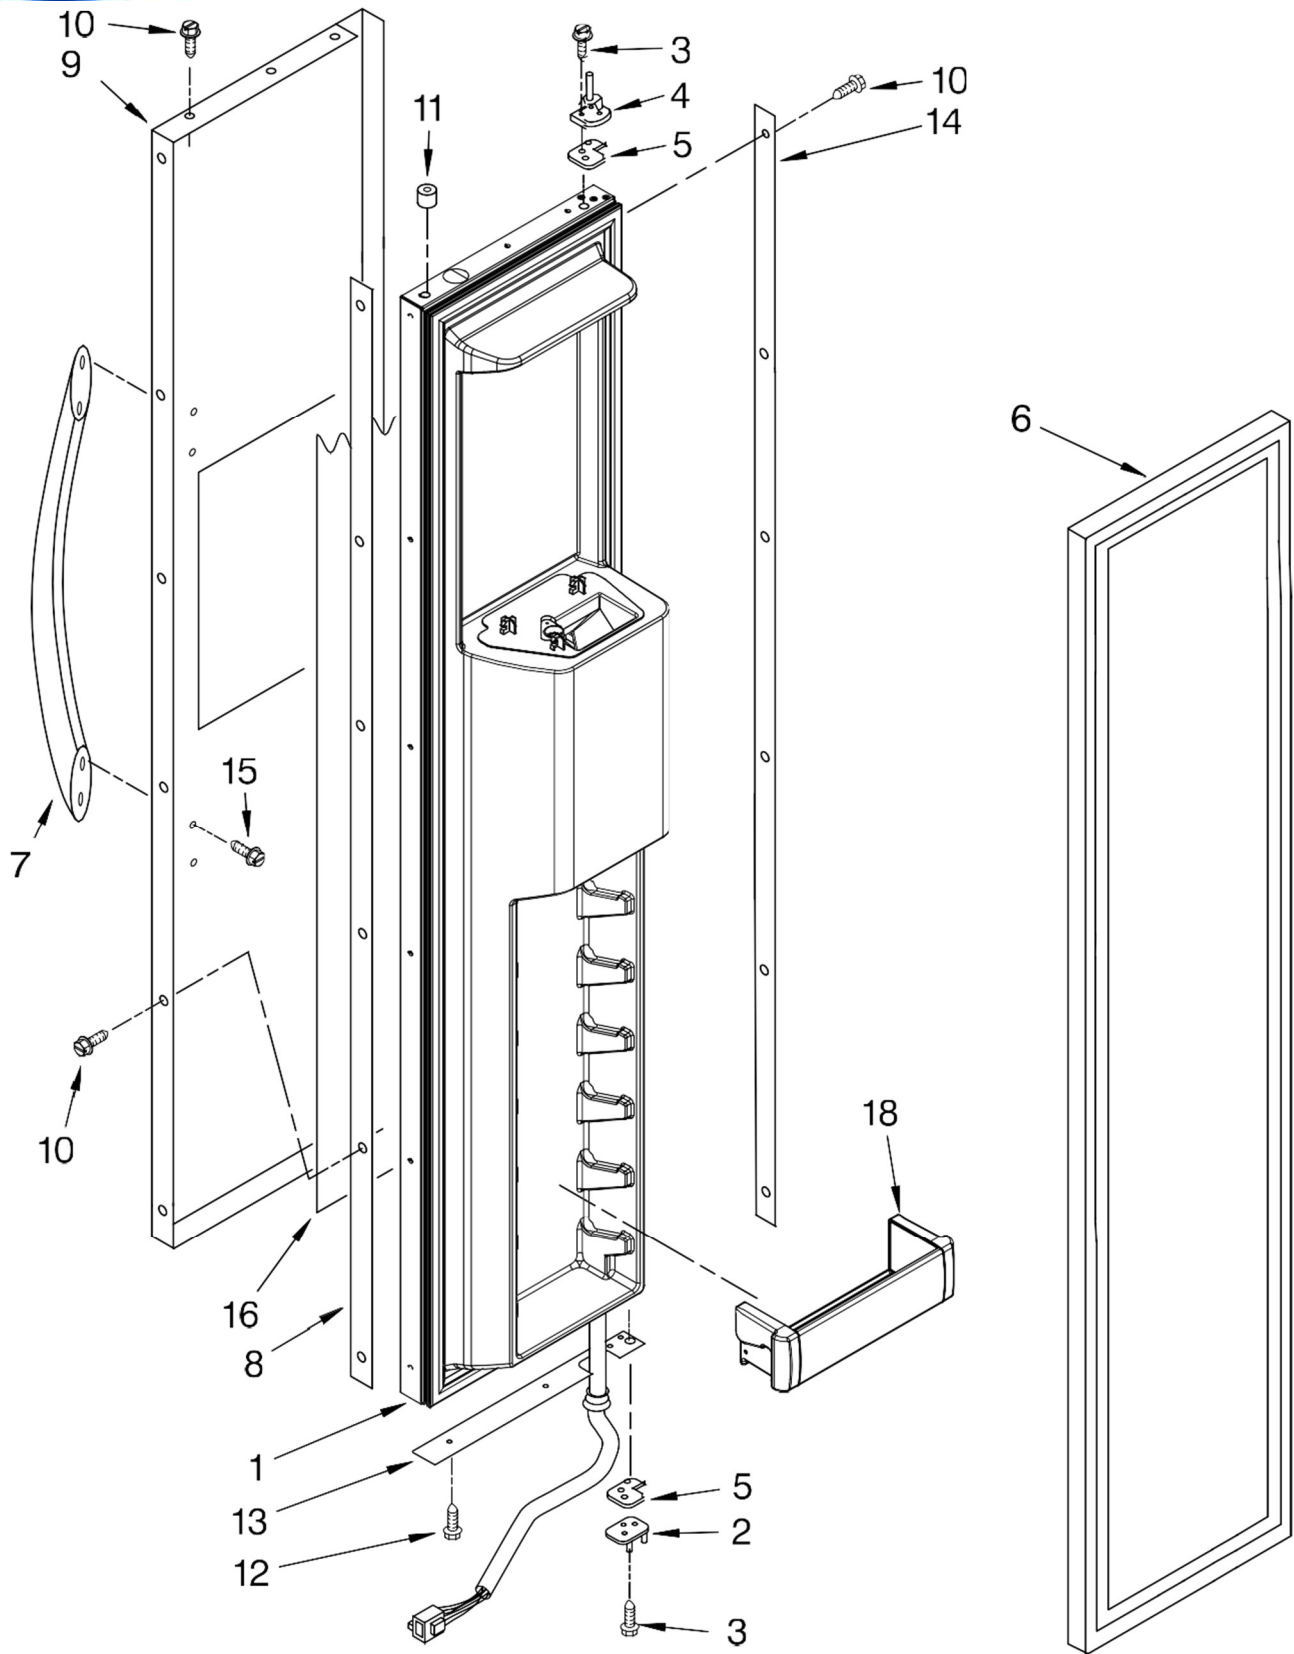


Illus. No.	Part No.	DESCRIPTION
1	W10292433	Freezer Door (Includes #7)
2	2302879	Hinge, Bottom
3	489282	Screw
4	2266854	Hinge, Top
5	2316804	Spacer-Door, Top & Bottom
6	2222812	Door Gasket, Magnetic
7		Handle, Door
	2316868	Stainless Steel
8		Spacer, Door-Skin (Handle Side)
	2309060	For Stainless Steel Model
9		Skin, Door
	2307311	Stainless Steel
10		Screw
	8281250	Stainless Steel
11	2005433	Spacer, Door-Skin (Top)
12	488568	Screw
13	2257386	Spacer, Door-Skin (Bottom)
14	W10142296	Spacer, Door-Skin (Hinge Side)
15	308544	Screw, Handle
16		Filler, Door
	2328903	Top
	2328904	Bottom
18	2222777	Bin, Door (3)

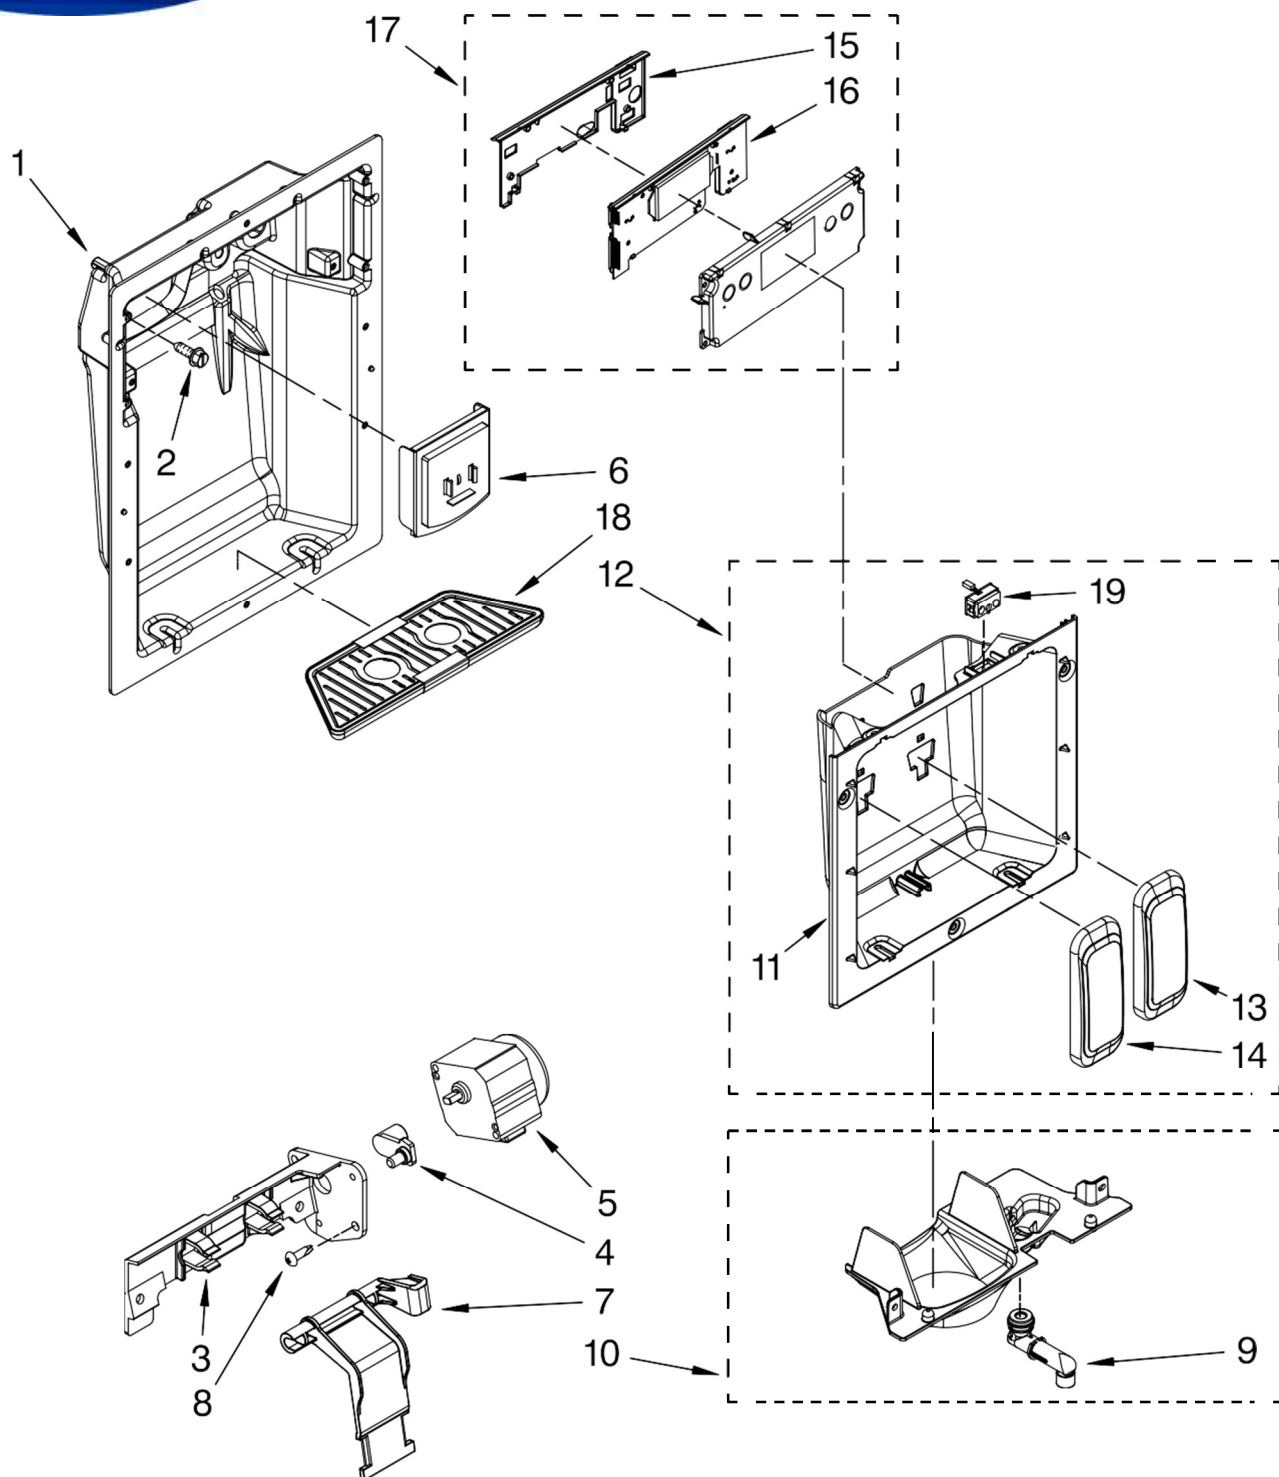




REFRIGERADOR KSSC48QVS02


Illus. No.	Part No.	DESCRIPTION
1		Housing, Dispenser (Not Serviced)
2	486194	Screw (3)
3	W10132946	Bracket, Motor
4	2305242	Connector, Door Bracket
5	W10205979	Motor, Ice Door
6	2180353	Door, Ice
7	2318020	Support, Ice Door
8	4449745	Screw (2)
9	2305235	Spigot
10	2318017	Separator Assembly
11		Housing, Middle (Not Available Order Item 12)
12	W10260622	Housing Assembly
13	2305307GN	Water, Paddle Asy
14	2305306GN	Ice, Paddle Asy
15	2305219	Cover, Control
16	2321746	Electronic Control (Includes #15)
17	2318042	User Interface Asy
18	2318062US	Tray, Housing
19	2305342	LED Assembly

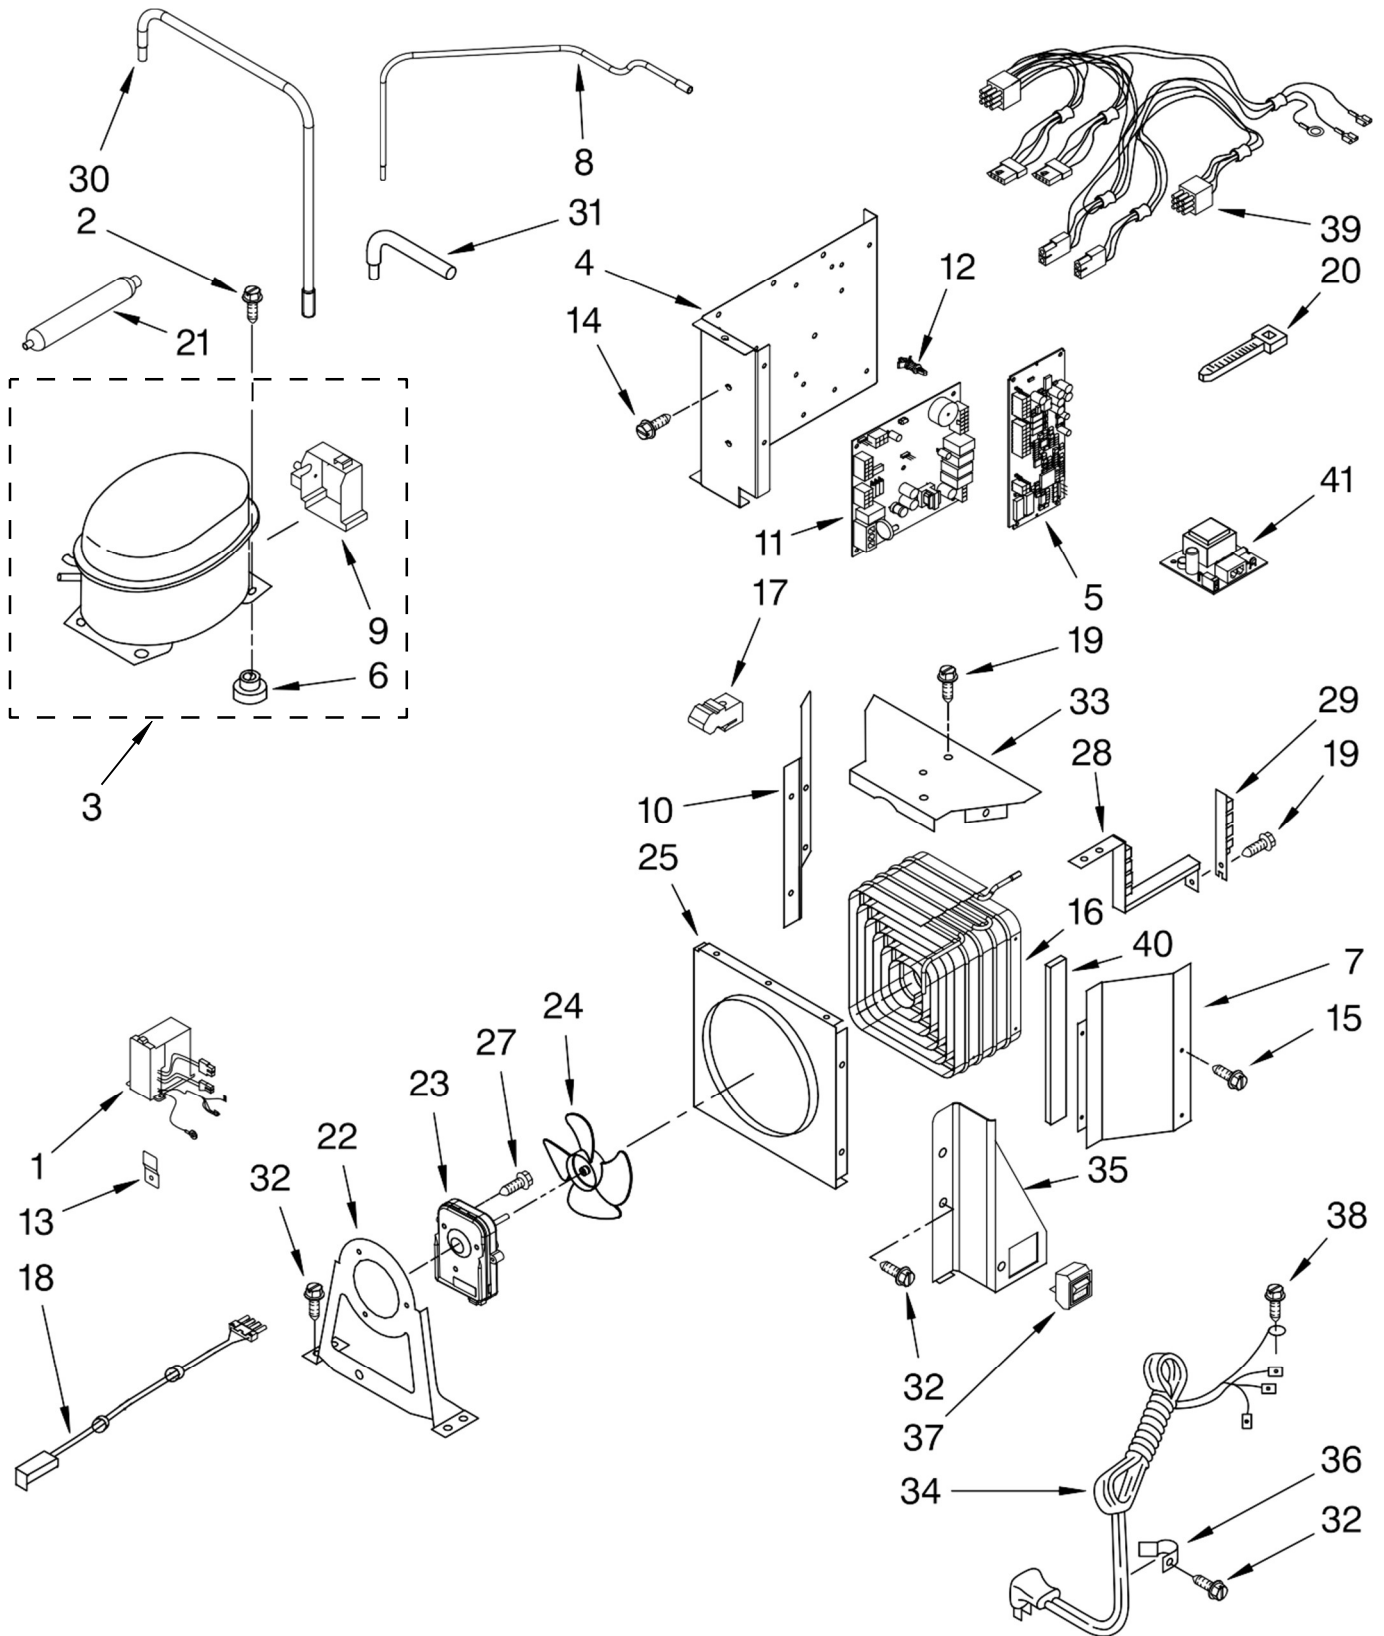

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	W10133449	Inverter Box	19	489399	Screw	41	2259350	Power Supply, Ingredient Care Center
2	489373	Screw, Compressor Mounting (4)	20	2155774	Wire Tie	<hr/> Following Parts Not Illustrated and Optional Parts Not Included <hr/>		
3	W10173296	Compressor (Includes Items 6 & 9)(Also Order 876765 Tube Kit)	21	W10175593	Drier			
4	2318087	Housing, Control Board	22	W10136614	Bracket, Fan Motor (Condenser Fan)	978025		Valve, Access (1/4")
5	2318054	Control Board	23	2188875	Motor, Fan	978026		Valve, Access (5/16")
6	1100826	Grommet, Mounting	24	W10139483	Blade, Fan	978027		Valve, Access (3/8")
7	2309002	Support, Conenser	25	2003169	Orifice, Fan	978028		Valve, Access (1/2")
8	W10197004	Tube, Tranisiton (Cond/Ht Loop) (Right)	27	8533993	Screw	978029		Valve, Access (5/8")
9	2215676	Terminal Cover	28	2317031	Bracket, Vibration (Condenser)	978030		Valve, Access (3/4")
10	2309001	Support, Condenser (Left)	29	2317030	Arm, Vibration (Condenser)	876764		Valve, Access (3/16")
11	W10219462	Control Board	30	2307566	Tube, Transition (Condenser/Drier)	<hr/> REFRIGERANT CHARGE <hr/>		
12	2203075	Spacer (5)	31	2194319	Tube, Process			7.75 oz.
13	2256328	Bracket, Inverter Box	32	486194	Screw			(R-134A)
14	486194	Screw	33	2309000	Cover, Condenser			
15	1157158	Screw	34	2310196	Service Cord			
16	2307998	Condenser	35	W10185556	Bracket, Mounting (Power Switch)			
17	2309431	Grommet (2)	36	549193	Clamp, Cord			
18	2310207	Wire, Jumper	37	2266802	Switch, Power Disconnect			
			38	487294	Screw, Ground			
			39	W10178860	Wiring Harness, Unit Compartment			
			40	2309432	Gasket, Condenser			

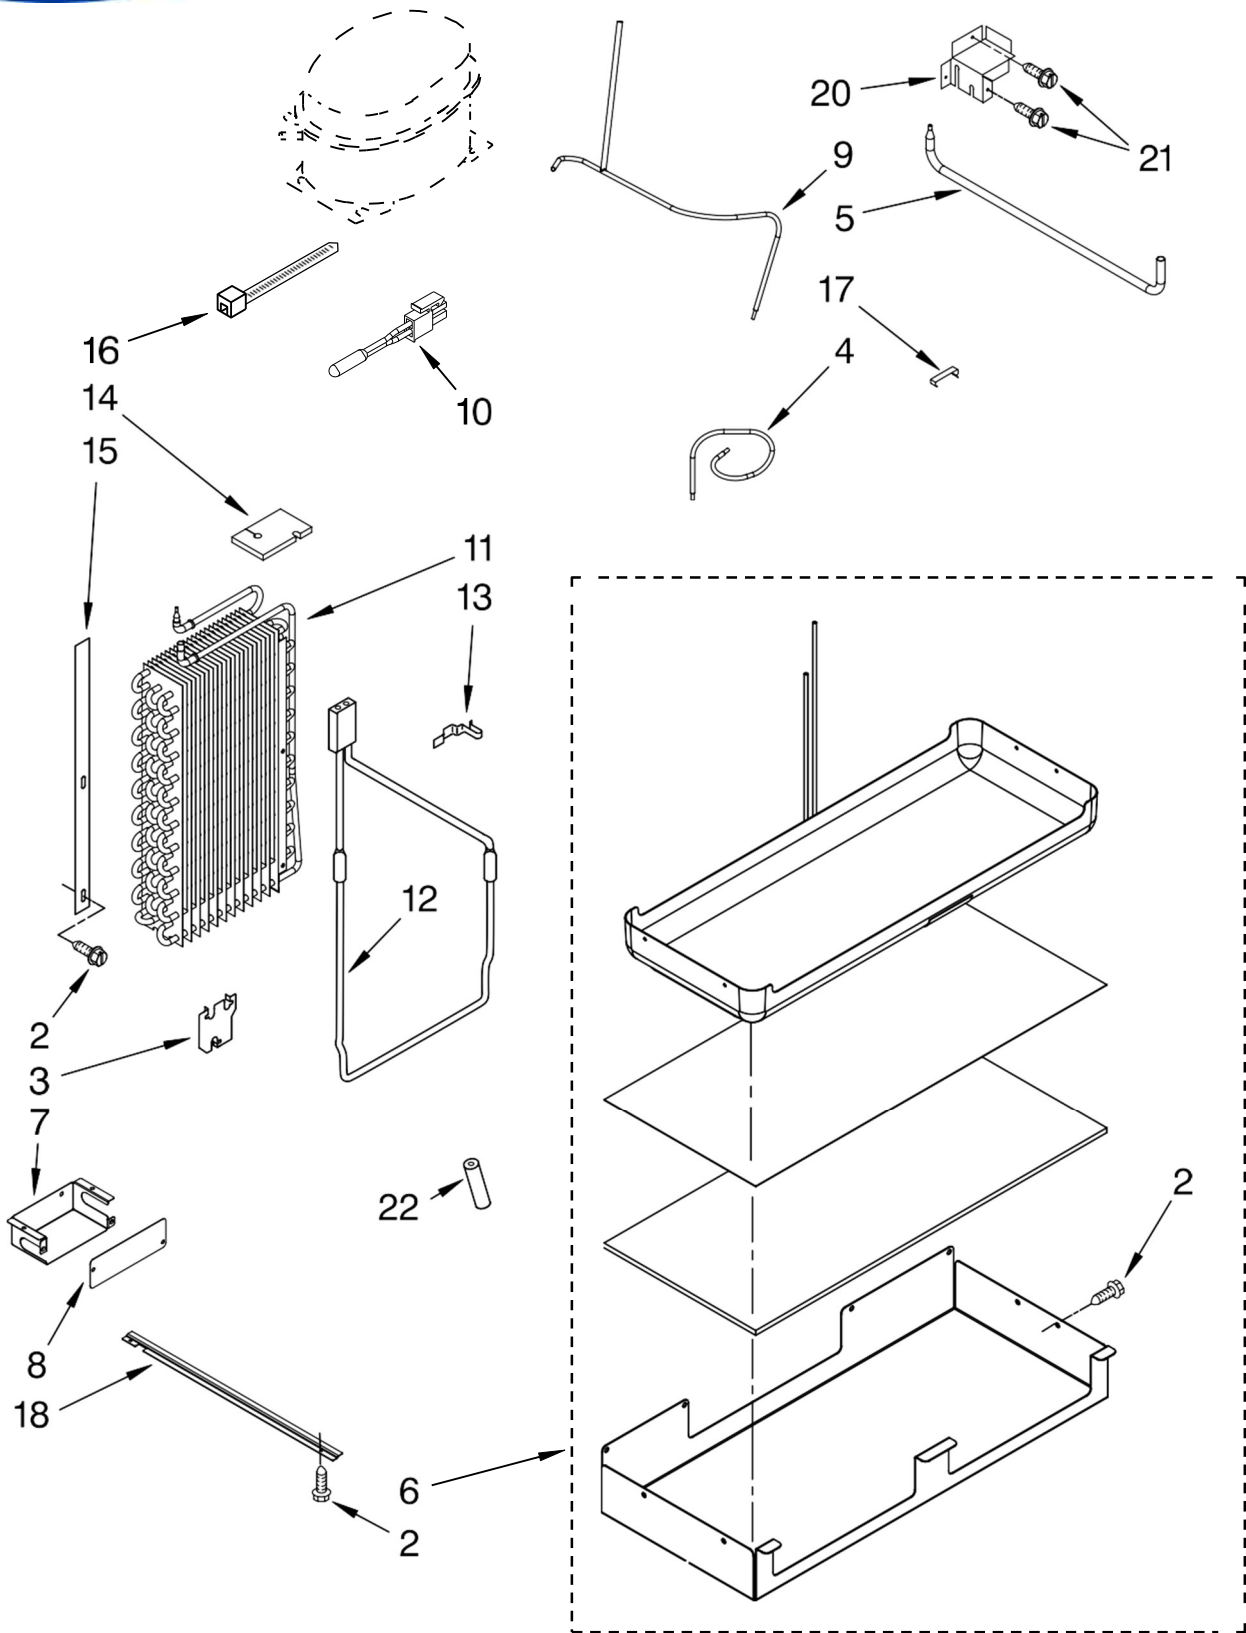

Illus. No.	Part No.	DESCRIPTION
2	486194	Screw
3	W10157752	Bracket
4	2309076	Suction Tube
5	2309070	Tube, Connect (Drier/Restrictor)
6	W10281061	Drain Pan Assy.
7	W10151288	Cover, Wiring
8	W10153595	Cover, Box
9	W10121374	Tube, Discharge
10	2188820	Thermistor
11	W10205102	Evaporator
12	W10140162	Heater, Defrost
13	1113048	Clamp, Heater (2)
14	W10139908	Seal, Return Air
15	2220832	Gasket, Evaporator
16	4389107	Wire Tie
17	W10169509	Clip, Heat Exchanger
18	2320554	Support, Drain Pan
20	W10160981	Bracket Assembly, Air Return
21	489464	Screw
22	2215648	Dampener

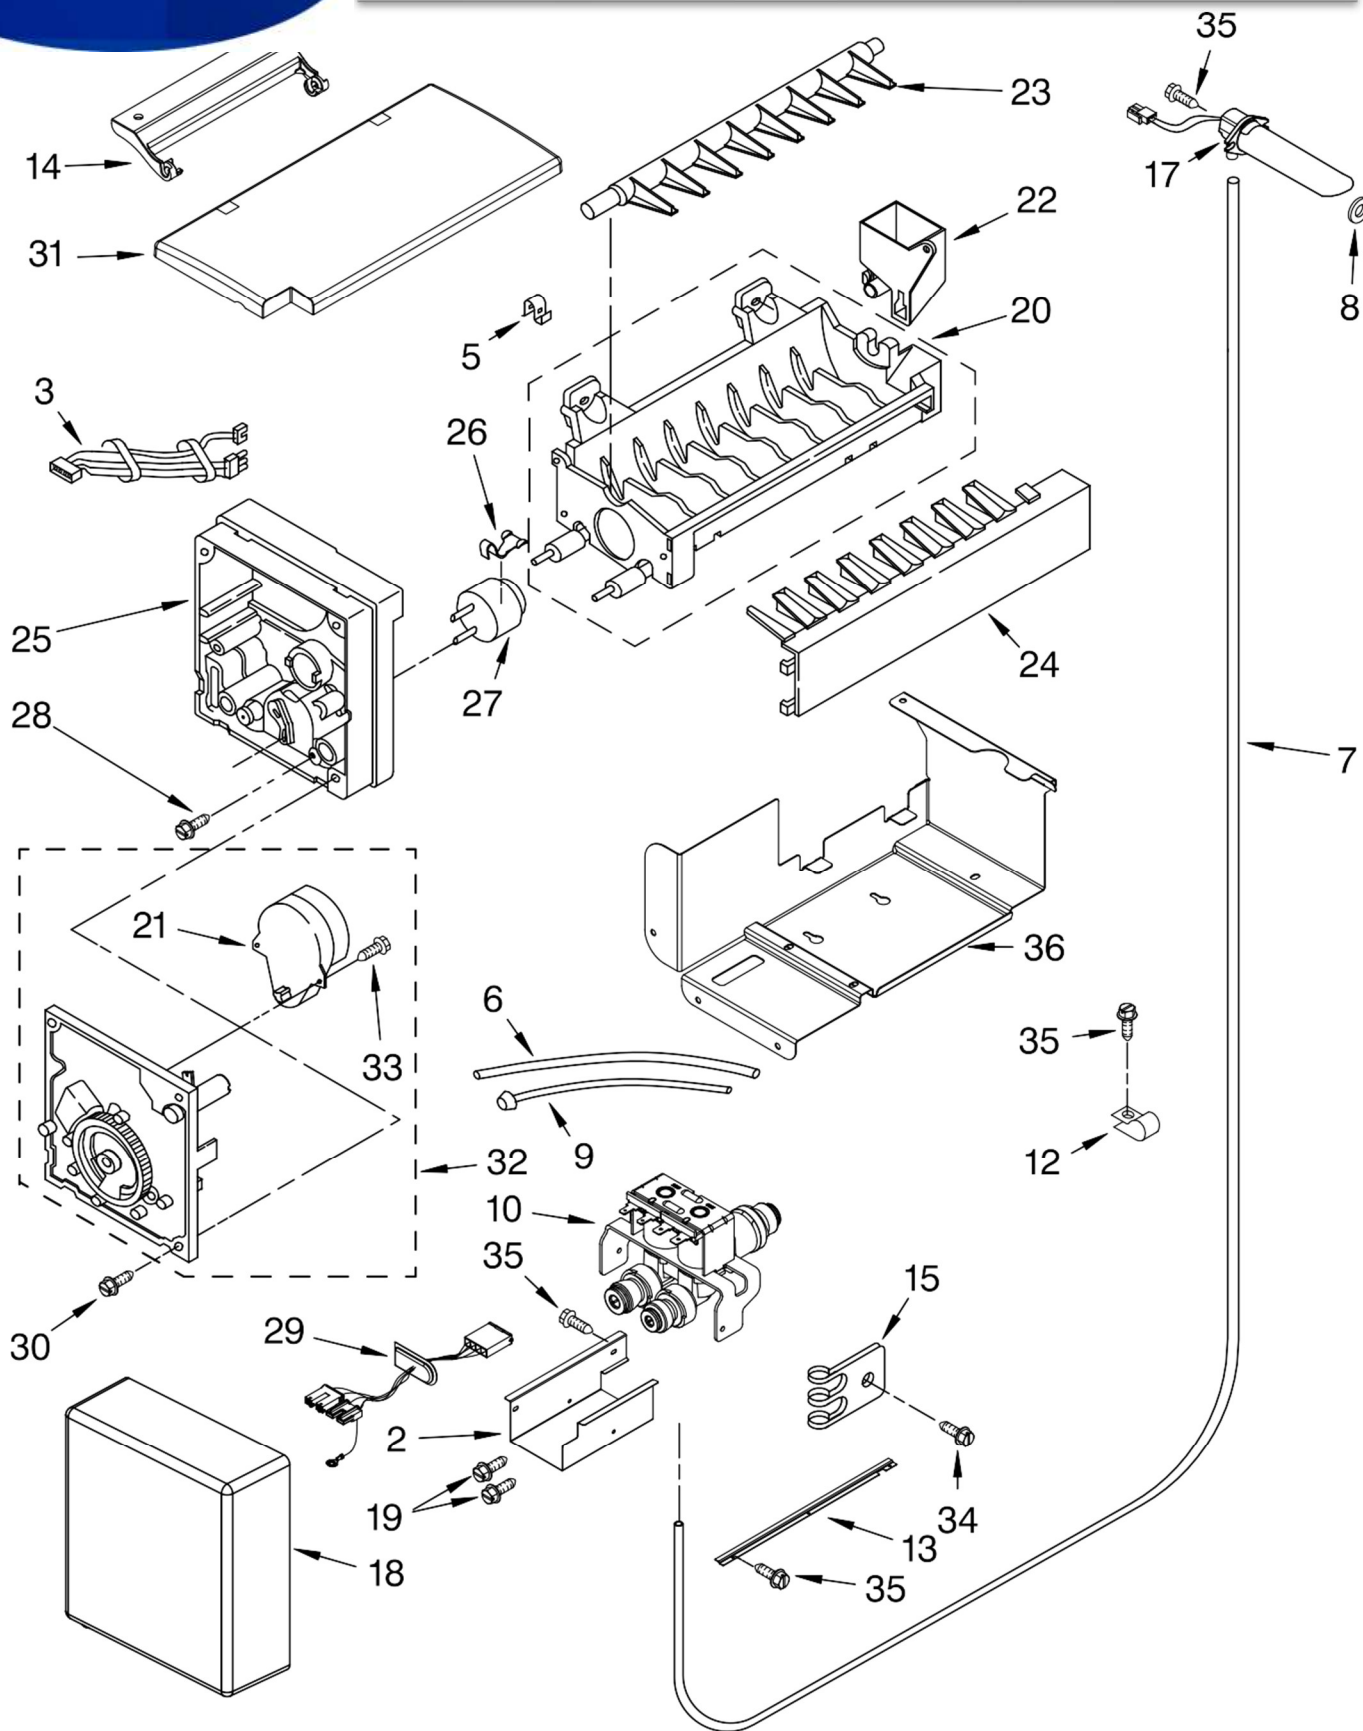

Illus. No.	Part No.	DESCRIPTION
2	2320601	Shield, Valve
3	2310191	Wire Assembly, Icemaker
5	628379	Clip, Fuse
6	W10296807	Tube, Filter Inlet
7	2320658	Water Tube
8	2302758	Seal Gasket
9	2317912	Tube, Filter Outlet
10	W10159842	Valve, Solenoid
12	2221070	Clamp, Tube
13	2320559	Support, Valve
14	2198641	Bracket, Icemaker Cover
15	2208136	Clamp, Nylon Valve
17	2302756	Tube, Water Inlet
18	2221232	Cover
19	488500	Screw

Illus. No.	Part No.	DESCRIPTION
20	W10122527	Mold & Heater (Also Order 542638 Silicone Grease)
21		Motor, (Not Serviceable Order Item 32)
22	628356	Cup-Water Fill
23	627843	Ejector
24	2198598	Ice Striper
25	2194712	Support
26	2315522	Retainer Thermostat (2)
27	628397	Thermostat (Also Order 542639 Cement Alumilastic)
28	8533917	Screw
29	W10139199	Wire Assembly
30	489276	Screw
31	2317041	Cover, Icemaker

Illus. No.	Part No.	DESCRIPTION
32	626680	Module Assembly (Includes Items 21 & 33)
33	489136	Screw (2)
34	489464	Screw
35	486194	Screw
36	2252228	Bracket, Icemaker Mounting
100	2320636	Complete Icemaker Assembly

Following Parts Not Illustrated (Optional Parts Only)

8537055	Cleaner, Stainless Steel
W10127748	Ice Container Assembly