




30" GAS RANGE BABEL 2° WAVE
Service Parts Catalog (EXPLOSIONADO DE PARTES)

MODELS:

WER7600S00



PARRILLA WER7600S00

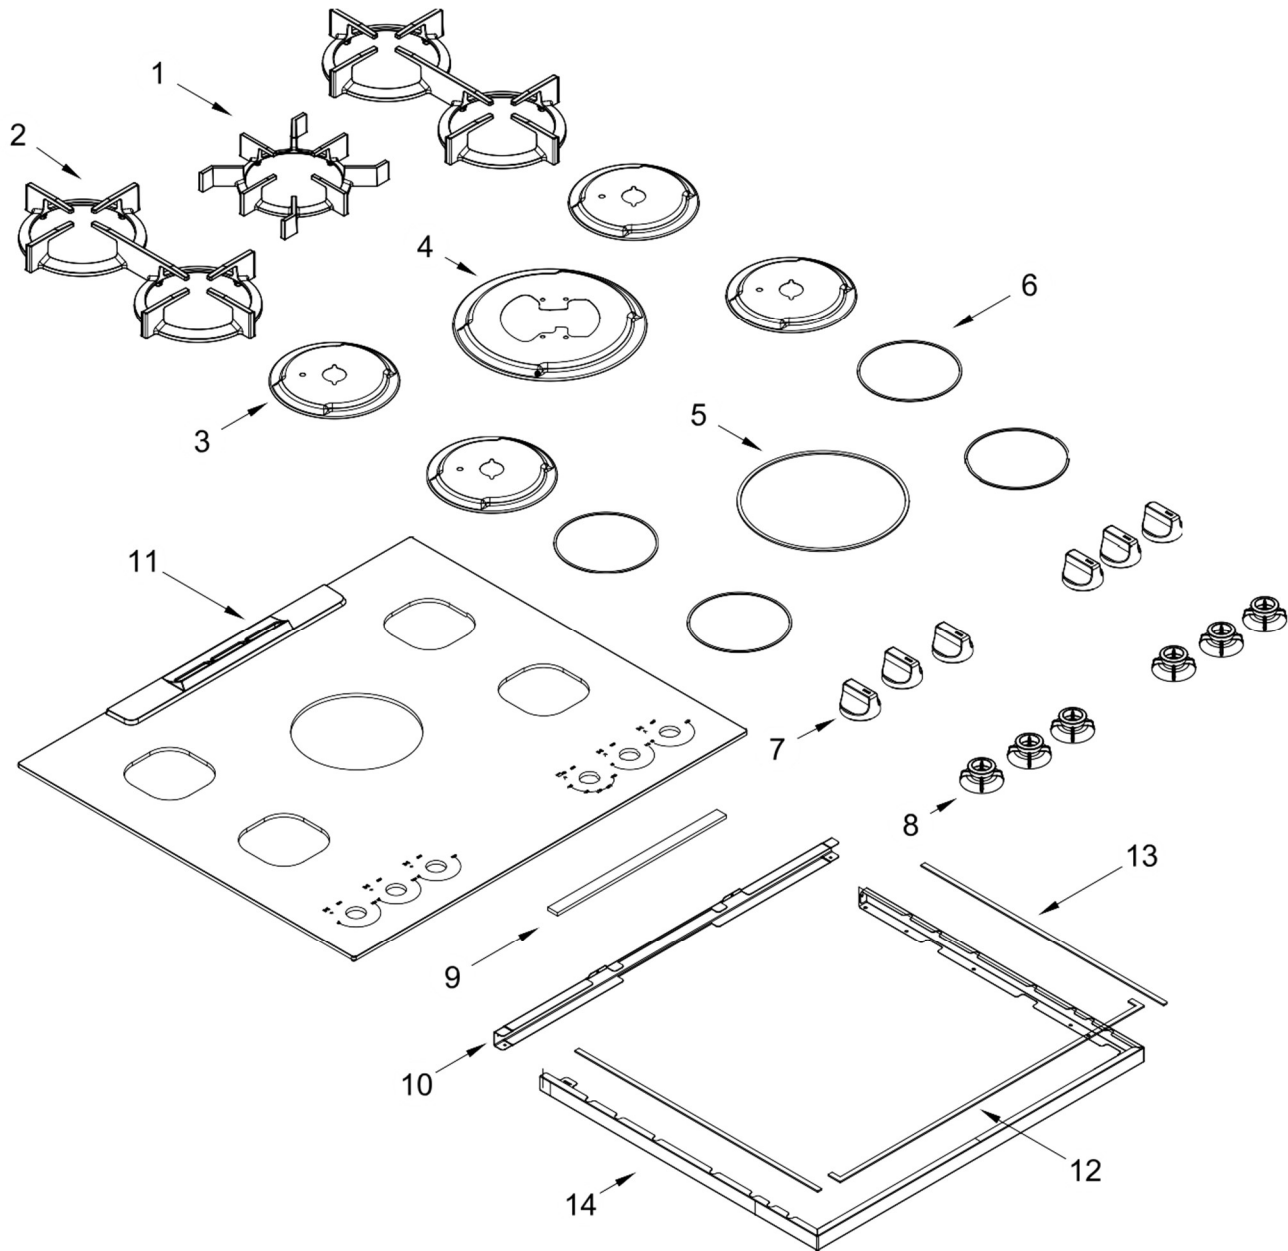




PARRILLA WER7600S00

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10911678	GRATE-CAST,ER Parilla central	7	W11125617	SINGLE KNOB - CHROMIUM 20" Perilla	12	W11111863	GASKET-FRONT, GLASS, BI Moldura empotrable
2	W10911677	GRATE-CAST, DOUBLE PARRILLA LATERAL	8	W10656502	KNOB SEALING Perilla de sellado	13	W11049187	GASKET-SIDE, GLASS, BI Moldura empotrable
3	W11100238	HEAT-SHIELD, HEB, R, ENAMEL, MATTE Disco chico	9	W11287282	GASKET, BACK, GLASS Gaxeta lateral	14	W11049172	FRAME-GOG, M, BI Estructura
4	W11310080	HEAT-SHIELD, ETC, ENAMEL Disco grande	10	W11113973	REAR-COMPLEMENT, GOG, B Moldura empotrable			
5	W10428062	SEAL-RING, BEZEL, SPECIAL Anillo grande	11	W11104721	GLASS-COOKTOP, FLUE, BOX, BI, MASSIVE			
6	W10428061	SEAL-RING, BEZEL Anillo chico			CUBIERTA SUPERIOR			



PARRILLA WER7600S00

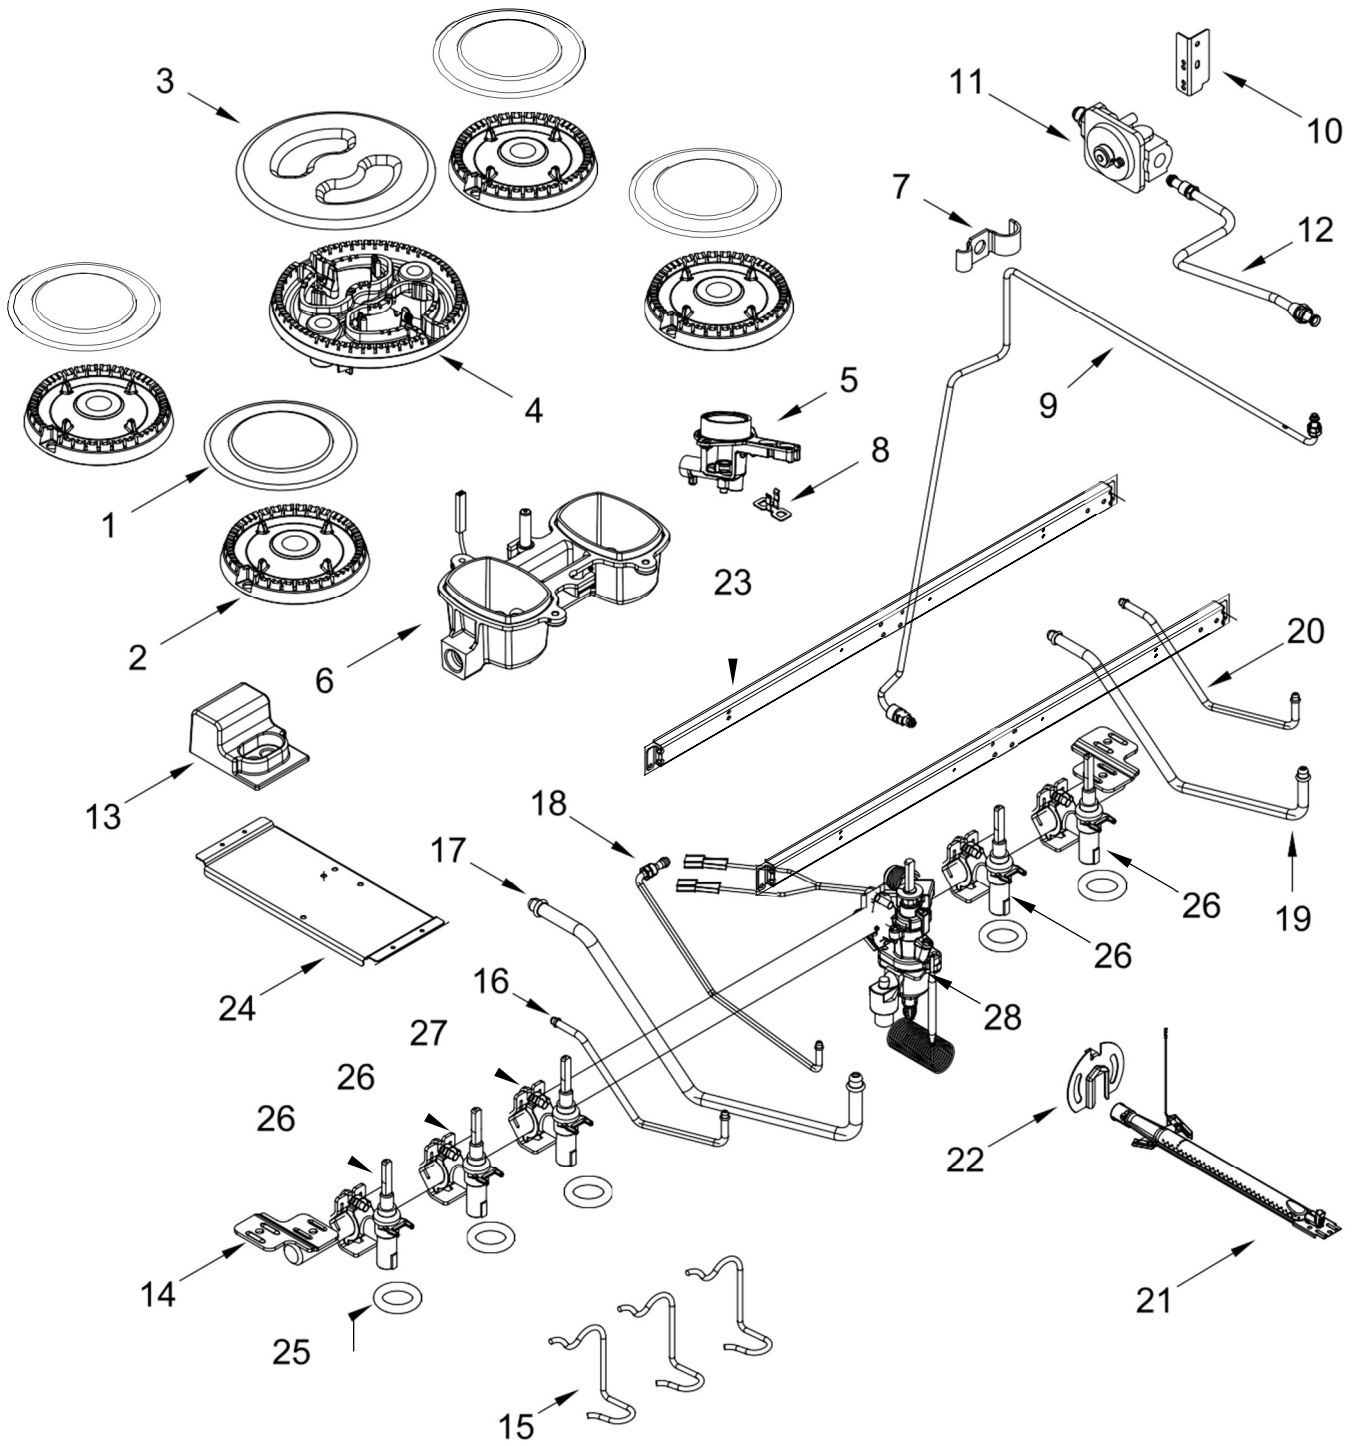




PARRILLA WER7600S00

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10390576	BURNER CAP-R,HEB Tapa del quemador	10	W10853735	BRACKET REGULATOR MT Bracket del regulador	19	W10911579	TUBE-COOKTOP,HEB,BACK,RIGHT, Tubo HEB trasero
2	W10344590	SPREADER-R,HEB Quemador	11	W10682560	PRESSURE REGULATOR ASSEMBLY Regulador de presion	20	W10911578	TUBE-COOKTOP,HEB,FRONT,RIGHT, Tubo HEB frontal
3	W11000247	CAPP.EST.BRU.TC.DEFENDI RAF Tapa del super quemador	12	W11372864	TUBING REGULATOR GOG Tubo regulador	21	W11337086	Oven burner assy with electrode Quemador del horno
4	W10939081	BRUCIATORE TRIPLA CORONA DEF Super quemador	13	W10912676	BUMPER, DOOR Batente puerta	22	98005713	Retainer, Burner Retenedor del horno
5	W10393974	ORIFICE HOLDER-0,81,R,HEB Esprea	14	W11045063	MANIFOLD-ASSY,GOG,FS,MASSIVE Tubo del Manifold	23	W11049175	BEAM-BURNER,HORIZONTAL,GLASS Quemador de viga central
6	W11310087	INJECTOR HOLDER,ECOTC,ELECTRODE Soporte del electrodo	15	326006137	TRAVA TUBO LIGACAO - K PPFG0049 Tubo	24	W11310077	BEAM-BURNER,CENTRAL,ETC,GLAS Quemador de viga central
7	98005026	Clip, Tubing CLIP DEL TUBING DEL HORNO	16	W10911583	Tube, cooktop,HEB,Front,Left Tubo HEB frontal	25	326055030	RETAINER RING
8	326020655	VALVE CLIP Clip	17	W10911582	TUBE-COOKTOP,HEB,BACK,LEFT,GLASS Tubo HEB trasero	26	326056404	Gas valve Valvula
9	W10912922	ASSY-TUBE,OVEN,GOGM Tubo del horno	18	W11310078	TUBE-COOKTOP,ETC,SINGLE,GOG Tubo del Quemador	27	W10437410	Valve-LP Valvula
						28	W11232766	Thermostat,electronic,ignition Termostato

KIT DE CONVERSIÓN A GAS NATURAL - WER7600S		
Numero de Parte	Nombre de la pieza	Cantidad
W11014771	ORIFICE SUP BURNER	2
W10451655	ORIFICE STD BURNER	4
W10539375	ORIFICE OVEN BURNER	1
326035078	VALVE FOR STD BURNER	4
W10437410	VALVE FOR SUP BURNER	1



PARRILLA WER7600S00

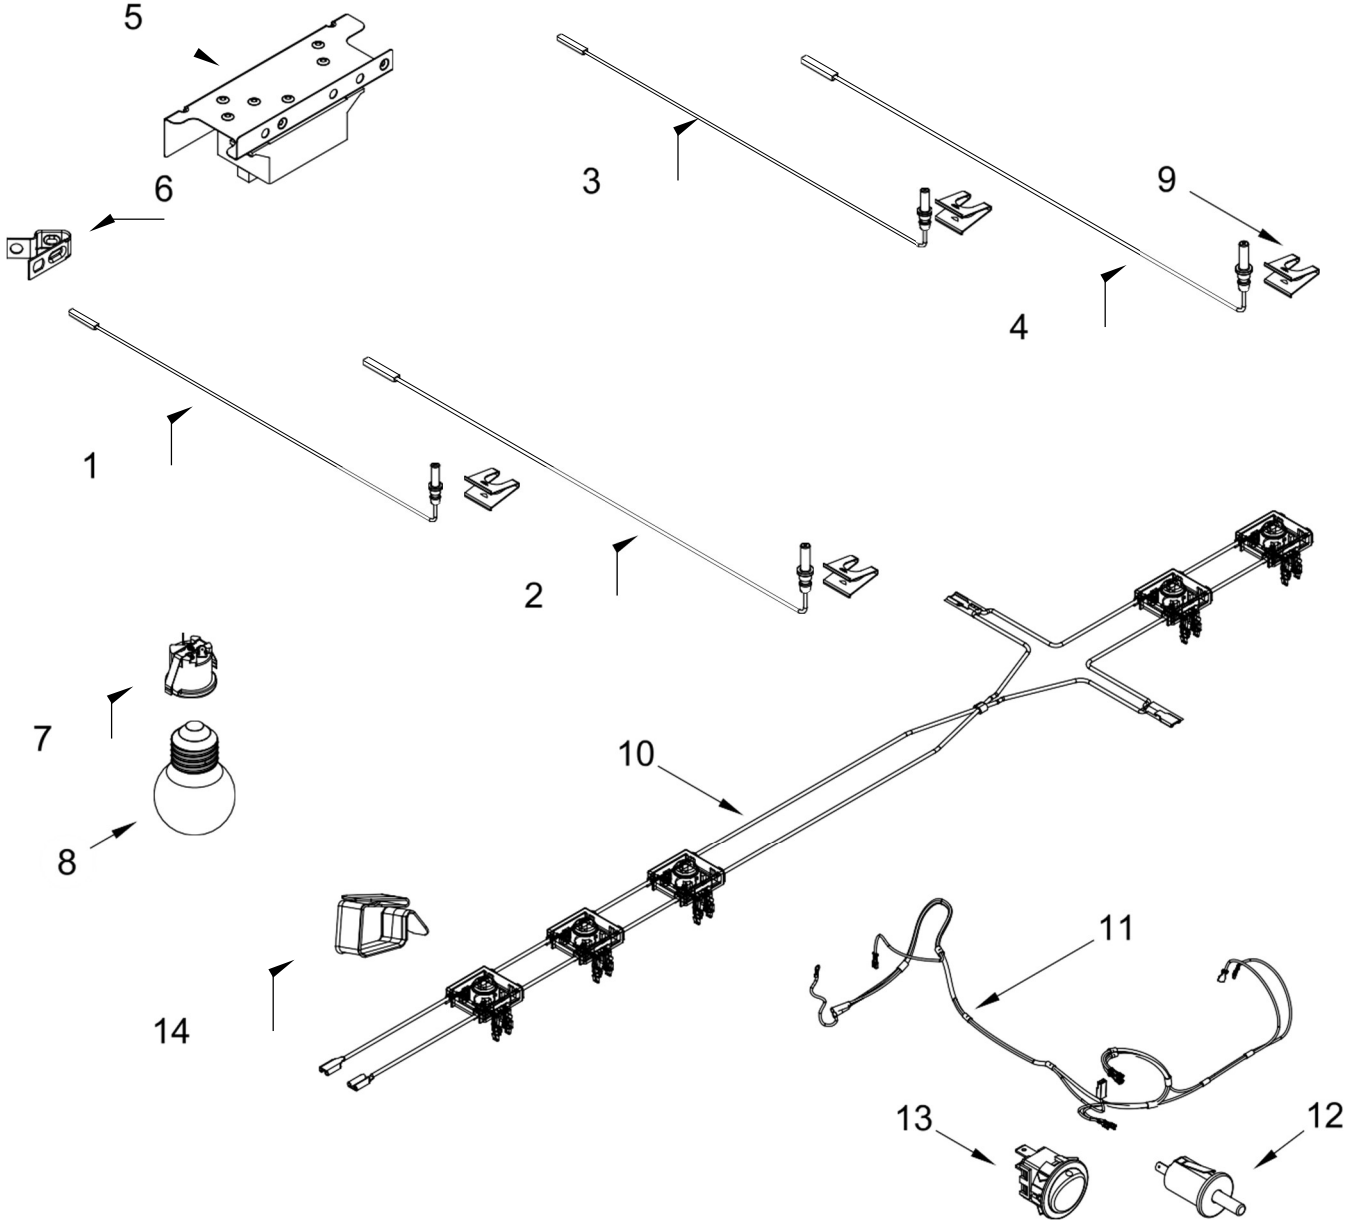



PARRILLA WER7600S00


<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11279765	TOP ELECTRODE BABEL GOG 350 Bujia
2	W11279766	TOP ELECTRODE BABEL GOG 500 Bujia
3	W11279767	TOP ELECTRODE BABEL GOG 650 Bujia
4	W11279768	TOP ELECTRODE BABEL GOG 850 Bujia
5	W10737818	ASSY MODULE 30" Modulo de encendido
6	98005894	Clamp, Cord abrazadera

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
7	W10554269	Socket - Oven Light Adaptador para foco
8	W10788320	Bulb, Light Foco del horno
9	326023245	ELECTRODE CLIP Clip del electrodo
10	W11096155	SWITCH HARNESS 5 POS GOGM + T Switch del arnes
11	W11096154	MAIN HARNESS GOGM Arnes principal
12	98005765	SWITCHDOOR Interruptor de Puerta

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
13	W11156795	ROCKER OVEN LIGHT SWITCH BLACK-PRINTED Interruptor para la luz del horno
14	98005896	Clip, Wire Clip del cable



PARRILLA WER7600S00

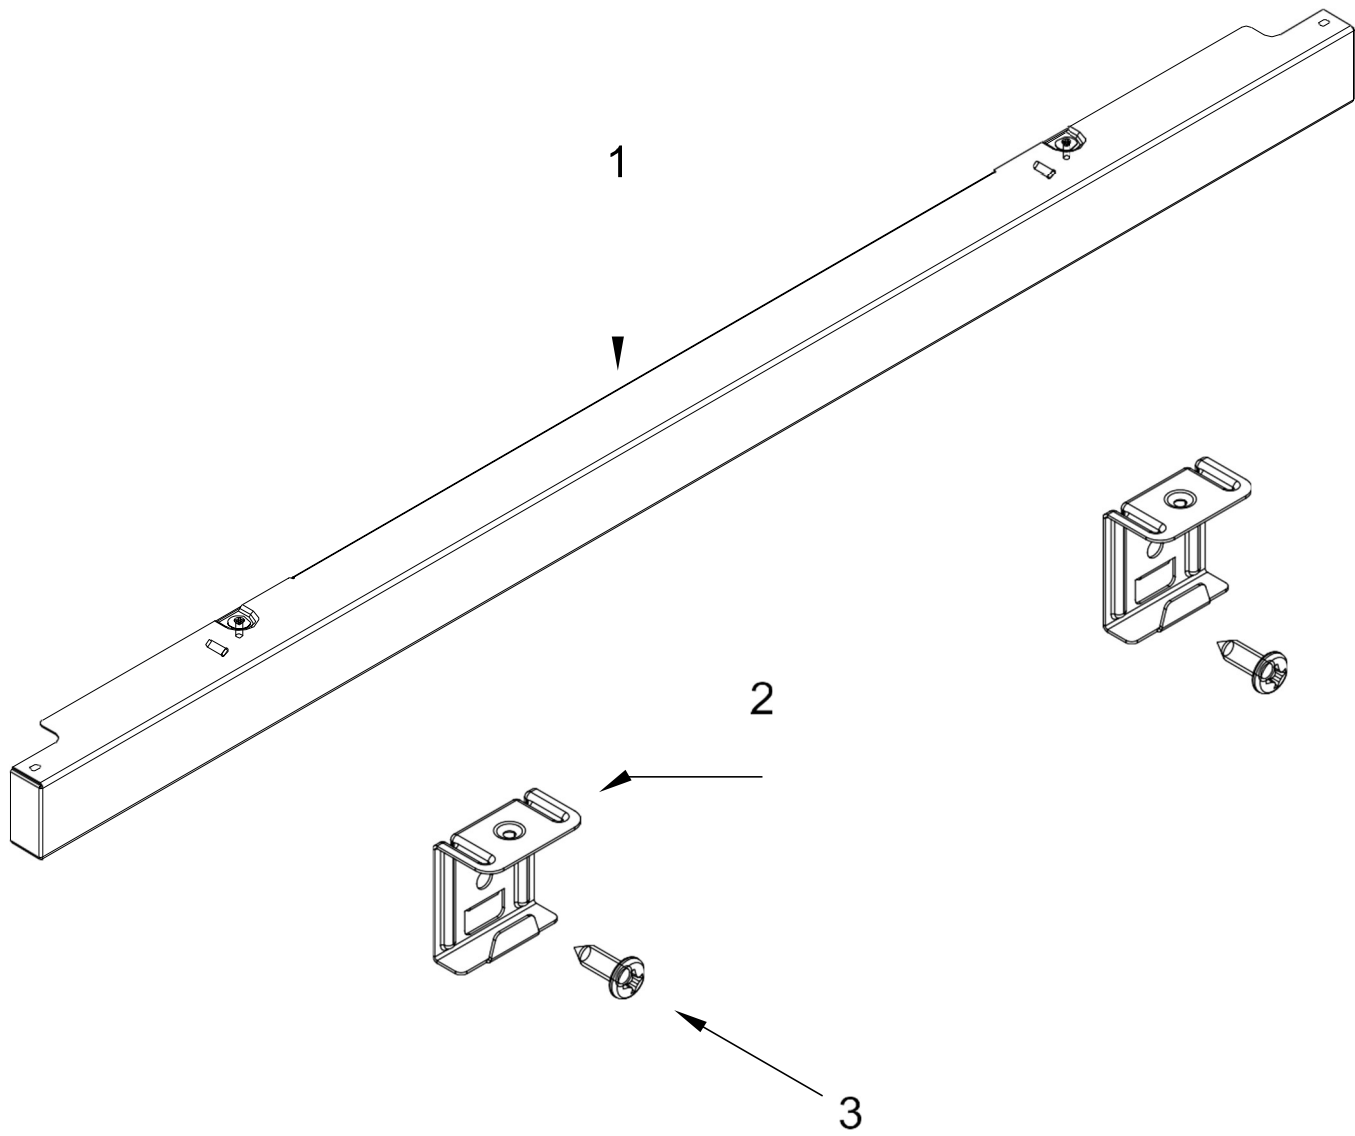



PARRILLA WER7600S00


Illus.
No. Part No. Description
1 W10500822 KICK PANEL ASM -
SS
Panel completo

Illus.
No. Part No. Description
2 W10394887 KICK PANEL
BRACKET
Bracket del panel

Illus.
No. Part No. Description
3 W10493726 Screw
Tornillo



PARRILLA WER7600S00

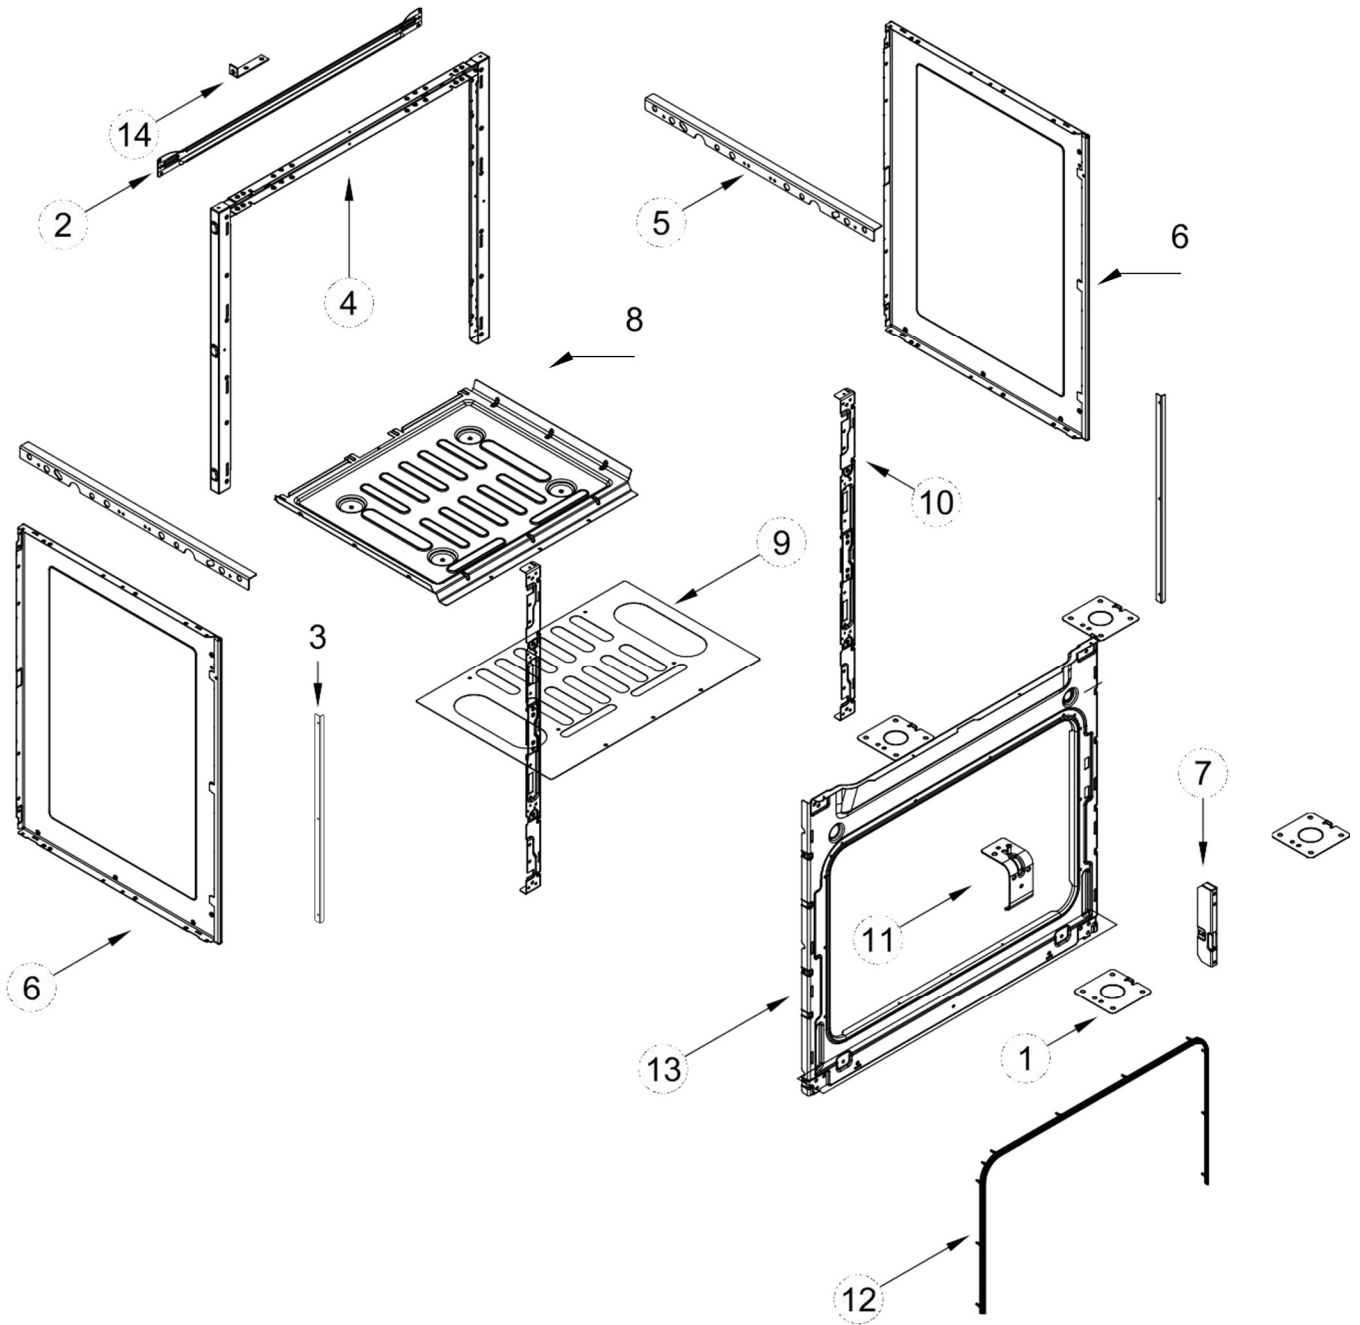



PARRILLA WER7600S00


<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10364505	CORNER PLATE Plato esquinero
2	98015363	Support, Rear Soporte trasero
3	W11279577	SIDE FRAME, BI BLACK Marco lateral
4	W10494904	REAR FRAME ASM BI Ensamble estructural posterior
5	W10539013	TRIM SIDE PANEL REINFORCEMENT REFUERZO DE PANEL LATERAL
6	W10869208	SIDE PANEL BI FS 30" PAINT BLACK Panel lateral

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
7	W10327222	COUNTER SUPPORT - HINGE Contrabrisagra
8	W10607830	OVEN BURNER DEFLECTOR 30" BI - W/HOLES piso del horno
9	W10607808	BASE BAFLE WITH HOLES - BI ENAMEL Deflector del piso
10	W10327220	FRONT VERTICAL PILLAR B/I Pilar frontal vertical
11	W10616130	OVEN BURNER BRACKET Bracket del quemador del horno

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
12	W10759584	SEAL OVEN DOOR CS Sello de la puerta del horno
13	W11118286	FRONT FRAME 30" DROP W/SWITCH FINISH Marco frontal
14	W10604154	BRACKET SUPPORT CUT-OFF Soporte



PARRILLA WER7600S00

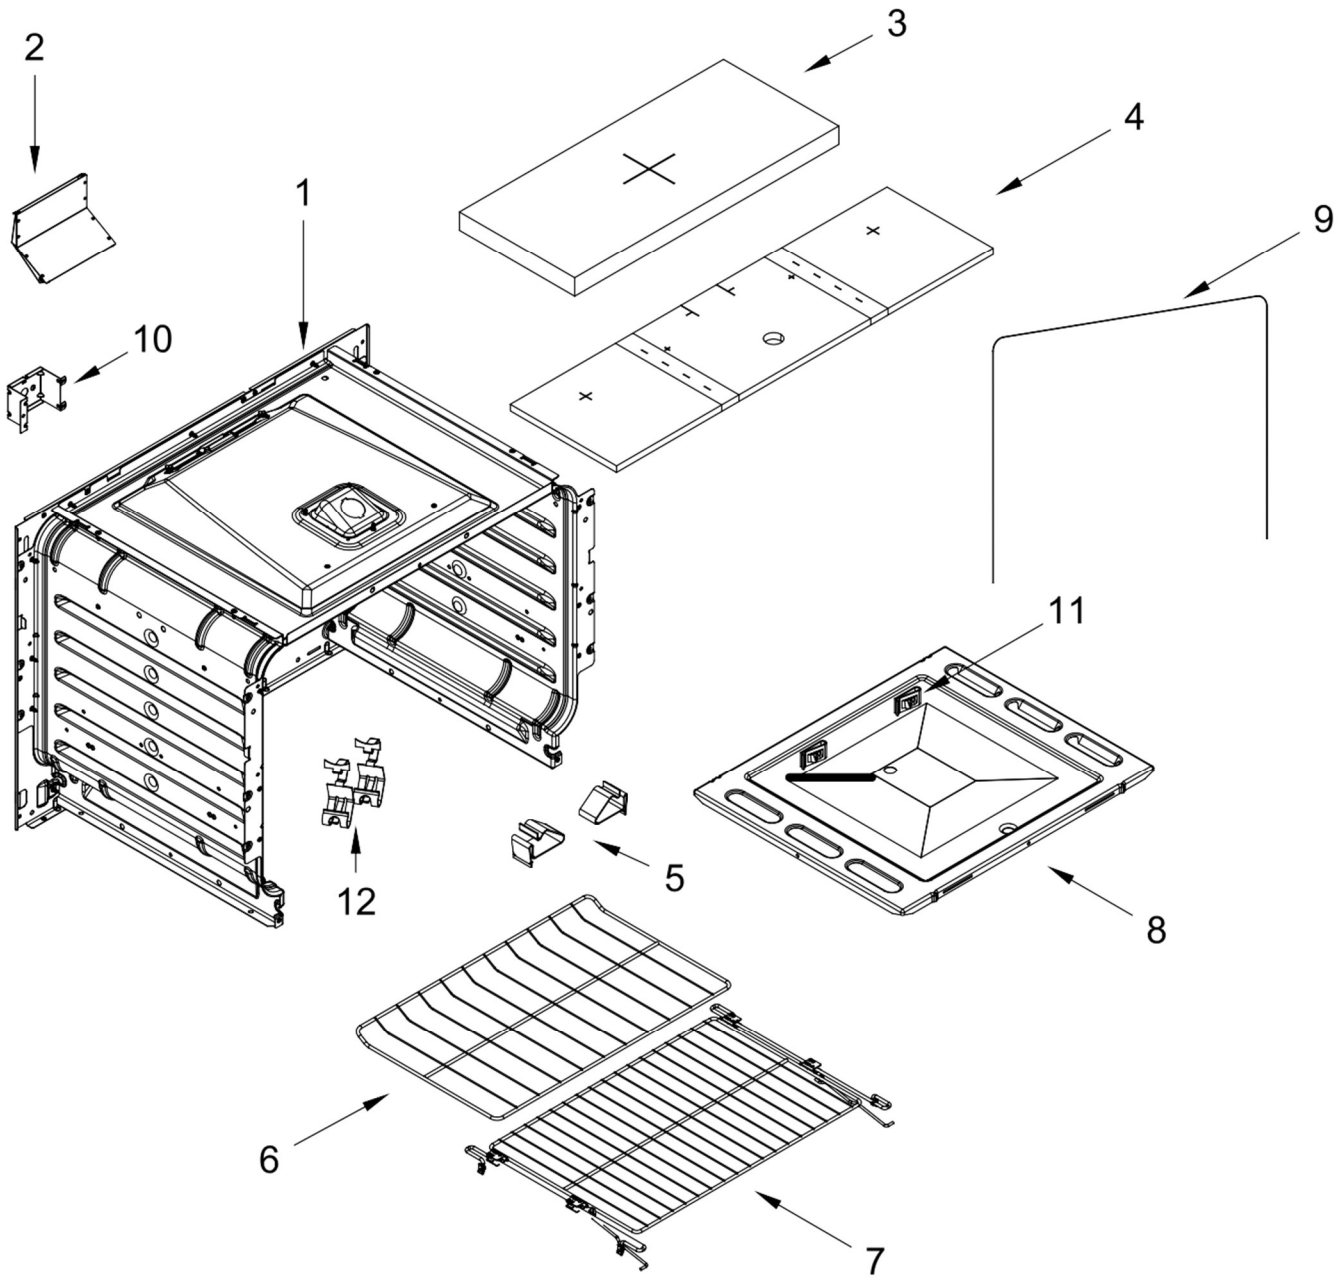




PARRILLA WER7600S00

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		CAVITY ASM W/LIGHT F/S No refaccionable Ensamble de la cavidad	4	W11181059	UPPER INSULATION COVER Cubierta aislante superior	8	W10764694	Bottom, Oven piso del horno
2	W10863729	GOG FS FLUE BO Ensamble de chimenea	5	98004722	Clip, Cooktop Clip	9	W10132554	WIRE - INSULATION TIE Cable
3	W11130754	Wrapper oven cavity insulation Aislante cavidad del horno	6	W10550642	Rack, Oven Parrilla del horno	10	W10381594	BRACKET - REAR, OVEN BURNER Soporte trasero
			7	W11116641	KIT SLIDE OUT ECONOMIC - DD DOOR kit parrilla deslizable	11	98009179	U-Nut Tornillo
						12	98005642	Clip, Therm Bulb Clip



PARRILLA WER7600S00

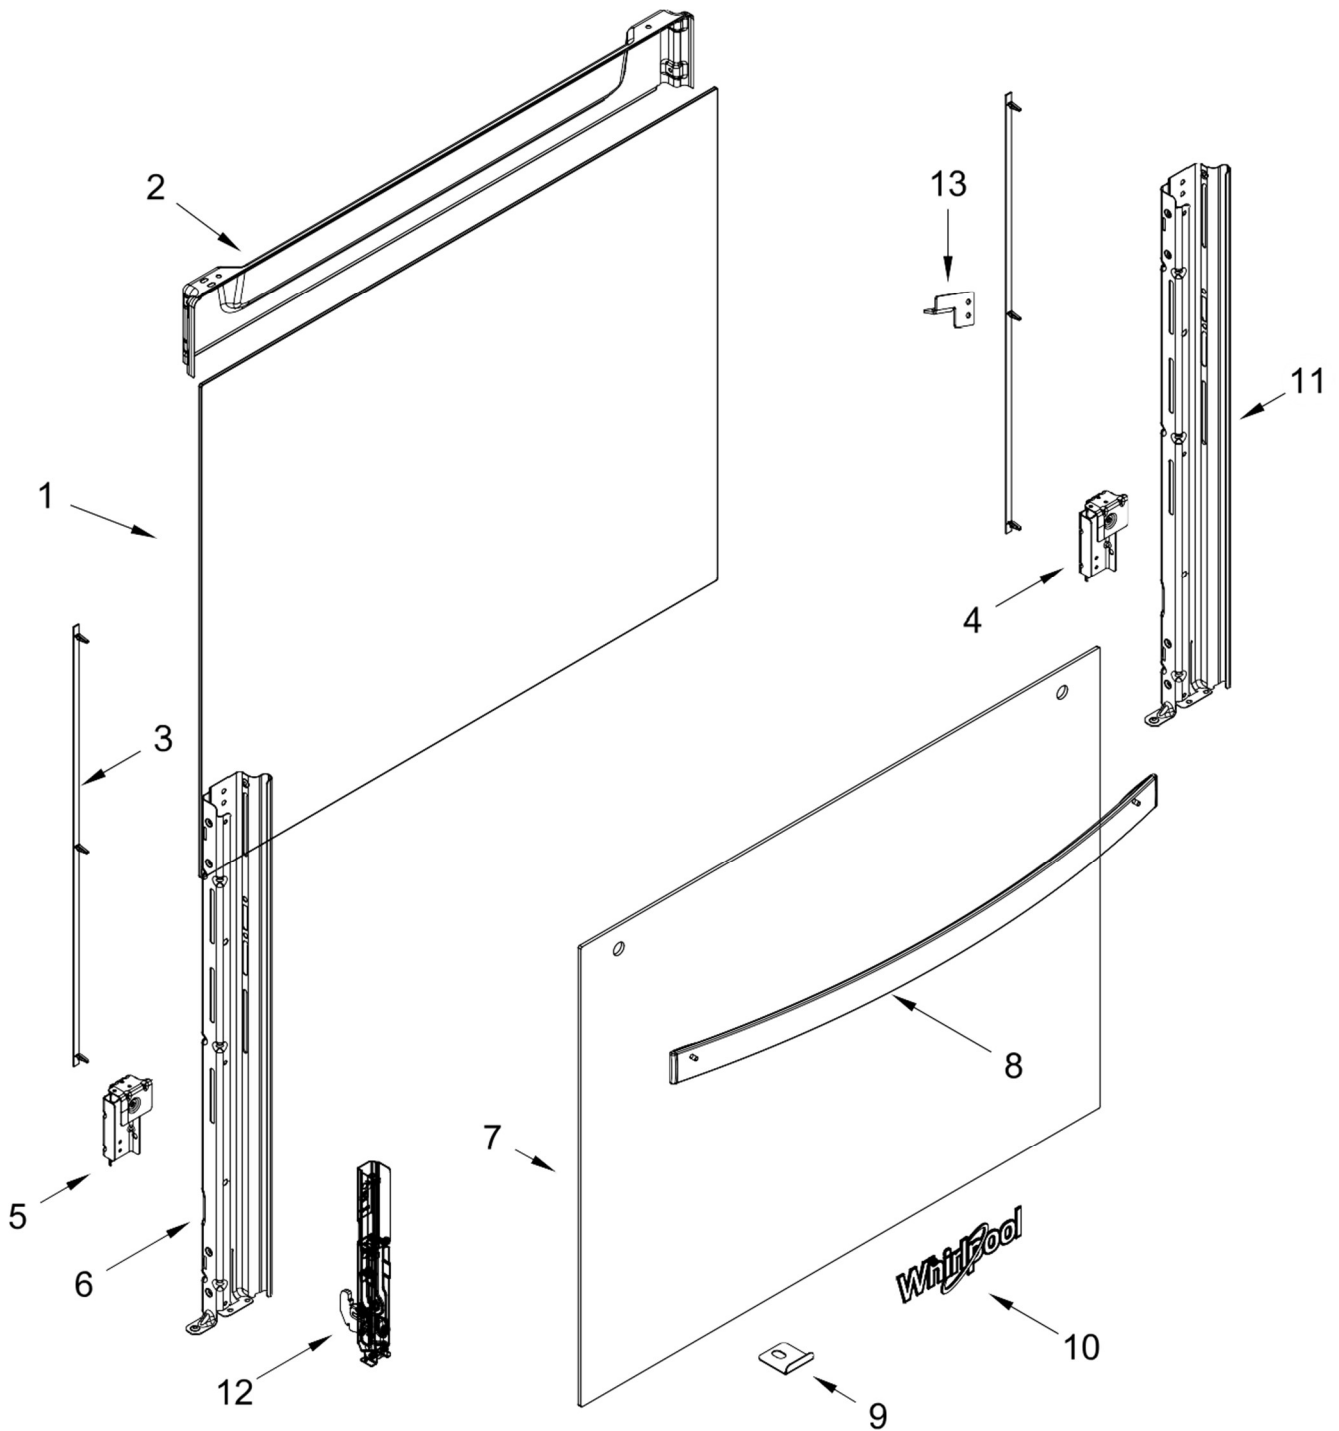



PARRILLA WER7600S00

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11038876	INNER GLASS - OVEN DOOR Vidrio Interno de la puerta del horno	6	W11096312	OVEN DOOR PILLAR LEFT S/O - FINISH Pilar izquierdo de la puerta del horno	10	W10884775	Black Logotipo
2	W11105596	COVER OVEN DOOR DROP FINISH Tapa superior de la puerta	7	W11172290	BI OUTER GLASS & LOWER TRIM ASM-LG GL2 Vidrio Exterior de la puerta del horno	11	W11096309	OVEN DOOR PILLAR RIGHT S/O - FINISH Pilar derecho de la puerta del horno
3	W10292266	Seal, Inner Door Sello de la puerta del horno	8	W11165656	HANDLE ASSY,WP30 BREATHE 2.0 BABEL Agarradera	12	W11115345	OVEN DOOR HINGE 9.6 KG
4	W11096062	SUPPORT BRACKET HANDLE RGT Soporte de la jaladera	9	W10811550	BRACKET DOOR GLASS HOLDER BLACK Soporte del vidrio de la puerta	13	W10479996	BRACKET RETAINER - FINISH Soporte puerta deslizable
5	W11096065	SUPPORT BRACKET HANDLE LFT Soporte de la jaladera				14	W11236643	KIT OVEN DOOR - BI - LG GL2 S/O Kit de la puerta del horno